

- TX340sm
- RXT-3400
- MTTplus-340
- MTTplus-320
- TX300sm



Multi-Service Test Modules

OTN, SDH/SONET, PDH/DSn, Ethernet,
Fiber Channel, CPRI/OBSAI, Teleprotection,
Synchronization

Please direct all questions to your local VeEX Sales Office, Representative, or Distributor. Or, contact VeEX technical support at www.veexinc.com.

No part of this user manual may be reproduced, translated into a foreign language, or be transmitted electronically without prior agreement and written consent of VeEX Incorporated as governed by International copyright laws. Information contained in this manual is provided “as is” and is subject to change without notice. Trademarks of VeEX Incorporated have been identified where applicable, however the absence of such identification does not affect the legal status of any trademark. D07-00-094P RevD01

Copyright 2022 VeEX Incorporated. All rights reserved.

Table of Contents

[1.0 General Information](#)

[2.0 Introduction](#)

[2.1 Connector Panels & Test Ports](#)

[3.0 Safety Information](#)

[4.0 Basic Operations](#)

[5.0 Utilities](#)

[6.0 Setup](#)

[6.1 Signal Overview](#)

[6.2 Setup: PDH](#)

[6.2.1 Transmitter/Receiver Setup](#)

[6.3 Setup: SDH](#)

[6.3.1 Transmitter Setup](#)

[6.3.2 Receiver Setup](#)

[6.4 Setup: SONET](#)

[6.4.1 Transmitter Setup](#)

[6.4.2 Receiver Setup](#)

[6.5 Setup: OTN/SDH](#)

[6.5.1 Transmitter Setup](#)

[6.5.2 Receiver Setup](#)

[6.6 Setup: OTN/SONET](#)

[6.6.1 Transmitter Setup](#)

[6.6.2 Receiver Setup](#)

[6.7 Measurement Configuration](#)

[6.7.1 Timer Setup](#)

[6.7.2 Performance Analysis](#)

[6.7.3 General](#)

[6.7.4 Auto-Config](#)

[6.7.5 Service Disruption Test \(SDT\)](#)

7.0 Results

7.1 Results: PDH

[7.1.1 Summary](#)

[7.1.2 Errors and Alarms](#)

[7.1.3 Event Log](#)

[7.1.4 Signal](#)

[7.1.5 Histogram](#)

[7.1.6 Graph](#)

[7.1.7 Performance Analysis](#)

[7.1.8 Service Disruption Test \(SDT\) Results](#)

7.2 Results: SDH

[7.2.1 Summary](#)

[7.2.2 Errors and Alarms](#)

[7.2.3 Event Log](#)

[7.2.4 Signal](#)

[7.2.5 Histogram](#)

[7.2.6 Graph](#)

[7.2.7 Performance Analysis](#)

[7.2.8 Service Disruption Test \(SDT\) Results](#)

7.3 Results: SONET

[7.3.1 Summary](#)

[7.3.2 Errors and Alarms](#)

[7.3.3 Event Log](#)

[7.3.4 Signal](#)

[7.3.5 Histogram](#)

[7.3.6 Graph](#)

[7.3.7 Performance Analysis](#)

[7.3.8 Service Disruption Test \(SDT\) Results](#)

7.4 Results: OTN

7.4.1 Summary

7.4.2 Errors and Alarms

7.4.3 Event Log

7.4.4 Signal

7.4.5 Histogram

7.4.6 Graph

7.4.7 Performance Analysis

7.4.8 Service Disruption Test (SDT) Results

8.0 Alarms/Errors

8.1 Alarm Generation

8.1.1 SDH Alarms

8.1.2 OTN Alarms

8.2 Error Insertion

8.2.1 SDH Errors

8.2.2 OTN Errors

9.0 OTN Tools

9.1 Shortcuts

9.2 Overhead Analyzer & Generator

9.2.1 OTN Frame Analysis

9.2.2 Optical Transport Unit (OTU) Analysis

9.2.3 Optical Data Unit (ODU) Analysis

9.2.4 Optical Payload Unit (OPU) Analysis

9.3 Payload Label (Payload Structure Identifier)

9.4 Trace Identifier (Trail Trace Identifier)

9.5 TCM Tasks (Tandem Connection Monitoring)

10.0 SDH/SONET Tools

10.1 SDH/SONET Tools

[10.1.1 Shortcuts](#)

[10.1.2 Overhead Analyzer](#)

[10.1.3 Overhead Generator](#)

[10.1.4 Pointer Tasks](#)

[10.1.4.1 Pointer Analysis](#)

[10.1.4.2 Pointer Generation](#)

[10.1.4.3 Pointer Sequences](#)

[10.1.5 Trace Identifier](#)

[10.1.5.1 Transmitted Traces \(TX\)](#)

[10.1.5.2 Received Traces \(RX\)](#)

[10.1.6 Payload Labels](#)

[10.1.7 APS Tasks](#)

[10.1.7.1 APS Timing](#)

[10.1.7.2 APS Sequence](#)

[10.1.8 Tandem Connection Monitoring \(TCM\)](#)

[10.1.9 Tributary Scan](#)

[10.1.10 Round Trip Delay](#)

[10.1.11 Jitter and Wander](#)

[10.2 SONET Tools](#)

[10.2.1 Shortcuts](#)

[10.2.2 Overhead Analyzer](#)

[10.2.3 Overhead Generator](#)

[10.2.4 Pointer Tasks](#)

[10.2.4.1 Pointer Analysis](#)

[10.2.4.2 Point Generator](#)

[10.2.4.3 Pointer Sequences](#)

[10.2.5 Trace Identifier](#)

[10.2.5.1 Transmitted Traces \(TX\)](#)

[10.2.5.2 Received Traces \(RX\)](#)

[10.2.6 Payload Labels](#)

[10.2.7 APS Tasks](#)

[10.2.7.1 APS Timing](#)

[10.2.7.2 APS Sequence](#)

[10.2.8 Tandem Connection Monitoring \(TCM\)](#)

[10.2.9 Tributary Scan](#)

[10.2.10 Round Trip Delay](#)

[10.2.11 Jitter and Wander](#)

[10.2.12 STS-1 Monitor](#)

[10.2.13 SONET BERT](#)

[11.0 PDH Tools](#)

[11.1 E1 Pulse Mask](#)

[11.2 E3 Pulse Mask](#)

[11.3 E1 Sa Bits SSM QL \(Clock Quality Level\)](#)

[11.4 Round Trip Delay](#)

[11.5 E1 RX Data](#)

[11.6 V.54](#)

[11.7 E1 ISDN PRI](#)

[11.7.1 ISDN PRI Call](#)

[11.7.1.1 Setup \(PRI Call Setup\)](#)

[11.7.1.2 Signal](#)

[11.7.1.3 Call - Voice and 3.1K Audio Setup](#)

[11.7.1.4 Call - Data Setup](#)

[11.7.1.5 Data Call BERT Results \(Result tab\)](#)

[11.7.1.6 Supplementary Service Scan](#)

[11.7.1.7 Multi Call](#)

[11.7.1.8 DTMF](#)

[11.7.2 ISDN PRI Monitor](#)

[11.8 E1 VF](#)

[11.9 Jitter & Wander](#)

[12.0 DS1/3 Tools](#)

[12.1 DS1 Pulse Mask](#)

[12.2 DS3 Pulse Mask](#)

[12.3 DS1/3 Loop](#)

[12.4 Round Trip Delay](#)

[12.5 DS1 RX Data](#)

[12.6 DS3 FEAC Tasks](#)

[12.7 DS1 ISDN PRI](#)

[12.8 DS1 VF Tasks](#)

[12.9 Jitter & Wander](#)

[12.10 CSU/NIU Emulation for DS1](#)

[12.11 DS1/3 Auto Monitor](#)

[12.12 DS1 BERT](#)

[12.13 DS1 \(Stress\) Multi-BERT](#)

[12.14 DS1 FDL & SSM QL](#)

[13.0 Jitter and Wander Application](#)

[13.1 Jitter Measurement & Generation \(Jitter icon\)](#)

[13.2 Max Jitter Tolerance \(MTJ\)](#)

[13.3 Jitter Transfer Function \(JTF\)](#)

[13.4 Wander Measurements and Analysis](#)

[13.4.1 Recovered Clock Wander Measurements](#)

[13.4.1.1 Test Setup](#)

[13.4.1.2 Test Result](#)

[13.4.2 Advanced Clock Wander & Phase Measurements](#)

[13.4.2.1 Clock Wander and Phase Measurements \(Optional\)](#)

[13.4.2.2 Built-in MTIE & TDEV Analysis \(Optional\)](#)

[13.4.3 VeEX MTIE/TDEV Wander Analysis PC Software](#)

[13.4.3.1 TIE Measurement Results](#)

[13.4.3.2 MTIE & TDEV Analysis](#)

[13.4.3.3 MTIE & TDEV Analysis Report in PDF](#)

14.0 Ethernet over OTN (EoOTN)

14.1 OTU2e & OTU1e Overview

14.2 OTU2e & OTU1e with Ethernet Payloads

14.2.1 Signal Setup

14.2.1.1 Hierarchy

14.2.1.2 Interface

14.2.1.3 Pattern

14.2.2 Measurements

14.2.3 General

14.3 OTU2e & OTU1e Results

14.4 OTU2e & OTU1e Ethernet Applications

14.4.1 OTU2e & OTU1e with 10GE BERT

14.4.2 OTN/10GE RFC 2544 Conformance Testing

14.4.3 OTN/10GE Throughput Testing (Multiple Streams)

14.5 ODU0 and ODUflex Overview

14.6 ODU0 and ODUflex Setup Menu

14.6.1 Signal Setup

14.6.2 Measurements

14.6.3 General

14.6.4 GE Port-config

14.7 ODU0 and ODUflex Results

14.8 OTN Tools

14.9 Alarm/Error

15.0 Ethernet

15.1 Ethernet Setup

15.1.1 Test Port Selection

15.1.2 Port Setup

15.1.3 Measurement Settings

15.1.4 MX Discover and Control

[15.1.5 ViPAG/V-Route Test](#)

[15.2 IP](#)

[15.2.1 IP Connection](#)

[15.2.1.1 Setup](#)

[15.2.1.2 Status](#)

[15.2.2 Trace Route](#)

[15.2.3 ARP Wiz](#)

[15.2.4 Ping](#)

[15.2.5 VoIP Testing](#)

[15.2.5.1 VoIP Check](#)

[15.2.5.2 VoIP Expert - Client/Server Mode](#)

[15.2.5.3 VoIP Expert - IP Phone Mode](#)

[15.2.5.4 Placing a Call](#)

[15.2.5.5 VoIP IP Phone Results](#)

[15.3 BERT](#)

[15.3.1 BERT Setup](#)

[15.3.1.1 Header Settings](#)

[15.3.1.2 Traffic Settings](#)

[15.3.1.3 Error Injection](#)

[15.3.1.4 Starting/Stopping a BERT](#)

[15.3.2 BERT Results](#)

[15.3.2.1 Summary](#)

[15.3.2.2 Errors](#)

[15.3.2.3 Events](#)

[15.3.2.4 Traffic](#)

[15.3.2.5 Rates](#)

[15.3.2.6 Delay](#)

[15.3.2.7 Alarms](#)

[15.3.2.8 Signal](#)

[15.4 RFC 2544 Conformance Testing](#)

[15.4.1 Setup - Standard Mode](#)

[15.4.1.1 Header Settings](#)

[15.4.1.2 Frame Settings](#)

[15.4.1.3 Threshold Settings](#)

[15.4.1.4 Throughput, Latency, Frame Loss, and Burst Settings](#)

[15.4.1.5 Starting/Stopping a RFC 2544 Measurement](#)

[15.4.2 Results - Standard Mode](#)

[15.4.3 Saving RFC 2544 Results](#)

[15.4.4 Advanced SLA Mode](#)

[15.4.5 Background Results - Advanced SLA Mode](#)

[15.4.6 Peer-to-Peer and Asymmetric Testing](#)

[15.5 V-SAM](#)

[15.5.1 V-SAM Setup](#)

[15.5.1.1 Header Settings](#)

[15.5.1.2 Service Attributes](#)

[15.5.2 Results](#)

[15.6 Throughput Testing \(Multiple Streams\)](#)

[15.6.1 Setup](#)

[15.6.1.1 General Throughput Settings \(Global Configuration\)](#)

[15.6.1.2 MX Discover and Control Settings](#)

[15.6.1.3 Per Stream Configurations](#)

[15.6.1.4 Traffic Settings \(Per Stream Configuration\)](#)

[15.6.1.5 Error Injection Settings \(Per Stream Configuration\)](#)

[15.6.1.6 Alarm Injection Settings](#)

[15.6.1.7 Summary](#)

[15.6.1.8 Starting/Stopping a Throughput \(Multiple Streams\) Test](#)

[15.6.2 Throughput Results](#)

[15.6.2.1 Viewing Throughput \(Multiple Streams\) Test Results](#)

[15.6.2.2 Global/Aggregate Results](#)

[15.6.2.3 Per Stream Results](#)

[15.6.2.4 Saving Throughput \(Multiple Streams\) Results](#)

[15.7 Ethernet OAM Testing](#)

[15.7.1 OAM Setup](#)

[15.7.1.1 Link Level 802.3ah OAM Setup](#)

[15.7.1.2 Service Level OAM: 802.1ag/Y.1731/G.8113.1 Setup](#)

[15.7.2 OAM Results](#)

[15.7.2.1 Link OAM Results](#)

[15.7.2.2 OAM Service Results](#)

[15.8 Monitor \(Pass Through\) Mode](#)

[15.8.1 Setup](#)

[15.8.2 Results](#)

[15.9 Advanced Monitoring](#)

[15.10 Loopback Mode](#)

[15.11 Scan](#)

[15.12 SyncE](#)

[15.12.1 SyncE Setup](#)

[15.12.2 SyncE Wander Measurements \(Slave Mode Only\)](#)

[15.12.2.1 Setup](#)

[15.12.2.2 Results](#)

[15.12.2.3 Built-in TIE, MTIE & TDEV Analysis \(Optional\)](#)

[15.12.3 ESMC SSM](#)

[15.13 1588v2/PTP](#)

[15.13.1 Products Supporting IEEE 1588v2 PTP Testing](#)

[15.13.1.1 Available Reference Clocks](#)

[15.13.1.2 Brief PTP Basics](#)

[15.13.1.3 Simultaneous SyncE+PTP Operation](#)

[15.13.2 Configuring the Test Application](#)

[15.13.2.1 Launching the IEEE1588v2/PTP Test Feature](#)

[15.13.2.2 Configuring Synchronous Ethernet \(SyncE\)](#)

[15.13.2.3 Configuring PTP Slave Emulation](#)

[15.13.3 Configuring PTP Quasi-Slave Emulation](#)

[15.13.3.1 Setup](#)

[15.13.3.2 Quasi-slave mode ITU-T G.8260 filter options](#)

[15.13.4 Configuring PTP Master Emulation](#)

[15.13.5 Measurement Results](#)

[15.13.5.1 The Results Tab](#)

[15.13.5.1.1 Summary](#)

[15.13.5.1.2 Messages](#)

[15.13.5.1.3 Events \(Slave only\)](#)

[15.13.5.1.4 Protocol Monitor \(Decoder\)](#)

[15.13.5.1.5 Protocol Monitor \(Capture\)](#)

[15.13.5.1.6 Clock \(Slave only\)](#)

[15.13.6 Graphs \(Packet Timing\)](#)

[15.13.7 The Rec->USB Button \(Record TE Data to USB Memory Stick\)](#)

[15.13.8 Stopping and Saving Results \(Test Report\)](#)

[15.13.9 1588v2/PTP Wander Measurements](#)

[15.13.10 Setup](#)

[15.13.11 Results](#)

[15.13.12 TIE Monitor Graph](#)

[15.13.13 MTIE & TDEV Post Analysis](#)

[15.13.14 TIE Analysis](#)

[15.13.15 MTIE & TDEV Analysis](#)

[15.14 PDV Analysis](#)

[15.15 Packet Capture](#)

[15.15.1 Packet Capture Setup](#)

[15.15.2 Packet Capture Results](#)

[15.16 IPTV](#)

[15.16.1 IPTV Setup](#)

[15.16.2 IPTV Analysis](#)

[15.16.3 IPTV Viewer](#)

[15.17 Layer 4+ Applications](#)

[15.17.1 V-Perf](#)

[15.17.2 V-Test](#)

[15.17.3 V-FTP](#)

[15.18 PESQ Testing](#)

[15.19 Phy Mode](#)

[15.20 Net Wiz](#)

[15.21 Autoscripting](#)

[15.22 L2CP Transparency](#)

[15.23 IP Monitoring](#)

[16.0 Fiber Channel](#)

[16.1 Setup](#)

[16.1.1 Test Applications](#)

[16.1.2 Port Configuration](#)

[16.2 BERT/Throughput](#)

[16.2.1 Overview](#)

[16.2.2 Setup](#)

[16.2.3 Traffic Generation and Error Injection](#)

[16.2.4 Starting Measurements](#)

[16.2.5 Results](#)

[16.3 RFC 2544](#)

[16.4 Loopback](#)

[16.5 Packet Capture](#)

[17.0 CPRI Optical Testing](#)

[17.1 Interface Specifications](#)

[17.2 CPRI Testing](#)

[17.2.1 CPRI/OBSAI Unframed BERT Setup](#)

[17.2.1.1 Test Pattern](#)

[17.2.1.2 Traffic Pattern](#)

[17.2.1.3 Error Injection](#)

[17.2.2 CPRI/OBSAI Unframed BERT Results](#)

[17.2.2.1 Summary](#)

[17.2.2.2 Signal](#)

[17.2.2.3 Errors](#)

[17.2.2.4 Alarms](#)

[17.2.2.5 Events](#)

[17.3 CPRI Layer 1 Framed Testing](#)

[17.3.1 Setup](#)

[17.3.2 Results](#)

[17.3.3 L1 RTD](#)

[17.4 CPRI Layer 2 Framed Testing](#)

[17.4.1 Setup](#)

[17.4.2 Results](#)

[17.4.3 CPRI Round Trip Delay](#)

[17.4.4 Service Disruption Test \(SDT\) Results](#)

[17.4.5 Control Words](#)

[17.4.6 Frame Capture](#)

[17.4.7 Wander Measurements](#)

[17.5 CPRI Layer 2 Monitor](#)

[17.5.1 Setup](#)

[17.5.2 Results](#)

[17.5.3 Service Disruption Test \(SDT\) Results](#)

[17.5.4 Control Words](#)

[18.0 IEEE C37.94™ Testing](#)

[18.1 Introduction](#)

[18.2 Getting Started](#)

18.3 Testing C37.94

18.3.1 Test Setup

18.3.2 Test Results

18.3.3 Test Profiles

18.3.4 Round Trip Delay (RTD)

18.3.5 C37.94 Data (Received)

18.3.6 One-Way Delay Measurements (Latency and Asymmetry)

19.0 G703.64k Codirectional

19.1 Setup

19.1.1 Signal

19.1.2 Measurements

19.1.3 General

19.2 Results

19.2.1 Summary

19.2.2 Errors and Alarms

19.2.3 Event Log

19.2.4 Signal

19.2.5 Histogram

19.2.6 Graph

19.2.7 Performance Analysis

19.3 Alarm Generation and Error Insertion

19.4 Round Trip Delay

20.0 Clock Wander & Phase Measurement

21.0 1588v2/PTP Through Mode & PDV Analysis

21.1 Port Setup

21.2 1588v2/PTP Filter Setup

21.3 Packet Capture

21.4 PTP Stats

21.5 Ethernet Stats

[21.6 PDV Graphs](#)

[21.7 PDV Analysis](#)

[22.0 Profiles](#)

[23.0 Common Functions](#)

[24.0 Product Specifications](#)

[25.0 Certifications and Declarations](#)

[26.0 About VeEX](#)

[Go back to top](#)

1.0 General Information

This user manual is suitable for novice, intermediate, and experienced users and is intended to help use the features and capabilities of VeEX products successfully. It is assumed that the user has basic computer experience and skills, and is familiar with telecommunication and other concepts related to VeEX product usage, terminology, and safety.

Every effort was made to ensure that the information contained in this user manual is accurate. Information is subject to change without notice and we accept no responsibility for any errors or omissions. In case of discrepancy, the web version takes precedence over any printed literature. The content in this manual may vary from the software version installed in the unit. For condition of use and permission to use these materials for publication in other than the English language, contact VeEX, Inc.

© Copyright VeEX, Inc. All rights reserved. VeEX, Sunrise Telecom, Digital Lightwave, Air Expert, CaLan, FaultScout, Fiberizer, MPA, MTT, RXT, VeGrade, VeriPHY, and VeSion, among others, are trademarks or registered trademarks of VeEX, Inc. and/or its affiliates in the USA and other countries. All trademarks or registered trademarks are the property of their respective companies. No part of this document may be reproduced or transmitted electronically or otherwise without written permission from VeEX, Inc.

This manual describes software and/or a device that uses software either developed by VeEX Inc. or licensed by VeEX, Inc. from third parties. The software is confidential and proprietary of VeEX, Inc. The software is protected by copyright and contains trade secrets of VeEX, Inc. or VeEX's licensors. The purchaser of this device and/or software, downloaded or embedded, agrees that it has received a license solely to use the software as embedded in the device and/or provided by VeEX Inc., and to use it solely as intended and described in this manual. The purchaser is prohibited from copying, reverse engineering, decompiling, or disassembling the software.

[Go back to top](#) [Go back to TOC](#)

1.1 Customer Support

For more technical resources, visit www.veexinc.com.

For assistance or questions related to the use of this product, call or e-mail our customer care department for customer support. Before contacting our customer care department, have the product model, serial number, and software version ready. Please locate the serial number on the back of the chassis. Please provide this number when contacting VeEX, Inc. customer care.

Support hours may vary depending on the product.

Product Technical Support

Support is generally available 8:00 AM to 8:00 PM, Eastern Standard Time, Monday to Friday.

Phone: +1 510 651 0500

E-mail: customercare@veexinc.com

MPA Product Technical Support

Support is generally available 8:30 AM to 5:30 PM, Eastern Standard Time, Monday to Friday.

Phone: +1 877 929 4357

International: +1 727 475 1206

E-mail: serviceandsupport@veexinc.com

[Go back to top](#) [Go back to TOC](#)

1.2 Warranty

For warranty information on VeEX products, go to <https://www.veexinc.com/Support/Warranty>.

To activate the warranty, please register your product at <https://www.veexinc.com/Support/ProductRegistration>.

[Go back to top](#) [Go back to TOC](#)

1.3 Patent Information

VeEX product hardware and software may be protected by one or more patents on file with the United States Patent Office.

1.4 Documentation Conventions

Icons used in this manual:

	Marks a helpful tip (action or method), which can save time and improve usability of the product.
	Provides important information needed to use this product and avoid missteps.
	Cautions against an action or inactivity, which can hinder productivity.
	Strongly warns against a condition, an action, or inactivity which can lead to a health hazard, injury, equipment damage, data loss, and/or financial losses.
	Stop and read before continuing.

2.0 Introduction to Multi-Service Test Modules

VeEX offers a variety of flexible Multi-Service Test Modules covering a wide range of transmission technologies, protocols, verification and troubleshooting test features, from 64 kbit/s up to 11Gbit/s. They also share similar user interfaces to ease the transitioning from one product or platform to another.

This manual describes all the features that may be available to any of the following test sets or modules:

- TX300s with one or two built-in TX340sm modules
- TX300s with built-in TX320sm module
- TX300s with one or two built-in TX300sm modules
- RXT-3400 module
- RXT-3000 module
- MTTplus-340 module
- MTTplus-320 module
- UX400 with one or more Combo blades

These Multi-service Test Modules are based on an all-inclusive hardware that includes all physical interfaces to cover legacy and modern transmission technologies. They provide all the flexibility to allow the activation of new technologies, rates, protocols and test features via licenses, as required, without having to return the test set to a service center.

Features and functions availability may vary depending on the installed modules, so please refer to the latest datasheet and become familiar with the version you have.

Transport Networks:

- OTN
 - OTU1, OTU2, OTU1e, OTU2e Line Rates
 - ODU0, ODUflex mappings
 - Bulk (PRBS), SDH/SONET+PDH/DSn and Ethernet Payloads
- SDH/SONET
 - STM-0 to STM-64
 - STS-1 to OC-192
 - Bulk (PRBS) and PDH/DSn Payloads
- PDH/DSn
 - DS1, DS3, E1, E3, E4
 - Unframed, Framed and Structured (Channelized) Payloads
 - ISDN PRI, VF Channel Access
 - G.703 64k Codirectional Interface
- Teleprotection
 - IEEE C37.94 (TX320sm/TX340sm and MTTplus-320 only)

Packet Switched Networks

- Ethernet
 - From 10 Mbps to 10 Gbps LAN/WAN, copper and fiber
 - IPv4/IPv6, VLAN, MPLS, MPLS-TP, PBB, VoIP, IPTV,...
 - RFC2544 SLA, Y.1564 V-SAM, OAM/MPLS-TP OAM (802.3ah, 802.1ag, Y.1731, G.8113.1)
 - Layer 4 Throughput applications: V-PERF (TCP), VeTest (HTTP), FTP
- SyncE
 - Master and Slave Emulation
 - Clock Recovery and Translation
 - Wander Measurements
- 1588v2 PTP (Precision Timing Protocol)
 - Master and Slave Emulation with Clock Recovery and Translation
 - PTP Message Capture, Decode and Export (pcap)
 - Wander and Phase Measurements
- Fibre Channel (Storage Area Networks)
 - 1, 2, 4, 8, 10 and 16 Gbps

Wireless Networks

- CPRI
 - Common Public Radio Interface
 - From 614.4 Mbps up to 12.168 Gbps
- OBSAI
 - Open Base Station Architecture Initiative
 - From 768 Mbps up to 6.144 Gbps
- Clock Accuracy and Stability Assessment
 - Wander Measurement and Analysis
 - Absolute Phase (Timing) Error Measurement and Analysis (1PPS clocks)
 - External or built-in precision reference clocks (GPS and Atomic options)
- Backhaul Testing
 - Ethernet, VLAN, Q-in-Q, MPLS-TP, OAM,...
 - 1588v2 PTP, SyncE
 - Clock Stability (Wander) and Timing Accuracy (Phase)

Network Synchronization


- Synchronous Ethernet (SyncE)
 - Master/Slave Emulation with clock recovery/translation and SSM/ESMC Monitor
- 1588v2 / PTP (Precision Timing Protocol)
 - Master/Slave Emulation with clock recovery/translation, PDV Analysis and SSM/ESMC Monitor
- Wander Measurement & Analysis
 - Recovered Clock Accuracy and Stability assessment
 - Long term TIE log and MTIE/TDEV post processing with Pass/Fail analysis based on standard or user-defined masks
- Built-in Precision Reference Clock Options (TX300S Platform)
 - GPS provides accurate phase aligned to the standard UTC second
 - Atomic Clock provides high stability, required for field wander and phase measurements
 - Portability - No physical reference signal or power are required
- One-way Delay Measurements
 - 1588v2 PTP requires the links to be symmetrical (similar delay both directions)

Not all features and options described in this manual may be available or installed in your test set, since they depend on the specific configuration and options purchased. Please refer to those that apply to your particular test set configuration. Please check the product datasheet for further details.


[Go back to top](#) [Go back to TOC](#)

2.1 Connector Panels & Test Ports

TX300S with two TX300SM blades

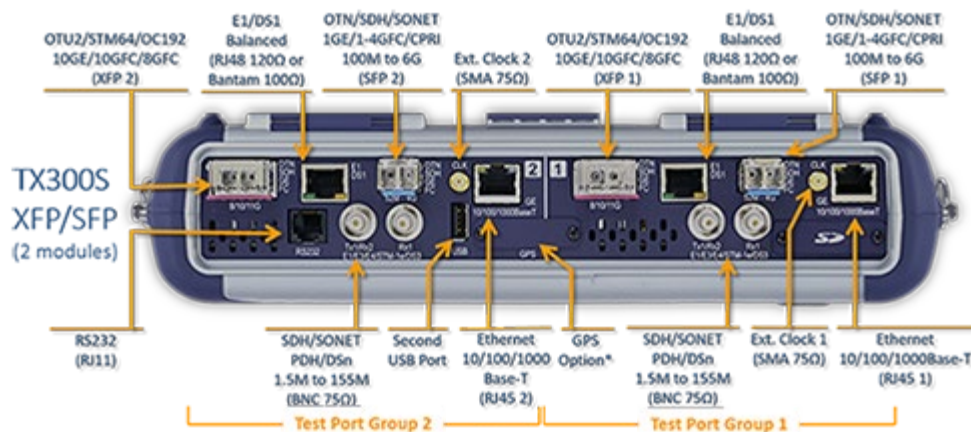


TX300S with one TX300SM blade

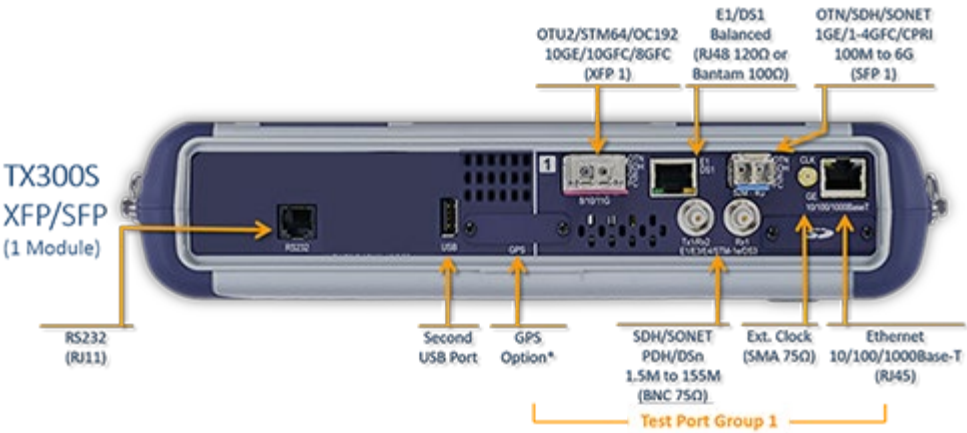


A separate test module may also be installed in the test port group 2 (e.g. OTDR module)

TX300S with one TX320SM blade

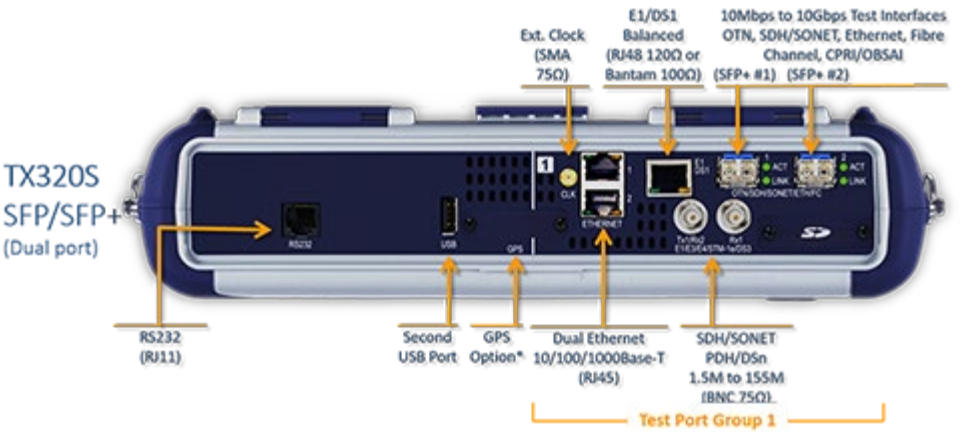


A separate test module may also be installed in the test port group 2 (e.g. OTDR or 100G/40G module)

TX300S with one TX340SM blade

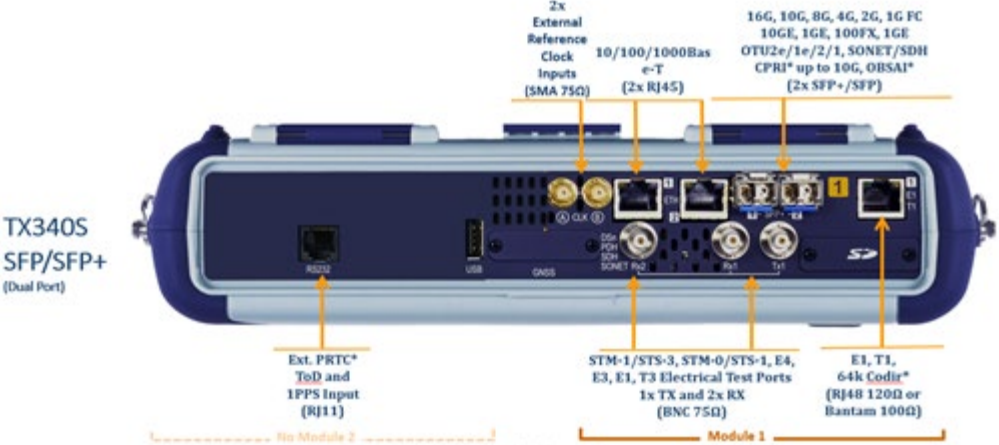


A separate test module may also be installed in the test port group 2 (e.g. OTDR or 100G/40G module)


RXT-3000 module

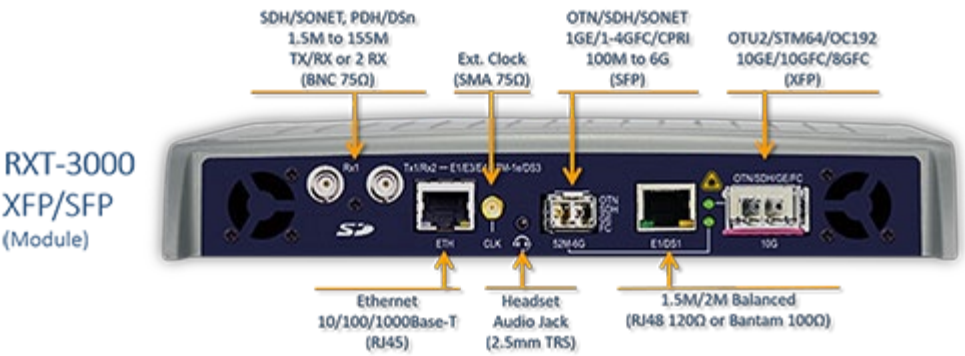


MTTplus-320 module

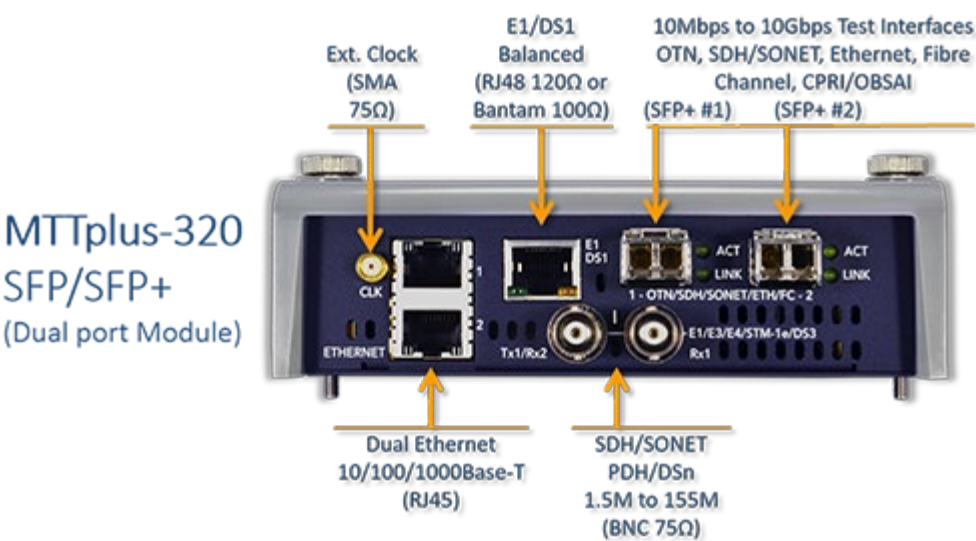

MTTplus-340 module

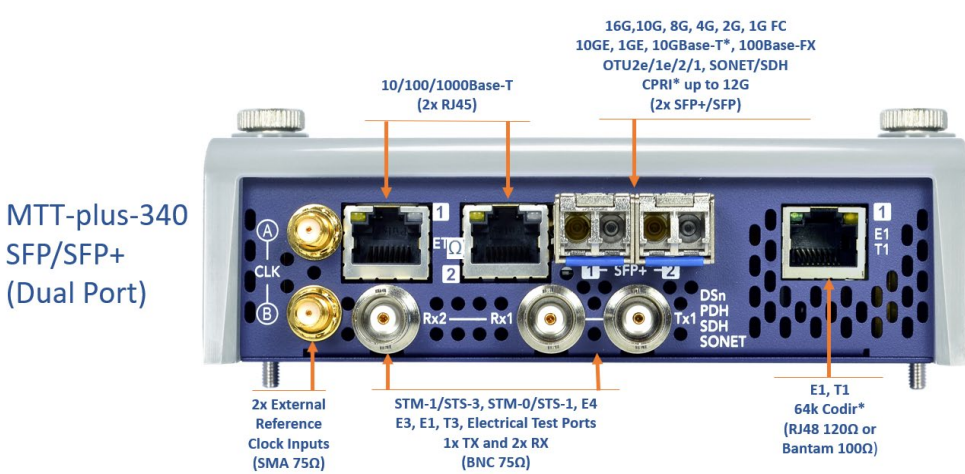

UX400-Combo module

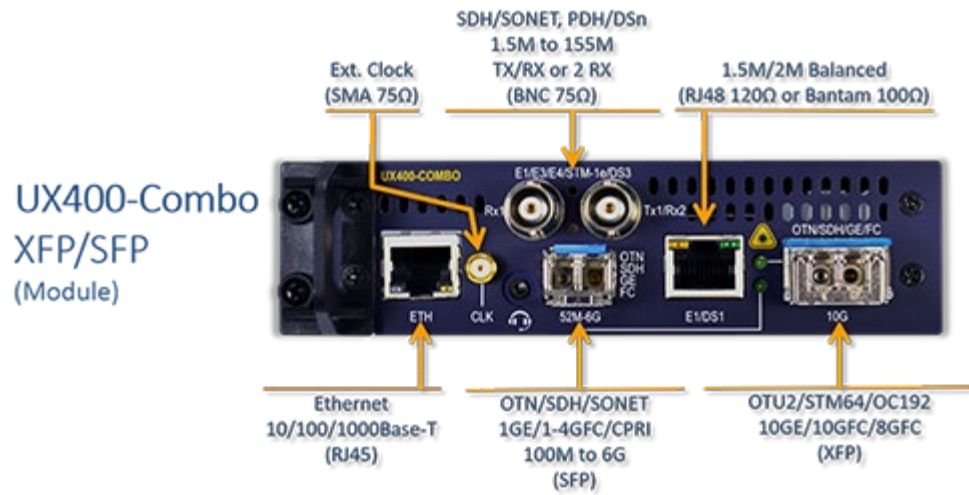

[Go back to top](#) [Go back to TOC](#)

3.0 Safety Information



Safety precautions should be observed during all phases of operation of this instrument. The instrument has been designed to ensure safe operation however please observe all safety markings and instructions. Do not operate the instrument in the presence of flammable gases or fumes or any other combustible environment. VeEX Inc. assumes no liability for the customer's failure to comply with safety precautions and requirements.

Optical Connectors

The test sets display a laser warning icon when the laser source is active to alert the user about a potentially dangerous situation. It is recommended to:

1. Deactivate the laser before connecting or disconnecting optical cables or patchcords.
2. Never look directly into an optical patchcord or an optical connector interface (SFP+) while the laser is enabled. Even though optical transceivers are typically fitted with Class 1 lasers, which are considered eye safe, optical radiation for an extended period can cause irreparable damage to the eyes.
3. Never use a fiber microscope to check the optical connectors when the laser source is active.

Safe Module Handling

While replacing test modules, all work on the open panel must be performed only by suitably qualified personnel who is familiar with the dangers both to people and to the instrument itself.

- Modules are not hot swappable. The platform must be turned off and unplugged from VAC mains when removing or inserting test modules.
- For safety and EMC (Electromagnetic Compatibility), empty module slots must be properly covered with blank panel covers.
- Prevent foreign objects from entering the UX400, before, during and after module exchange or re-configuration process. They could create short circuits or damage internal fans.
- Always store test modules by themselves in individual ESD protected packaging (with no loose elements, like screws or tools).

Lithium-ion Battery Precautions

Lithium-ion (Li-ion) battery packs are compact and offer high capacity and autonomy, which make them ideal for demanding applications, like providing long lasting power to portable test equipment. For safety reasons, due to their high energy concentration, these batteries packs and products containing them must be used, charged, handled, and stored properly, according to the manufacturer's recommendations.

Li-ion battery packs contain individual Li-ion cells as well as battery monitoring and protection circuitry, sealed in its plastic container that shall not be disassembled or serviced.

The test set unit's battery pack is also fitted with a safety connector to prevent accidental short circuits and reverse polarity.

- Always charge the unit's battery pack inside the test platform battery bay using the AC/DC adapter supplied by VeEX.
- Do not charge or use the battery pack if any mechanical damage is suspected (shock, impact, puncture, crack, etc).
- Do not continue charging the battery if it does not recharge within the expected charging time
- Storage: For long term storage, the battery pack should be stored at 20°C/68°F (room temperature), charged to about 30 to 50% of its capacity. Spare battery packs should be charged and used at least once a year to prevent over-discharge (rotate them regularly).
- It is recommended to charge and use battery packs at least every three months. Battery packs shall not go without recharging (reconditioning) for more than six months.
- After extended storage, battery packs may reach a deep discharge state or enter into sleep mode. For safety reasons, Li-ion

batteries in deep discharge state may limit the initial charging current (pre-recharge) before starting their regular fast charging cycle. The pre-charging state may take several hours.

- Air transportation of Li-ion batteries is regulated by United Nations' International Air Transportation Association (IATA) Dangerous Goods Regulations and by country-specific regulations. Please check local regulations and with common carriers before shipping Li-ion battery packs or products containing relatively large Li-ion battery packs.

Electrical Connectors

Telephone lines may carry dangerous voltages. Always connect the electrical test ports to known test interfaces which carry low level signals.

ESD: Electrostatic Discharge Sensitive Equipment

Test modules could be affected by electrostatic discharge. To minimize the risk of damage when replacing or handling test modules, make sure to follow proper ESD procedures and dissipate any electrostatic charge from your body and tools and the use proper grounding gear.



- Perform all work at a workplace that is protected against electrostatic build-up and discharging.
- Never touch any exposed contacts, printed circuit boards or electronic components.
- Always store test modules in ESD protected packaging.
- Wear ESD protection and grounding gear when:
 - Inserting, extracting, or handling test modules.
 - Inserting or removing SFPs, XFPs, QSFPs, or CFPs from the platform.
 - Connecting or disconnecting cables from modules or platform.

[Go back to TOC](#)

4.0 Basic Operations

Refer to the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for information about Basic Operations, Home menu, Launching Test Applications etc.

[Go back to top](#) [Go back to TOC](#)


5.0 Utilities

Refer to the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for information about all Utilities and Tools available.

[Go back to top](#) [Go back to TOC](#)

6.0 OTN, SDH/SONET, PDH/DSn Test Mode

Accessing Setup: Please see the Getting Started section in the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for information on launching Test Applications.

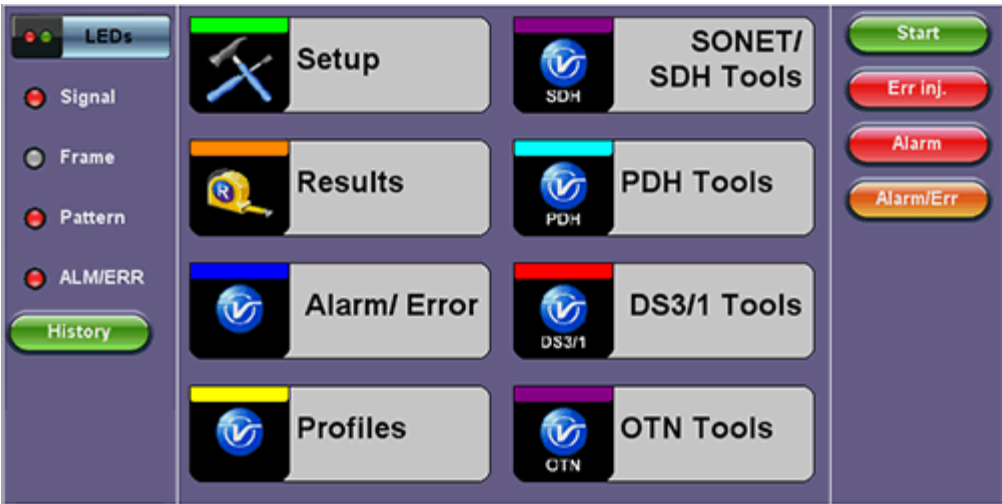


SONET Home Menu

The Setup page has four tabs for setting the OTN, SDH/SONET, and PDH parameters: Signal, Measurements, General, and Auto-Config tabs.

[Go back to top](#) [Go back to TOC](#)

6.1 Signal Overview

Tap on the **Signal** tab to set up the Transmitter and Receiver interfaces and associated test parameters prior to running a test.

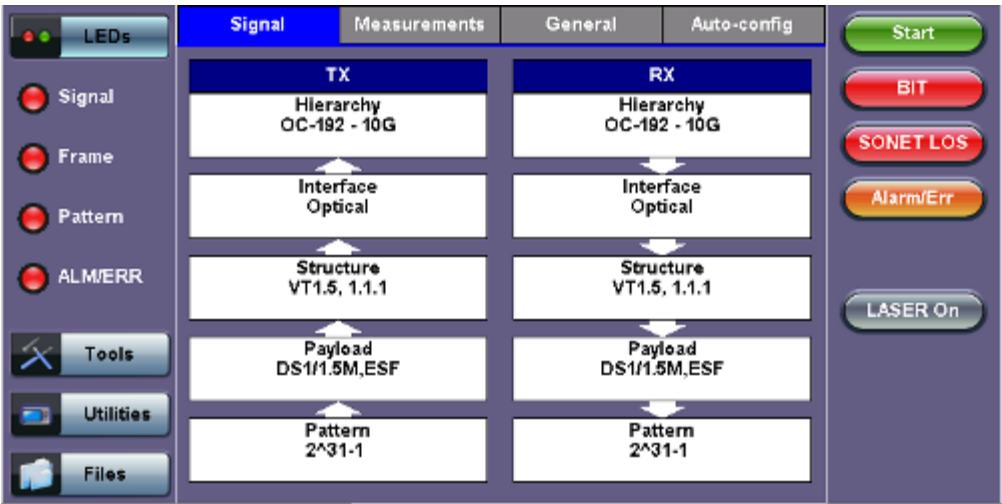


Signal tab

TX and RX Configurations

The Transmitter (TX) and Receiver (RX) configurations are grouped into a simple yet intuitive block diagram. The TX and RX signal parameters can be modified by tapping the applicable block which displays a new dialog window displaying additional input and specific selection settings. The Transmitter transmits as soon as a valid configuration is entered. The Receiver will check for a valid signal on its input so the measurement function is synchronized. When a test is not running, the LEDs will still indicate errors and alarms, but any other results displayed will be the results of a previous test.

Coupling TX and RX

When the TX and RX signal structures are required to be identical or symmetrical, coupling the Transmitter and Receiver is possible. Tap on the blue "TX" or "RX" header to bring up the Copy menu. Copy menu options are Coupled, Tx=Rx, and Rx=Tx.

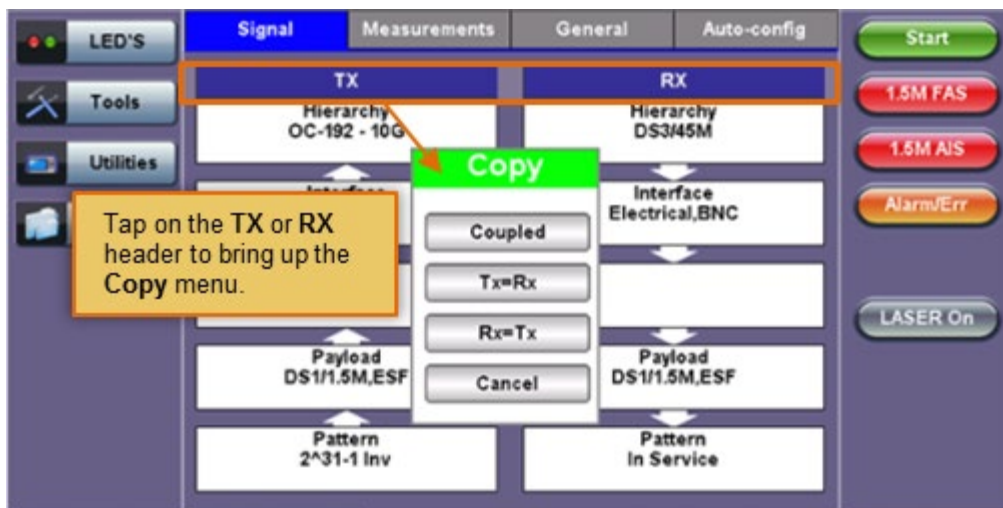

Accessing the Copy Menu

Copy Menu Options

- **Coupled:** TX and RX configurations are grouped as one block; TX and RX will have identical configuration. To uncouple TX and RX settings, tap on the blue "Coupled" heading and select Independent from the Copy Menu.
- **Tx=Rx:** Tx blocks will copy the settings made in the Rx blocks
- **Rx=Tx:** Rx blocks will copy the settings made in the Tx blocks

Changes to the Setup are applied immediately unless an invalid parameter has been selected.

When the TX and RX signal structures need to be independent or asymmetrical, uncoupling the transmitter and receiver is possible. For example, the TX could be sending a PRBS of $2^{23}-1$ in a VC12 carried within an optical STM-64, while the RX could be expecting to receive a PRBS of $2^{23}-1$ in a 2Mbps E1 signal.

Hierarchy: Allows the user to configure OTN/SDH, OTN/SONET, PDH signal and network types, including the bit rate and higher order mapping, if applicable.

Interface: Allows the user to select optical or electrical test ports. Optical test ports apply to OTN/SDH signal types only, while electrical ports can apply to STTM-1E or PDH signals. Clock source and offset options are also configured in this screen.


Structure: Applies to SDH/SONET signals only and allows the user to configure lower order mapping and the channel number.

Payload: Applies to both SDH/SONET and PDH signals and allows the user to configure low rate signal (if applicable) and associated framing.

Pattern: Applies to both SDH/SONET and PDH signals and allows the user to configure the test pattern to be used. Use the pattern drop-down box to select the test pattern which will be inserted into the transmitted signal. Pseudo Random Bit Sequences (PRBS) defined by ITU-T 0.150 and 0.151 standards, fixed words and 24-bit or 32 bit user defined patterns are available. **Note:** If the 32 bit user pattern entered is incorrect, the default pattern will be 0xFFFFFFFF.

Warning Message


While a test is running, it is possible to view the signal configuration, but it is not possible to change the setup or modify other measurement settings. This warning screen is only shown during initial setup to alert the user.

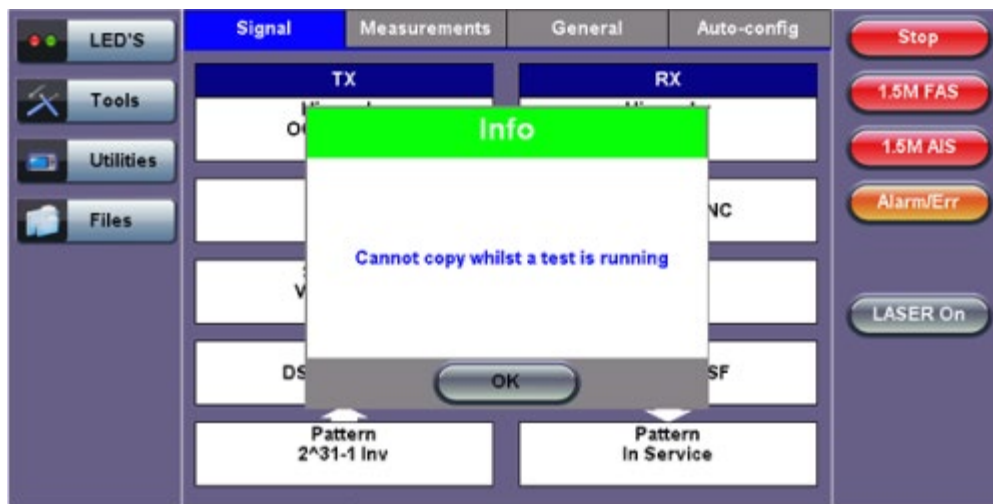

Warning Message

[Go back to top](#) [Go back to TOC](#)

6.2 Setup: PDH

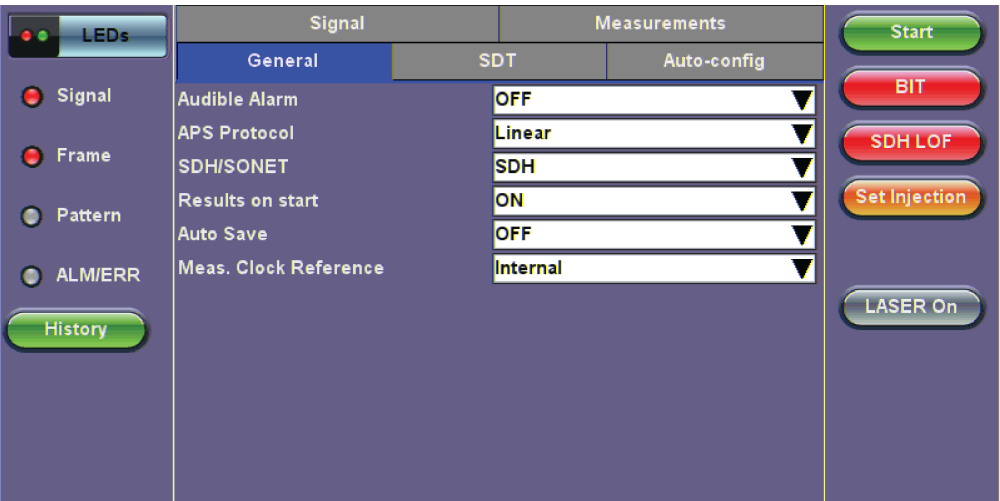

SDH/SONET selection from the General tab

SDH/SONET Selection from the General tab

Accessing PDH Testing

To display PDH options for the TX and RX block configuration,


- 1. Tap on the **General** tab from the Setup screen and select SDH from the **SDH/SONET** drop-down menu.
- 2. Tap on **Signal** tab > **Hierarchy** > **Network Type** and select PDH from the drop-down menu.

6.2.1 Transmitter/Receiver Setup

Depending on whether SDH or SONET (international or North American) terminology was selected from the **SDH/SONET** option under the **General** tab (see [SDH Setup](#)), TX and RX configuration screens will look slightly different. Nonetheless, they both feature the same options described in this section.

Hierarchy

Tapping the Hierarchy box opens the Hierarchy setup screen, allowing users to select the test interface and rate. The screen examples shown in this part of the manual depict and describe the settings for 1.5M or DS1 signals. Options for other bit rates and modes are described in text format.

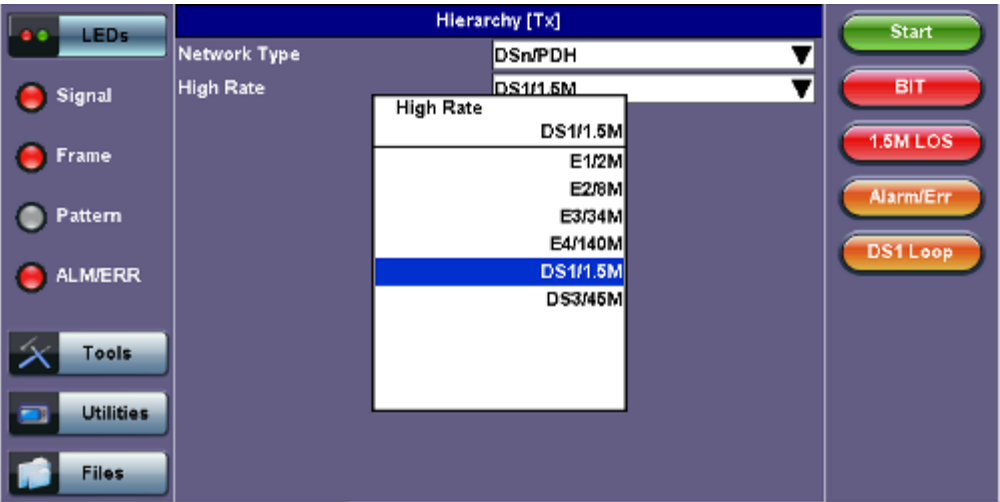


Tx Hierarchy Setup

- **Network Type:** Select PDH as the network type.
- **High Rate:** This is the physical data rate on the test port. Options are 1.5Mbps (DS1), 2Mbps (E1), 8Mbps (E2), 34Mbps (E3), 45Mbps (DS3), 140Mbps (E4). Refer to Low Rate for the logical test payload. Example: A DS3 (high) physical interface carrying a multiplexed DS1 (low) logical test channel.
- **Dual (RX only):** Dual DS1 or E1 Receiver Option ON/OFF: Receiver 2 sets exact same configuration as Receiver 1.

[Go back to top](#) [Go back to TOC](#)

Interface

Tapping the **Tx** Interface box opens the electrical Interface Setup screen shown below.

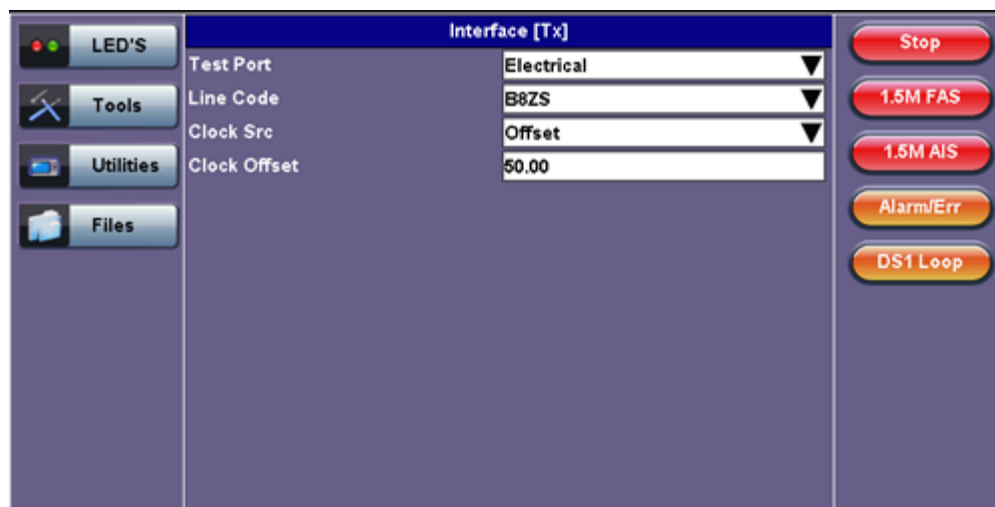

Tx Interface Setup

Test Port: If a PDH structure has been selected in the Hierarchy setup, the optical options will be disabled under the test port menu

Line Code (TX only): Line code options will vary depending on the High Rate chosen in Hierarchy setup

- In DS1 mode, the line code options default to B8ZS or AMI
- In DS3 mode, the line code is B3ZS or AMI
- In E1 mode, the line code options default to HDB3 or AMI. Normal E1 systems use HDB3 line coding while AMI is reserved for special applications
- In E3 mode, the line code is HDB3 or AMI
- In E4 mode, the line code is CMI

Tx Line Level (TX only; DS1, DS3 only): Simulates attenuation and distortion caused by the cable

- DS1/1.5M: (LBO) 0, -7.5dB, -15dB, -22.5dB
- DS3/45M: High, DSX, DSX 450', DSX 900'

Clock Source (TX only), can be configured as follows:

- **Internal clock:** The clock for the transmitter is derived from the internal quartz oscillator. The internal clock has an accuracy of +/- 3.5ppm conforming to G.812 recommendations.
- **External clock:** 1.5MHz, 2MHz, 1.5Mbps, and 2Mbps signals are present on the SMA connector. Only 2Mbps signals are available on the RX2 balanced and RX2 BNC unbalanced ports.
- **RX:** The clock for the transmitter is derived from the received signal and the jitter of the incoming signal is suppressed.
- **Offset:** The clock for the transmitter is derived from internal clock generator. It can change the frequency offset while measurements are running. Use numeric key to increase and decrease the frequency shift, up to 0.01ppm. Frequency offset: ±50ppm with 1, 0.1, 0.01ppm resolution.
- **Atomic 10MHz:** If the test set is fitted with the optional built-in atomic clock oscillator (+/-0.05ppb free-running), user can select this precision clock to transmit with highly accurate frequency. The atomic clock could be used in free-running or GPS disciplined modes.

Balanced: Check when using the RJ-48 or Bantam connectors. The transmitter output impedance will be set to 120 or 100 ohms. The Primary test port is "1" on top panel. If unchecked, the unit will assume that testing is taking place on the 75 ohms unbalanced BNC connector for E1 mode.

Termination (RX only): The sensitivity of the receiver can be set for ITU-T and ANSI standard termination, Protected Monitoring Points (PMP), or to High Impedance connections.

The options under the termination menu are as follows:

- **Terminated:** The received signal is terminated with a 75 ohm (BNC), 120 ohm (RJ48) or 100 ohm (Bantam) impedance enabling the unit to decode the signal over a wide range of cable losses.
- **Monitor:** To be used when the measurement is made at a Protected Monitoring Point (PMP) of network equipment. The PMP level can range between -20 and -26dB.
- **Bridge:** Available on in DS1 or E1 mode. Select this mode for a high impedance monitor test or when the receiver is connected directly in parallel to DS1 or E1 line carrying live traffic. The isolation circuit of the unit protects the DS1 or E1 signal from any possible disruption.

DS3/45M features the following termination options:


- High
- DSX
- Monitor
- Low

Equalization (RX only; DS1 only): Turn it on to compensate for cable distortion (applicable to certain DS1 application)

[Go back to top](#) [Go back to TOC](#)

Payload

Tapping the Payload box opens the Tx Payload Setup screen.

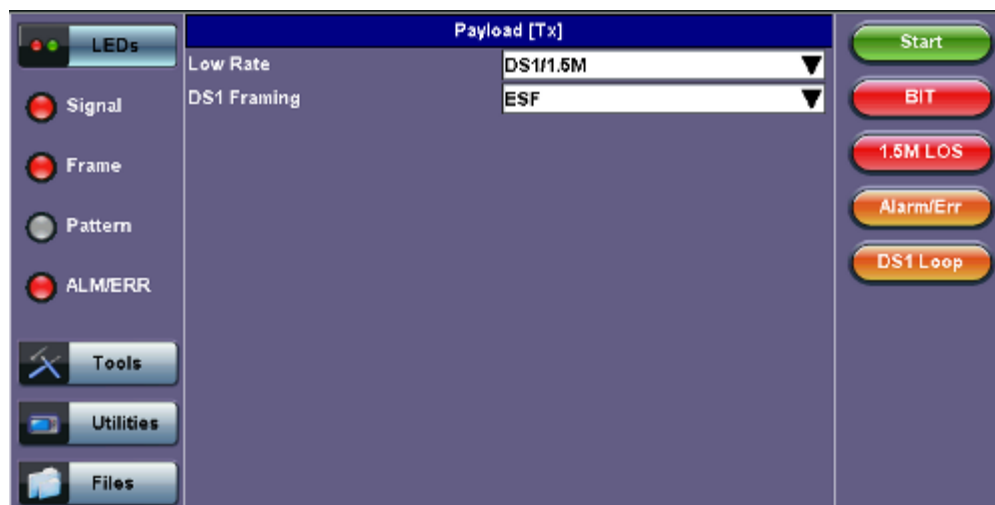

Tx Payload Setup

Low Rate (test payload):

In DS1 (1.544Mbps) mode, the options are 1.544M or Fractional DS1 (Nx64 or Nx56) where:

- 1.544M: Configures the transmitter for full rate testing at 1.544Mbps
- Fractional DS1 (Nx64 or Nx56): Configures the transmitter for fractional testing using any combination of N or M 64kbps or 56kbps timeslots (contiguous or non-contiguous timeslots)

In DS3 (45Mbps) mode, the options are 45M, 1.544M Mux (DS3/DS1 Mux) or Fractional DS1Mux (Nx64 or Nx56) where:

- 45M: Configures the transmitter for full rate testing at 45Mbps
- 1.544M (DS3/DS1 Mux): Configures the transmitter for full rate testing at 45Mbps signal with DS1 payloads (1 to 28 channels)

- Fractional DS1 Mux: Configures the transmitter for full rate testing at 45Mbps signal with DS1 payloads (1 to 28 channels) for fractional testing using N or M 64kbps or 56kbps timeslots (contiguous or non-contiguous timeslots)

In E1 (2Mbps) mode, the options are 2M, or Fractional E1 (N x64) where:

- 2M: Configures the transmitter for full rate testing at 2.048Mbps
- Fractional E1 (N x64): Configures the transmitter for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)

In E2 (8Mbps) mode, the options are 8M, 2M, or Fractional E1 (Nx64) where:

- 8M: Configures the transmitter for full rate testing at 8Mbps
- 2M (E3/E1 Mux): Configures the transmitter for full rate testing at 8Mbps signal with E1 payloads (1 to 16 channels)
- Fractional E1 (E1Mux w/ Nx64): Configures the transmitter for full rate testing at 8Mbps signal with E1 payloads (1 to 16 channels) for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)

In E3 (34Mbps) mode, the options are 34M, 2M Mux (E3/E1 Mux), 8M, or Fractional E1 (Nx64) Mux where:

- 34M: Configures the transmitter for full rate testing at 34Mbps
- 2M (E3/E1 Mux): Configures the transmitter for full rate testing at 34Mbps signal with E1 payloads (1 to 16 channels)
- 8M (E3/E1 Mux): Configures the transmitter for full rate testing at 34Mbps signal with E1 payloads (1 to 16 channels)
- Fractional E1 (E3/E1Mux w/ Nx64): Configures the transmitter for full rate testing at 34Mbps signal with E1 payloads (1 to 16 channels) for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)

In E4 (140Mbps) mode, the option is 140M. This configures the transmitter for full rate testing at 140Mbps.

Framing:

- In DS1 mode, the options are unframed, D4 (SF) and ANSI T1.107 (ESF).
- In DS3 mode, the options are unframed, M13 and C-bit.
- In E1 mode, the options are unframed, PCM31, PCM31C, PCM30, and PCM30C. Framing conforms to G.704 and G.706 recommendations and are briefly described below. The C indicates whether the CRC4 checking is turned ON or OFF.
- In E2 mode, the option is framed G.742.
- In E3 and E4 mode, the options are unframed, framed G.751.

For Nx64 and Nx56 rates:

Select the timeslot by tapping the applicable boxes. Deselect the time slot by tapping the box again.

- **Unused:** AIS, Idle
- **Channel:** Input channel number to structure test payload.
- **Other channels:** Unequipped—used to fill up unused (idle) timeslots, broadcast



Unframed signal types are not supported in the Nx64 fractional mode because framing is required to determine the location of timeslots.



Timeslots 1-31 correspond to channels 1-31 when using PCM-31 framing. When using PCM-30 framing, timeslots 1-15 correspond to channels 1-15, while timeslots 17-31 correspond to channels 16-30. Timeslot 16 is used for the Multi Frame Alignment Signal.

[Go back to top](#) [Go back to TOC](#)

Pattern

Tapping the **Pattern** box opens the Tx Pattern Setup screen shown below. Any binary test sequence can be applied to all PDH/DSn and SDH/SONET rates; however, ITU-T recommends certain sequences depending on the bit rate under test.



Tx Pattern Setup

Out of Service (RX only): Should be selected if the incoming signal is expected to contain a known test pattern. Deselect this option if signal is expected to contain live network traffic – this will disable the pattern detection process to avoid reporting constant LSS (Loss of test Sequence Synchronization).

Pattern: Use the pattern drop-down box to select the test pattern which will be inserted into the transmitted signal. Pseudo Random Bit Sequences (PRBS) defined by ITU-T 0.150 and 0.151 standards, Quasi-Random Signal Source (QRSS). Short sequences, fixed words and 24-bit or 32-bit user defined patterns are available. Up to 10 fixed 32-bit test patterns can be programmed using hexadecimals. **Note:** If the 32-bit user pattern entered is incorrect, the default pattern will be 0xFFFFFFFF. The 24-bit pattern must be entered in binary format.


Invert: Inversion of polarity is also available.

 ITU-T specification 0.150 recommends the following test patterns:

Test Sequences for PDH signals according to ITU-T 0.150 recommendation		
PRBS	Zeros	Application
2 ⁹ -1	8	Error measurements for bit rates ≤ 14,400 kbits/s
2 ¹¹ -1	10	Error & jitter measurements for bit rates of n x 64 kbit/s & 64 kbits/s
2 ¹⁵ -1	15	Error & jitter measurements for T1, E1, E3 and DS3 bit rates
2 ²⁰ -1	14	Error & jitter measurements for T1, E1, E3 and DS3 bit rates
2 ²³ -1	23	Error & jitter measurements for E3 and E4 bit rates
2 ³¹ -1	31	Delay measurements for E3, DS3 and E4 bit rates

[Go back to top](#) [Go back to TOC](#)

6.3 Setup: SDH

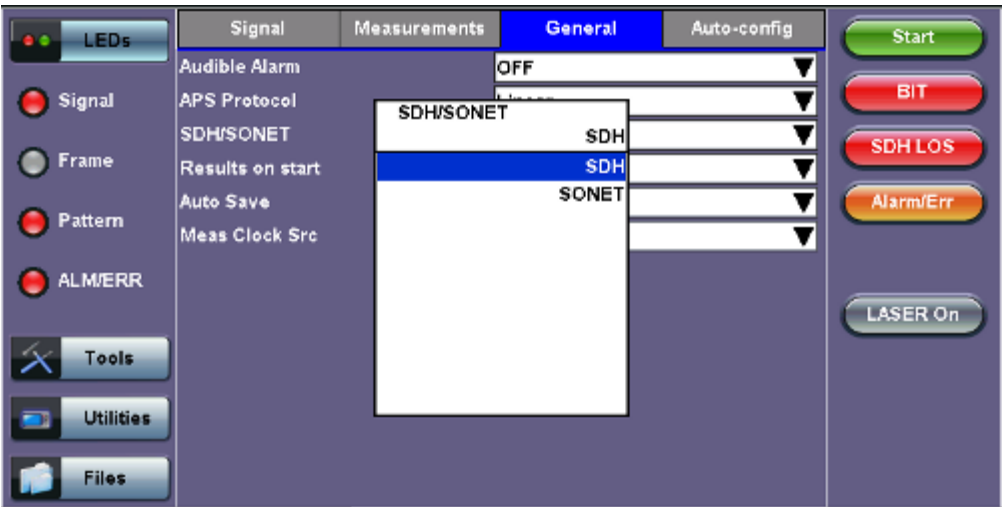

SDH/SONET selection from the General tab

Accessing SDH Testing

To display SDH options for the TX and RX block configuration,

1. Tap on the **General** tab from the Setup screen and select SDH from the **SDH/SONET** drop-down menu.
2. Tap on **Signal** tab > **Hierarchy** > **Network Type** and select SDH from the drop-down menu.

 Depending on whether SDH or SONET is selected from the **SDH/SONET** option under the **General** tab, TX and RX configuration screens will look slightly different.

[Go back to top](#) [Go back to TOC](#)


6.3.1 Transmitter Setup

This section of the manual describes the SDH configuration capabilities. The block diagram of the Tx and Rx structure is described in [Signal Overview](#).

 Depending on the platform and module(s) installed, available options will vary.

Hierarchy

Tapping the **Hierarchy** box opens the Tx Hierarchy Setup screen.

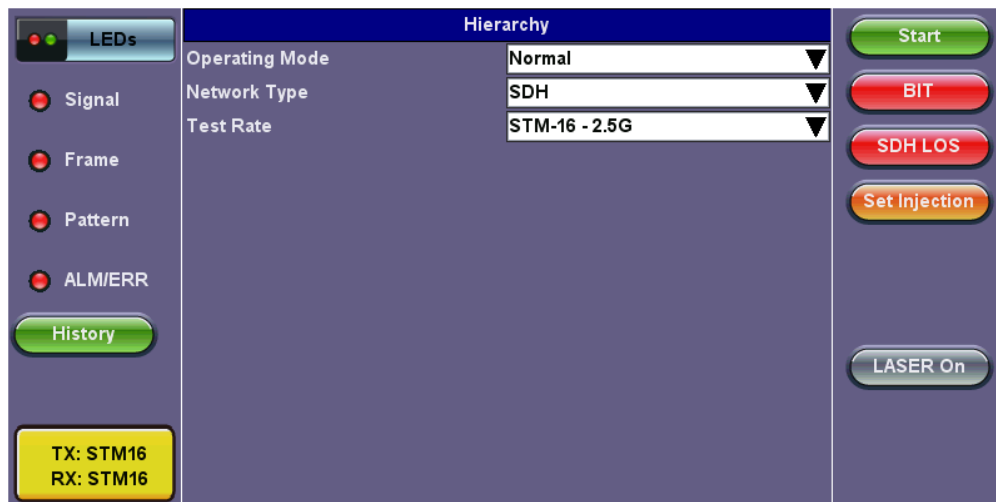

Coupled Hierarchy - Normal Operating Mode

- **Operating Mode:** Normal, Payload, or Transparent.
 - **Normal Mode:** Unit working as normal SDH mode.
 - **Payload Through Mode:** Overhead overwrite Editing Thru mode allows for some intrusive error and alarm injection through overhead manipulation.
 - **Transparent Through Mode:** All the traffic goes through the unit untouched and the unit can monitor it. It is comparable to Monitor mode with a 10/90 splitter. In Transparent mode, the unit regenerates the signal in amplitude. The clock is recovered from the received signal.


Through modes are used to test network behavior under certain conditions, such as alarms. To select Payload Through, the payload has to be the same for the relevant ports.

- **Network Type:** Select SDH as the network type.
- **Test Rate:** Select a test rate.

[Go back to top](#) [Go back to TOC](#)

Interface

Tapping the **Tx Interface** box opens the Tx Interface Setup screen.

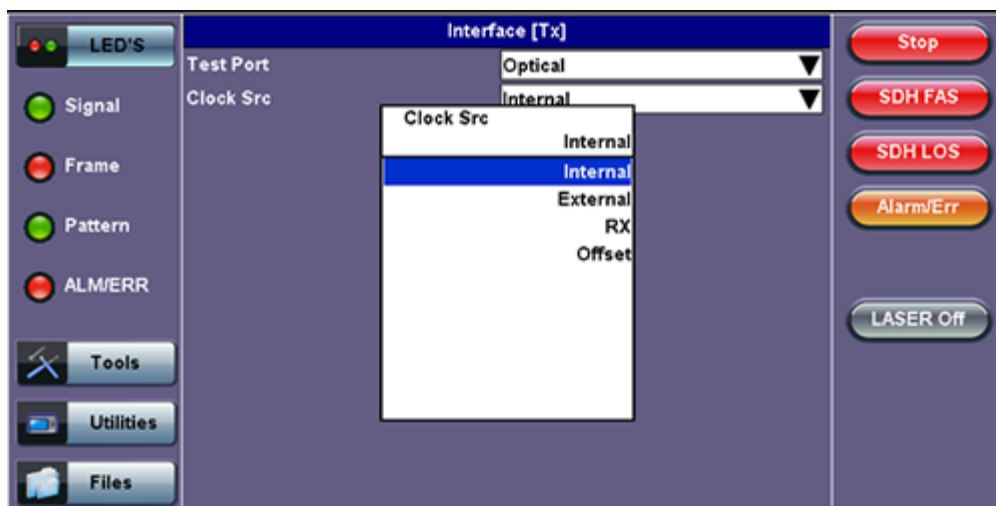

Tx Interface Setup

- **Test Port:** Optical or Electrical.
 - Optical interface is available for STM-0, STM-1, STM-4, STM-16 and STM-64 signals.
 - Electrical interface is available for STM-0E, STM-1E signals.
- **Clock Source:** Can be configured as follows:
 - **Internal clock:** The clock for the transmitter is derived from the internal clock. The internal clock has an accuracy of

+/- 3.5ppm conforming to G.812 recommendations.

- **External clock:** The clock for the transmitter is derived from a 1.5MHz, 2MHz, 1.5Mbps, or 2Mbps signal on the SMA.
- **Rx:** The clock for the transmitter is derived from the received signal, and the jitter of the incoming signal is suppressed.
- **Offset:** The clock for the transmitter is derived from the internal clock generator. It can change the offset while measurements are running. Use the numeric key to increase and decrease the frequency shift, up to 0.01ppm. Frequency offset: $\pm 50\text{ppm}$ with 1, 0.1, 0.01ppm resolution.
- **Atomic 10 MHz:** Built-in Atomic Clock option provides 10 MHz reference and can be disciplined to the built-in GPS receiver option.

[Go back to top](#) [Go back to TOC](#)



Structure

Tapping the **Tx Structure** box opens the Tx Structure Setup screen which shows two display modes: Text mode and Graphical mode. Tap on the **Text/Graphical** button to switch between the two modes.

Structure [Tx]	
SDH Mapping	AU-3
VC Mapping	VC3
Bulk	OFF
Tributary	34M
Channel Selection	
STM-N	1
AU-3	1

Tx Structure Setup - Text Mode

SDH Mapping: Both AU-4 and AU-3 signal mappings per G.707 recommendations are supported. The multiplexing structure is shown below.

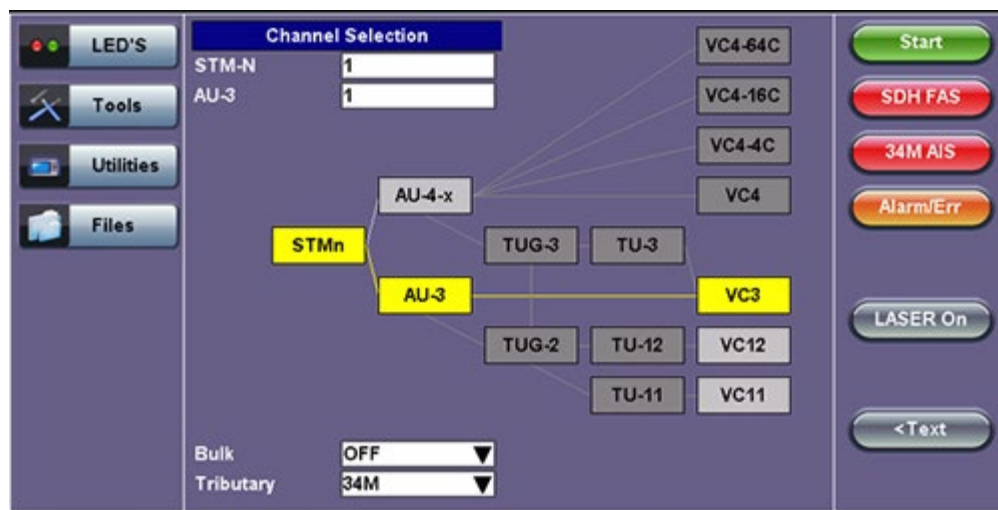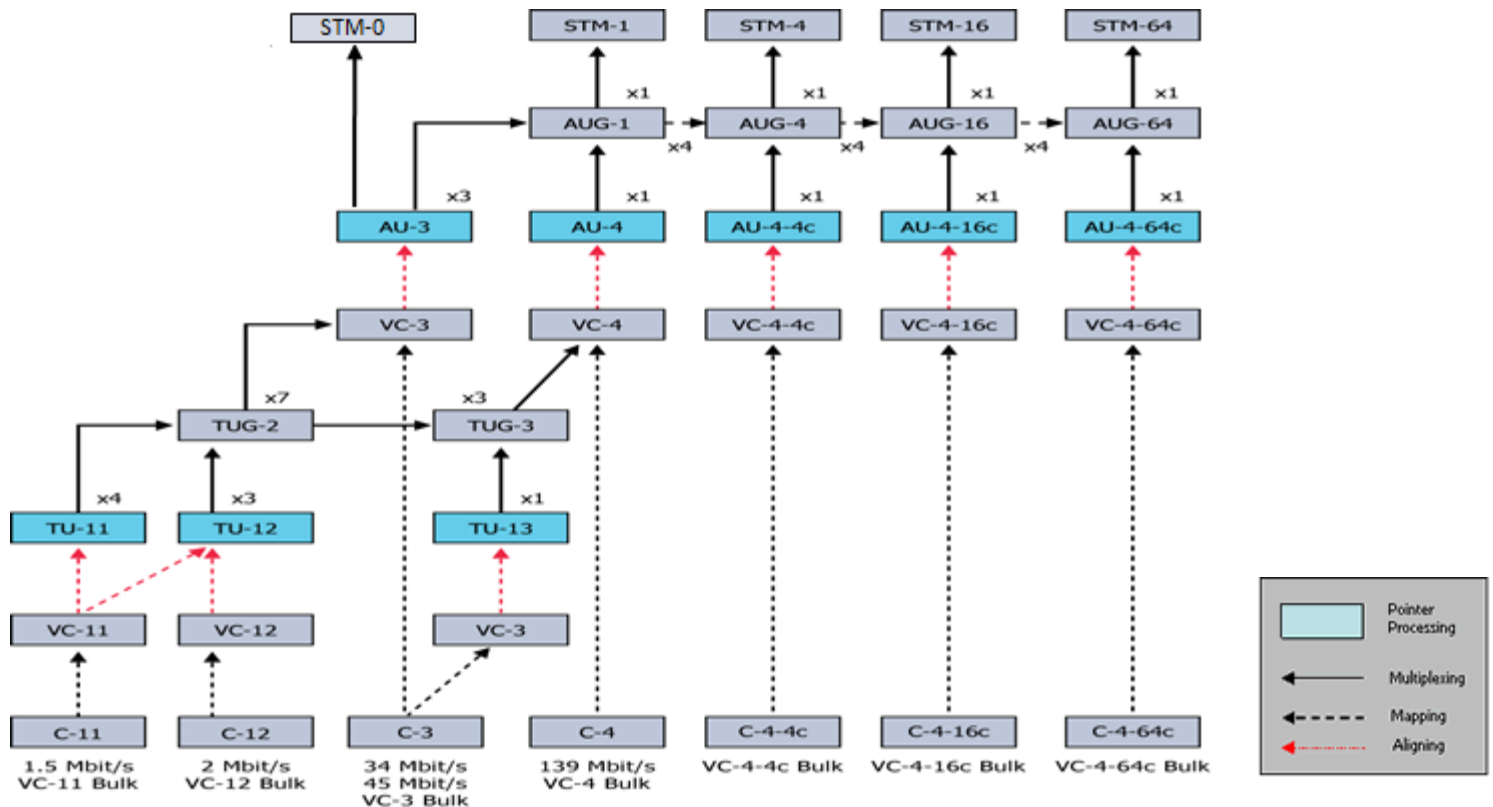

Tx Structure Setup - Graphical Mode

- **AU4 Mapping:** VC4-64C, VC4-16C, VC4-4C, VC4, VC3, and VC12 are available.
- **AU3 Mapping:** VC3, VC12, and TU11/VC11 are available.
- **Bulk:** Tap the check box to enable the setting. In bulk mode, the entire VT container is filled with a test pattern per ITU-T 0.181 recommendations.
- **Tributary:** Preset to DS1, E1, DS3, and E3 rates depending upon the options and mapping.

Channel Selection: The Tx channel is selected by entering the STM-N, TUG-3, TUG-2, and TU-12 numbers for the channel.

- **TUG:** A Tributary Unit Group is the structure generated by combining several lower level tributaries into the next higher level tributary
- **TU-12:** Each TU-12 frame consists of 36 bytes, structured as 4 columns of 9 bytes
 - At a frame rate of 8000Hz, these bytes provide a transport capacity of 2.304Mbps and accommodate the mapping of a 2.048Mbps signal
 - 63 x TU-12s may be multiplexed into a STM-1 VC-4

The tributary numbering used above is per ITU-T G.707 standard.

The high order paths are named using a C, B, A convention as follows:

- C: The AUG-4 are numbered 1 to 4
- B: The AUG-1 are numbered 1 to 4
- A: The AU-3 are numbered 1 to 3

Thus the naming convention per SDH rate is as follows:

- For STM-16: [C, B, A] convention is used
- For STM-4: [B, A] convention is used
- For STM-1 using AU-3 mapping: [A] convention is used
- For STM-1 using AU-4 mapping: [0] convention is used


The low order paths are named using a K, L, M convention as follows:

- K: TUG-3 are numbered 1 to 3
- L: TUG-2 are numbered 1 to 7
- M: TU-11, TU12, within the TUG-2 are numbered 1 to 4

[Go back to top](#) [Go back to TOC](#)

Payload

Tapping the **Tx Payload** box opens the Tx Payload Setup screen.

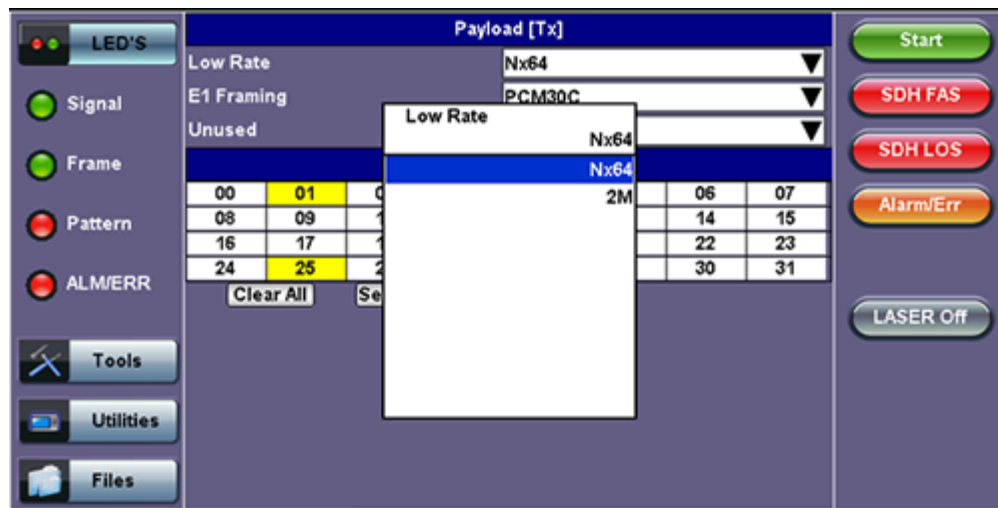

Tx Payload Setup

Rate: Depends on mapping selected.

In TU11/VC11 mapping mode, the Low Rate options are 1.544M or Fractional DS1 (Nx64 or Nx56) where:

- 1.544M: Configures the transmitter for full rate testing at 1.544Mbps
- Fractional DS1 (Nx64 or Nx56): Configures the transmitter for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)

In VC3 mapping mode/Tributary set to DS3, the Low Rate options are 45M, 1.544M Mux (DS3/DS1 Mux), or Fractional DS1 (Nx64 or Nx56) Mux where:

- 45M: Configures the transmitter for full rate testing at 45Mbps
- 1.544M Mux mode: Configures the transmitter for full rate testing at 45Mbps signal with DS1 payloads (1 to 28 channels)
- Fractional DS1 Mux mode: Configures the transmitter for full rate testing at 45Mbps signal with DS1 payloads (1 to 28 channels) for fractional testing using N or M 64kbps or 56kbps timeslots (contiguous or non-contiguous timeslots)

In VC12 mapping mode, the Low Rate options are 2M or Fractional E1 (N x64) where:

- 2M: Configures the transmitter for full rate testing at 2.048Mbps
- Fractional E1: Configures the transmitter for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous)

timeslots)

In VC3 mapping mode/Tributary set to E3, the Low Rate option are 34M or 2M Mux (E3//E1 Mux) or Fractional E1 Mux (E3//E1 Mux w/Nx64) where:

- 34M: Configures the transmitter for full rate testing at 34Mbps
- 2M Mux mode: Configures the transmitter for full rate testing at 34Mbps signal with E1 payloads (1 to 16 channels)
- Fractional E1 Mux mode: Configures the transmitter for full rate testing at 34Mbps signal with E1 payloads (1 to 16 channels) for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)


Framing: Depends on low rate selected:

- In DS1 mode, the options are unframed, D4 (SF), and ANSI T1.107 (ESF).
- In DS3 mode, the options are unframed, M13, and C-Parity.
- In E1 mode, the options are unframed, PCM31, PCM31C, PCM30, and PCM30C. Framing conforms to G.704 and G.706 recommendations and are briefly described below.
- In E3 mode, the options are unframed, framed G.751.

[Go back to top](#) [Go back to TOC](#)

Pattern

Tapping the **Tx Pattern** box opens the Tx Pattern Setup screen.

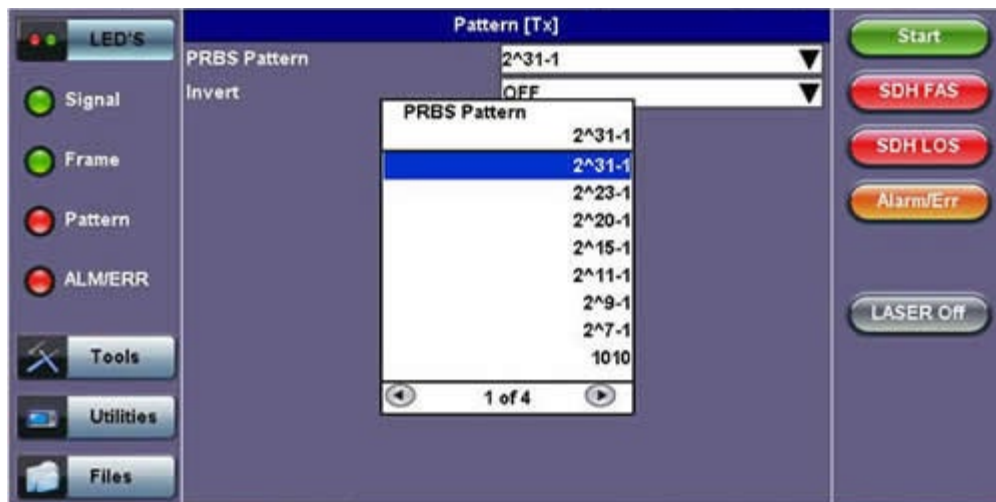

Tx Pattern Setup

- **PRBS Pattern:** Use the pattern drop-down box to select the test pattern which will be inserted into the transmitted signal. Pseudo Random Bit Sequences (PRBS) defined by ITU-T 0.150 and 0.151 standards, fixed words and 24-bit or 32 bit user defined patterns are available. **Note:** If the 32 bit user pattern entered is incorrect, the default pattern will be 0xFFFFFFFF.
- **Invert:** Inversion of polarity is also available.

[Go back to top](#) [Go back to TOC](#)

6.3.2 Receiver Setup

Hierarchy

Tapping the **Hierarchy** setup box opens the Rx Hierarchy screen. The Hierarchy setup options for the Rx are the same as for the Tx described previously.

Interface

Tapping the **Interface** setup box opens the Rx Interface screen. The Interface setup options for the Rx are the same as for the Tx described previously, except for clock offset, which is only available in Tx.



Remember to use an optical attenuator to prevent receiver overload or damage – refer to the SFP chart below to determine safe levels. Avoid looping back the Tx and Rx on a 1550nm XFP or SFP using a patchcord only – this will damage the SFP.



Structure and Payload


SDH Rx Structure and Payload configurations are the same as for SDH Tx setup described previously.

Pattern

Tapping the **Pattern** box opens the Rx Pattern setup screen. The pattern setup options for the Rx are the same as for the Tx described previously, except for the Out of Service selection, which should be selected if the incoming signal is expected to contain a known test pattern. Deselect this option if signal is expected to contain live traffic.

[Go back to top](#) [Go back to TOC](#)

6.4 Setup: SONET

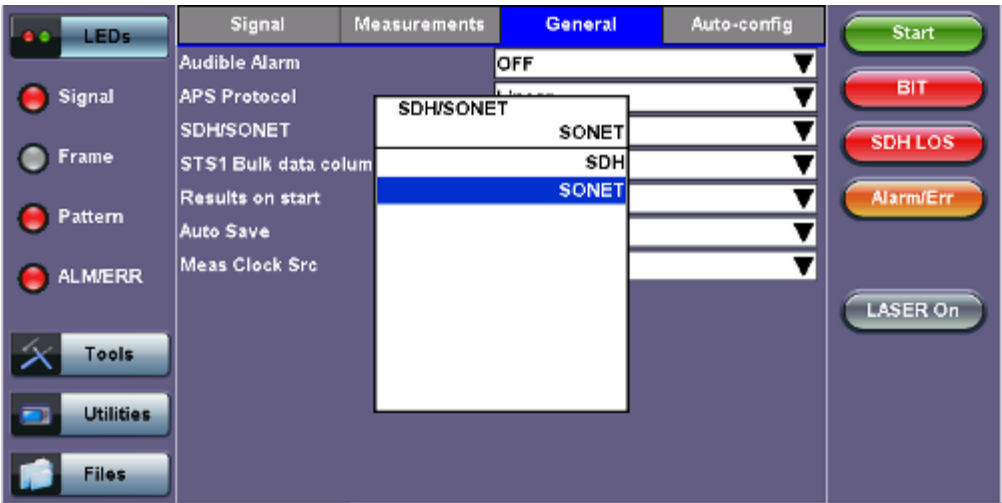

Selecting SONET from the General tab

Setting up SONET Testing

To display SONET options for the TX and RX block configuration, tap on the **General** tab from the Setup screen and select SONET from the **SDH/SONET** drop-down menu.

Depending on whether SDH or SONET is selected from the **SDH/SONET** option under the **General** tab, TX and RX configuration screens will look slightly different.

[Go back to top](#) [Go back to TOC](#)


6.4.1 Transmitter Setup

This section of the manual describes the SONET configuration capabilities. The block diagram of the Tx and Rx structure is described in [Signal Overview](#).

Depending on the platform and module(s) installed, available options will vary.

Hierarchy

Tapping the **Hierarchy** box opens the Tx Hierarchy Setup screen.

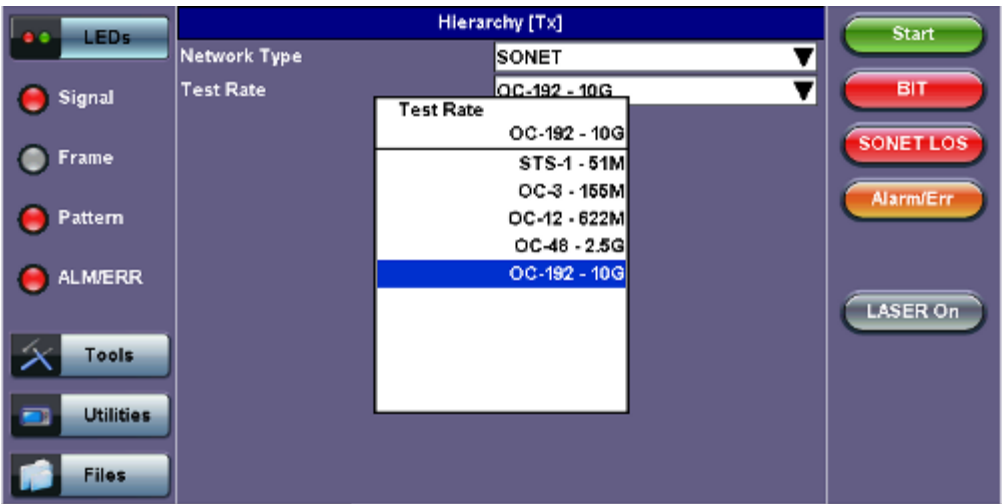

Coupled Hierarchy Setup

- **Operating Through Mode:**

- **Normal Mode:** Unit working as normal SONET mode.
- **Payload Through Mode:** Overhead overwrite Editing Thru mode allows for some intrusive error and alarm injection through overhead manipulation.
- **Transparent Through Mode:** All the traffic goes through the unit untouched and the unit can monitor it. It is comparable to Monitor Mode with a 10/90 splitter. In Transparent Mode, the unit regenerates the signal in amplitude. The clock is recovered from the received signal.


Through modes are used to test network behavior under certain conditions, such as alarms and APS. To select Payload Through, the payload has to be the same for the relevant ports.

- **Network Type:** Only optical interface selection is available on the unit.
- **Test Rate:** Options are STS-1, OC-3, OC-12, OC-48, and OC-192.

[Go back to top](#) [Go back to TOC](#)

Interface

Tapping the **Tx** Interface box opens the Tx Interface Setup screen. In this screen both electrical and optical options can be selected.

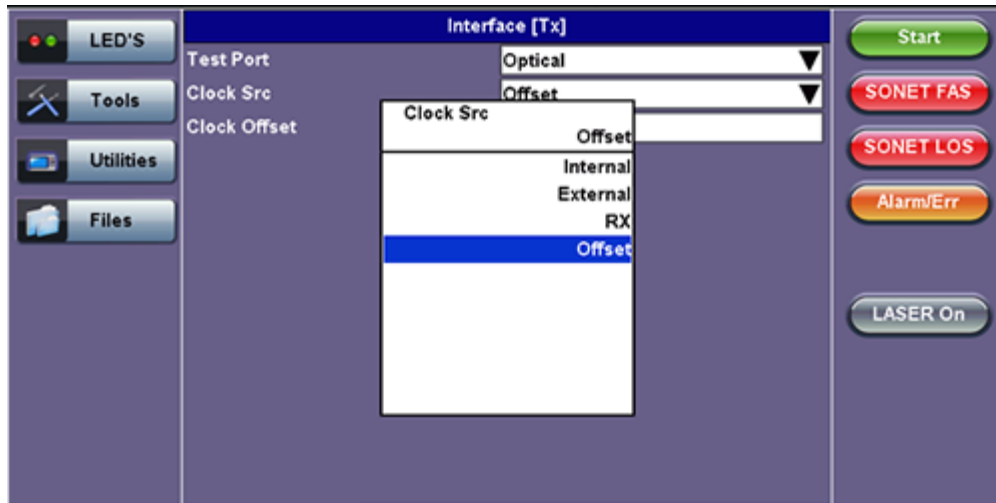

Tx Interface Setup

Test Port: Optical or Electrical.

- Optical interface is available for OC-1, OC-3, OC-12, OC-48 and OC-192 signals.
- Electrical interface is available for STS-1 and STS-3 signals.

Clock Source: Can be configured as follows.

- **Internal clock:** The clock for the transmitter is derived from the internal clock. The internal clock has an accuracy of +/- 3.5ppm conforming to G.812 recommendations.
- **External clock:** The clock for the transmitter is derived from a 1.5MHz, 2MHz, 1.5Mbps, or 2Mbps on the SMA.
- **Rx:** The clock for the transmitter is derived from the received signal, and the jitter of the incoming signal is suppressed.
- **Offset:** The clock for the transmitter is derived from internal clock generator. It can change the offset while measurements are running. Use the numeric key to increase and decrease the frequency shift, up to 0.01ppm. Frequency offset: ± 50 ppm with 1, 0.1, 0.01ppm resolution.

[Go back to top](#) [Go back to TOC](#)

Structure

Tapping the **Tx Structure** box opens the Tx Structure Setup screen which shows two display modes: Text mode and Graphical mode. Tap on the **Text/Graphical** button to switch between the two modes.

Structure [Tx]	
Mapping	STS1
Bulk	OFF
Tributary	E3/34M
Channel Selection	
STS-N	1

LED'S

Tools

Utilities

Files

Start

SONET FAS

SONET LOS


Alarm/Err


LASER On

<Graphical

Tx Structure Setup - Text Mode

Mapping: STS-192C, STS-48C, STS-12C, STS-3C, STS-1 and VT1.5 is available. VT-2 is optional. STS mappings per Bellcore GR-253 and ANSI T1.105 recommendations are supported. The multiplexing structure is shown below.

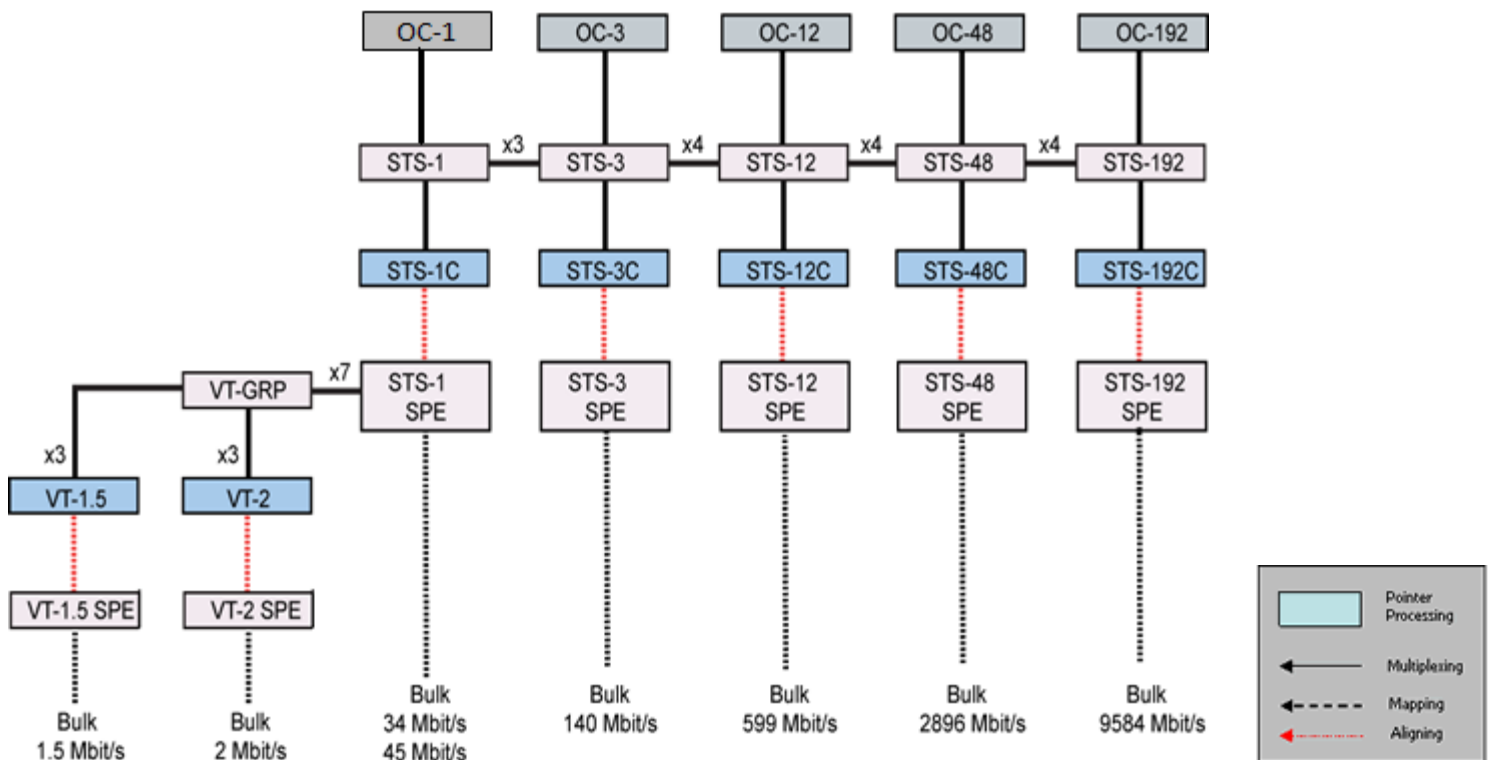


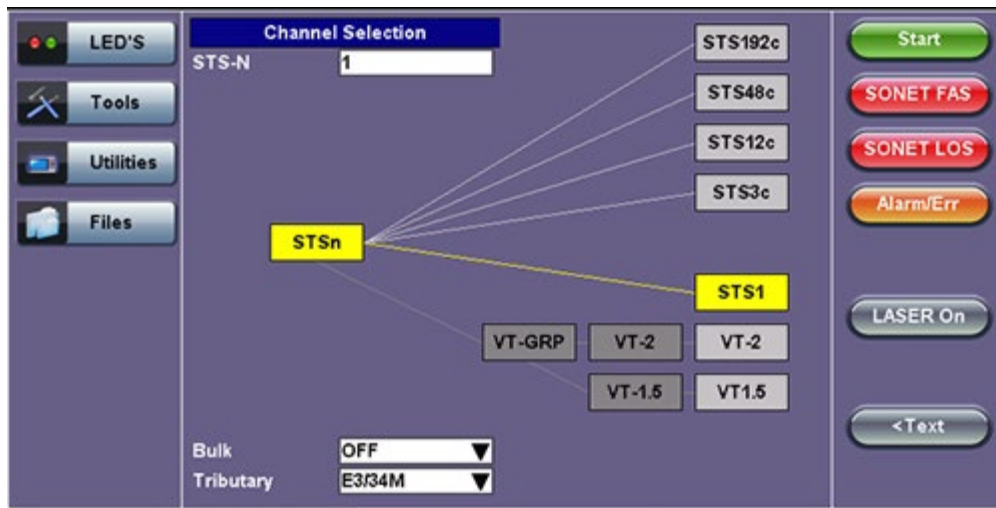

Tx Structure Setup - Graphical Mode

- **Bulk:** Tap the check box to enable the setting. In Bulk mode, the entire VT container is filled with a test pattern per ITU-T 0.181 recommendations.
- **Tributary:** Preset to DS1, E1, DS3, and E3 depending upon the options and mapping.
- **Other channels:** Unequipped—used to fill up unused (idle) timeslots, broadcast
- **Sync:** Async, Bit, Byte

Channel Selection: The Tx channel is selected by entering the STS-N, VT-GRP, and VT-1.5 SPE channel.

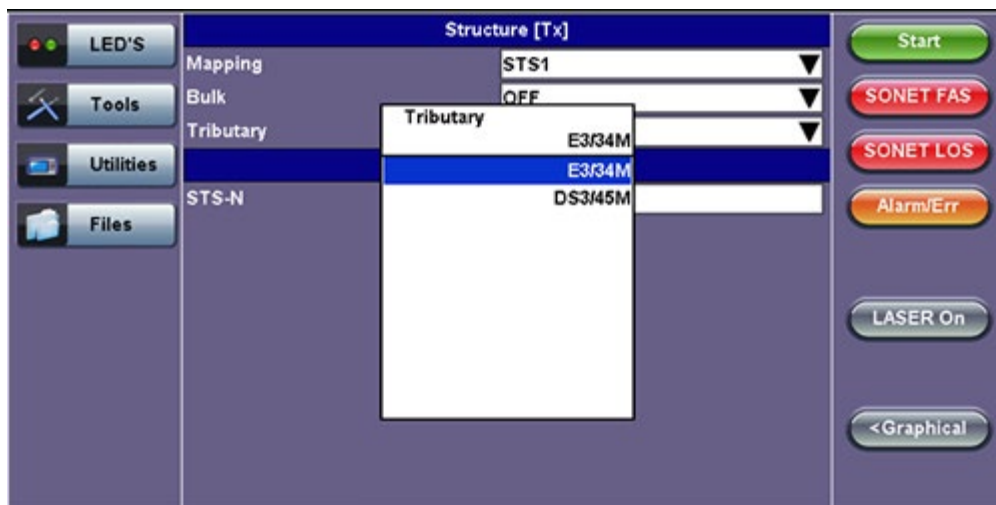

Tx Structure Setup - Tributary

- **VT-GRP:** In order to carry a mixed size of VTs in a STS-1 SPE in an efficient manner, VT Group (VTG) is defined. The size of the VTG is 12 columns, which is the least common multiple of the four sizes of VTs. Only one type of VT can be contained within each VTG. Therefore, a VTG can be formed by byte interleave multiplexing 3 VT-2s and 4 VT-1.5s
- **VT-1.5:** Each VT 1.5 frame consists of 27 bytes (3 columns of 9 bytes) These bytes provide a transport capacity of 1.728Mbps, and thus, can accommodate the transport of a DS1 signal. 28 VT 1.5s may be multiplexed into the STS-1 SPE.
- **VT-2:** Each VT-2 frame consists of 36 bytes (4 columns of 9 bytes) These bytes provide a transport capacity of 2.304Mbps, and can accommodate the transport one E1 signal. 21 VT-2s may be multiplexed into the STS-1 SPE.
- The tributary numbering used above is per Bellcore GR.253/ANSI T1.105 standard.

[Go back to top](#) [Go back to TOC](#)

Payload

Tapping the **Tx Payload** box opens the Tx Payload Setup screen.

Timeslot Selection							
00	01	02	03	04	05	06	07
08	09	10	11	12	13	14	15
16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31

Tx Payload Setup

Rate: Depends on mapping selected.

In VT-1.5 mapping mode, The Low Rate options are 1.544M or Fractional DS1 (Nx64 or Nx56) where:

- 1.544M: Configures the transmitter for full rate testing at 1.544Mbps

Fractional DS1 (Nx64 or Nx56): Configures the transmitter for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)

In STS-1 mapping mode/Tributary set to DS3, the Low Rate option are 45M or 1.544M Mux (DS3/DS1 Mux) or Fractional DS1 (Nx64 or Nx56) Mux where:

- 45M: Configures the transmitter for full rate testing at 45Mbps
- 1.544M Mux mode: Configures the transmitter for full rate testing at 45Mbps signal with DS1 payloads (1 to 28 channels)

Fractional DS1 Mux mode: Configures the transmitter for full rate testing at 45Mbps signal with DS1 payloads (1 to 28 channels) for fractional testing using N or M 64kbps or 56kbps timeslots (contiguous or non-contiguous timeslots)

In VT-2 mapping mode, the Low Rate options are 2M or Fractional E1 (Nx64) where:

- 2M: Configures the transmitter for full rate testing at 2.048Mbps
- Fractional E1: Configures the transmitter for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)

In STS-1 mapping mode/Tributary set to E3, the Low Rate options are 34M or 2M Mux (E3/E1 Mux) or Fractional E1 Mux (E3/E1 Mux w/Nx64) where:

- 34M: Configures the transmitter for full rate testing at 34Mbps
- 2M Mux mode: Configures the transmitter for full rate testing at 34Mbps signal with E1 payloads (1 to 16 channels)
- Fractional E1 Mux mode: Configures the transmitter for full rate testing at 34Mbps signal with E1 payloads (1 to 16 channels) for fractional testing using N or M 64kbps timeslots (contiguous or non-contiguous timeslots)

Framing: Depends on low rate selected:

In DS1 mode, the options are unframed, D4 (SF) and ANSI T1.107 (ESF).

In DS3 mode, the options are unframed, M13 and C-Parity.

In E1 mode, the options are unframed, PCM31, PCM31C, PCM30, and PCM30C. Framing conforms to G.704 and G.706 recommendations and are briefly described below.

In E3 mode, the options are unframed, framed G.751.

Pattern

Tapping the **Tx Pattern** box opens the Tx Pattern Setup screen.



Tx Pattern Setup

Pattern: Use the pattern drop-down box to select the test pattern which will be inserted into the transmitted signal. Pseudo Random Bit Sequences (PRBS) defined by ITU-T 0.150 and 0.151 standards, fixed words and 24-bit or 32 bit user defined patterns are available.

 If the 32 bit user pattern entered is incorrect, the default pattern will be 0xFFFFFFFF.

Invert: Inversion of polarity is also available.

6.4.2 Receiver Setup

Hierarchy

Tapping the **Hierarchy** setup box opens the Rx Hierarchy screen. The Hierarchy setup options for the Rx are the same as for the Tx described previously.

Interface

Tapping the **Interface** setup box opens the Rx Interface screen. The Interface setup options for the Rx are the same as for the Tx described previously, except for clock offset, which is not possible.

 Remember to use an optical attenuator to prevent receiver overload or damage – refer to the SFP chart below to determine safe levels. Avoid looping back the Tx and Rx on a 1550nm XFP or SFP using a patchcord only as this will damage the SFP.



Structure

Tapping the Structure setup box opens the Rx Structure screen. The Structure setup options for the Rx are the same as for the Tx described previously.

Payload


Tapping the Payload setup box opens the Rx Payload screen. The Payload setup options for the Rx are the same as for the SONET Tx setup described previously.

Pattern

Tapping the Pattern box opens the Rx Pattern setup screen. The pattern setup options for the Rx are the same as for the Tx described previously, except for the Out of Service selection, which should be selected if the incoming signal is expected to contain a known test pattern. Deselect this option if signal is expected to contain live traffic.

[Go back to top](#) [Go back to TOC](#)

6.5 Setup: OTN/SDH

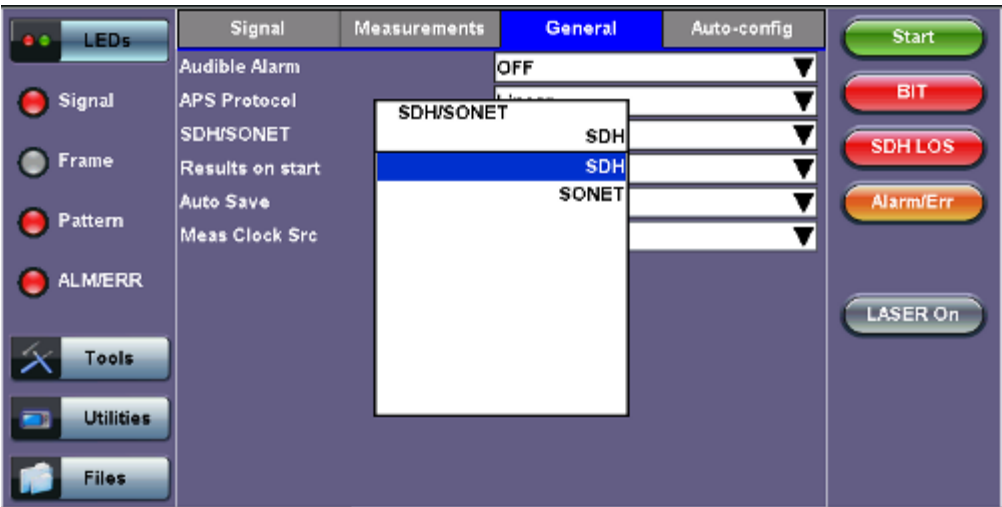

Selecting SDH from the General tab

Setting up OTN/SDH

To verify that the Tx and Rx block diagrams are OTN/SDH, verify that SDH is selected from the **SDH/SONET** drop-down menu under the **General** tab.


[Go back to top](#) [Go back to TOC](#)

6.5.1 OTN Transmitter Setup

This section of the manual describes the OTN configuration capabilities. The block diagram of the Tx and Rx structure has been described in [6.0 Setup](#).

Hierarchy

Tapping the **Hierarchy** box opens the Tx Hierarchy Setup screen.

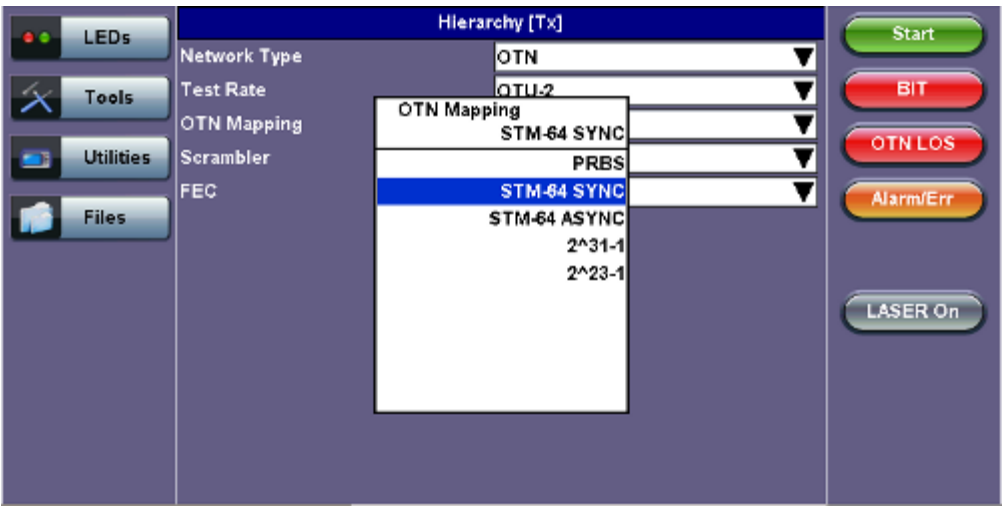


Coupled Hierarchy Setup

- **Network Type:** In the OTN mode, only optical interface options are available
- **Test Rate:** OTU-1 and OTU-2
- **OPU Rate:** OPU-0, OPU-1, OPU-2 (available for OTU-2 test rate)
- **ODTU2 Type** (OTU-2 only): ODTU12, ODTU2.1

- **ODTU12 Channel** (OTU-2 only)
- **OPU2 Mapping** (OTU-2 only): BMP, AMP
- **ODTU01 Channel**
- **OPU1 Mapping**: BMP, AMP
- **OPU0 Mapping**: GMP

ITU-T G.709 and both AU-4 and AU-3 signal mappings per G.707 recommendations are supported. The multiplexing structure is shown below.

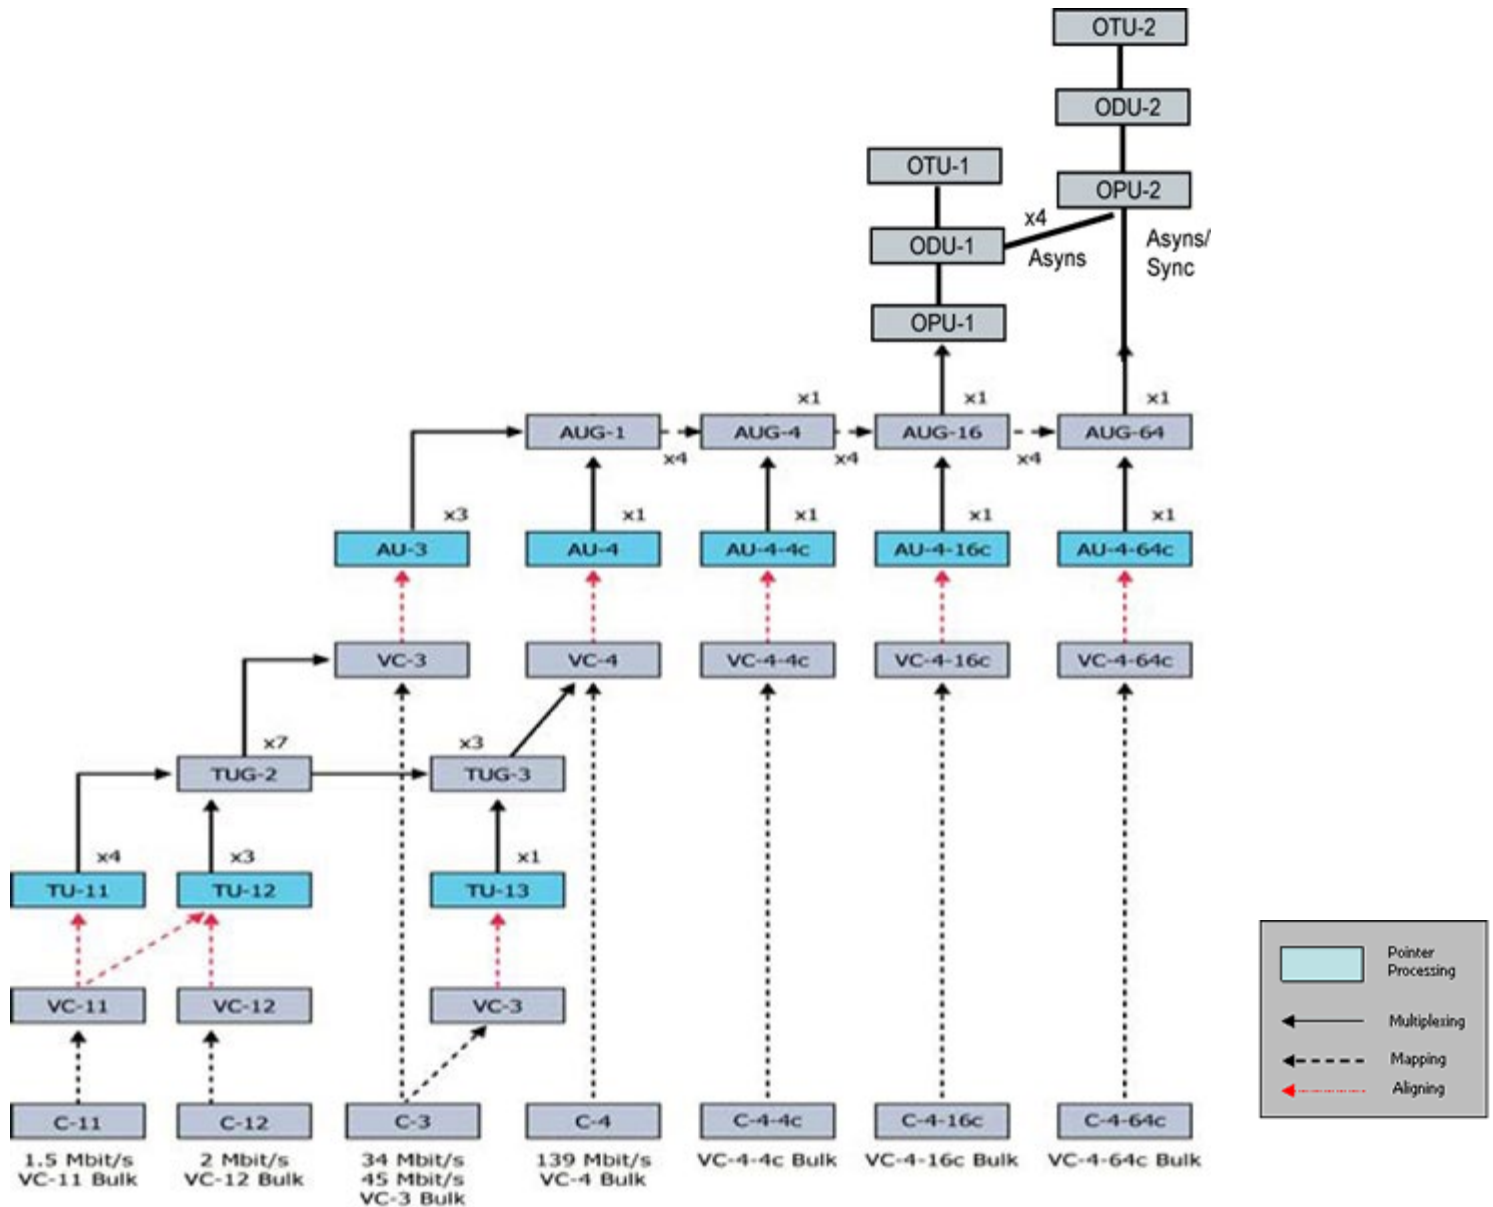

- **Scrambler**: ON/OFF
- **FEC**: FEC encoder can be ON/OFF (activated / deactivated)
- **OPU Type**: SDH
- **Test Rate**: STM-1-155M, STM-4-622M

[Go back to top](#) [Go back to TOC](#)

Interface, Structure, Payload, and Pattern

Interface, Structure, Payload, and Pattern TX block configurations are identical to configurations in [Transmitter Setup](#) in the SONET chapter. Please refer to that section for further details.

LEDs

Tools

Utilities

Files

Interface

Test Port

Optical

Clock Src

External

Clock Port

SMA

Clock External

1.5MHz

Start

BIT

OTN LOS

Alarm/Err

LASER On

Tx Interface Setup

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Channel Selection

STM-N

1

TUG-3

1

TUG-2

1

TU-12

1

VC4-64C

VC4-16C

VC4-4C

VC4

VC3

VC12

VC11

STMn

AU-4-x

AU-3

TUG-3

TU-3

TUG-2

TU-12

TU-11

Bulk

OFF

Tributary

2M

Start

Err inj.

Alarm

Alarm/Err

LASER Off

<Text

Tx Structure Setup - Graphical Mode

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Payload [Tx]

Low Rate

Nx64

DS1 Framing

ESF

Unused

AIS

Timeslot Selection

01	02	03	04	05	06	07	08
09	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24

Clear All

Select All

Start

BIT

OTN LOS

Alarm/Err

LASER On

Tx Payload Setup



Tx Pattern Setup

[Go back to top](#) [Go back to TOC](#)

6.5.2 Receiver Setup

Hierarchy

Tapping the **Hierarchy** setup box opens the Rx Hierarchy screen. The Hierarchy setup options for the Rx are the same as for the Tx described previously.

Interface

Tapping the **Interface** setup box opens the Rx Interface screen. The Interface setup options for the Rx are the same as for the Tx described previously, except for clock offset, which is only available in Tx.

Structure and Payload


OTN/SDH Rx Structure and Payload configurations are the same as for OTN/SDH Tx setup described previously.

Pattern

Tapping the Pattern box opens the Rx Pattern setup screen. The Pattern setup options for the Rx are the same as for the Tx described previously, except for the **Out of Service** selection, which should be selected if the incoming signal is expected to contain a known test pattern. Deselect this option if the signal is expected to contain live traffic.

[Go back to top](#) [Go back to TOC](#)

6.6 Setup: OTN/SONET

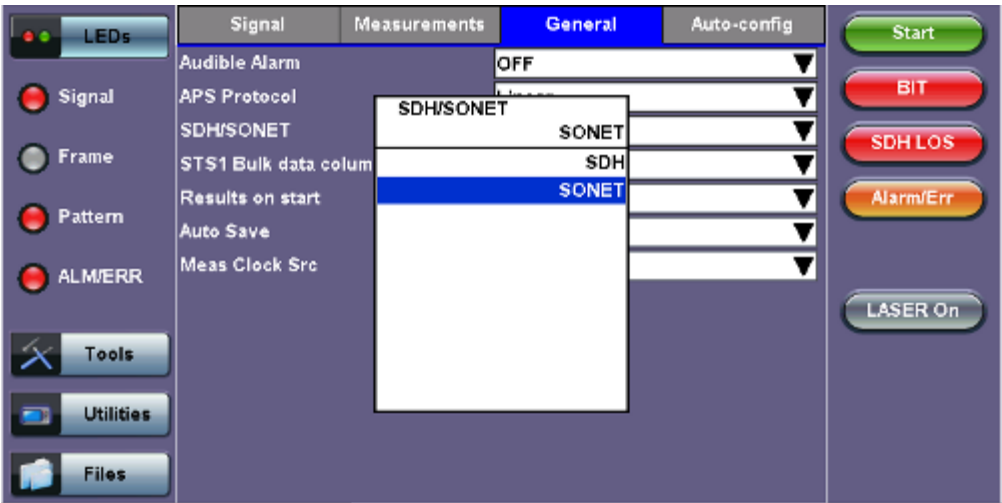

Selecting SONET from the General tab

To verify that the Tx and Rx block diagrams are OTN/SONET, make sure that SONET is selected from the **SDH/SONET** drop-down menu under the **General** tab.


[Go back to top](#) [Go back to TOC](#)

6.6.1 Transmitter Setup

This section of the manual describes the OTN configuration capabilities. The block diagram of the Tx and Rx structure is described in [Signal Overview](#).

Hierarchy

Tapping the **Hierarchy** box opens the Tx Hierarchy Setup screen.

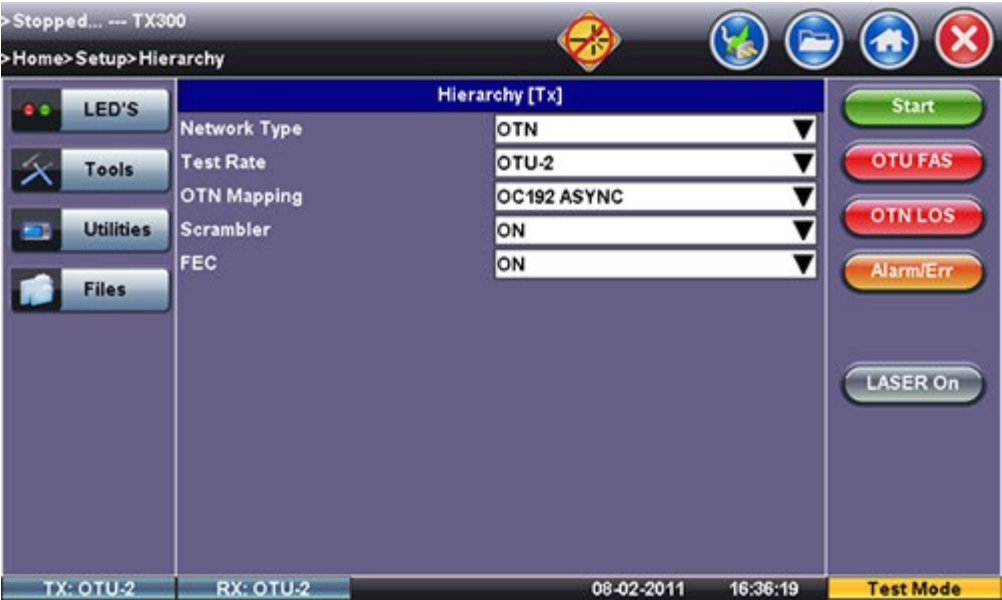


Tx Hierarchy Setup

Network Type: In the OTN mode, only optical interface options are available

Test Rate: Options are OTU-1 and OTU-2 (referring to 2.66G and 10.709G respectively)

OTN Mapping: SYNC, ASYNC, and PRBS pattern

💡 ITU-T G.709 and STS mappings per Bellcore GR-253 and ANSI T1.105 recommendations are supported. The multiplexing structure is shown below.

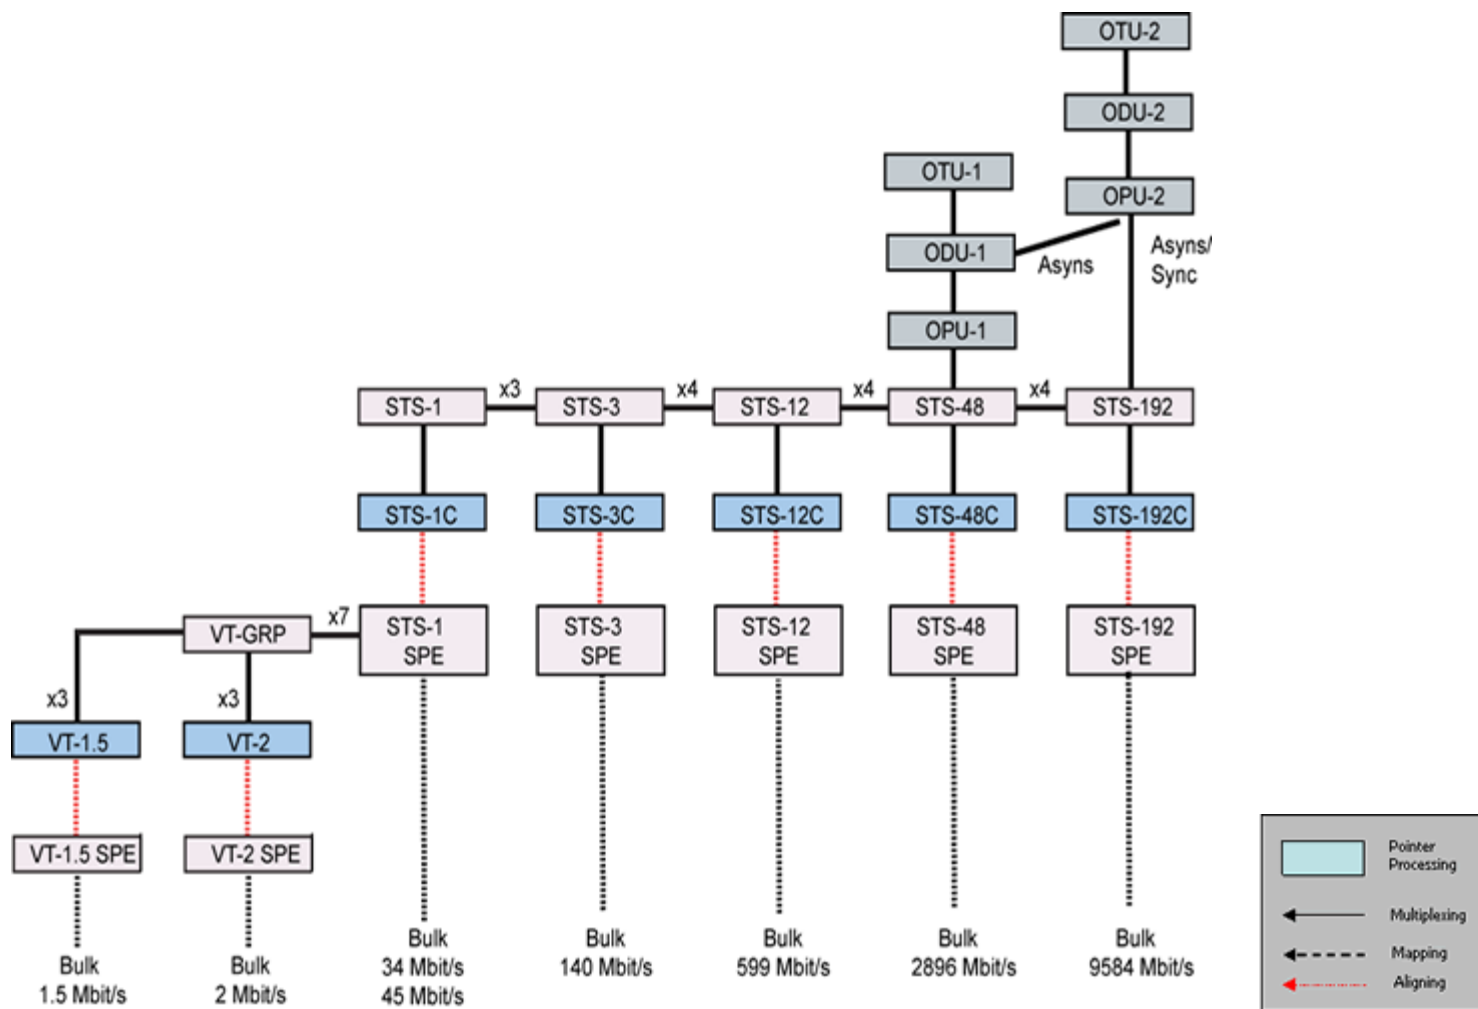

Scrambler: ON/OFF

FEC: FEC encoder can be ON/OFF (activated / deactivated)


[Go back to top](#) [Go back to TOC](#)

Interface, Structure, Payload, and Pattern


Interface, Structure, Payload, and Pattern TX block configurations are identical to configurations in [Transmitter Setup](#) in the SONET chapter. Please refer to that section for further details.




Tx Interface Setup

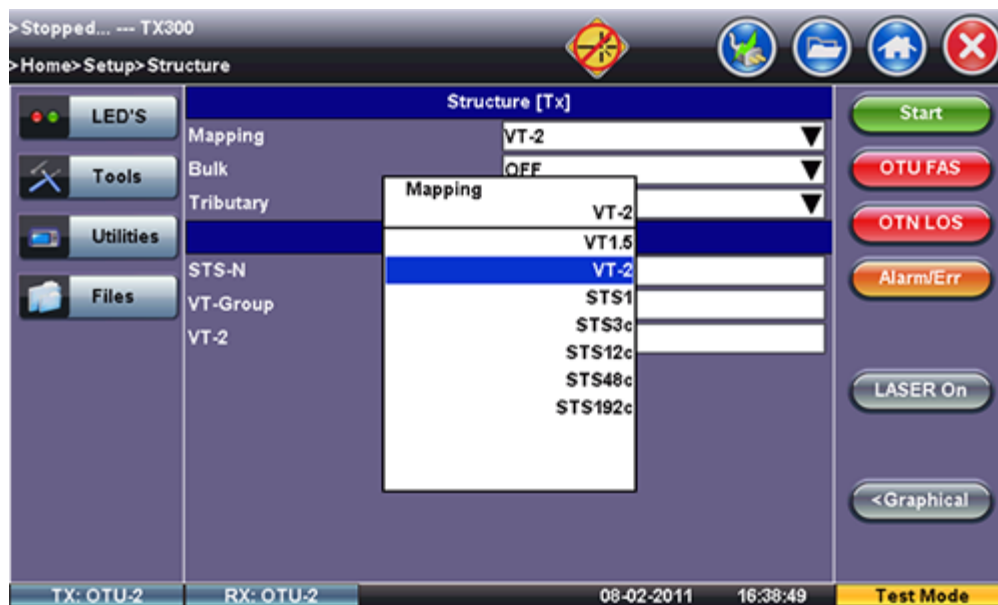

Tx Structure Setup - Text Mode

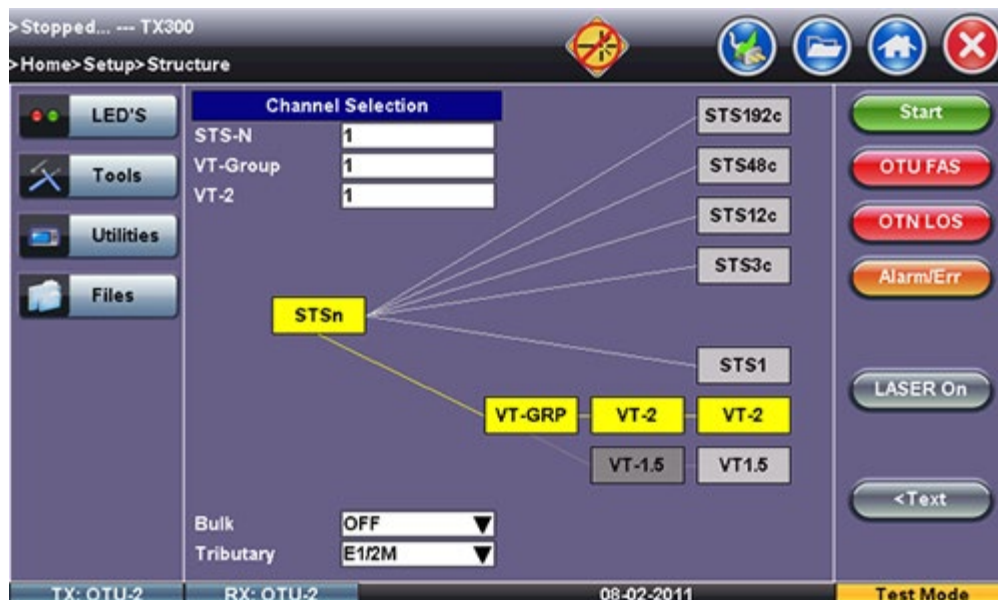


Tx Structure Setup - Graphical Mode

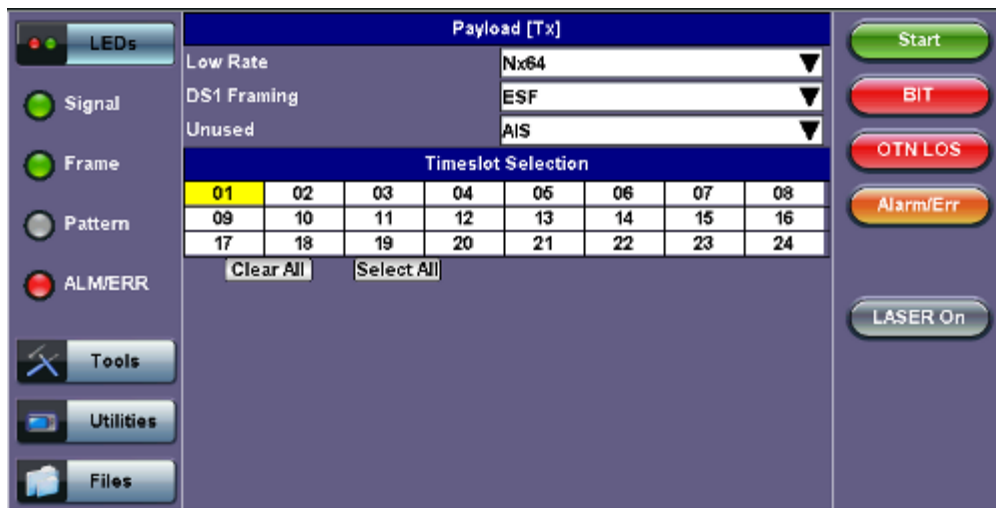

The interface shows the 'Tx Structure Setup' in graphical mode. On the left, there is a sidebar with 'LEDs' (Signal, Frame, Pattern, ALM/ERR) and 'Tools' (Tools, Utilities, Files). The main area is titled 'Payload [Tx]' and contains settings for 'Low Rate' (Nx64), 'DS1 Framing' (ESF), and 'Unused' (AIS). Below these is a 'Timeslot Selection' table with 24 slots (01-24). Slot 01 is highlighted. There are 'Clear All' and 'Select All' buttons below the table. On the right, there are buttons for 'Start', 'BIT', 'OTN LOS', 'Alarm/Err', and 'LASER On'.

Timeslot Selection							
01	02	03	04	05	06	07	08
09	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24

Tx Payload Setup

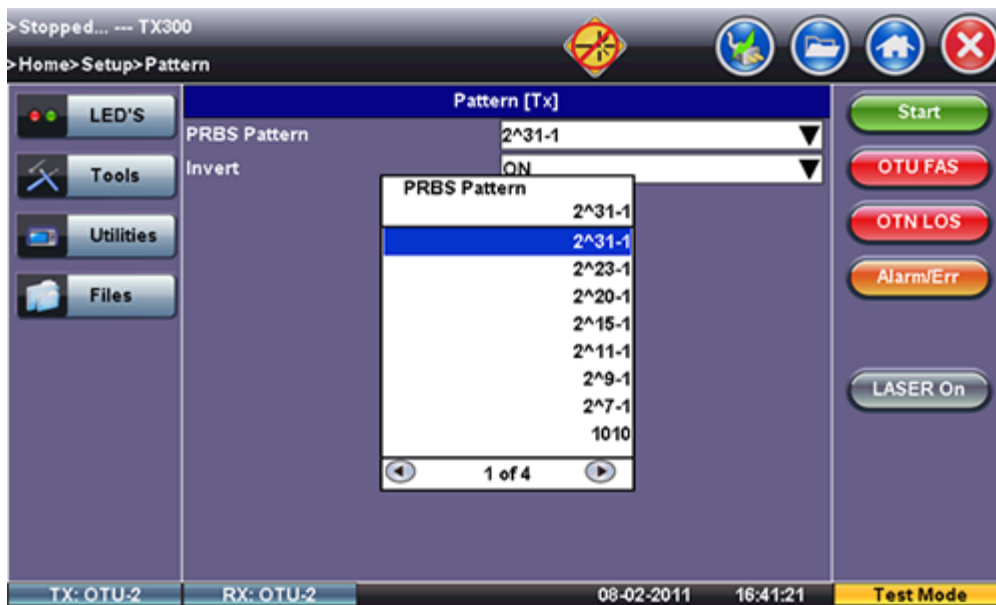

The interface shows the 'Tx Payload Setup' window. The title bar indicates 'Stopped... --- TX300' and the menu path is '> Home> Setup> Pattern'. The main area is titled 'Pattern [Tx]' and contains settings for 'PRBS Pattern' (2^31-1) and 'Invert' (ON). A dropdown menu for 'PRBS Pattern' is open, showing a list of options: 2^31-1, 2^23-1, 2^20-1, 2^15-1, 2^11-1, 2^9-1, 2^7-1, and 1010. The '2^31-1' option is selected. On the right, there are buttons for 'Start', 'OTU FAS', 'OTN LOS', 'Alarm/Err', and 'LASER On'. The bottom status bar shows 'TX: OTU-2', 'RX: OTU-2', the date '08-02-2011', the time '16:41:21', and 'Test Mode'.

Tx Pattern Setup

[Go back to top](#) [Go back to TOC](#)

6.6.2 Receiver Setup

Hierarchy

Tapping the **Hierarchy** setup box opens the Rx Hierarchy screen. The Hierarchy setup options for the Rx are the same as for the Tx described previously.



Rx Hierarchy Setup

[Go back to top](#) [Go back to TOC](#)

Interface

Tapping the **Interface** setup box opens the Rx Interface screen. The Interface setup options for the Rx are the same as for the Tx described previously, except for clock offset, which is only available in Tx.




Rx Interface


[Go back to top](#) [Go back to TOC](#)

Structure and Payload

OTN/SONET Rx Structure and Payload configurations are the same as for OTN/SONET Tx setup described previously.

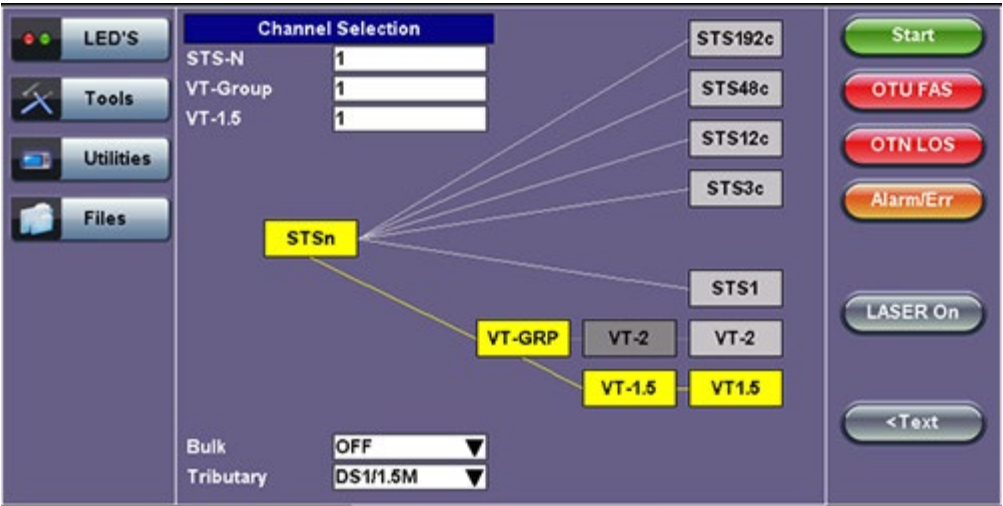

Rx Structure

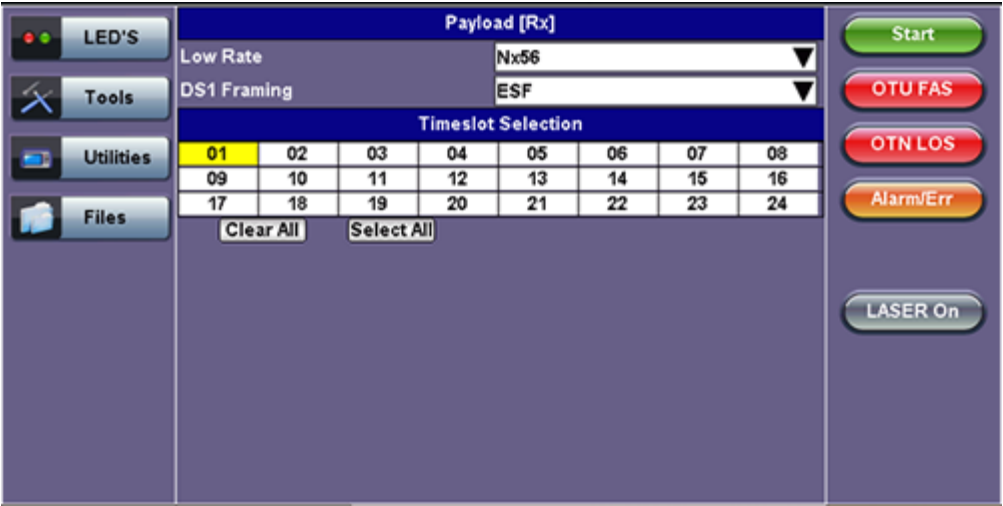

Rx Payload

[Go back to top](#) [Go back to TOC](#)

Pattern

Tapping the **Pattern** box opens the Rx Pattern setup screen. The Pattern setup options for the Rx are the same as for the Tx described previously, except for the **Out of Service** selection, which should be selected if the incoming signal is expected to contain a known test pattern. Deselect this option if signal is expected to contain live traffic.

LED'S Tools Utilities Files	Pattern [Rx]		Start OTU FAS OTN LOS Alarm/Err LASER On
	Out of service	ON	
	PRBS Pattern	2^31-1	
	Invert	OFF	

Rx Pattern

[Go back to top](#) [Go back to TOC](#)

6.7 Measurement Configuration

Tapping the **Measurements** tab opens the setup screen for the Timer, Performance Analysis, and General configurations.

Measurements tab

[Go back to top](#) [Go back to TOC](#)

6.7.1 Timer Setup

Configure a test to run for a fixed duration and/or a delayed start.

Mode: Manual, Timed, and Auto selections are available.


- **Manual:** This is directly linked to the Start/Stop function on the drop-down menu. The test starts as soon as the **Start** button is pressed.
- **Timed:** The test duration can be set by the user in seconds, minutes, hours or days. The test is activated by the Start/Stop function on the drop-down menu and stops automatically when the defined time has elapsed.
- **Auto:** A predetermined start time can be set by the user. The test duration can be set in seconds, minutes, hours or days. After programming the start time and duration, press the **Start** button and the test will be activated automatically when the programmed start time is reached.

 *M.2100 and M.2101 performance objectives are only available in Timed and Auto Mode.*

[Go back to top](#) [Go back to TOC](#)

6.7.2 Performance Analysis

The Analysis setup page selects the type of ITU-T performance evaluation that will be performed by the unit. Depending on Test mode, the selections include None, G.821, G.826, G.828, G.829, G.8201, M.2100, and M.2101. The available options may vary depending on configuration.

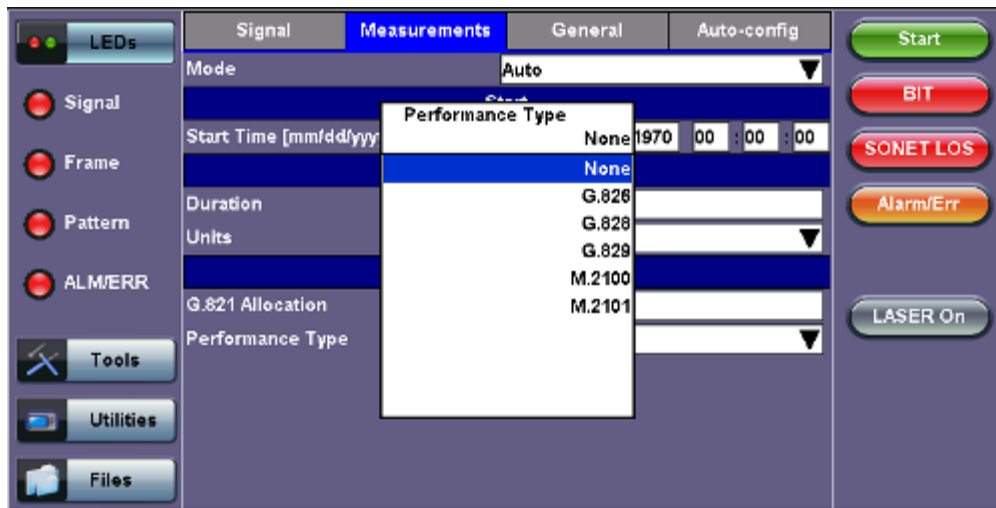

Analysis

The recommendations are briefly defined as follows:

- **G.821:** Error performance of an international digital connection operating at a bit rate below the primary rate and forming part of an Integrated Service Digital Network (ISDN)
 - Long term error performance conducted Out of Service (OOS)
 - Based on measuring bit errors
 - Evaluation period of 30 days
 - Since there is no overhead structure at these bit rates, in-service measurements are not recommended
- **G.826:** End-to-end error performance parameters and objectives for international, constant bit rate digital paths and connections
 - Long term error performance for Out of Service (OOS) and In-Service Monitoring (ISM)
 - Based on measuring bit errors for connections and block errors for paths
 - Evaluation period of 30 days
- **G.828 Analysis:** Error performance parameters and objectives for international constant bit rate synchronous digital paths
 - Deals exclusively with SDH paths
 - Long term error performance for Out of Service (OOS) and In-Service
 - Based on measuring block errors
 - Evaluation period of 30 days
- **G.829 Analysis:** Error performance events for SDH Regenerator and Multiplexer sections
 - Deals exclusively with SDH sections
 - Error event definition
 - Based on measuring block errors
- **G.8201:** Error performance parameters and objectives for multi-operator international paths within optical transport networks (OTN) addressing the objectives for international (and national) ODUk paths. This is a block-based measurement concept using error detection code (EDC) and EDC usage inherent to the path under test. This simplifies in-service measurements.
 - Error performance for Out of Service (OOS) and In-Service Monitoring (ISM)
- **M.2100:** Performance limits for bringing into service and maintenance of international multi-operator PDH paths and connections
 - Deals exclusively with PDH paths, sections and systems
 - Based on measuring bit errors and block errors
 - Bring-into-Service (BIS) limits for OOS/ISM
 - Evaluation periods of 15 minutes, 2 hours and 24 hours
 - First step is a continuity test for 15 minutes
 - PDH paths are composed of sub-elements of different lengths each with its own set Reference Performance Objectives (RPO)
- **M.2101 Analysis:** Performance limits and objectives for maintenance and bringing into service SDH paths and multiplex sections.
 - Deals exclusively with SDH paths and sections
 - Based on measuring block errors
 - BIS limits for OOS/ISM
 - Evaluation periods of 15 minutes, 2 hours, 24 hours and 7 days
 - First step is a continuity test for 15 minutes




Only one performance analysis can be performed at a time. To view or enable the M.2100 and M.2101 analyses, the measurement timer has to be set to a determined period. The table below describes the anomalies evaluated for the performance analysis selected.

ITU-T Performance Analysis for PDH and SDH systems			
Analysis	PDH	SDH	Anomalies
G.821	☒	☒	TSE based on bit errors
G.826 (Out of service)	☒	☒	TSE based on block errors
G.826 (In service)		☒	B1, B2, B3, LP-BIP, E1/E3/E4 FAS, E1 CRC
G.828 (In service)		☒	B1, B2, TSE
G.829 (In service)		☒	B1, B2, B3, LP-BIP, TSE
M.2100	☒		E1/E3/E4 FAS, E1 CRC, TSE
M.2101		☒	B1, B2, B3 HP, LP-BIP, TSE

[Go back to top](#) [Go back to TOC](#)

6.7.3 General

The General setup page configures the audible alarm and APS protocol settings. Audible alarms may not be supported by all test sets, technologies and applications.

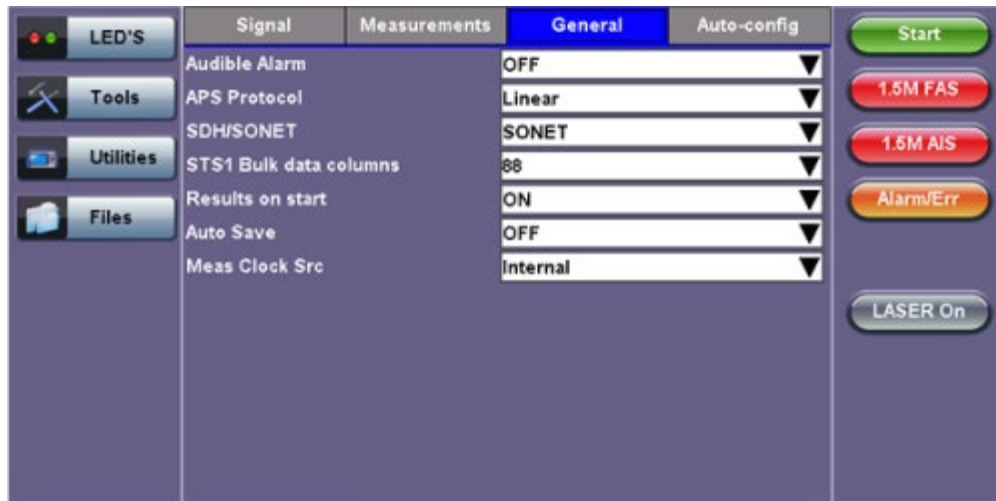

General tab

- **APS Protocol:** Linear or Ring architectures are selectable. This determines how the APS bytes (K1/K2) are decoded in the SDH Overhead Analyzer or how they are generated in the SDH Overhead Generator. It also determines how the APS measurement will be made.
- **SDH/SONET:** SDH or SONET modes are available options. Defines the reference standard to be used for GUI terminology and functionality. Select SDH for SDH and PDH applications. Select SONET for North American SONET and DS_n (T1 and T3). This may also change the behavior of certain menus and function.
- **STS-1 Bulk data** (SONET only): The STS-1 bulk mode fills the entire payload, except for the POH.
- **Result on start:** On or Off. Provides an automatic move to Result screen when it starts.
- **Auto Save:** Tap Auto Save and set it to **ON** to automatically save the results file.
- **Measurement Clock Source:** Internal Clock or Tx Clock Source; the measurement is synchronized to the Transmitted (Tx) Clock.

[Go back to top](#) [Go back to TOC](#)

6.7.4 Auto-Config

The Auto-Configuration function is described below.



Auto-config tab

The **Auto-Config** function automatically configures the test set's interface to match the received signal. A search for SDH and PDH signals at both the electrical or optical inputs is performed to determine the signal structure. For electrical signals, both Terminated and PMP voltage ranges are searched and supported.

Procedure

Tap on the **Start** button  to begin the search. The received signal is checked for network type, hierarchy and bit rate, payload structure, payload framing, test pattern and signal level. If the search is successful, a "PASS" result is displayed.


Search parameters and criteria

- **Interface:** Checks physical parameters (bit rate line code).
- **Mapping:** Checks mapping structure using the signal label and pointer bytes.
- **Payload:** Only test patterns defined in ITU-T or ANSI standards will be recognized. If no test pattern is detected, the unit assumes live traffic.

PDH Signals: Unframed or framed payloads at all hierarchies. For 1.5M signals containing 64kbps timeslots, the test set will assume live traffic and will not search for a test pattern.

[Go back to top](#) [Go back to TOC](#)

6.7.5 Service Disruption Test (SDT)

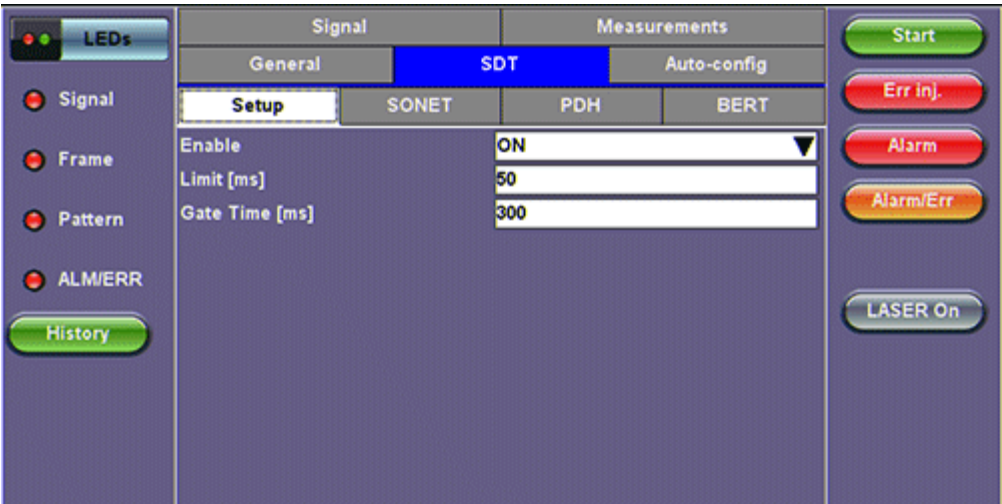

SDT Setup


A service disruption is triggered by any qualifying error or alarm determined by the user and continues to count until the error-free condition (Gate Time) is met. If SDT is enabled and alarm/error triggers are selected, the results will appear in the Results section under the SDT tab.

Testing Process


- The test set measures how long the event remains present after it is first recognized and will continue to measure the total service disruption time in the event of multiple disruptions.
- Before starting, ensure that no errors or alarms are present on the transmission system because this will impact the measurement.
- In the past, Automatic Protection Switching (APS) was used to measure physical service cuts, especially in optical links. Service disruption measurements are meant to measure the total time the service is not available to customers, which is not limited by the optical path cut. Therefore, it configures to include the time the whole system takes to recover.
- Service Disruption can still be used to measure APS time, if the trigger selected is LOS only. This will just measure the physical protection switch time.

Setup

1. Set **Enable** to ON to activate SDT testing.
2. Set a limit time and gate time. Limit and Gate Time counters begin at the onset of the first valid event.
 - **Limit Time:** Specifies pass/fail criteria for SDT events. This represents the acceptable amount of time for the customer to experience a service disruption. Events greater than the limit time are considered a fail. Configurable from 20 to 1000 ms.
 - **Gate Time:** Specifies the length of error free signal time used to determine the number of service disruptions. Configurable from 20 to 10000 ms. The Gate Time is not included in the service disruption time calculation.
3. Select the type of errors/alarms from the **SONET**, **PDH**, **BERT**, **OTN** tabs that will trigger the SDT test.
4. Press the **Start** button to begin testing.

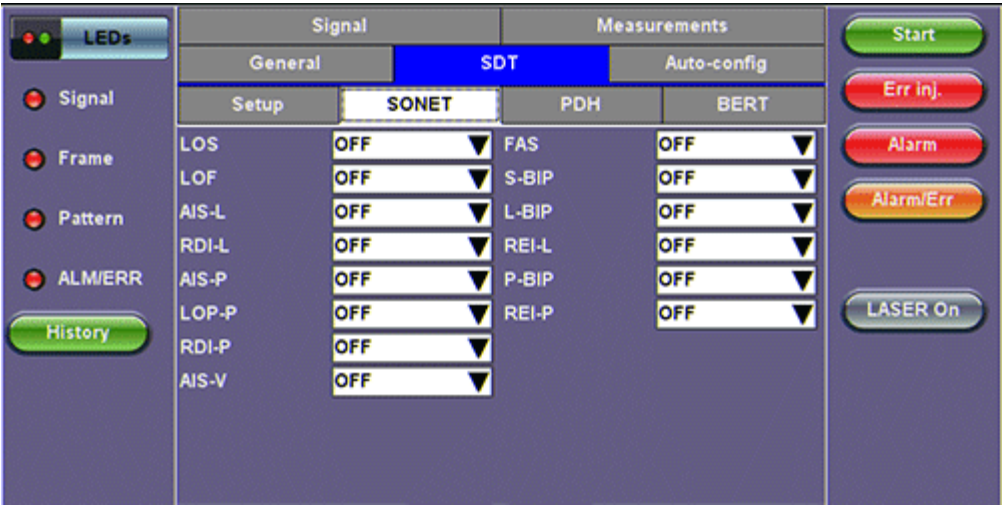

SDT SONET

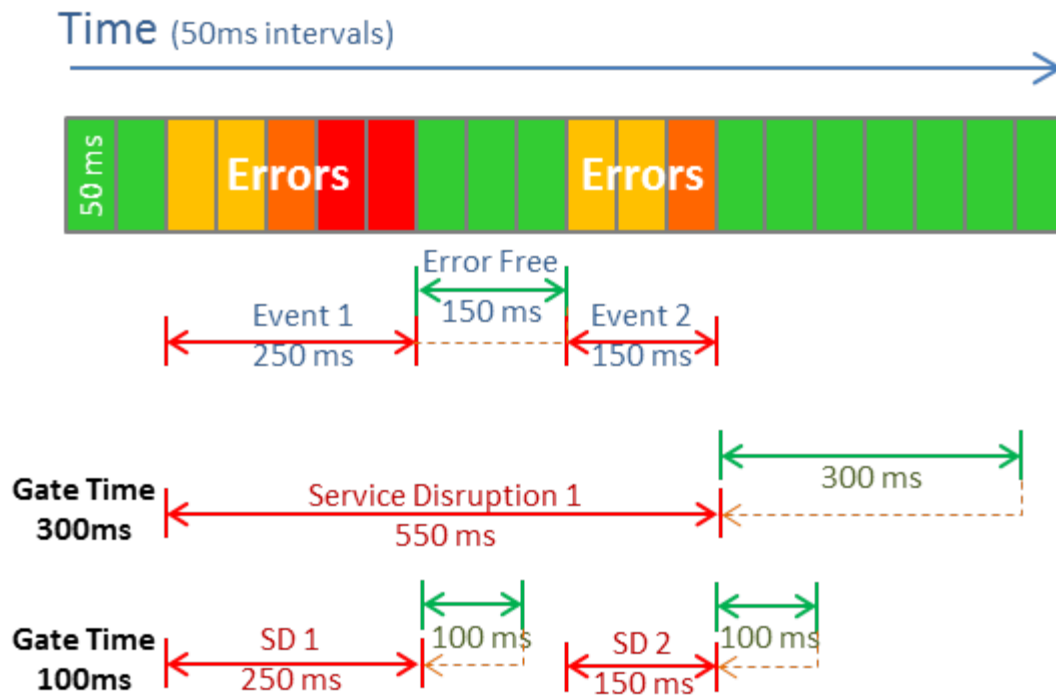

Multiple Service Disruptions


In the simplified example above, two events occur with 150ms of error free time in between. A gate time of 300ms counts them as one service disruption because the error-free section is less than the gate time. Using a gate time of 100ms to evaluate the same situation would count two service disruptions, because the Gate Time condition is met within the error-free section.

[Go back to top](#) [Go back to TOC](#)

7.0 Results

Accessing Results

To access measurements for PDH, SDH, SONET, and OTN, tap on **Start**, which starts testing, or **Results**.

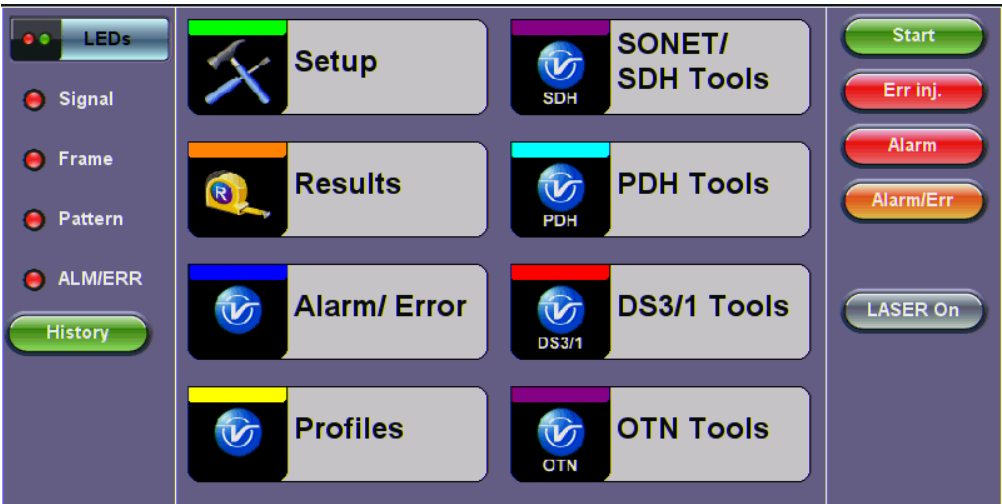

Results Button

[Go back to top](#) [Go back to TOC](#)

7.1 Results: PDH

7.1.1 Summary

The **Summary** tab displays an overview of the major test parameters. At a glance, the user is able to see if there are any alarms, errors, or signal failure.



Summary tab

[Go back to top](#) [Go back to TOC](#)


7.1.2 Errors and Alarms

The **Error/Alarm** tab displays several pages showing the errors and alarm status. Alarms/Errors results provides an overview of all the Errors and Alarms applicable to the signal or network under test. The color of the page tab is normally blue; however, it will turn

red when an alarm error condition has been detected or recorded.

The soft LEDs on screen are arranged logically and will depend on signal hierarchy, structure, payload and framing selected. The soft LEDs have a tricolor function:

- Green:** No error or alarm is present.
- Red:** An error or alarm condition is detected and is currently present.
- Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.

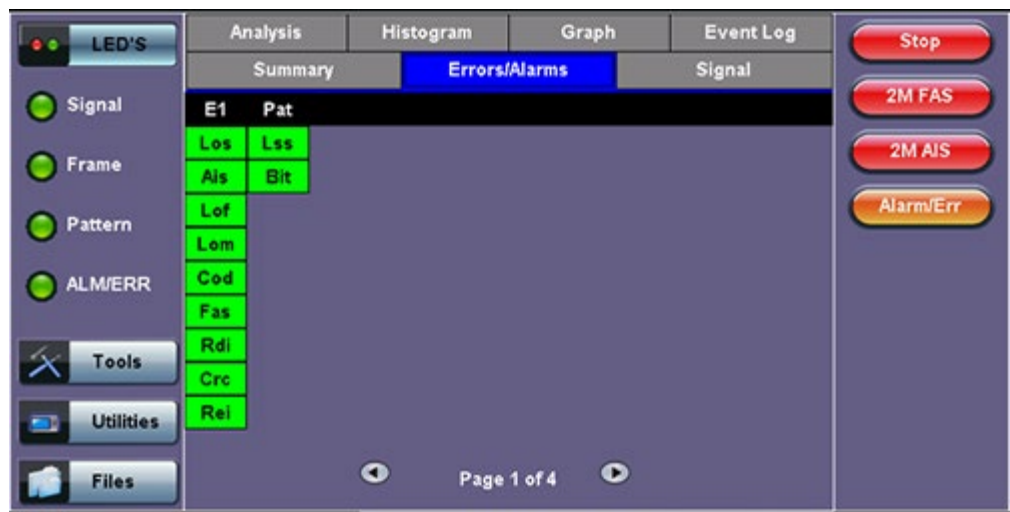


Errors/Alarms (Page 1)

*Tapping the individual soft LED will automatically link directly to the applicable result screen which provides detailed information. Depending on the settings chosen in **Setup > Signal**, the Alarms/Errors displayed and page length will vary, but the order in which they are presented remain the same.*

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 2)

Page 2 lists the Alarms in logical order that are associated with the signal under test. All alarms are evaluated and stored. The time resolution of alarms is 100ms.

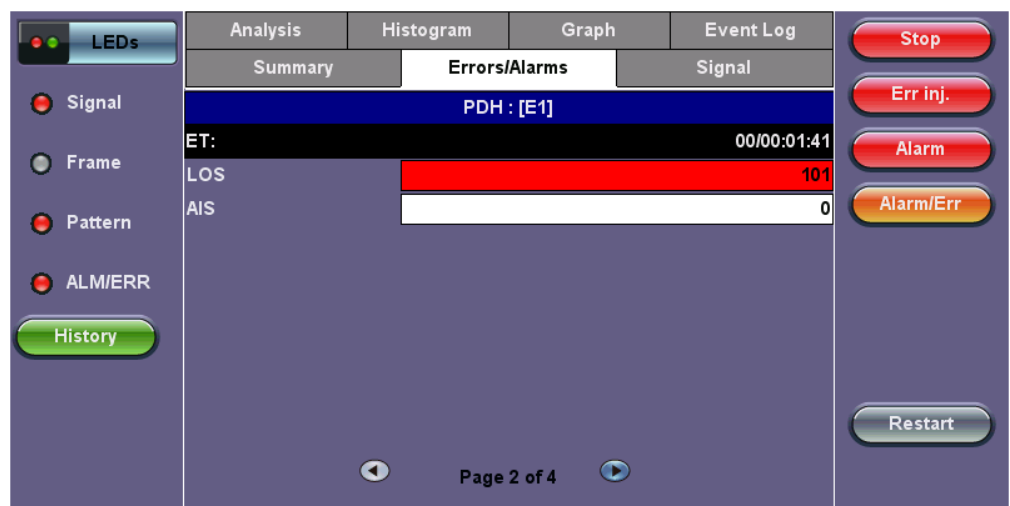


Errors/Alarms - PDH (Page 2)

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 3)

Page 3 lists the Errors in logical order that are associated with the signal under test. All errors are counted simultaneously and stored.

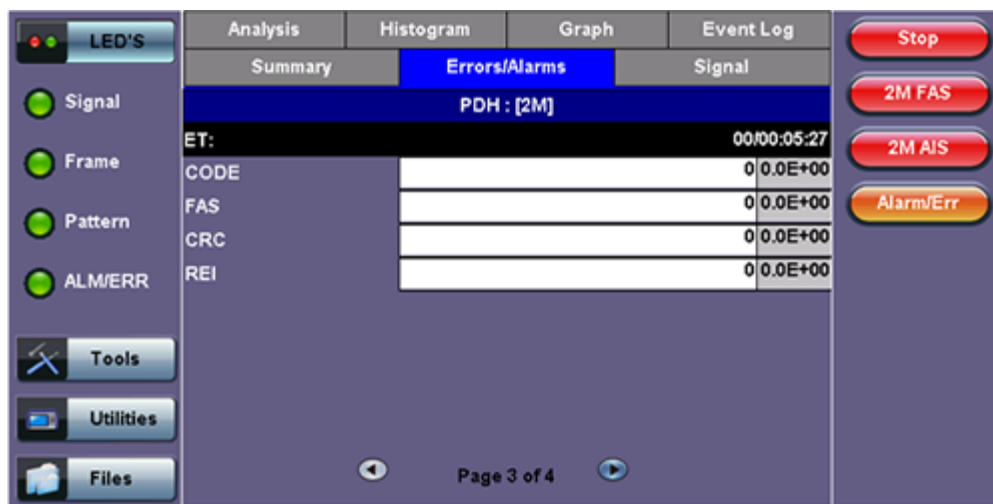

Errors/Alarms - PDH (Page 3)

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 4)

Page 4 lists the Bit Error Performance (BERT) associated with the signal under test.

[Go back to top](#) [Go back to TOC](#)

7.1.3 Event Log

The **Event log** tab displays the screen listing the Error and Alarm events recorded during a test. The events are presented in chronological sequence:

- **Number (#):** Event number, events are numbered sequentially
- **Type:** Indicates alarm or error type
- **Start:** Indicates when the alarm or error was detected
- **Dur/Count:** Indicates for how long the alarm or error was detected and provides duration (alarms) and ratio/count (errors). The duration format is day:hour:minute:second
- **Pages:** Scroll through the pages depending on the number of events recorded

Frequency Tolerances for PDH and T-Carrier Systems	
Signal	Frequency Specification
E1 PDH	2,048 Mbps $\pm$ 112 bps ($\pm$ 54.6 ppm)
E3 PDH	34,368 Mbps $\pm$ 846 bps ($\pm$ 24.6 ppm)
E4 PDH	139,264 Mbps $\pm$ 2730 bps ($\pm$ 19.6 ppm)
DS1 T-Carrier	1,544 Mbps $\pm$ 57 bps ($\pm$ 36.6 ppm)
DS3 T-Carrier	44,736 Mbps $\pm$ 1101 bps ($\pm$ 24.6 ppm)


Level: Measures the Peak and Peak-Peak voltage values of the incoming signal. The levels for the various signal types according to ITU-T G.703 recommendations are presented.

PDH Signal Levels per ITU-T G.703 Recommendations				
Signal	Bit Rate	Line code	Input	
			Termination	Level
E1	2 Mbit/s	HDB3	75 ohm unbalanced BNC	Terminate: 2.37 Volt peak Monitor: 2.37 Volt peak with 20 or 26dB gain
			120 ohm balanced RJ45	Terminate: 3.0 Volt peak Monitor: 3.0 Volt peak with 20 or 26dB gain
E3	34 Mbit/s	HDB3	75 ohm unbalanced BNC	Terminate: 1.0 Volt peak Monitor: 1.0 Volt peak with 20 or 26dB gain
E4	140 Mbit/s	CMI	75 ohm unbalanced BNC	Terminate: 1.0 Volt peak Monitor: 1.0 Volt peak with 20 or 26dB gain

[Go back to top](#) [Go back to TOC](#)

7.1.5 Histogram Log

The **Histogram** tab displays a historical record of the Alarms and Errors recorded during the measurement interval. A dedicated page is available for errors and alarms including BER. Scroll through the various pages to display the anomalies of interest.

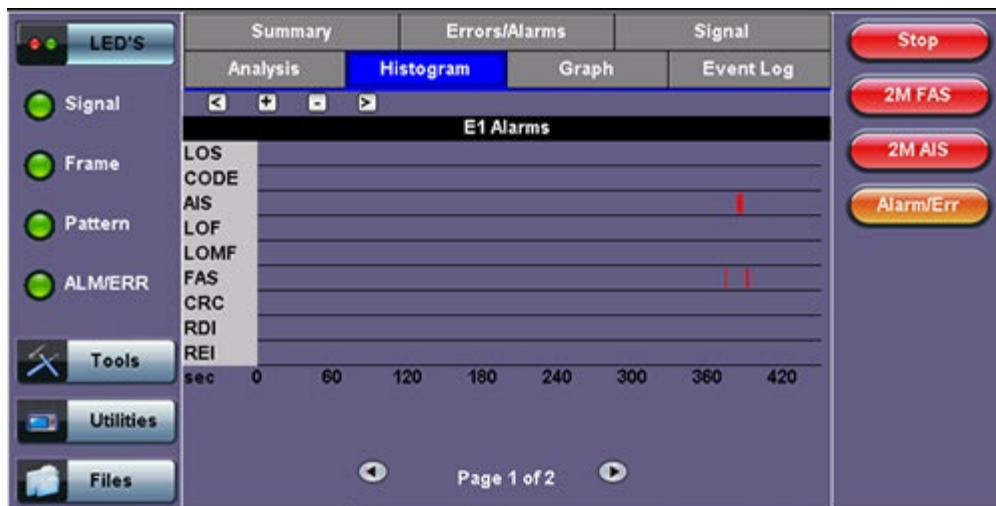

Histogram - E1 Alarms (Page 1)

The alarms and errors presented will depend on the signal type and structure selected. A graphical timeline on the horizontal axis indicates when the event occurred since the test was started. The upper left and right arrows allow the user to scroll through the measurement period while the + and – keys allow zooming in/out of the time axis. The events presented above are shown in the


table below.

The screen below depicts BER and bit errors (LSS stand for Loss of Sequence Synchronization).

[Go back to top](#) [Go back to TOC](#)

7.1.6 Graph

The **Graph** tab displays a screen displaying a log of the errors recorded during the measurement interval. A dedicated page is available for each error type. Scroll through the various pages to display the anomaly of interest.

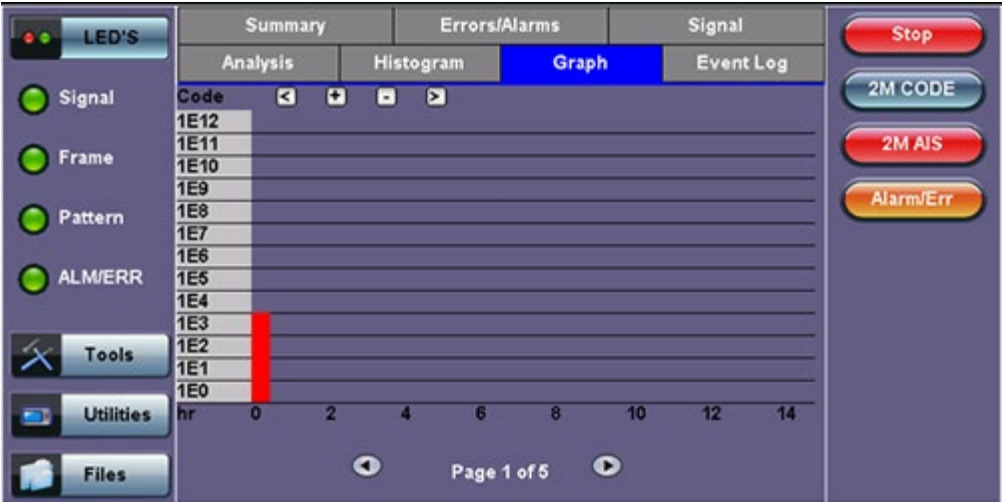


Graph tab

A graphical timeline on the horizontal axis indicates when the event occurred while the vertical axis indicates the logarithmic scale of errors. The upper left and right arrows allow the user to scroll through the measurement period, while the + and – keys allow zooming in/out of the time axis.

[Go back to top](#) [Go back to TOC](#)

7.1.7 Performance Analysis

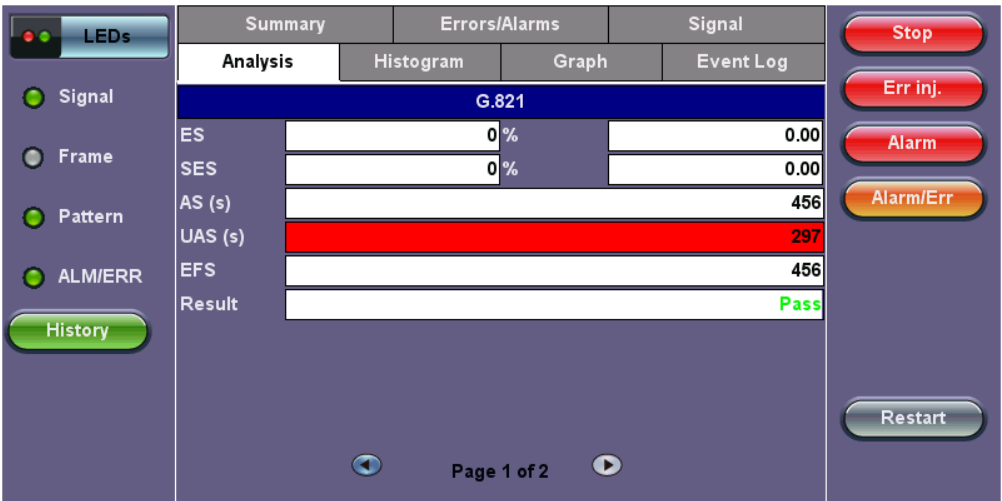

G.821 Analysis

The **Analysis** tab displays measured objectives from ITU-T performance tests selected from the Measurements tab (**Setup > Measurements**). For a brief description of supported G-Series and M-Series performance tests as well as setup instructions, please see [Performance Analysis](#) in the Measurement Configuration section.

Evaluation According to ITU-T G.821

This recommendation was originally specified for international circuit-switched N x 64kbps connections and later expanded to include higher bit rates.

ES, SES, AS and UAS are evaluated and can be performed on the following events:

- FAS bit errors (FAS 2, FAS 34)
- CRC errors
- E bit errors
- Bit errors (TSE, Test Sequence Error)


The following signals can be measured when performing G.821 evaluation of bit errors (TSE):

- Unframed patterns
- N x 64kbps
- Framed patterns and bulk signals
- Pass/Fail result is in conjunction with path allocation between 0.1 and 100%

 *ITU-T G.821 evaluates bit errors, therefore, facilities for evaluating block errors are disabled. G.821 relies on the evaluation of bit errors, thus the test channel must be taken out of service to perform the measurement.*

Definitions:

- **Errored Second (ES):** A one-second time interval in which one or more bit errors occur.
- **Severely Errored Second (SES):** A one-second interval in which the bit error ratio exceeds 10^{-3} .
- **Unavailable Second (UAS):** A circuit is considered to be unavailable from the first of at least ten consecutive SES. The circuit is available from the first of at least ten consecutive seconds which are not SES.
- **Available Second (AS):** A one-second time interval in which no bit errors occur.
- **Errored Free Second (EFS):** A one-second time interval in AS during which no errors and no pattern slips have been detected.

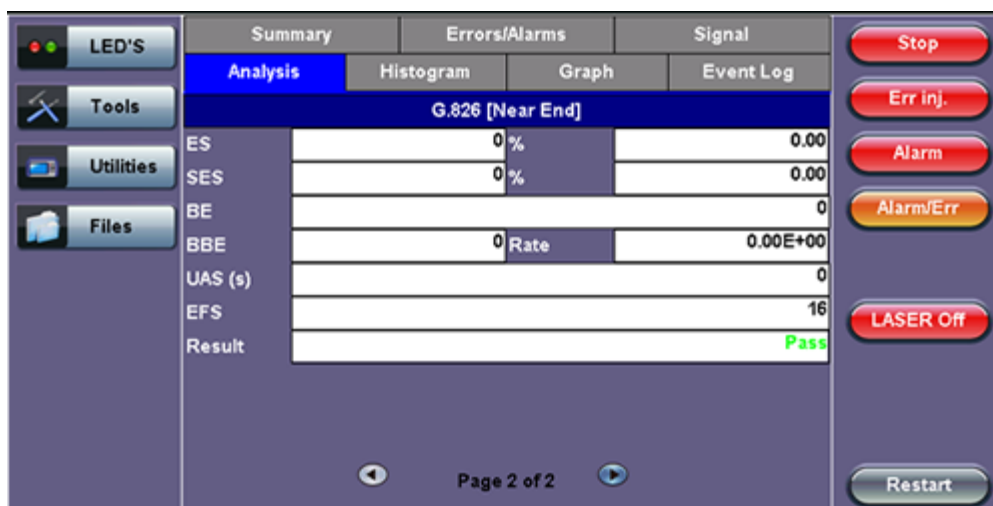

G.826 Analysis

Evaluation According to ITU-T G.826

G.826 recommendation makes provision for higher bit rates and allows in-service measurement using the evaluation of block errors.

The following are evaluated: ES, SES, BE, BBE, and UAS.

Pass/Fail result depends on path allocation of 0.1 to 100%.

In-Service Measurement (ISM): Simultaneous in-service measurement of “near end” and “far-end” of a selected path.

Out-of-Service Measurement (OOS): Out-of-service measurement using bit errors in a test pattern.

Definitions:

Errored Second (ES): A one-second time interval containing one or more errored blocks.

- **Severely Errored Second (SES):** A one-second time interval in which more than 30% of the blocks are errored.
- **Block Error (BE):** A block containing one or more errored bits.
- **Background Block Error (BBE):** An errored block that is not a SES.
- **Unavailable Second (UAS):** A circuit is considered to be unavailable from the first of at least ten consecutive SES. The circuit is available from the first of at least ten consecutive seconds which are not SES.

 *The recommended measurement time for G.821 and G.826 is 30 days.*

Evaluation According to ITU-T G.828

G.828 provides a precise block length for each bit rate as opposed to G.826.

- ES, SES, BBE, UAS and SEP are evaluated.
- Pass/Fail result is in conjunction with path allocation between 0.1 and 100%.

G.828 evaluation can be performed on the following events:

- B1
- B2
- MS-REI
- B3
- HP-REI
- LP-BIP
- LP-REI
- Bit errors (TSE)

Evaluation of the near end and far-end is possible, however far-end evaluations can only be made if REI is available.

Bit errors can be evaluated for:

- Unframed patterns
- Framed patterns and bulk signals
- Overhead bytes E1/E2 (order wire), F1/F2 (user), D1 - D3 and D4 - D12 (DCC) in the SDH overhead (SOH and POH)

 *Bit error evaluation is disabled because G.828 evaluates block errors.*

Evaluation According to ITU-T G.829

G.829 is based on the principle of monitoring block errors in service.

ES, SES, BBE and UAS are evaluated.

G.829 evaluation can be performed on the following events:

- B1
- B2
- MS-REI
- Bit errors (TSE)

Evaluation of the near end and far-end is possible, however far-end measurement can only be made if REI is available.

Bit errors can be evaluated for:

- Unframed patterns
- Framed patterns and bulk signals
- Overhead bytes E1/E2 (order wire), F1/F2 (user), D1 - D3 and D4 - D12 (DCC) in the SDH Overhead (SOH and POH)

Evaluation According to ITU-T M.2100

M.2100 applies to commissioning and maintenance. Commissioning consists of a 15-minute line up phase followed by a 24-hour in-service measurement. Once the line up phase is completed successfully, errors may occur within certain limits.

ES, SES and UAS are evaluated.

Pass/Fail results are based on threshold values S1 and S2 for ES and SES.

Settings for S1 and S2:

- Path allocation: 0.1 to 100%
- BISO multiplication factor: 0.1 to 100

The M.2100 evaluation can be performed on the following events:

- FAS bit errors (FAS2, FAS34, and FAS140)
- CRC-4 errors
- EBIT errors
- Bit errors (TSE)

Evaluation is made at the “Near End” and at the “Far End” for PCM-30/31 signals with CRC.

Bit errors can be evaluated for:

- Unframed patterns
- Framed patterns and bulk signals
- N x 64kbps

Since M.2100 evaluates bit errors, facilities for evaluating block errors are disabled.

Evaluation According to ITU-T M.2101

M.2101 is very similar to M.2100 except it deals with SDH systems only.

ES, SES, BBE, SEP and UAS are evaluated.

Pass/Fail results are based on the threshold values S1 and S2 for ES, SES, BBE and SEP.

Settings for S1 and S2:

- Path allocation: 0.1 to 100%
- BISO Multiplier: 0.1 to 100%

The M.2101 evaluation can be performed on the following events:

- B1
- B2
- MS-REI
- B3
- HP-REI
- LP-BIP
- LP-REI
- Bit errors (TSE)

Evaluation of the near end and far-end is possible but far-end evaluations can only be made if REI is available.


Bit errors can be evaluated for:

- Unframed patterns
- Framed patterns and bulk signals
- Overhead bytes E1/E2 (order wire), F1/F2 (user), D1 - D3 and D4 - D12 (DCC) in the SDH Overhead (SOH and POH)

 *M.2101 measures block errors, therefore bit error evaluation is disabled.*

[Go back to top](#) [Go back to TOC](#)

7.1.8 Service Disruption Test (SDT) Results

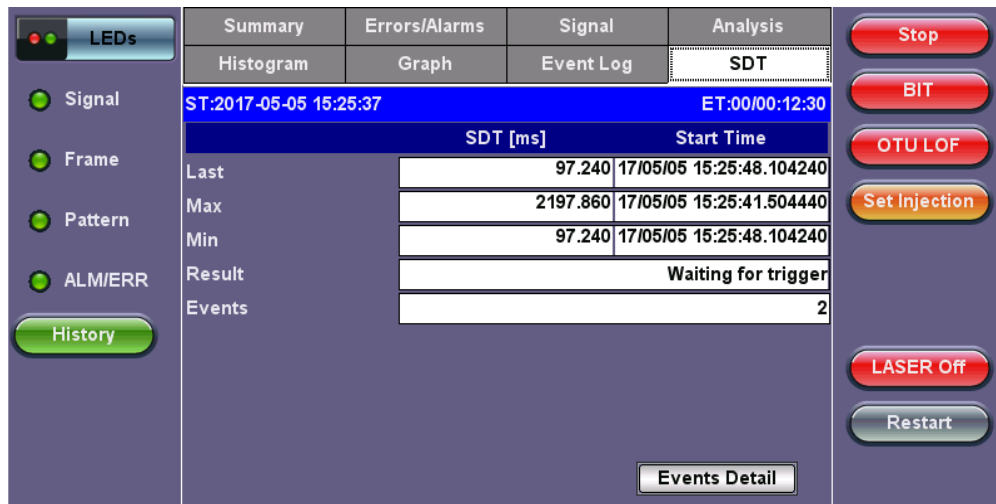

SDT Results

If SDT is enabled in Setup, the SDT tab will display time measurements of detected errors/alarms specified by the user in SDT setup.

- **Last SDT:** The duration of the last service disruption detected
- **Min/Max:** Shortest and longest service disruption duration
- **Result:** Waiting for trigger or Measure
 - Waiting for trigger: Testing is in progress and the unit is waiting to detect an error/alarm
 - Measure: Error/alarm is in progress
- **Events:** Number of errors/alarms detected

Events Detail displays additional details such as error/alarm type and Pass/Fail status.

Service Disruption Events			
Page 1 of 1			
Type	Start	Duration [ms]	Verdict
Start	17/05/05 15:25:37.0		
Disruption	17/05/05 15:25:41.504440	2197.860	Fail
-LSS	17/05/05 15:25:41.504440	97.240	
-LSS	17/05/05 15:25:41.803550	97.250	
-LSS	17/05/05 15:25:42.103550	98.810	
-LSS	17/05/05 15:25:42.405560	97.240	
-LSS	17/05/05 15:25:42.704380	97.230	
-LSS	17/05/05 15:25:42.801620	0.010	
-LSS	17/05/05 15:25:43.004180	97.230	
-LSS	17/05/05 15:25:43.101420	0.010	
-LSS	17/05/05 15:25:43.304420	97.250	
-LSS	17/05/05 15:25:43.603490	98.810	
Disruption	17/05/05 15:25:48.104240	97.240	Fail
-LSS	17/05/05 15:25:48.104240	97.240	


SDT Events Detail

[Go back to top](#) [Go back to TOC](#)

7.2 Results: SDH

7.2.1 Summary

The **Summary** tab displays a summary of test results and parameters. At a glance, the user is able to see if there are any alarms, errors, or signal failure pertaining to the SDH signal and its payload.

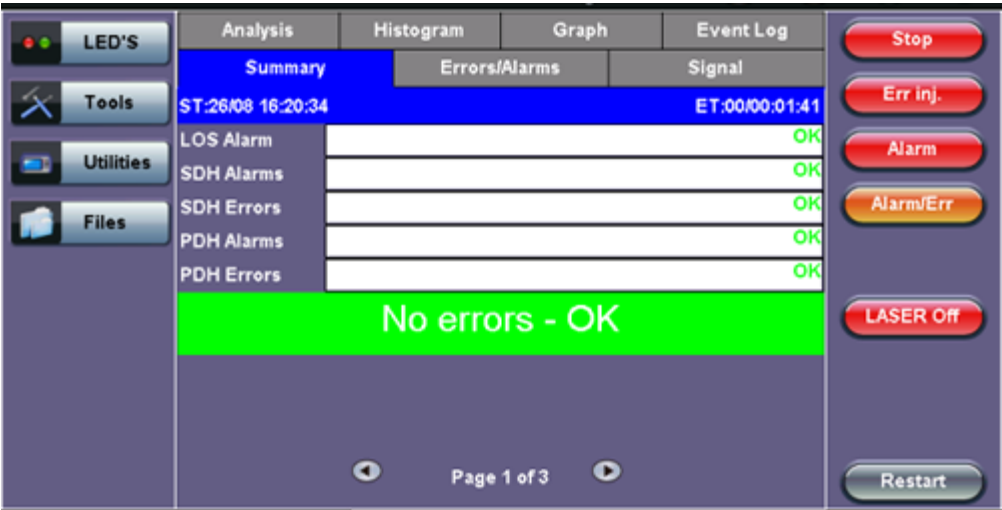

Summary

[Go back to top](#) [Go back to TOC](#)


7.2.2 Errors and Alarms

The **Errors/Alarms** tab displays several pages showing the errors and alarms status.

Page 1 provides an overview of all the Errors and Alarms applicable to the signal or network under test. The color of the page tab is normally blue; however, it will turn red when an alarm error condition has been detected or recorded.

The soft LEDs on screen are arranged logically and will depend on signal hierarchy, structure, payload, and framing selected. The soft LEDs have a tricolor function:

- Green:** No error or alarm is present.
- Red:** An error or alarm condition is detected and is currently present.
- Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.

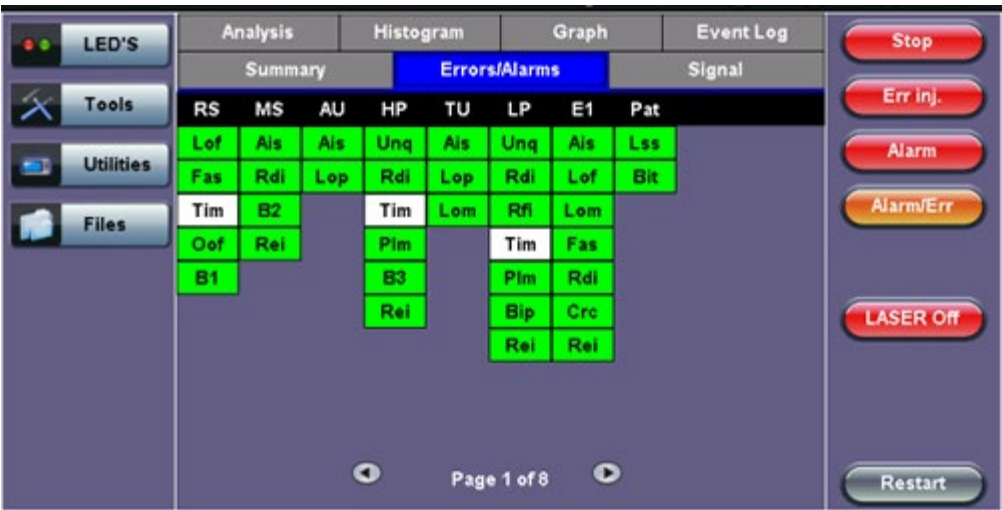



Tapping the individual soft LED will automatically link directly to the applicable result screen which provides detailed information. Depending on the settings chosen in **Setup > Signal**, the Alarms/Errors displayed and page length will vary, but the order in which they are presented remain the same.

The LED headers are described in the table below:

SDH Alarm Definitions and Descriptions	
RS	Regenerator Section
MS	Multiplexer Section
AU	Administrative Unit
HP	High Order Path
TU	Tributary Unit
LP	Low Order Path
E1	2Mbit/s signal (depends on payload selected)
Pat	Pattern detection (PRBS, user, fixed words)

SDH Error and Alarm defection criteria per ITU-T G.707 and O.150 recommendations:

Signal and BER – Alarm Definitions	
LOS	Loss of Signal LOS is raised when the synchronous signal (STM-N) level drops below the threshold at which a BER of 10^{-3} is predicted. It could be due to a cut cable, excessive attenuation of the signal, or equipment fault. The LOS state will clear when two consecutive framing patterns are received and no new LOS condition is detected.
TSE	Test Sequence Error
LSS	Loss of Sequence Synchronization - Out-of-service bit error measurements using pseudo-random sequences or PRBS can only be performed if the reference sequence produced on the receiving side of the test set-up is correctly synchronized to the sequence coming from the object under test. Sequence synchronization shall be considered lost and re-synchronization shall be started if: - The bit error ratio is ≥ 0.20 during an integration interval of 1 second; or - It can be unambiguously identified that the test sequence and the reference sequence are out of phase.

Regenerator Section – Alarm Definitions	
LOF	Loss of Frame - Declared when OOF state exists for up to 3 ms. If OOFs are intermittent, the timer is not reset to zero until an in-frame state persists continuously for 0.25 ms.
OOF	Out of Frame - Declared when 4 consecutive SDH frames are received with invalid (errored) framing patterns. Maximum OOF detection time is 625 μ s
B1	Regenerator section error monitoring - Parity errors evaluated by the B1 byte (BIP-8) of an STM-N. If any of the eight parity checks fail, the corresponding block is assumed to be in error.

SDH Error and Alarm defection criteria per ITU-T G.707 and O.150 recommendations:

Multiplexer Section – Alarm Definitions	
MS-AIS	Multiplexer Section Alarm Indication Signal - Declared when bits 6,7,8 of the K2 byte contain a "111" pattern for five consecutive frames
MS-RDI	Multiplexer Section Remote Defect Indication - Declared when bits 6,7,8 of the K2 byte contain a "110" pattern for five consecutive frames
MS-REI	Multiplexer Section Remote Error Indication - For STM-1 signals, declared when the M1 byte located in TS #3 is different - For STM-4/16 signals, declared when the M1 byte located in TS #7 is different
B2	Multiplexer section error monitoring - Parity errors evaluated by the B2 byte (BIP-24 $\times$ N) of an STM-N. If any of the N $\times$ 24 parity checks fail, the corresponding block is assumed to be in error

Administrative Unit – Alarm Definitions	
AU-AIS	Administrative Unit Alarm Indication Signal - Alarm is declared when H1 and H2 pointer bytes contain an all ones pattern for three consecutive frames
AU-LOP	Administrative Unit Loss of Pointer - Indicates that a valid pointer is not found in N consecutive frames where N = 8, 9 or 10 or a 1001 pattern is detected (NDF)
AU-NDF	Administrative Unit New Data Flag


High Order Path – Alarm Definitions	
HP-UNEQ	HO path unequipped - Declared when the C2 byte contains "00H" in five consecutive frames
HP-RDI	HO path Remote Defect Indication - Alarm is declared when bits 5,6,7 of the G1 byte contain 100 or 111 in five consecutive frames
HP-TIM	HO path Trace Identifier Mismatch - Indicates that the J1 path trace does not match the expected message value. The TIM function must be enabled for this alarm to be active
HP-PLM	HO path Payload Mismatch - Declared after receiving five consecutive frames with mismatched VC signal labels
B3	HO path error monitoring of VC-3, VC-4 - Parity errors evaluated by the B3 byte (BIP-8) of a VC-N (N = 3, 4). If any of the eight parity checks fail, the corresponding block is assumed to be in error.
HP-REI	HO path Remote Error Indication - Declared when bits 1-4 of the G1 byte contain 0001 to 1000 pattern

Tributary Unit – Alarm Definitions	
TU-AIS	Tributary Unit Alarm Indication Signal - Declared when the V1 and V2 bytes for the TU path contain an all ones pattern for five consecutive super-frames
TU-LOP	Tributary Unit Loss of Pointer - Declared when no valid pointer is detected in N consecutive super-frames (N > 8 and < 10), or if N consecutive NDFs "1001" patterns are detected
TU-LOM	Tributary Unit Loss of Multiframe (H4)

Low Order Path – Alarm Definitions	
LP-UNEQ	LO path unequipped - Declared when bits 5, 6, 7 of the V5 byte contain "000" for five consecutive frames
LP-RDI	LO path Remote Defect Indication - Declared when bit 5 of the V5 byte contains a "1" in five consecutive TU super-frames while bits 6,7 of the K4 byte contain "00" or "11"
LP-RFI	LO path Remote Failure Indication - Declared when bit 4 of the V5 byte contains "1" in five consecutive frames
LP-TIM	LO path Trace Identifier Mismatch - Indicates that the J2 path trace does not match the expected message value. The TIM function must be enabled for this alarm to be active
LP-PLM	LO path Payload Mismatch - Declared when bits 5,6,7 of the V5 byte are set to "000", "001", or "111" which indicate a mismatch LP signal label
LP-REI	LO path Remote Error Indication - Declared when bit 3 of the V5 byte is set to "0"
LP-BIP	LO path Bit Interleaved Parity (VC-11, VC-12) - A BIP-2 parity error calculated over all the bytes of the previous VC frame

Errors/Alarms (Page 2)

Page 2 lists the SDH Errors in logical order that are associated with the signal under test. All errors are evaluated and stored. The Elapsed Time [ET] is shown in the right hand corner of the header. Error conditions are displayed in red including count and rate.

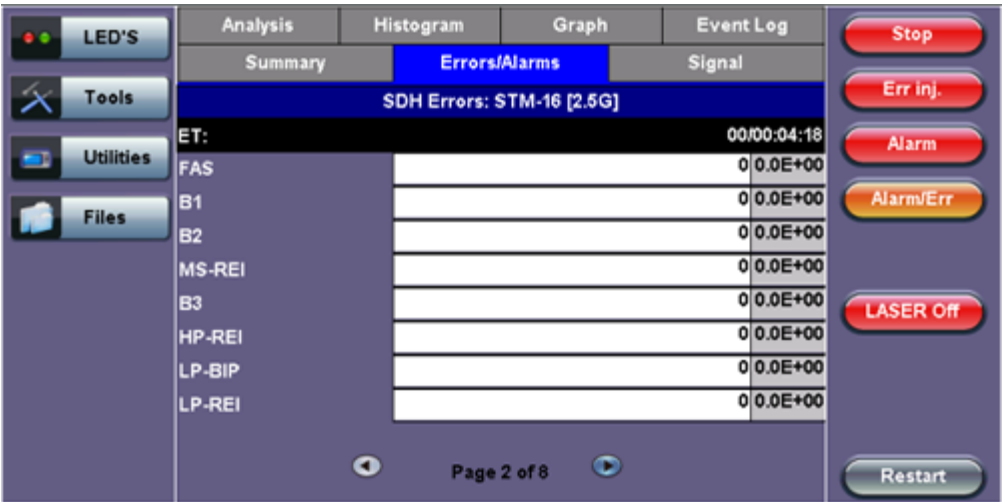


Errors/Alarms (Page 2)

Errors/Alarms (Page 3)

Page 3 lists the Section and Line Overhead Alarms in logical order associated with the signal under test. All alarms are evaluated and stored. The Elapsed Time [ET] since the start of the test is shown in the upper right hand corner.

The alarms associated with the Section and Line are displayed separately for ease of interpretation.

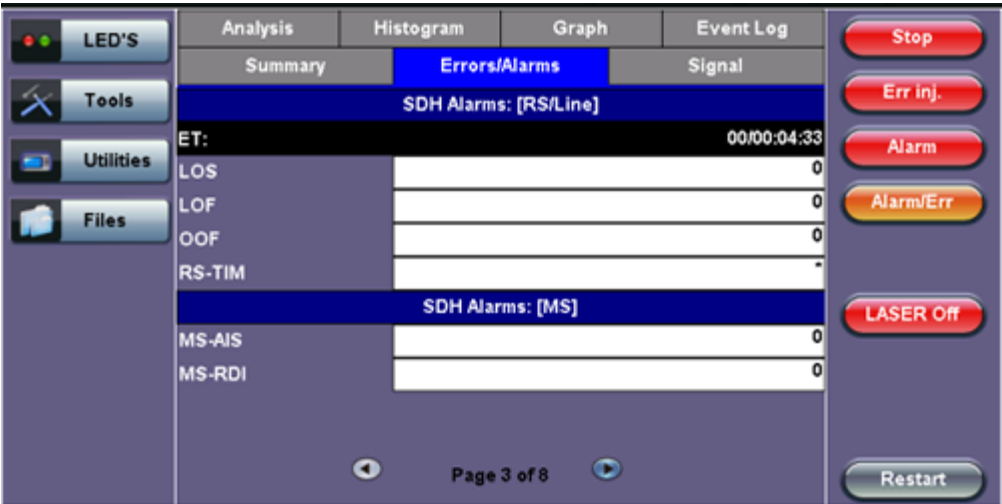

Errors/Alarms (Page 3)

Errors/Alarms (Page 4 & 5)

Page 4 & 5 lists the High Order Path and Low Order path in logical order that are associated with the signal under test. All alarms are evaluated and stored.

Errors/Alarms (Page 6)

Page 6 lists the PDH Alarms in logical order that are associated with the signal and payload under test. All alarms are evaluated and stored.

Errors/Alarms (Page 7)

Page 7 lists the PDH Errors in logical order that are associated with the signal and payload under test. All errors are evaluated and stored.

Errors/Alarms (Page 8)

Page 8 lists the BERT Errors in logical order that are associated with the signal and payload under test. All errors are evaluated and stored.

[Go back to top](#) [Go back to TOC](#)

7.2.3 Event Log

The **Event** Log tab displays the screen listing the Error and Alarm events recorded during a test. The events are presented in chronological sequence - number, type of event, start time, duration (alarms), and ratio/count (errors) are displayed.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Summary		Errors/Alarms		Signal
Analysis	Histogram	Graph		Event Log
#	Type	Start		Dur/Count
1	Start	17/08/25 10:14:22.0		
2	LOS	17/08/25 10:14:22.1		00:04:56.1
3	LSS	17/08/25 10:19:18.2		00:00:00.2
4	CODE	17/08/25 10:19:19.0		12384
5	CODE	17/08/25 10:19:38.0		1
6	CODE	17/08/25 10:19:39.0		1
7	CODE	17/08/25 10:19:40.0		1
8				
9				

Page 1 of 1

Stop

Err inj.

Alarm

Alarm/Err

Restart


Event Log

[Go back to top](#) [Go back to TOC](#)

7.2.4 Signal

The **signal** tab displays the Level and Frequency screen. Page 1 displays the level measurement in electrical units (volts) for STM-1, STM-4, STM-16 and STM-64 signals.


Loss of Signal (LOS) and the Saturation level for optical signals is shown graphically including the level measurement in dBm.

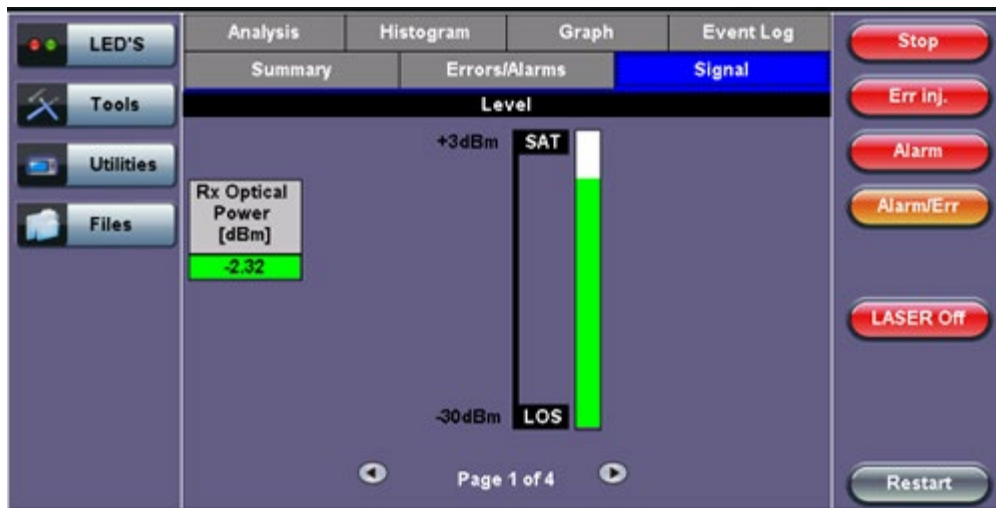

Signal (Page 1)

Frequency (Page 2)

The received signal frequency and offset is measured and displayed. For SDH signals, the measurement is performed on both electrical (BNC) and optical interfaces (SFP or XFP).

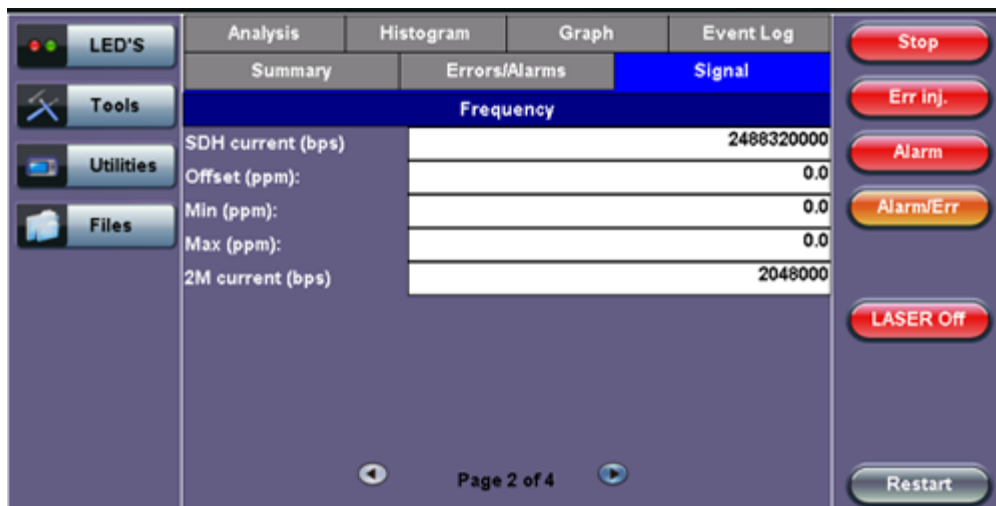

Signal - Frequency (Page 2)

Frequency: The received signal frequency and offset is measured and displayed.

- **SDH Current:** Indicates the frequency of the input signal.
- **Offset:** Indicates the difference between the standard rate and the rate of the input signal.
- **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal.
- **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal.
- **2M Current:** Indicates the frequency of the payload data. Options 1.5M, 45M, 34M are displayed.

A Min (ppm) and Max (ppm) function can be used to ensure that the received signal is within a certain clock tolerance and that the network element is transmitting correctly. The frequency limits for the various signal types according to ITU-T recommendations are presented in the table below.

Low quality clock sources that deviate from the nominal value cause problems in the operation of network elements. It is necessary and recommended to measure the signal frequency at all hierarchies to reduce synchronization risks. To measure line frequency in service, the test set must be connected to a Protected Monitoring Point (PMP). The frequency of the signal is normally reported in Hz, while the deviation is reported in ppm. Tolerances for the various clock frequencies of SDH hierarchies are presented in the table below.

SONET/SDH Clock Frequencies and Tolerances	
Bit rate (Mbps)	Tolerance (ppm)
155,520	< 4.6ppm
622,080	< 4.6ppm
2,488,320	< 4.6ppm
9,953,280	< 4.6ppm


Level: Measures the Peak and Peak-Peak voltage values or optical power of the incoming signal.

Optical Information (Page 3)

Page 3 displays the Optical module (SFP or XFP) information which includes Vendor name, Part number, and Optical Wavelength.

Optical Information (Page 4)

Page 4 displays the Optical module (SFP or XFP) Power Measurement Graph.

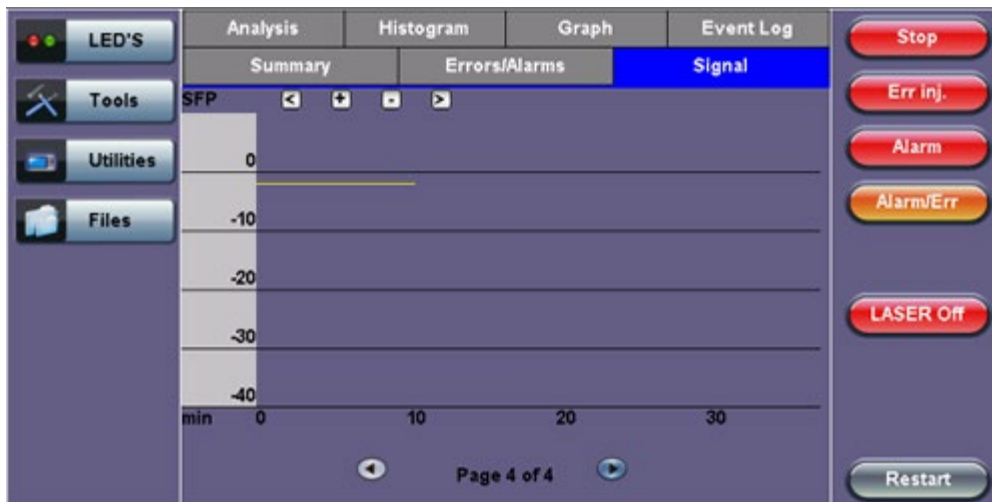


Signal - Optical (Page 4)

[Go back to top](#) [Go back to TOC](#)

7.2.5 Histogram

The **Histogram** tab displays the screen showing a historical record of the Alarms and Errors recorded during the measurement interval. A dedicated Page is available for errors and alarms including BER.

Page 1 displays the **Alarms** associated with the **Section Overhead (SOH) Alarm**.

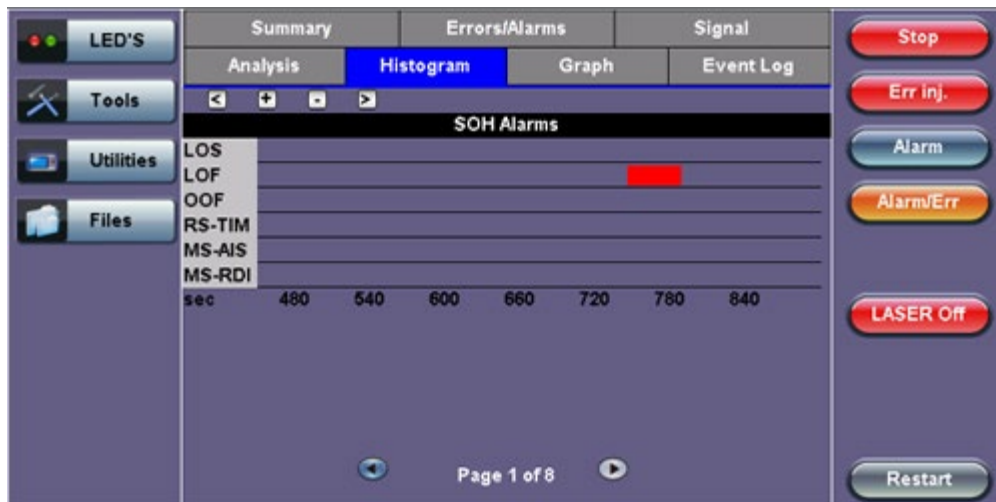

Histogram - SOH Alarms (Page 1)

The alarms and errors presented depend on the signal type and structure selected. A graphical timeline on the horizontal axis indicates when the event occurred. The upper left and right arrows allow the user to scroll through the measurement period while the + and – keys allow zooming in/out of the time axis.

Histogram (Page 2)

Page 2 displays the **Errors** associated with the **Section Overhead (SOH)**.

Histogram (Page 3)

Page 3 displays the **Alarms and Errors** associated with the **Administrative Unit (AU, SDH)**. The measured parameters are:

- AU-AIS (AU - Alarm Indication Signal)
- AU-LOP (AU - Loss of Pointer)

Histogram (Page 4)

Page 4 displays the **Alarms and Errors** associated with the **High Order Path (HP, SDH)**. The measured parameters are:

- HP-UNE (HP-Unequipped)
- HP-PLM (HP-Payload Mismatch)
- HP-TIM (HP-Trace Identifier Mismatch)
- HP-RDI (HP-Remote Defect Indication)
- B3 errors
- HP-REI (HP-Remote Error Indication)

Histogram (Page 5)

Page 5 displays the **Alarms and Errors** associated with the **Tributary Unit (TU)**.

- TU-AIS (TU-Alarm Indication Signal)
- TU-LOP (TU-Loss of Pointer)

Histogram (Page 6)

Page 6 displays the **Alarms and Errors** associated with the **Low Order Path (LP,SDH)**. The measured parameters are:

- LP-UNE (LP-Unequipped)
- LP-PLM (LP-Payload Mismatch)
- LP-TIM (LP-Trace Identifier Mismatch)
- LP-RDI (LP-Remote Defect Indication)
- LP-RFI (LP-Remote Fault Indication)
- LP-BIP (LP-Bit Interleaved Parity)

Histogram (Page 7)

Page 7 displays the **Alarms** associated with the payload. The measured parameters depend on the payload selected.

Histogram (Page 8)

Page 8 displays the **BERT Errors** associated with the test pattern.


[Go back to top](#) [Go back to TOC](#)

7.2.6 Graph

The Graph tab displays the screen displaying a log of the Errors recorded during the measurement interval. A dedicated page is available for each of the following error types:

- FAS
- B1
- B2
- MS-REI
- B3
- HP-REI
- LP-BIP
- LP-REI
- PDH errors depending on payload


Scroll through the various pages to display the anomaly of interest. A status pop-up screen can be accessed by tapping on the graph area.

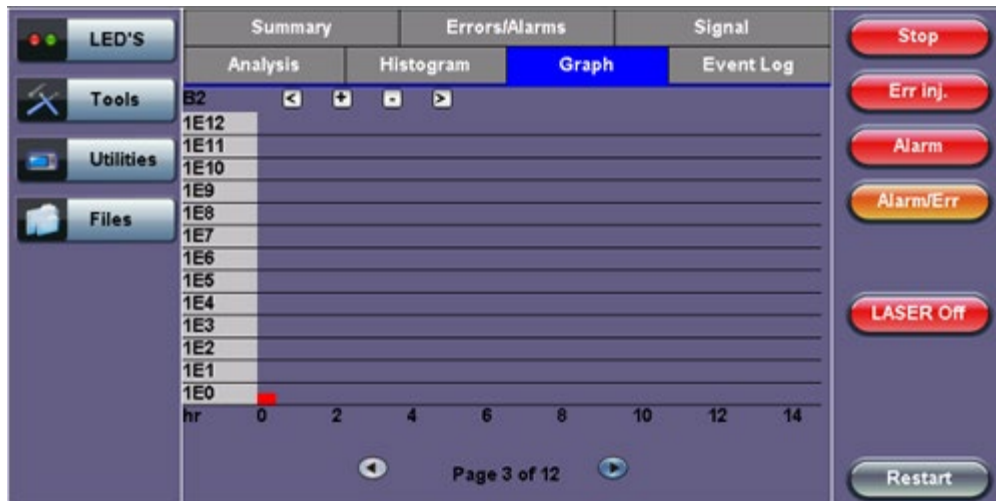

Graph (Page 3)

[Go back to top](#) [Go back to TOC](#)

7.2.7 Performance Analysis

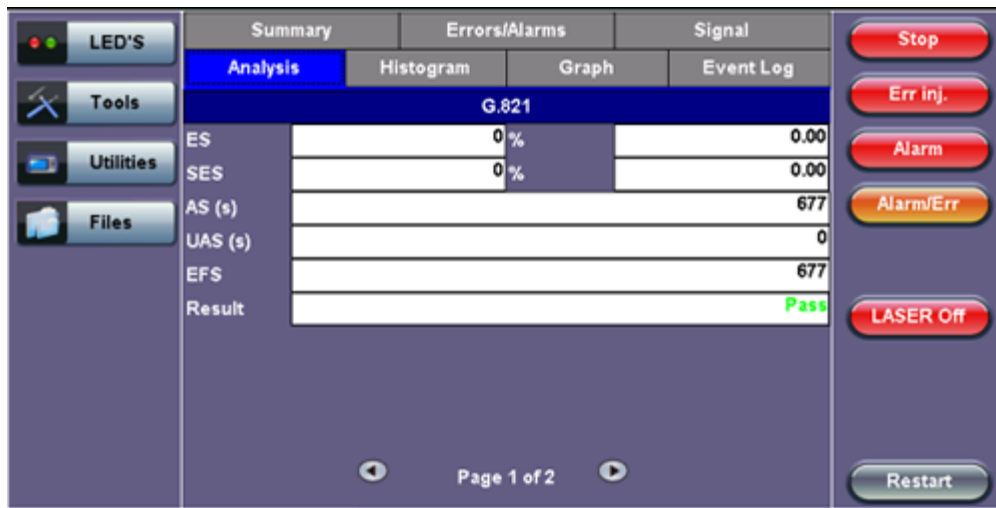

G.821 Analysis

The **Analysis** tab displays measured objectives from ITU-T performance tests selected from the Measurements tab (Setup > Measurements). See [Performance Analysis](#) in the PDH section for information on the Analysis tab and test definitions. For a brief description of supported G-Series and M-Series performance tests as well as setup instructions, please see [Performance Analysis](#) in the Measurement Configuration section.

[Go back to top](#) [Go back to TOC](#)

7.2.8 Service Disruption Test (SDT) Results


Refer to [SDT Results in the PDH section](#) for more information.

[Go back to top](#) [Go back to TOC](#)

7.3 Results: SONET

7.3.1 Summary

The **Summary** tab displays a summary of test results and parameters. At a glance, the user is able to see if there are any alarms, errors, or signal failure pertaining to the SONET signal and its payload.

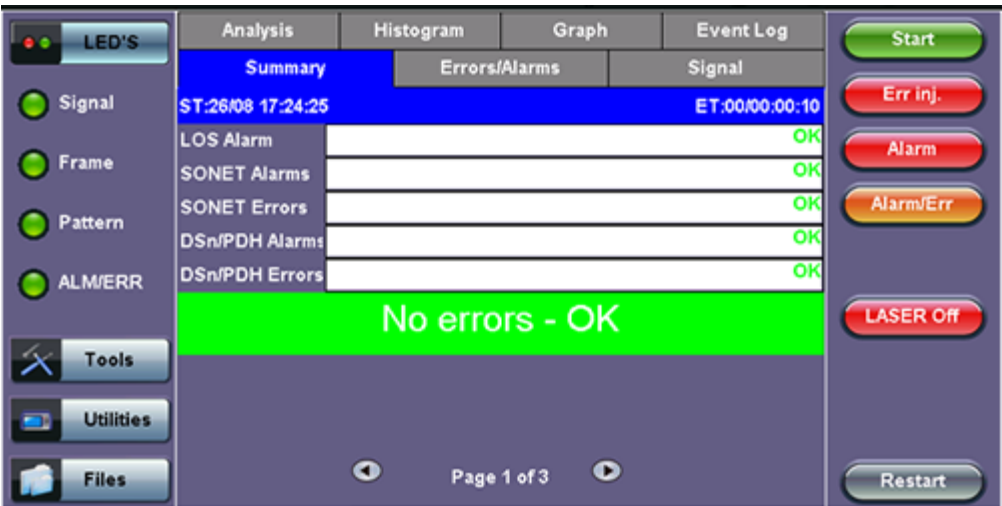

Summary

[Go back to top](#) [Go back to TOC](#)


7.3.2 Errors and Alarms

The **Errors/Alarms** tab displays several pages showing error and alarm statuses.

Page 1 provides an overview of all the Errors and Alarms applicable to the signal or network under test. The color of the page tab is normally blue; however, it will turn red when an alarm error condition has been detected or recorded.

The soft LEDs on screen are arranged logically and will depend on signal hierarchy, structure, payload, and framing selected. The soft LEDs have a tricolor function:

-  **Green:** No error or alarm is present.
-  **Red:** An error or alarm condition is detected and is currently present.
-  **Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.

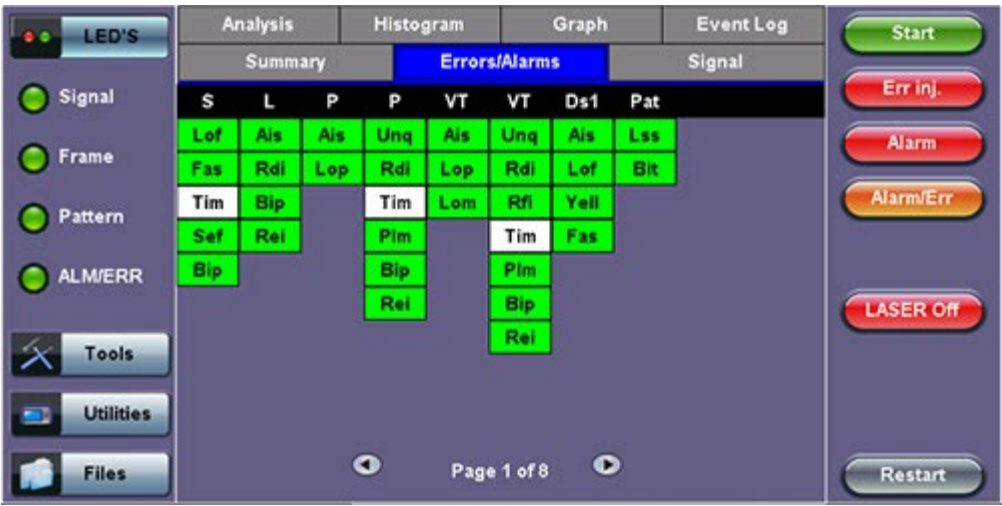



Tapping the individual soft LED will automatically link directly to the applicable result screen which provides detailed information. Depending on the settings chosen in **Setup > Signal**, the Alarms/Errors displayed and page length will vary, but the order in which they are presented remain the same.

The LED headers are described in the table below:

SONET Alarm Definitions and Descriptions	
Section	Section Layer
Line	Line Layer
STS Path	STS Path Layer
VT Path	Virtual Tributary Path Layer
DS1	1.5 Mbit/s signal (depends on payload selected)
Pat	Pattern detection (PRBS, user, fixed words)

SONET Error and Alarm definitions per Bellcore GR.253 and ANSI T1.105 recommendations:

Abbreviation	Name	OH byte
LOS	Loss of Signal	
TSE	Test Sequence Error(bit error)	
LSS	Loss of Sequence Synchronizartion	
AIS	Alarm Indication Signal	
SECTION		
OOF	Out of Frame	A1,A2
LOF	Loss of Frame	A1,A2
B1(8bits)	Regenerator Section Error Monitoring	B1
TIM-S	Trace Identifier Mismatch	J0
LINE		
AIS-L	Line AIS	K2
RDI-L	Line Remote Defect Indication	K2
REI-L	Line Remote Error Indication	M1
B2(24bits)	Error Monitoring	B2

STS-PATH		
LOP-P	Loss of STS Pointer	H1,H2
AIS-P	Administrative Unit AIS	STS-1 SPE include. H1,H2,H3
RDI-P	STS path Remote Defect Indication	G1
REI-P	STS path Remote Error Indication	G1
TIM-P	STS path Trace Identifier Mismatch	J1
PLM-P	STS path Payload Label Mismatch	C2
B3(8bits)	Error Monitoring	B3
UNEQ-P	STS path Unequipped	C2
VIRTUAL TRIBURTARY PATH (VT)		
LOP-V	Loss of TU Pointer	V1,V2
AIS-V	TU Alarm Indication Signal	VT incl. V1 to V4
LOM	TU Loss of Multiframe	H4
UNEQ-V	VT Path Unequipped	V5
RDI-V	VT Path Remote Defect Indication	V5
REI-V	VT Path Remote Error Indication	V5
RFI-V	VT Path Remote Failure Indication	V5
TIM-V	VT Path Trace Identifier Mismatch	J2
PLM-V	VT Path Payload Label Mismatch	V5
BIP-2	VT Path Error	V5

SONET Error and Alarm defection criteria per Bellcore GR.253 and ANSI T1.105/231:

	Anomalies/Defect	Detection Criteria	Bellcore ANSI
Section/Line Layer			
LOS	Loss of Signal	All-zero pattern for 2,3 us ≤ T ≤ 100us	GR-253 T1.231
LOF	Loss of Frame	A1, A2 No valid framing pattern for 3 ms (24 frames)	GR-253 T1.231
B1	Section BIP error	Mismatch of the recovered and computed BIP-8 covers the whole STS-N frame	GR-253 T1.105
B2	Line BIP error	Mismatch of the recovered and computed Nx BIP-8 covers the whole STS-N frame	GR-253 T1.105
AIS-L	Line-AIS	K2(bits 6, 7, 8) = 111 for 5 frame	GR-253 T1.231
REI-L	Line Remote Error Indication	Number of detected B2 errors in the sink side encoded in the byte M0 or M1 of source side	GR-253 T1.105
RDI-L	Line Remote Defect Indication	K2(bits 6, 7, 8) = 110 for z frame (z = 5 – 10)	GR-253 T1.231

	Anomalies/Defect	Detection Criteria	Bellcore ANSI
STS Path Layer			
AIS-P	STS Path AIS	All "1" in the STS pointer bytes H1, H2 for ≥ 3 frames	GR-253 T1.231
LOP-P	STS Path Loss of Pointer	8 – 10 NDF enable, 8 – 10 invalid pointers	GR-253 T1.231
B3	STS Path BIP error	Mismatch of the recovered and computed BIP-8 covers the entire STS-SPE	GR-253 T1.105
UNEQ-P	STS Path Unequipped	C2 = "0" for ≥ 5 (≥ 3 as per T1.231) frames	GR-253 T1.231
TIM-P	STS Path Trace Identifier Mismatch	Mismatch of the accepted and expected Trace Identifier in byte J1 (64 bytes sequence)	GR-253 T1.105
REI-P	STS Path Remote Error Indication	Number of detected B3 errors in the sink side encoded in byte G1 (bits 1, 2, 3, 4) of the source side	GR-253 T1.105
RDI-P	STS Path Remote Defect Indication	G1 (bit 5) = 1 for 10 frames	GR-253 T1.231
PLM-P	STS Path Payload Label Mismatch	Mismatch of the accepted and expected Payload Label in byte C2 for ≥ 5 (≥ 3 as per T1.231) frames	GR-253 T1.231


	Anomalies/Defect	Detection Criteria	Bellcore ANSI
VT Path Layer			
LOM	Loss of Multiframe	Loss of synchronization on H4 (bits 7, 8) superframe sequence	GR-253 T1.105
AIS-V	VT Path AIS	All "1" in the VT pointer bytes V1, V2 for ≥ 3 frames	GR-253 T1.231
LOP-V	VT Path Loss of Pointer	8 – 10 NDF enable, 8 – 10 invalid pointers	GR-253 T1.231
BIP-2	VT Path BIP Error	Mismatch of the recovered and computed BIP-2 (V5 bits 1, 2) covers entire VT	GR-253 T1.105
UNEQ-V	VT Path Unequipped	V5 (bits 5, 6, 7) = 000 for ≥ 5 (≥ 3 as per T1.231) superframes	GR-253 T1.231
TIM-V	VT Path Trace Identifier Mismatch	Mismatch of the accepted and expected Trace Identifier in byte J2	
REI-V	VT Path Remote Error Indication	If one or more BIP-2 errors detected in the sink side, byte V5 (bit 3) = 1 on the source side	GR-253 T1.105
RDI-V	VT Path Remote Defect Indication	V5 (bit 5) = 1 for 10super frames	GR-253 T1.231
PLM-V	VT Path Payload Label Mismatch	Mismatch of the accepted and expected Payload Label in bye V5 (bits 5, 6, 7) for ≥ 5 (≥ 3 as per T1.231) superframes	GR-253 T1.231

Refer to PDH alarms in the PDH [Results](#) section.

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 2)

Page 2 lists the SONET Errors in logical order that are associated with the signal under test. All errors are evaluated and stored. The Elapsed Time [ET] is shown in the right hand corner of the header. Error conditions are displayed in red including count and rate.

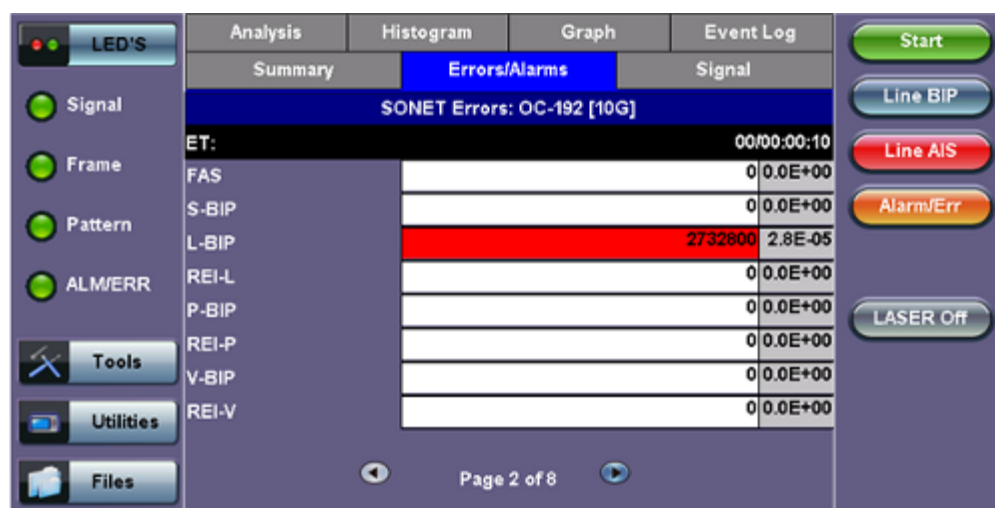


Errors/Alarms (Page 2)

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 3)

Page 3 lists the Section and Line Overhead Alarms in logical order associated with the signal under test. All alarms are evaluated and stored. The Elapsed Time [ET] since the start of the test is shown in the upper right hand corner.

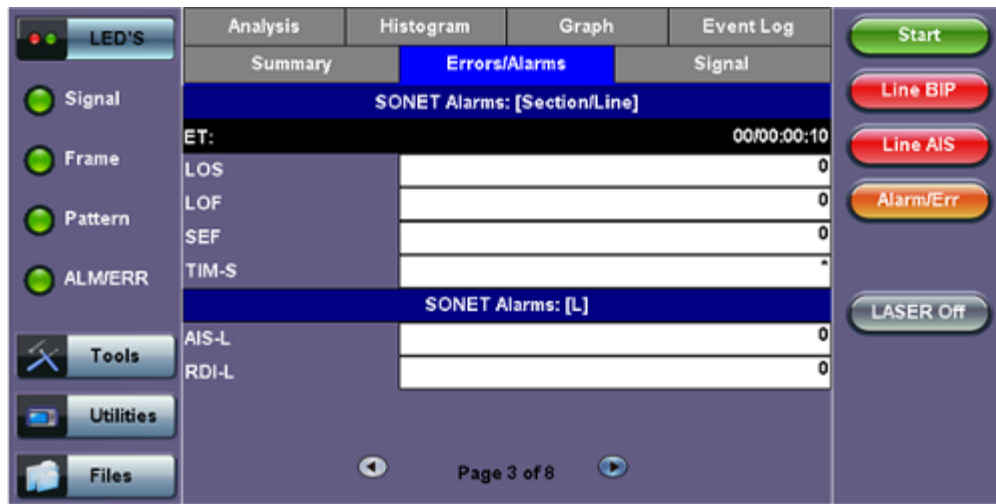

Errors/Alarms (Page 3)

The alarms associated with the Section and Line are displayed separately for ease of interpretation.

Errors/Alarms (Page 4 and 5)


Page 4 & 5 lists the STS Path and VT path in logical order that are associated with the signal under test. All alarms are evaluated and stored.

Errors/Alarms (Page 6 and 7)

Page 6 lists the **PDH/DSn Alarms** in logical order that are associated with the signal and payload under test. All alarms are evaluated and stored.

Errors/Alarms (Page 8)

Page 8 lists the **BERT Errors** in logical order that are associated with the signal and payload under test. All errors are evaluated and stored.

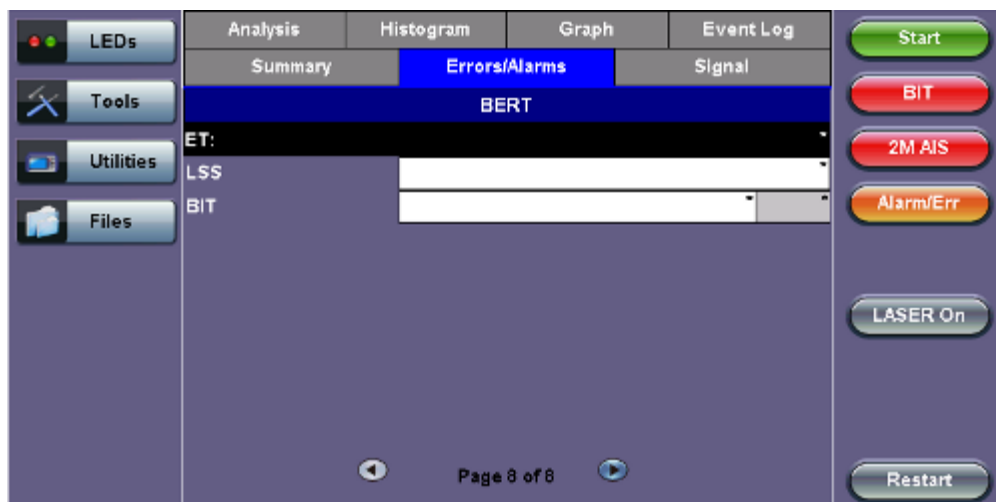

Errors/Alarms (Page 8)

[Go back to top](#) [Go back to TOC](#)

7.3.3 Event Log

The **Event log** tab displays the screen listing the Error and Alarm events recorded during a test. The events are presented in chronological sequence - number, type of event, start time and duration and duration (alarms) and ratio/count (errors) are displayed.

Refer to [Results: PDH > Event Log](#) for details

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Summary		Errors/Alarms		Signal
Analysis		Histogram	Graph	Event Log
#	Type	Start		Dur/Count
1	Start	13/04/11 16:21:41.0		
2	L-BIP	13/04/11 16:21:49.0		313856
3	L-BIP	13/04/11 16:21:50.0		1961216
4	L-BIP	13/04/11 16:21:51.0		457728
5	Stop	13/04/11 16:21:51.0		
6				
7				
8				
9				

Page 1 of 1

Start

Line BIP

Line AIS

Alarm/Err

LASER Off


Event Log

[Go back to top](#) [Go back to TOC](#)

7.3.4 Signal

The **Signal** tab displays the Level and Frequency screen. Page 1 displays the level measurement in electrical units (volts) for OC-3, OC-12, OC-48 and OC-192 signals.

Loss of Signal (LOS) and the Saturation level for optical signals is shown graphically including the level measurement in dBm.

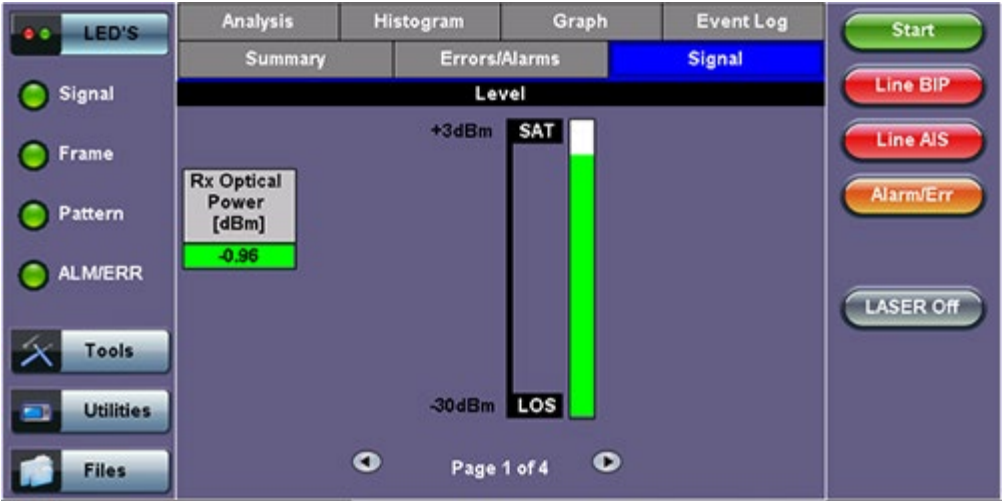


Signal (Page 1)

[Go back to top](#) [Go back to TOC](#)

Signal > Frequency (Page 2)

The received signal frequency and offset is measured and displayed. For SONET signals, the measurement is performed on both electrical (BNC) and optical interfaces (SFP or XFP).

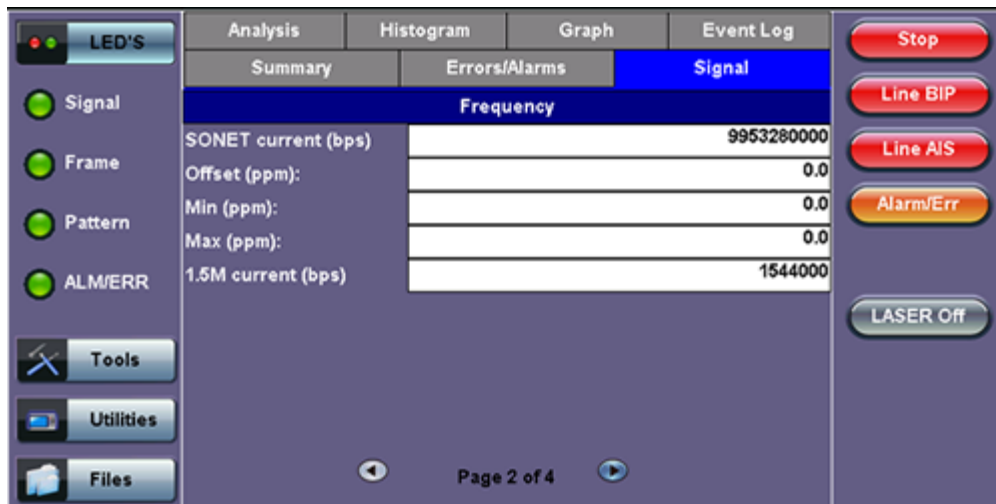

Frequency (Page 2)

Frequency: The received signal frequency and offset is measured and displayed.

- **SONET Current:** Indicates the frequency of the input signal.
- **Offset:** Indicates the difference between the standard rate and the rate of the input signal.
- **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal.
- **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal.
- **45M Current:** Indicates the frequency of the payload data. Options are 1.5M, 2M, 34M are displayed.

A Min (ppm) and Max (ppm) function can be used to ensure that the received signal is within a certain clock tolerance and that the network element is transmitting correctly. The frequency limits for the various signal types according to ITU-T recommendations are presented in the table below.

Low quality clock sources that deviate from the nominal value cause problems in the operation of network elements. It is necessary and recommended to measure the signal frequency at all hierarchies to reduce synchronization risks. To measure line frequency in service, the test set must be connected to a Protected Monitoring Point (PMP). The frequency of the signal is normally reported in Hz, while the deviation is reported in ppm. Tolerances for the various clock frequencies of SONET hierarchies are presented in the table below

SONET/SDH Clock Frequencies and Tolerances	
Bit rate (Mbps)	Tolerance (ppm)
155,520	< 4.6ppm
622,080	< 4.6ppm
2,488,320	< 4.6ppm
9,953,280	< 4.6ppm


Level: Measures the Peak and Peak-Peak voltage values of the incoming signal. The levels for STS-3 electrical signal according to GR.253 recommendations are presented.

ITU-T/GR-253 Performance Analysis for PDH/DSn and SONET systems			
Analysis	PDH/DSn	SONET	Anomalies
G.821	✓	✓	TSE based on bit errors
G.826 (Out of service)	✓	✓	TSE based on block errors
G.826 (In service)		✓	B1, B2, B3, BIP-V, DS1/E1/DS3, E1 CRC
G.828 (In service)		✓	B1, B2, TSE
G.829 (In service)		✓	B1, B2, B3, BIP-V, TSE
M.2100	✓		DS1/E1/DS3 FAS, E1 CRC, TSE
M.2101		✓	B1, B2, B3, BIP-V, TSE

[Go back to top](#) [Go back to TOC](#)

Optical Information (Page 3)


Page 3 displays the Optical module (SFP or XFP) information which includes Vendor name, Part Number and Optical Wavelength.

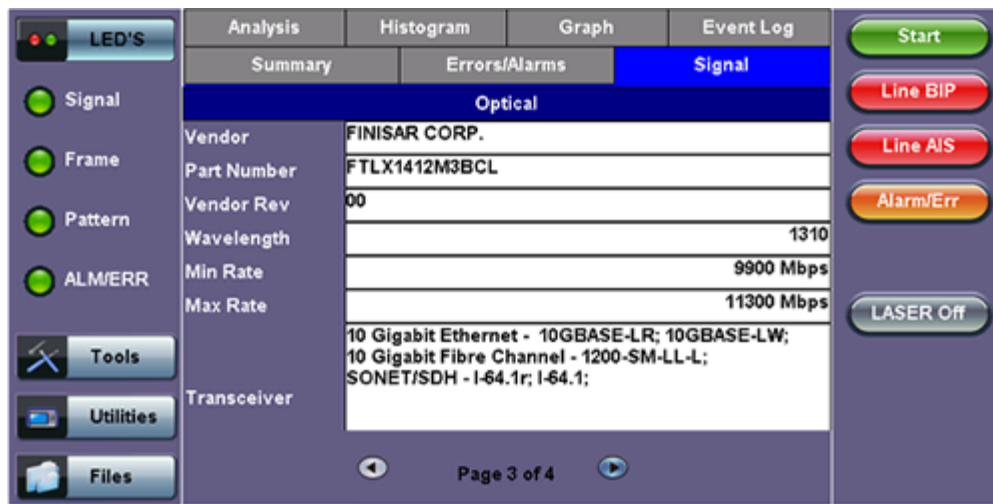

Signal - Optical (Page 3)

Signal > Optical Information (Page 4)

Page 4 displays the Optical module (SFP or XFP) Power Measurement Graph.

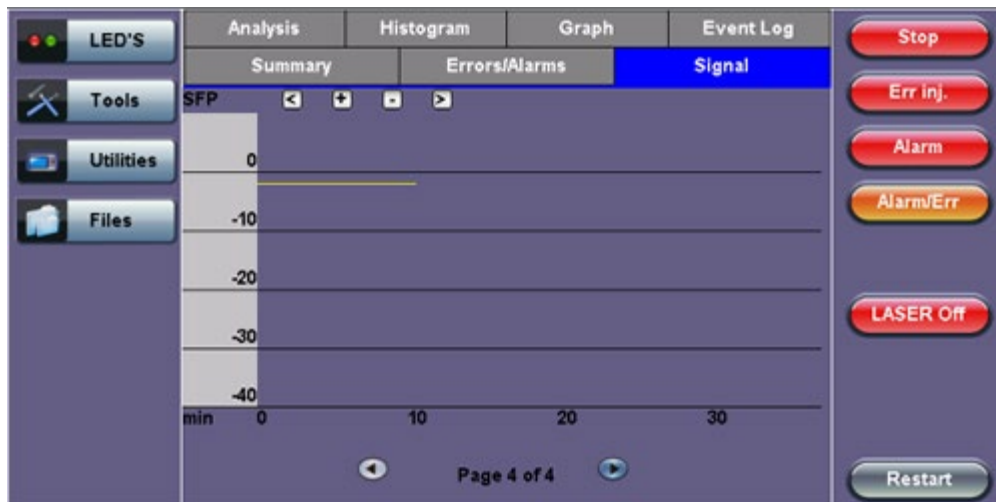

Signal - Optical (Page 4)

[Go back to top](#) [Go back to TOC](#)

7.3.5 Histogram

The **Histogram** tab displays the screen showing a historical record of the Alarms and Errors recorded during the measurement interval. A dedicated page is available for errors and alarms including BER.

Page 1 displays the **Alarms** associated with the **SONET Alarm**.




The alarms and errors presented depend on the signal type and structure selected. A graphical timeline on the horizontal axis indicates when the event occurred. The upper left and right arrows allow the user to scroll through the measurement period while the + and – keys allow zooming in/out of the time axis.

[Go back to top](#) [Go back to TOC](#)

Histogram (Page 2)

Page 2 displays the Errors associated with the **SONET Errors**.

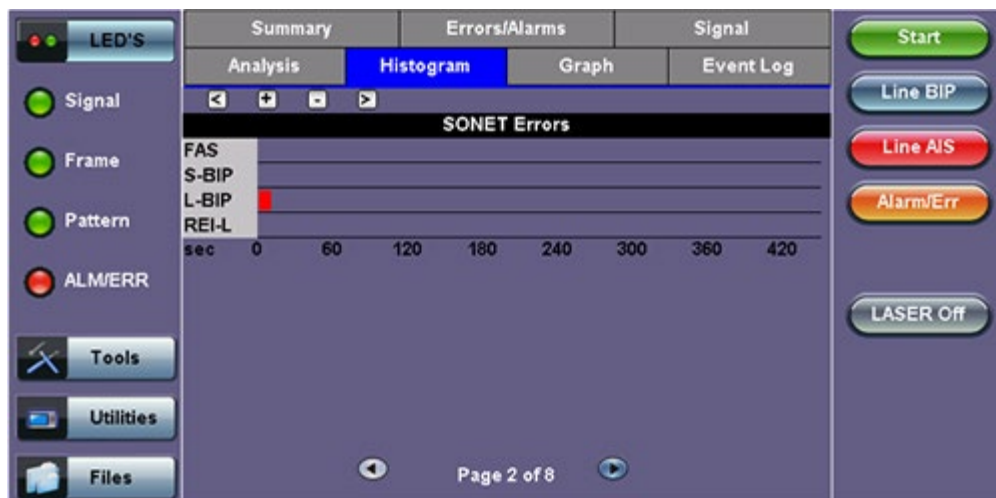

Histogram - SONY Errors (Page 2)

[Go back to top](#) [Go back to TOC](#)

Histogram (Page 3)

Page 3 displays the **Alarms and Errors** associated with the **STS PATH**. The measured parameters are:

- AIS-P, STS Path AIS
- LOP-P, STS Path LOP

[Go back to top](#) [Go back to TOC](#)

Histogram (Page 4)

Page 4 displays the **Alarms and Errors** associated with the **STS Path**. The measured parameters are:

- UNEQ-P (STS Path-Unequipped)
- PLM-P (STS Path-Payload Mismatch)
- TIM-P (STS Path-Trace Identifier Mismatch)
- RDI-P (STS Path-Remote Defect Indication)
- B3 errors
- REI-P (STS Path-Remote Error Indication)

[Go back to top](#) [Go back to TOC](#)

Histogram (Page 5)

Page 5 displays the **Alarms and Errors** associated with the **Virtual Tributary (VT)**.

- AIS-V (VT-Alarm Indication Signal)
- LO-VP (VT-Loss of Pointer)

[Go back to top](#) [Go back to TOC](#)

Histogram (Page 6)

Page 6 displays the **Alarms and Errors** associated with the **VT Path**. The measured parameters are:

- UNEQ-V (VT-Unequipped)
- PLM-V (VT-Payload Mismatch)
- TIM-V (VT-Trace Identifier Mismatch)
- RDI-V (VT-Remote Defect Indication)
- RFI-V (VT-Remote Fault Indication)
- BIP-V (VT-Bit Interleaved Parity)
- REI-V (VT-Remote Error Indication)

[Go back to top](#) [Go back to TOC](#)

Histogram (Page 7)

Page 7 displays the **Alarms and Errors** associated with the payload. The measured parameters depend on the payload selected.

[Go back to top](#) [Go back to TOC](#)

Histogram (Page 8)

Page 8 displays the **Bit Errors** associated with the test pattern.

[Go back to top](#) [Go back to TOC](#)


7.3.6 Graph

The **Graph** tab displays the screen displaying a log of the Errors recorded during the measurement interval. A dedicated page is available for each of the following error types:

- FAS
- B1
- B2

- REI-S
- B3
- REI-P
- BIP-V
- REI-V
- PDH/DSn errors depending on payload


Scroll through the various pages to display the anomaly of interest. A status pop-up screen can be accessed by tapping on the graph area.

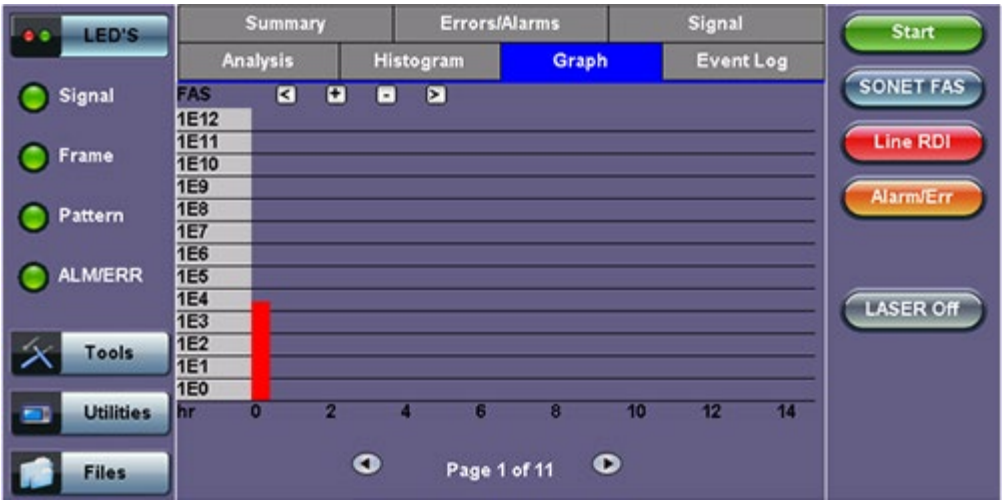

Graph (Page 1)

[Go back to top](#) [Go back to TOC](#)

7.3.7 Performance Analysis

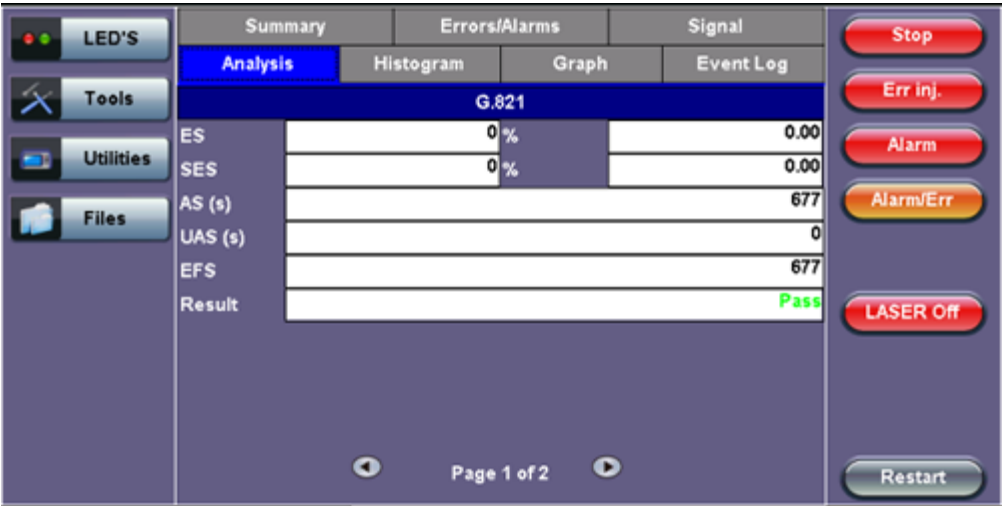

G.821 Analysis

The **Analysis** tab displays measured objectives from ITU-T performance tests selected from the Measurements tab (Setup > Measurements). See [Performance Analysis](#) in the PDH section for information on the Analysis tab and test definitions. For a brief description of supported G-Series and M-Series performance tests as well as setup instructions, please see [Performance Analysis](#) in the Measurement Configuration section.

[Go back to top](#) [Go back to TOC](#)

7.3.8 Service Disruption Test (SDT) Results


Refer to [SDT Results in the PDH section](#) for more information.

7.4 Results: OTN

Measurements are accessed by tapping the Results button in the main menu. The results comprise a range of tabbed pages, similar to the setup pages.

7.4.1 Summary

The **Summary** tab displays a summary page of test results and parameters. At a glance, the user is able to see if there are any alarms, errors or signal failure pertaining to the OTN/SDH or OTN/SONET signal and its payload.

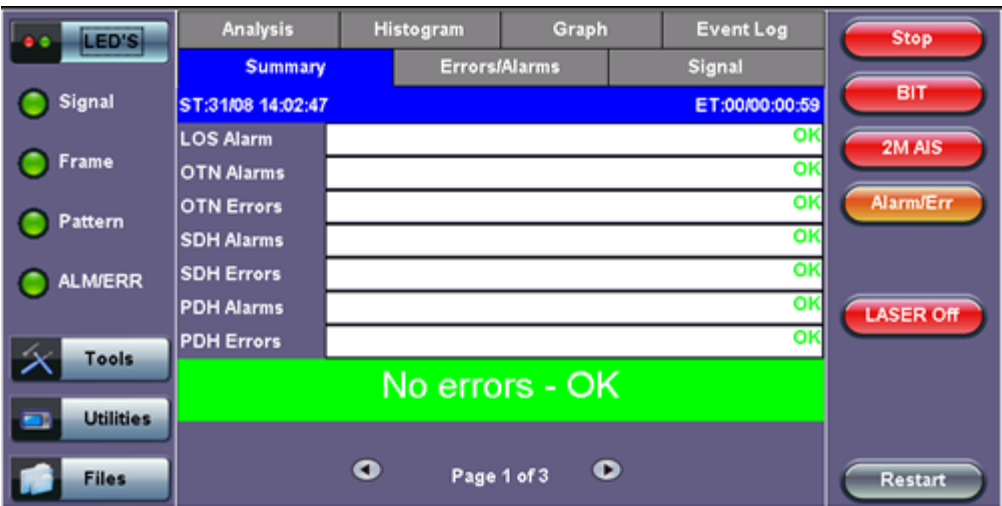

OTN/SDH Summary (International and Advanced Versions)

[Go back to top](#) [Go back to TOC](#)


7.4.2 Errors and Alarms

The **Error/Alarm** tab displays several pages showing the errors and alarm status.

Page 1 provides an overview of all the Errors and Alarms applicable to the signal or network under test. The color of the page tab is normally blue; however, it will turn red when an alarm error condition has been detected or recorded.

The soft LEDs on screen are arranged logically and will depend on signal hierarchy, structure, payload and framing selected. The soft LEDs have a tricolor function:

-  **Green:** No error or alarm is present.
-  **Red:** An error or alarm condition is detected and is currently present.
-  **Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.

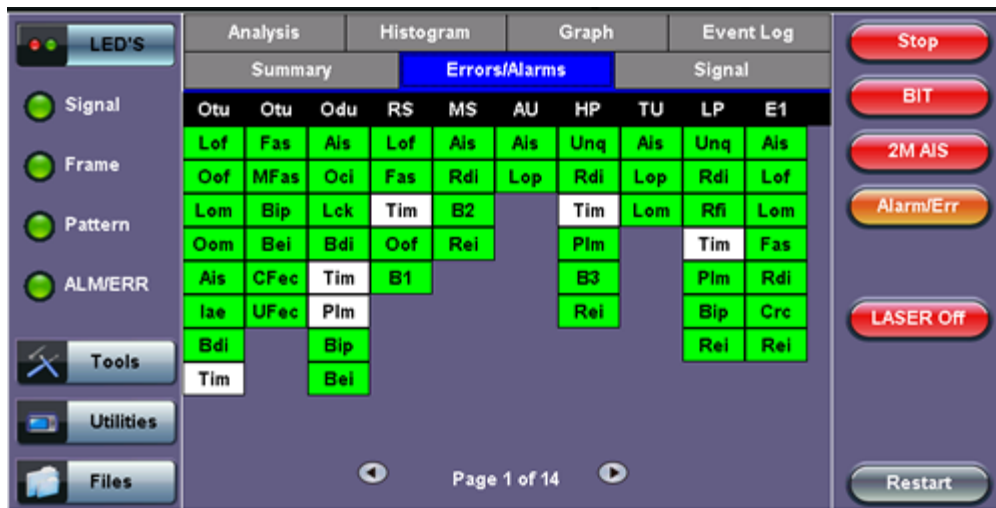

Errors/Alarms (Page 1)

Tapping the colored LEDs will automatically link directly to the applicable result screen which provides detailed information. Depending on the settings chosen in **Setup > Signal**, the Alarms/Errors displayed and page length will vary, but the order in which they are presented remain the same (from physical layer on the left, to payload and test pattern on the far right).

The colored headers are described in the table below:

Alarm Definitions and Descriptions	
OTU	Optical channel Transport Unit
ODU	Optical channel Data Unit
OPU	Optical channel Payload Unit
RS	Regenerator Section
MS	Multiplexer Section
AU	Administrative Unit
HP	High Order Path
TU	Tributary Unit
LP	Lower Order Path
E1	2Mbit/s signal (depend on payload selected)
PAT	Pattern detection (PRBS, User, fixed words)

OTN Error and Alarm definitions per ITU-T G.709 recommendations:

OTU Alarm Definitions Detection criteria according to G.709 and G.798	
LOF	Loss of Frame - Declared when the OOF states have been constantly observed for 3 ms respectively
OOF	Out of Frame - Declared if it fails to find an FAS sub-pattern (FAS bytes 3, 4, and 5) for five consecutive frames.
LOM	Loss of Multiframe - Declared when the OOF states have been constantly observed for 3 ms respectively
OOM	Out of Multiframe - Declared when the received MFAS is out of sequence for five consecutive frames
OTU-AIS	Alarm Indication Signal - PN-11 sequence (covers complete Och) $\geq 3 \times 8192$ bits
OTU-IAE	Incoming Alignment Error - This bit allows the ingress to inform the egress that an alignment error in the incoming signal has been detected. • IAE = 1 with error • IAE = 0 no error • Status (STAT) These three bits indicate the presence of maintenance signals (AIS, OCI, TCM, IAE)
OTU-BDI	Backward Defect Indication - This single bit conveys information regarding signal failure in the upstream direction • BDI = 1 indicates OTUk backward defect • BDI = 0 otherwise
OTU-TIM	Trail Trace Identifier Mismatch

OTU Error Definitions Detection criteria according to G.709 and G.798	
FAS	Frame alignment signal - Uses the first six bytes and , to provide framing for the entire signal
MFAS	Multiframe alignment signal - Used to extend command and management functions over several frames. The MFAS counts from 0 to 255, providing a 256 multiframe structure.
BIP-8	Bit interleaved parity-8 code
BEI	Backward error indication -SM byte 3, bit 1 to 4: value 0 to 8: SM BIP-8 error count value 9 to 15: no SM BIP-8 errors value 11: SM BIAE
BIAE	Backward incoming alignment error - SM byte 3, bit 1 to 4: " 1011" ≥ 3 frames
CFEC	Correctable FEC error
UFEC	Uncorrectable FEC error

ODU Alarm/Error Definitions Detection criteria according to G.709 and G.798	
ODU-BEI	Backward error indication -PM byte 3, bit 1 to 4: value 0 to 8: SM BIP-8 error count value 9 to 15: no SM BIP-8 errors
ODU-AIS	Alarm Indication Signal - PM byte 3, bit 6 to 8: " 111" ≥ 3 frames
ODU-OCI	Open connection indication - PM byte 3, bit 6 to 8: " 110" ≥ 3 frames
ODU-LCK	Locked - PM byte 3, bit 6 to 8: " 101" ≥ 3 frames
ODU-BDI	Backward Defect Indication - PM byte 3, bit 5 = 1 ≥ 5 frames
ODU-PLM	Payload mismatch - Declared if the accepted payload type is not equal to the expected payload type(s) as defined by the specific adaptation function.
ODU-TIM	Trail Trace Identifier Mismatch

GMP-Generic Mapping Procedure			
	GMP	Description	Notes
Errors	LO-Sync	Loss of Synchronization	Local
	Cm=0	No payload	Local
	CRC-5	CRC-5 Error	Local
	CRC-8	CRC-8 Error	Local


Refer to [Errors and Alarms](#) in the SDH Results section for more information on SDH errors/alarms.

Refer to [Errors and Alarms](#) in the SONET Results section for more information on SONET.

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 3)

Page 3 lists the **OTU Errors** in logical order that are associated with the signal under test. All errors are evaluated and stored. The Elapsed Time [ET] is shown in the right hand corner of the header. Error conditions are displayed in red including count and rate.

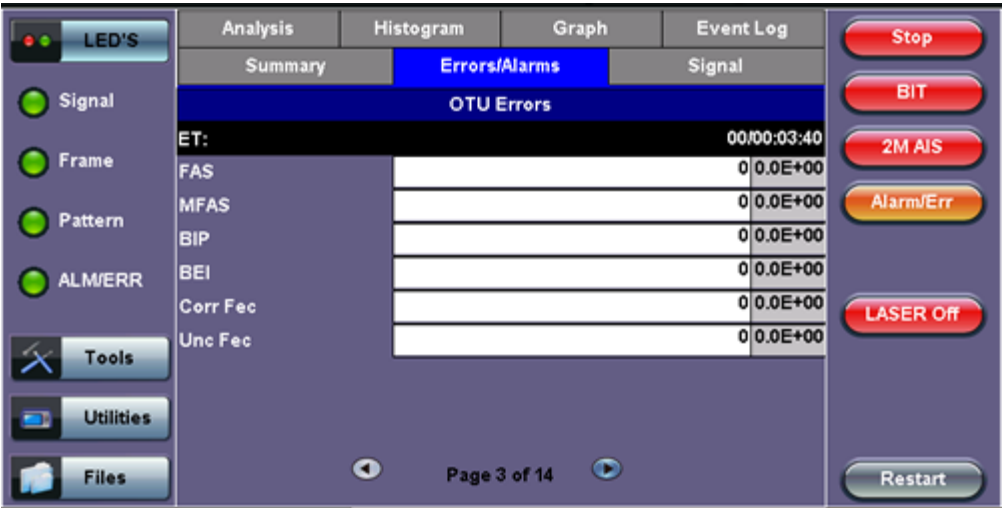


Errors/Alarms (Page 3)

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 4 and 5)

Page 4 lists the **OTU Alarms** in logical order associated with the signal under test. All alarms are evaluated and stored. The Elapsed Time [ET] since the start of the test is shown in the upper right hand corner.

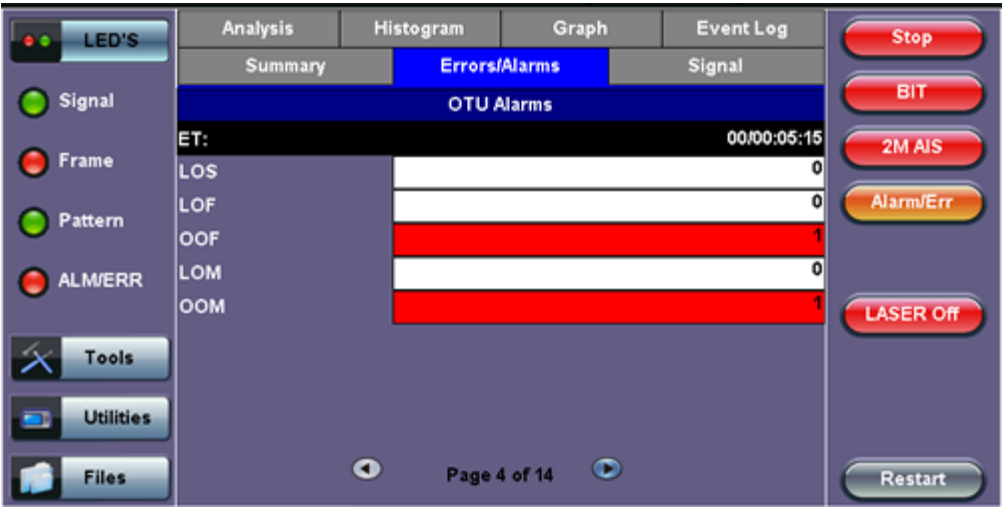


Errors/Alarms (Page 4)

The alarms associated with the Section and Line are displayed separately for ease of interpretation.


[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 6 and 7)

Page 6 and 7 lists the **ODU/OPU errors and alarms** in logical order that are associated with the signal under test. All alarms are evaluated and stored.

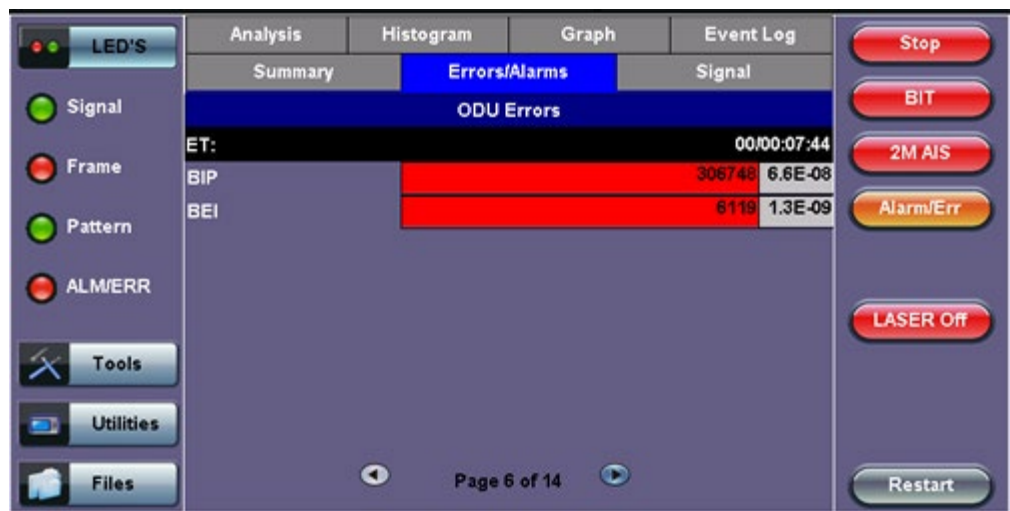

Errors/Alarms (Page 6)

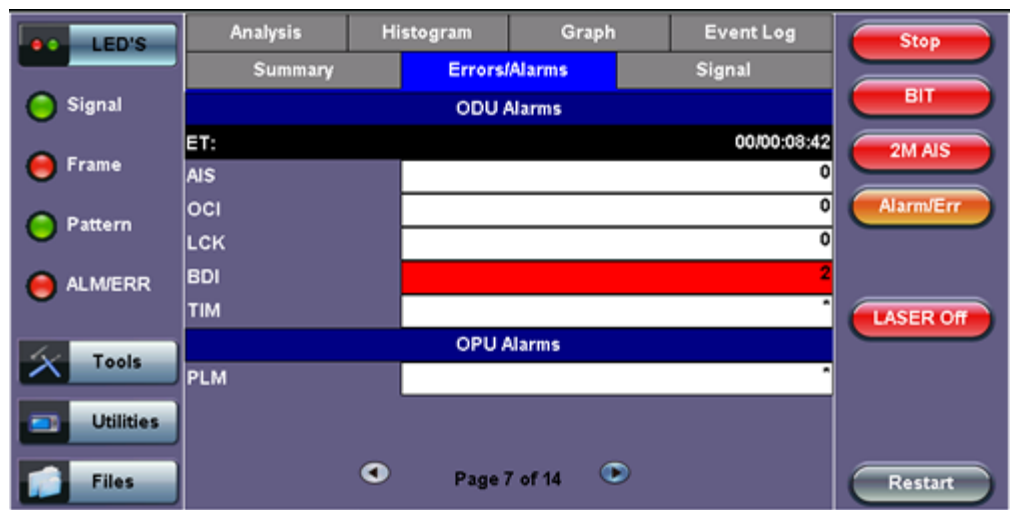

Errors/Alarms (Page 7)

Errors/Alarms (Page 8 to 14)

Pages 8 to 14 lists the **SDH/PDH Alarms** in logical order that are associated with the signal and payload under test. All alarms are evaluated and stored.

Refer to PDH details in the [PDH Results](#) section.

Refer to SDH details in the [SDH Results](#) section.

[Go back to top](#) [Go back to TOC](#)

7.4.3 Event Log

The **Event** log tab lists Error and Alarm events recorded during the test. The events are presented in chronological sequence, with sequence number, type of event, start time and duration, duration (alarms) and ratio/count (errors).

[Go back to top](#) [Go back to TOC](#)


7.4.4 Signal (Pages 1 to 4)

The signal tab displays the Level, Frequency and related screens. Page 1 displays the level measurement in dBm for the optical signal.

Loss of Signal (LOS) and the Saturation level for optical signals are shown graphically including the level measurement in dBm.

Optical Level (Page 1):

- The optical level measurement for OTU-1 and OTU-2 signals is displayed in dBm.
- Loss of Signal (LOS) and the Saturation levels is shown both graphically and in dBm.

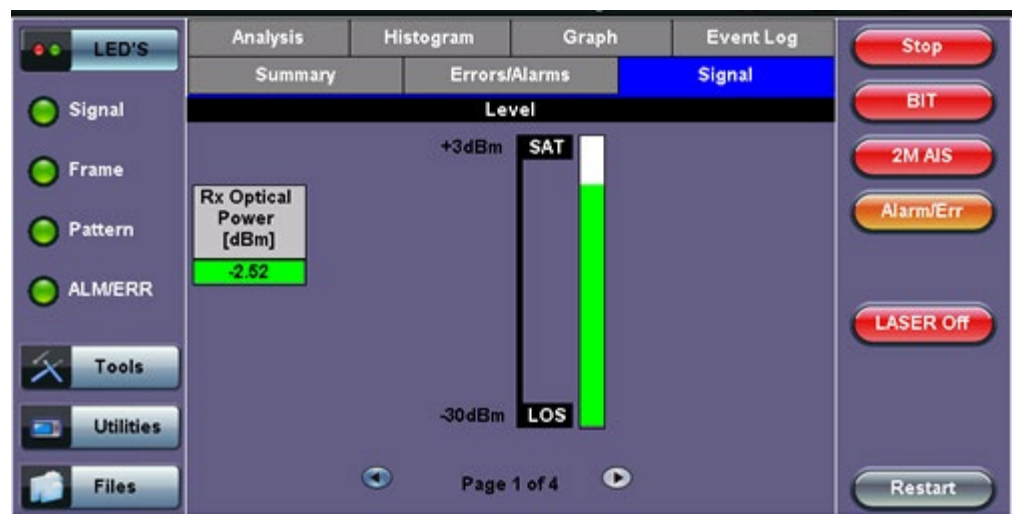

Signal (Page 1)


[Go back to top](#) [Go back to TOC](#)

Frequency (Page 2)

The received signal frequency and offset is measured and displayed.

For OTN signals, the measurement is performed on the optical interfaces (SFP for OTU-1) or (XFP for OTU-2).

- **OTN Current:** Indicates the frequency of the input signal
- **Offset (ppm):** Indicates the difference between the standard rate and the bit rate of the input signal
- **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal
- **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal
- **SDH Current:** Indicates the frequency of the SDH or SONET signal carried with the OTU frame
- **2M Current:** Indicates the frequency of the PDH or T-Carrier payload. Options 1.5Mbps, 45Mbps, 34Mbps, 139Mbps

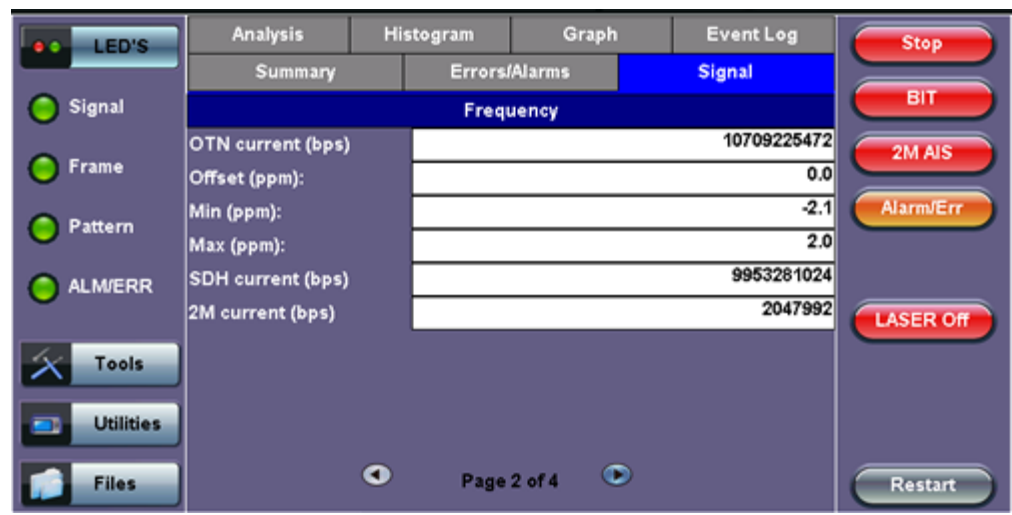


Signal (Page 2)

[Go back to top](#) [Go back to TOC](#)

Optical Information (Page 3)

The Optical Transceiver (SFP, SFP+, or XFP) information including Vendor name, Part #, Firmware revision #, Optical Wavelength, Min/Max bit rates supported and Dynamic Range.

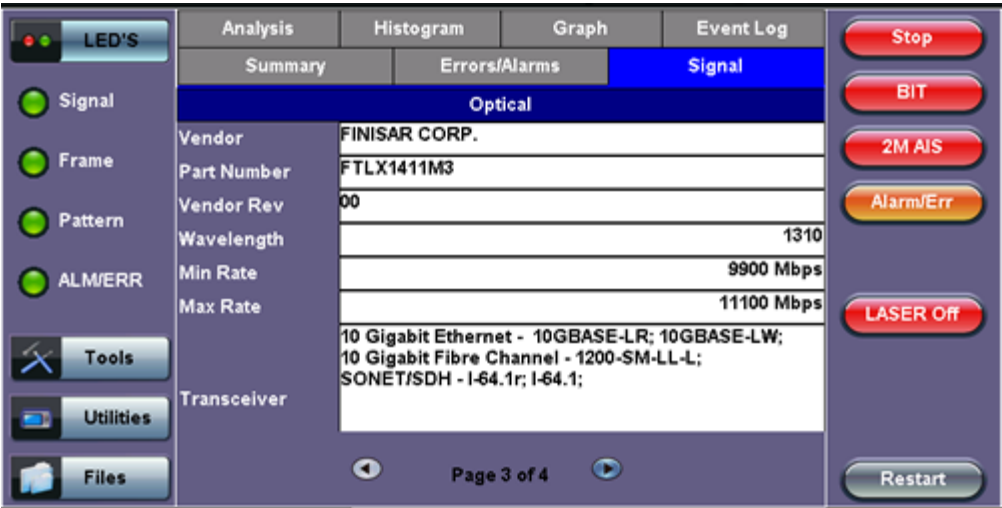


Signal (Page 3)

[Go back to top](#) [Go back to TOC](#)

Optical Signal Histogram (Page 4)


- Displays the Optical Transceiver (SFP or XFP) Power Measurement Graph.
- This is useful for troubleshooting defective XFPs or for monitoring intermittent optical power fluctuations

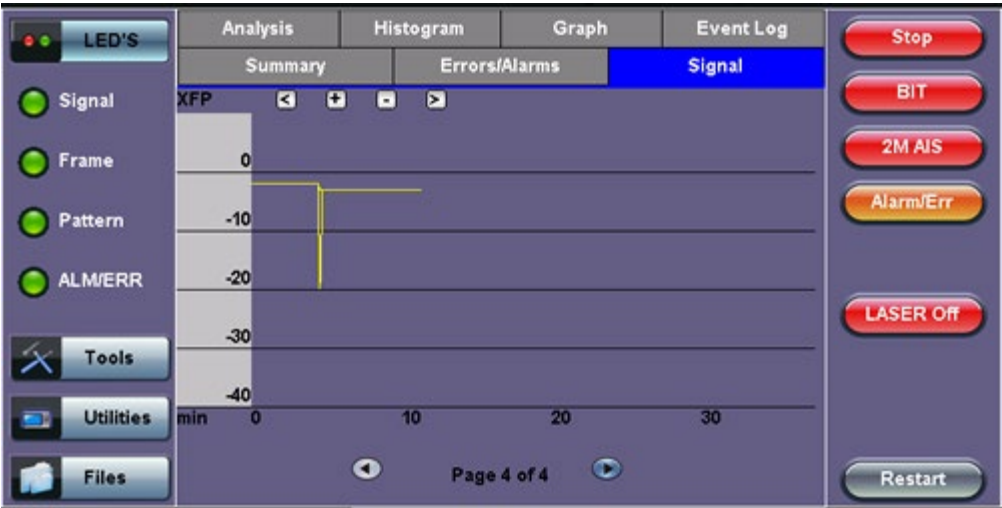

Signal (Page 4)

[Go back to top](#) [Go back to TOC](#)

7.4.5 Histogram

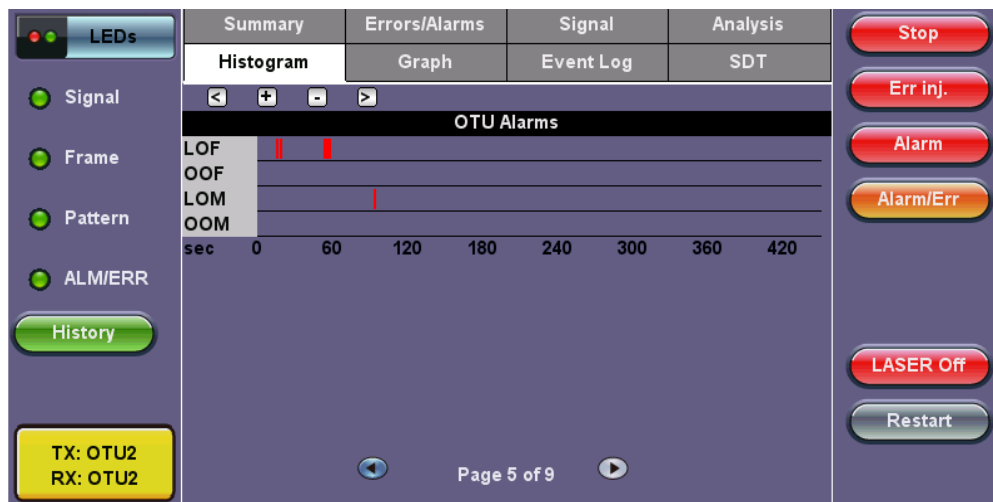

Histogram - OTU Alarm

The Histogram tab displays a historical record of Alarms and Errors recorded during the measurement interval in a graph format for easy time correlation. This helps identify the sequence of events that occurred before and after a disruption. A dedicated page is available for errors and alarms including BER.

Histogram (Page 1)

Page 1 displays the Alarms associated with the OTU Alarms.

Histogram (Page 2)

Page 2 displays the Errors associated with the OTU Errors.

Histogram (Page 3)

Page 3 displays the Alarms and Errors associated with the ODU2 Alarms.

Histogram (Page 4)

Page 4 displays the Alarms and Errors associated with ODU2 Errors.

Histogram (Page 5)

Page 5 displays the Alarms and Errors associated with OTU Alarms.

Histogram (Page 6)

Page 6 displays the Alarms and Errors associated with OTU Errors.

Histogram (Page 7)

Page 7 displays the Alarms and Errors associated with ODU1 Alarms.

Histogram (Page 8)

Page 8 displays the Alarms and Errors associated with ODU1 Errors.


Histogram (Page 9)

Page 9 displays the BERT Alarms/Errors associated with the test pattern.

[Go back to top](#) [Go back to TOC](#)

7.4.6 Graph


The **Graph** tab displays the behavior of individual alarms and errors over time, providing a visual indication of severity (count or rate) of the Errors and Alarms recorded during the measurement interval. A dedicated page is available for each of the error types. Scroll through the various pages to display the anomaly of interest. A status pop-up screen can be accessed by tapping on the graph area.

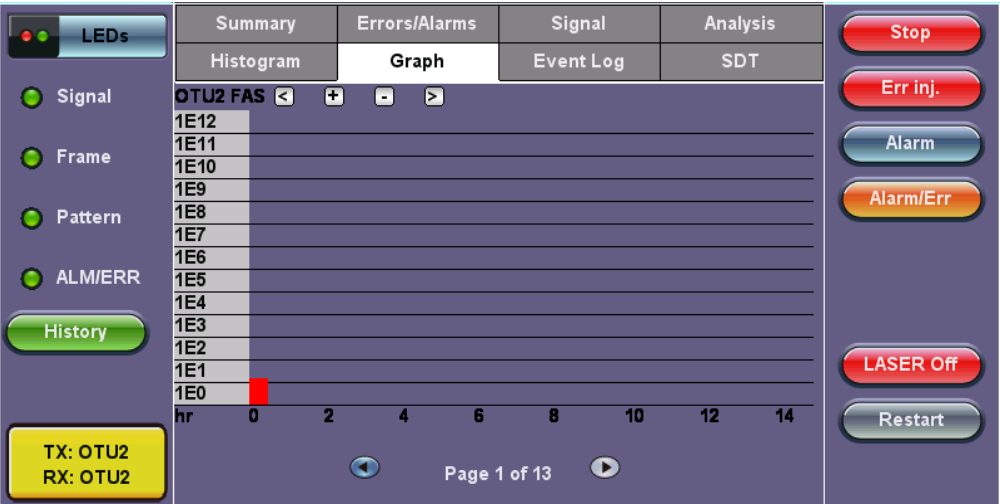

Graph - OTU2 FAS

[Go back to top](#) [Go back to TOC](#)

7.4.7 Performance Analysis

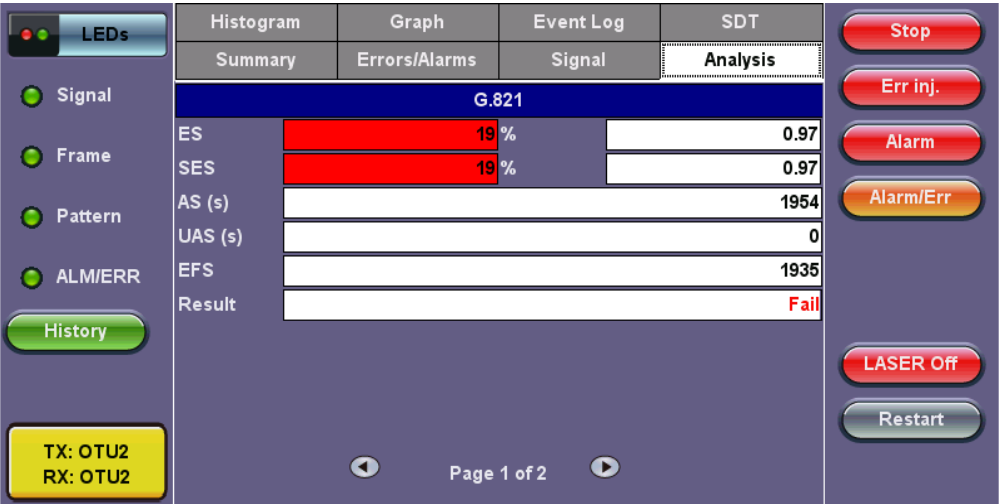

G.821 Analysis

The **Analysis** tab displays measured objectives from ITU-T performance tests selected from the Measurements tab (Setup > Measurements). See [Performance Analysis](#) in the PDH section for information on the Analysis tab and test definitions. For a brief description of supported G-Series and M-Series performance tests as well as setup instructions, please see [Performance Analysis](#) in the Measurement Configuration section.

[Go back to top](#) [Go back to TOC](#)

7.4.8 Service Disruption Test (SDT) Results

Refer to [SDT Results in the PDH section](#) for more information.


[Go back to top](#) [Go back to TOC](#)

8.0 Alarm Generation and Error Insertion

Accessing Alarm Generation and Error Insertion

Tap on **Home (main menu) > Alarm/Error**

The alarm and error functions are used in conjunction with the drop-down menu which has dedicated buttons for error injection and alarm generation. Alarm and error selections will depend on PDH, SDH, or OTN signal types.

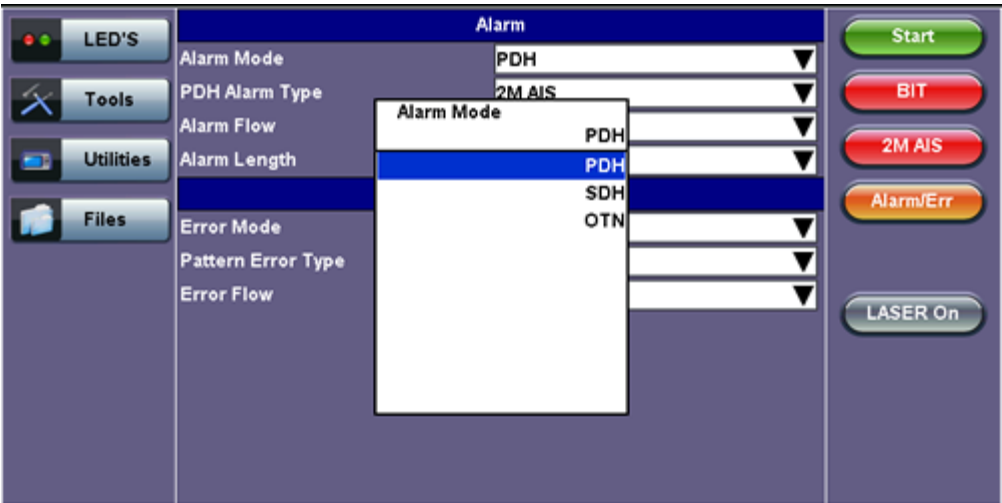


Alarm Setup

[Go back to top](#) [Go back to TOC](#)

8.1 Alarm Generation

Generates a range of different anomalies into the transmit signal. Alarm generation modes include:

- **Alarm Flow**
 - **Continuous:** Generates a continuous alarm when button is tapped
 - **Count:** Specific count for 0.1s, 1s, 10s, 100s when button is tapped

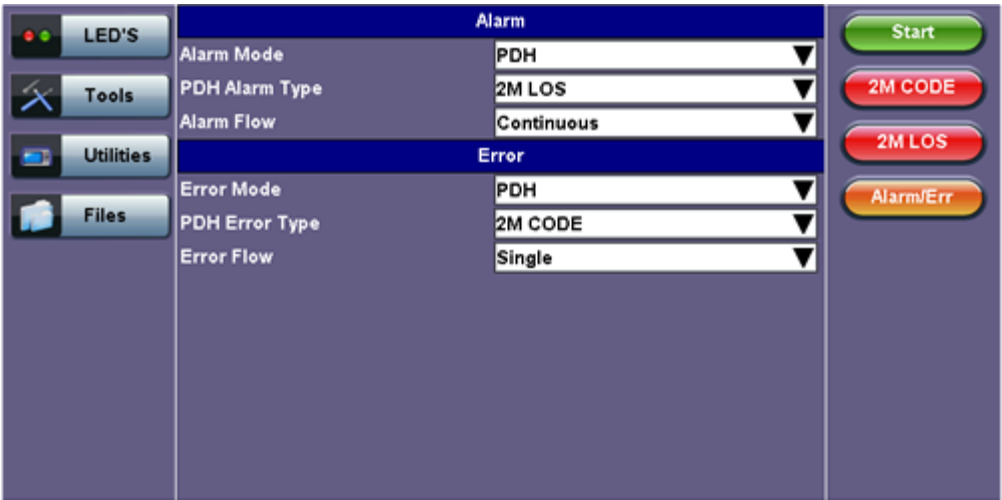

Alarm/Error Generation


[Go back to top](#) [Go back to TOC](#)

8.1.1 SDH Alarms

The following **SDH Alarms** can be generated:

- **STM-1/4/16/64 (depends on signal structure):** LOS, LOF, MS-AIS, MS-RDI, RS-TIM, AU-LOP, AU-AIS, HP-UNEQ, HP-PLM, HP-RDI, HP-TIM, TU-LOM, TU-LOP, TU-AIS, LP-UNEQ, LP-PLM, LP-RDI, LP-RFI, LP-TIM
- **Payload alarms (depends on payload):** DS1-AIS, DS1-LOF, 2M-AIS, 2M-RDI, 2M-LOF, 34M-AIS, 34M-LOF, 34M-RDI, 45M-AIS

Mode: Static (enable/disable) using drop-down menu function.

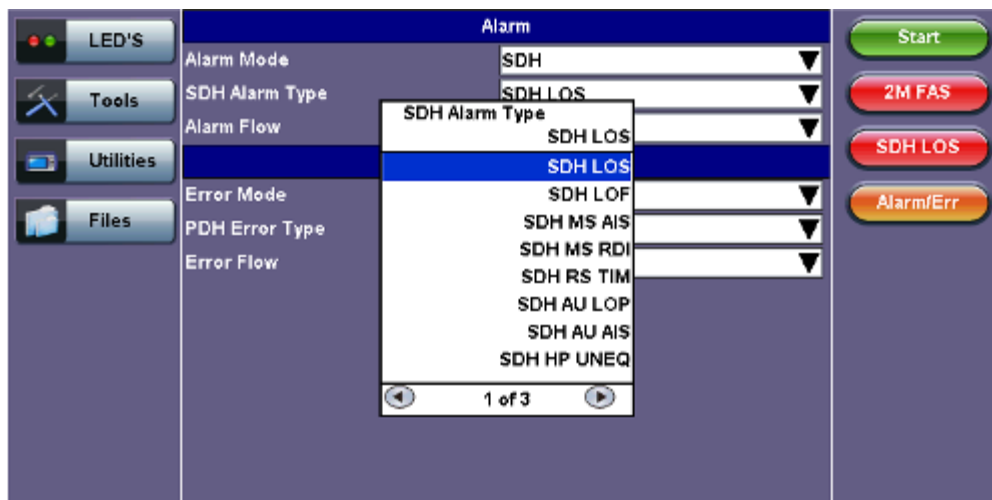

SDH Alarm Type


[Go back to top](#) [Go back to TOC](#)

8.1.2 OTN Alarms

The following **OTN alarms** can be generated:

- **OTU-1/OTU-2:** LOS, LOF, OOF, OOM, LOM, AIS, IAE, BDI, TIM
- **ODU-1/OPU-2:** AIS, OCI, LCK, BDI, TIM
- **OPU-1/OTU-2:** PLM
- **SDH Payload alarms:** LOF, MS-AIS, MS-RDI, RS-TIM, AU-LOP, AU-AIS, HP-UNEQ, HP-PLM, HP-RDI, HP-TIM, TU-LOM, TU-LOP, TU-AIS, LP-UNEQ, LP-PLM, LP-RDI, LP-RFI, LP-TIM
- **PDH Payload alarms (depends on payload):** DS1-AIS, DS1-LOF, 2M-AIS, 2M-RDI, 2M-LOF, 34M-AIS, 34M-LOF, 34M-RDI, 45M-AIS

Mode: Static (enable/disable) using drop-down menu function.

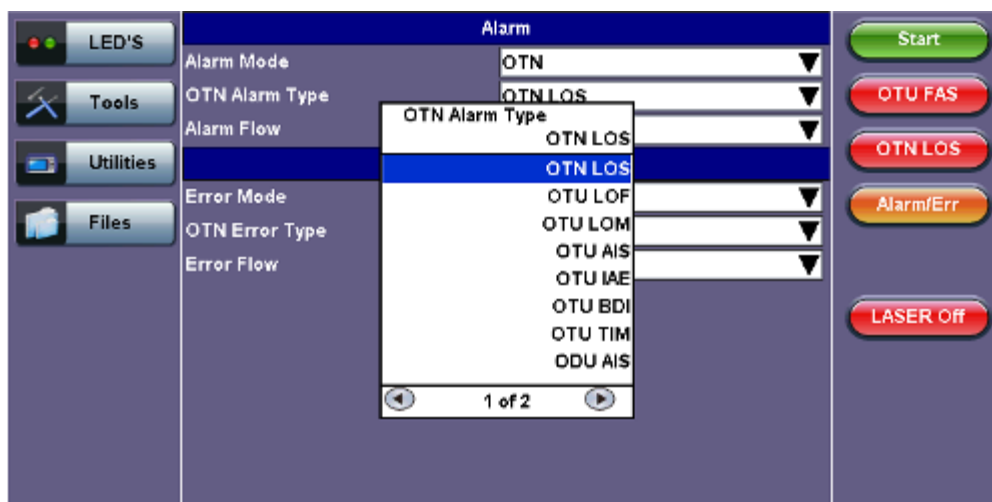

OTN Alarm Type

8.2 Error Insertion

OTN, SDH, PDH and T-Carrier errors can be generated.

LED'S

Tools

Utilities

Files

Alarm

Alarm ModeOTN

OTN Alarm TypeOTN LOS

Alarm FlowContinuous

Error

Error ModeOTN

OTN Error TypeOTU FAS

Error FlowSingle

Start

OTU FAS

OTN LOS

Alarm/Err

LASER Off

8.2.1 SDH Errors

The following **SDH errors** can be generated:

- **STM-1/4/16/64 signals:** FAS, B1, B2, MS-REI, B3, HP-REI, LP-BIP, LP-REI,
- **Depends on payload:** 2M-FAS, 2M-CRC, 2M-REI, 34M-FAS, 45M-FAS, 1.5M-FAS

LED'S

Tools

Utilities

Files

Alarm

Alarm ModeSDH

SDH Alarm TypeSDH LOS

Alarm FlowSDH FAS

SDH Error Type

Error ModeSDH B1

SDH Error TypeSDH B2

SDH MS REI

SDH B3

SDH HP REI

SDH LP BIP

SDH LP REI

Error Flow

Start

SDH FAS

SDH LOS

Alarm/Err

SDH Error Type

8.2.2 OTN Errors

- **OTU-1/2 signals:** FAS, MFAS, BIP, BEI, Corrected FEC errors, Uncorrectable FEC
- **ODU-1/2 signals:** BIP, BEI
- **STM-16/64 signals:** FAS, B1, B2, MS-REI, B3, HP-REI, LP-BIP, LP-REI,
- **Depends on payload:** 2M-FAS, 2M-CRC, 2M-REI, 34M-FAS, 45M-FAS, 1.5M-FAS

Alarm	
Alarm Mode	OTN
OTN Alarm Type	OTN LOS
Alarm Flow	Continuous

Error	
Error Mode	OTN
OTN Error Type	OTU FAS
Error Flow	Single

OTN Error Type

[Go back to top](#) [Go back to TOC](#)

Error Flow: OTN, SDH, SONET, PDH signals

Injects different anomalies into the transmit signal. Error insertion flow modes include:

- **Single:** Inserts a single error every time the insertion button is tapped
- **Count:** Specific count or number of errors when the insertion button is tapped
- **Rate:** Specific rate between 1×10^{-3} and 5×10^{-6}

The list of available error types depends on the type of framing being used and the SDH or PDH hierarchies and line interfaces that have been selected.

Alarm	
Alarm Mode	PDH
PDH Alarm Type	2M AIS
Alarm Flow	Single

Error	
Error Mode	Single
Pattern Error Type	Single
Error Flow	Single

Error Flow

Alarm Generation/Error Insertion

At any time during the test process, tap the **Error Injection** or **Alarm Generation** buttons to inject errors or generate alarms.

[Go back to top](#) [Go back to TOC](#)

9.0 OTN Tools

9.1 Shortcuts

Accessing OTN Tools

Tap on **Home (main menu) > OTN Tools**




OTN Tools Menu

- **Overhead Analyzer:**
 - Displays the Optical Channel Transport Unit (OTU)
 - Displays Optical Channel Data Unit (ODU)
 - Displays Optical Channel Payload Unit (OPU) bytes of the received channel
- **Overhead Generator:**
 - Used to edit Optical Channel Transport Unit (OTU)
 - Used to edit Optical Channel Data Unit (ODU)
 - Used to edit Optical Channel Payload Unit (OPU) bytes of the transmitted channel
- **Trail Trace Identifier:**
 - TTI is similar to the J0 byte in SONET/SDH. It is used to identify the signal from the source to the destination within the network.
 - TTI contains the so called Access Point Identifiers (API) which are used to specify the Source Access Point Identifier (SAPI) and Destination Access Point Identifier (DAPI).
 - The APIs contain information regarding the country of origin, network operator and administrative details.
- **Payload Structure Identifier:**
 - PSI field transports a 256-byte message aligned with the ODU multiframe.
 - PSI0 contains the Payload Type (PT) identifying the payload being transported.
 - The OPU Payload Type (PT) is a single byte defined within PSI to indicate the composition of the OPU signal, or in other words, the type of payload being carried in the OPU.
- **TCM Tasks:**
 - Used to analyze or edit the sequence of TCMi (i = 1 to 6) bytes by generating alarms and errors in the Tandem connection sub-layer.
- **Round Trip Delay (Propagation Delay):** Measurement works by sending a test pattern. Bit errors are transmitted in the pattern. The time it takes for the error to reach the receiver is the propagation time through the network.

[Go back to top](#) [Go back to TOC](#)

9.2 Overhead Analyzer & Generator

Tap the **Overhead Analyzer** button to display the OH screens shown below.

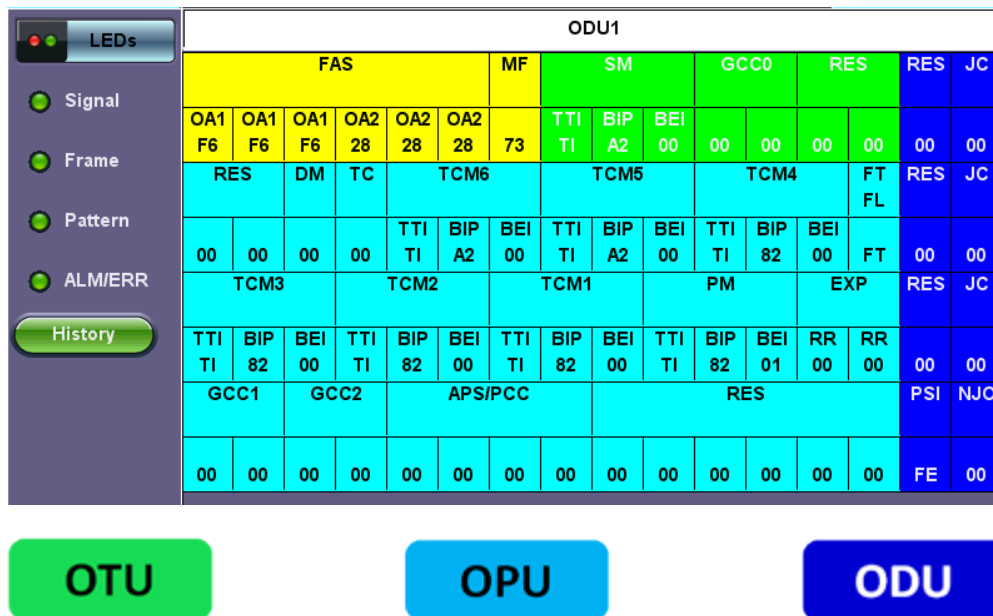


Overhead Analyzer Menu

The Overhead is color coded for simplified viewing.

Decoding Bytes

Tapping the applicable byte enables an automatic decode – a byte description including the Hexadecimal and Binary value is provided. For some bytes, an advanced decode of the various bits is also available.

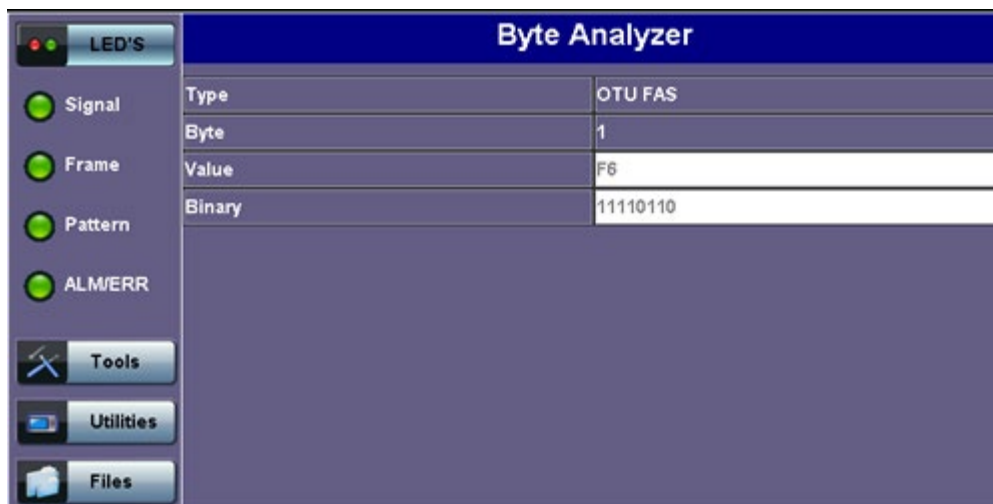

Byte Analyzer - Advanced Decode

9.2.1 OTN Frame Analysis


The OTU framing is divided into two portions: FAS and MFAS.

- **Frame Alignment Signal (FAS)**
 - Uses the first six bytes and, similar to SONET/SDH, it is used to provide framing for the entire signal
 - In order to provide enough 1/0 transitions for synchronization, scrambling is used over the entire OTU frame, except for the FAS bytes
- **MultiFrame Alignment Signal (MFAS)**
 - Byte is used to extend command and management functions over several frames
 - The MFAS counts from 0 to 255, providing a 256 multiframe structure


[Go back to top](#) [Go back to TOC](#)

9.2.2 Optical Transport Unit (OTU) Analysis

The OTU overhead is comprised of the SM, GCC0, and RES bytes.

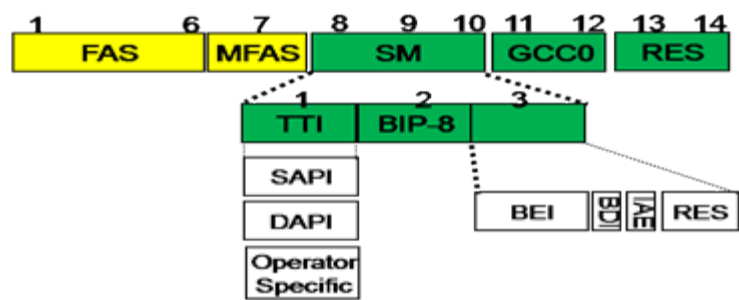


- Section Monitoring (SM)
 - Bytes are used for the Trail Trace Identifier (TTI), Parity (BIP-8) and the Backward Error Indicator (BEI) (also known as the Backward Incoming Alignment Error [BIAE]), Backward Defect Indicator (BDI), and Incoming Alignment Error (IAE).
 - The TTI is distributed over the multiframe and is 64 bytes in length. It is repeated four times over the multiframe.

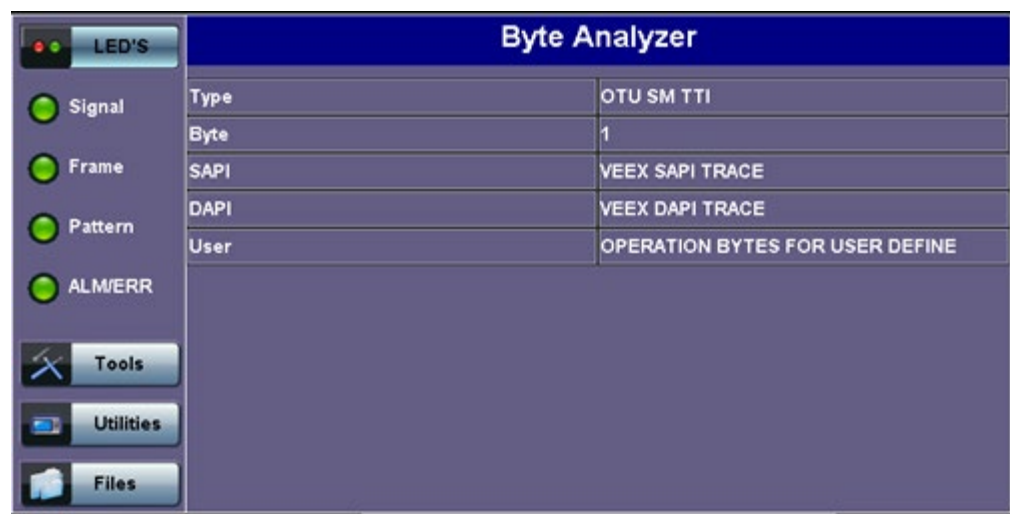

SM TTI Type

- General Communication Channel 0 (GCC0)
 - Clear channel used for transmission of information between OTU termination points

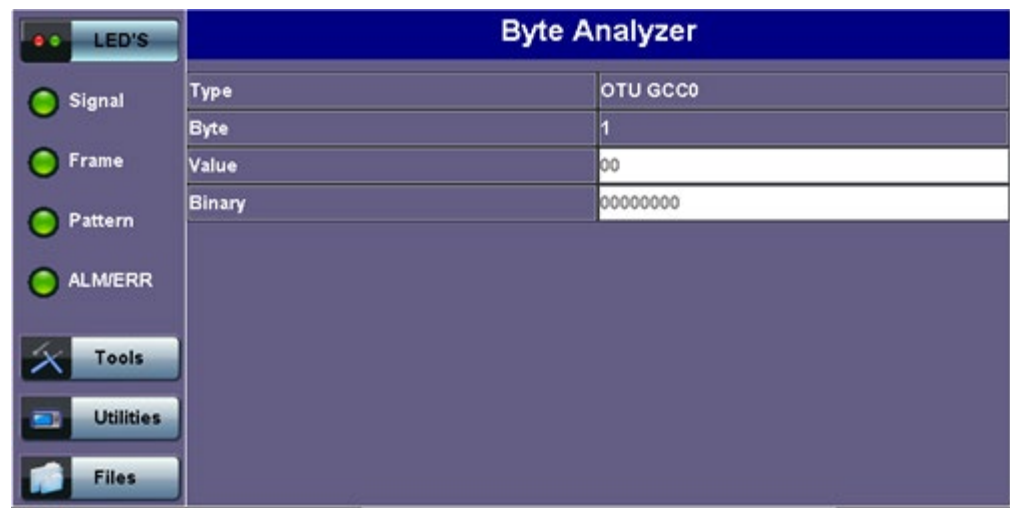


GCC0 Type

Reserved (RES) bytes are currently undefined in the standard.

[Go back to top](#) [Go back to TOC](#)


9.2.3 Optical Data Unit (ODU) Analysis

The ODU overhead is divided into several fields: RES, PM, TCMi, TCM ACT, FTFL, EXP, GCC1/GCC2 and APS/PCC.

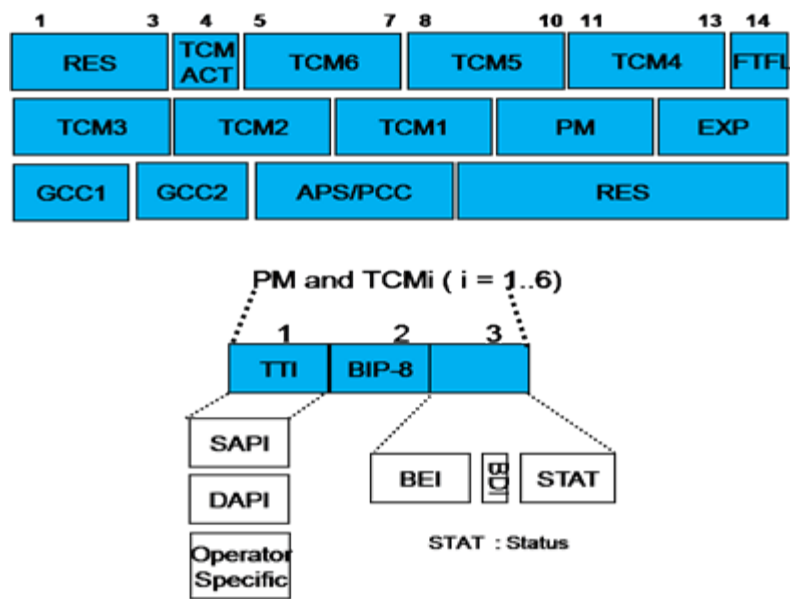

Reserved (RES) bytes are undefined and set aside for future applications.

- **Path Monitoring (PM)**
 - Field is similar to the SM field described above. It contains the TTI, BIP-8, BEI, BDI, and Status (STAT) subfields.

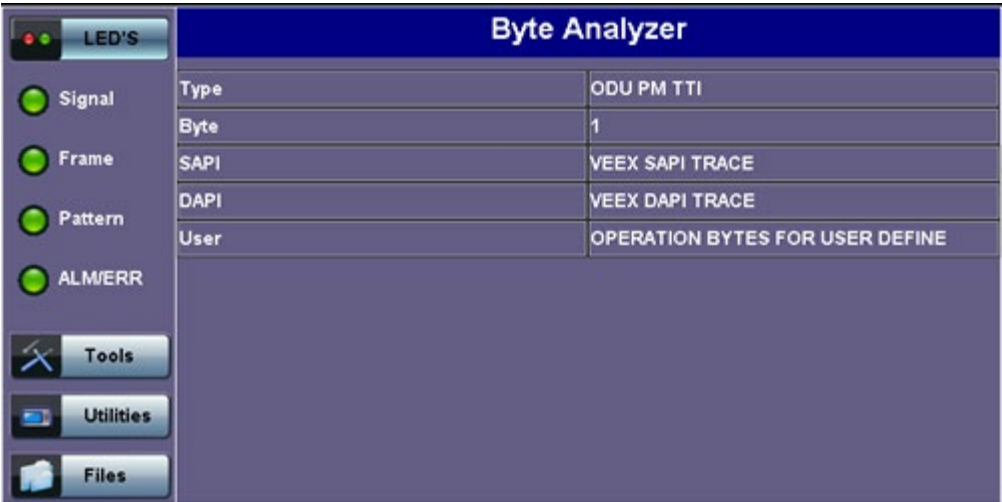

PM TTI Type

[Go back to top](#) [Go back to TOC](#)

- **TCMi:**
 - There are six Tandem Connection Monitoring (TCMi) fields that define the ODU TCM sub-layer, each containing TTI, BIP-8, BEI/BIAE, BDI, and STAT subfields associated to each TCM level (i=1 to 6).
 - The STAT subfield is used in the PM and TCMi fields to provide an indication of the presence or absence of maintenance signals.

Byte Analyzer	
Type	ODU TCM1 BEI
Byte	3
Value	01
Bit 5: BDI	0
Bits 6-8: Request	001
In use without IAE	

TCM1 BEI Type

[Go back to top](#) [Go back to TOC](#)



- **Fault Type and Fault Location (FTFL)**

- Reporting communication channel field used to create a message spread over a 256-byte multiframe
- Provides the ability to send forward and backward path-level fault indications


Byte Analyzer	
Type	ODU FTFL
Forward Indication	00
	No fault
Backward Indication	00
	No fault

FTFL Type

ITU-T G.709 Figure 15-20

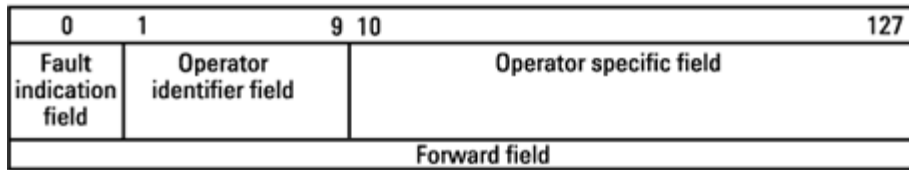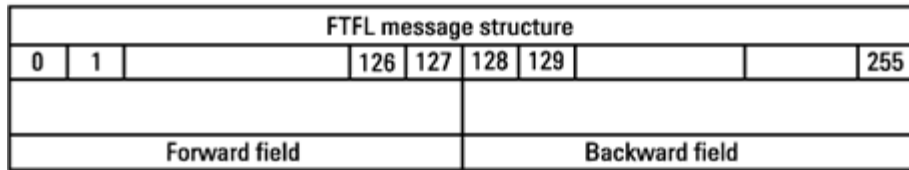

ITU-T G.709 Figure 15-20

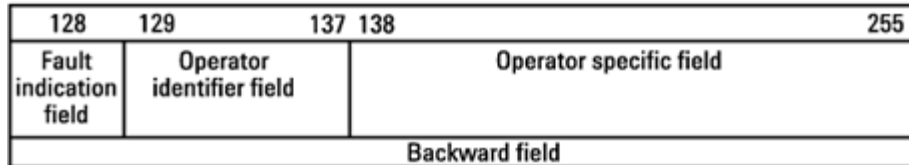

ITU-T G.709 Figure 15-21

Fault indication codes	
Fault Code	Definition
0000 0000	No fault
0000 0001	Signal fail
0000 0010	Signal degrade
0000 0011	Reserved for future standardization
..	
1111 1111	

ITU-T G.709 Figure 15-6

[Go back to top](#) [Go back to TOC](#)


- **Experimental (EXP)**
 - Field not subject to standards and is available for network operator applications



EXP Type

[Go back to top](#) [Go back to TOC](#)


- **General Communication Channels 1 and 2 (GCC1/GCC2)**
 - Fields are very similar to the GCC0 field, except that each channel is available in the ODU

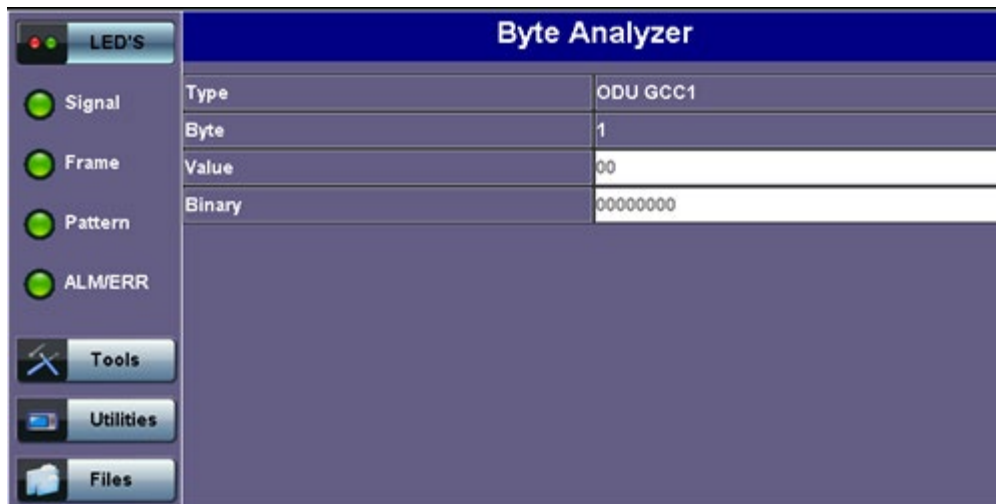

GCC1 Type

[Go back to top](#) [Go back to TOC](#)

- **Automatic Protection Switching and Protection Communication Channel (APS/PCC)**
 - Supports up to eight levels of nested APS/PCC signals associated to a dedicated-connection monitoring level depending on the value of the multiframe

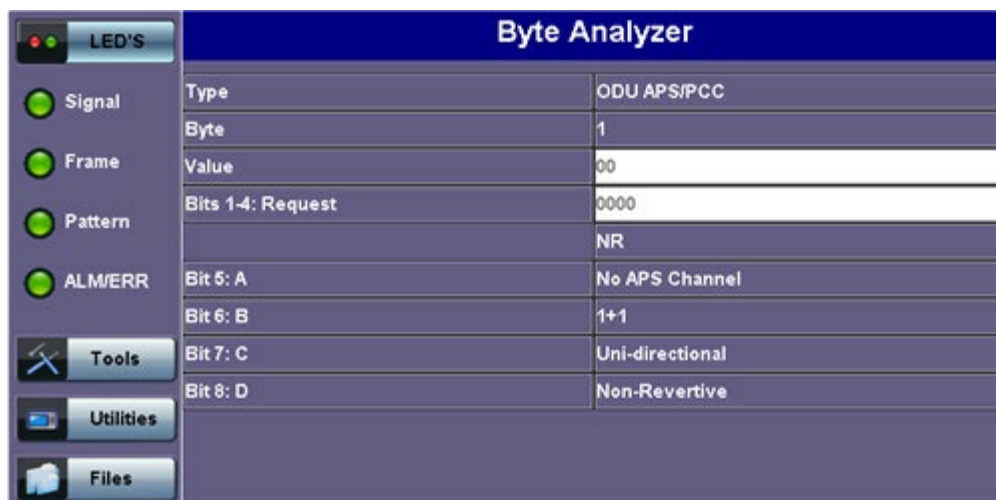


APS/PCC Type

[Go back to top](#) [Go back to TOC](#)


9.2.4 Optical Payload Unit (OPU) Analysis

- **Payload Structure Identifier (PSI)**
 - Primary overhead field associated with the OPU
 - A 256-byte multiframe whose first byte is defined as the Payload Type (PT). The remaining 255 bytes are currently reserved.

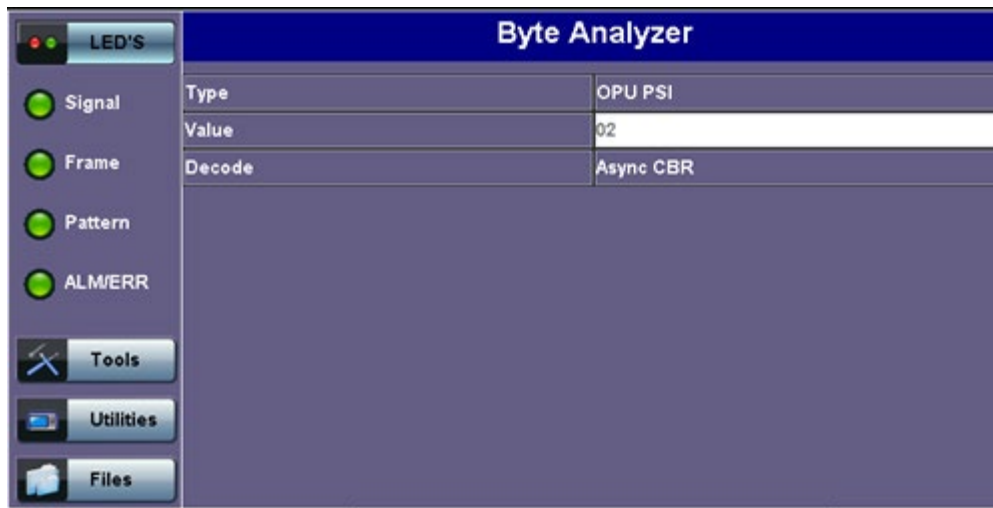

OPU PSI Type

The other fields in the OPU overhead are dependent on the mapping capabilities associated to the OPU. For an asynchronous mapping (the client signal and OPU clock are different), Justification Control (JC) bytes are available to compensate for clock rate differences. For a purely synchronous mapping (client source and OPU clock are the same), the JC bytes become reserved. Further details on mapping are available in ITU G.709.

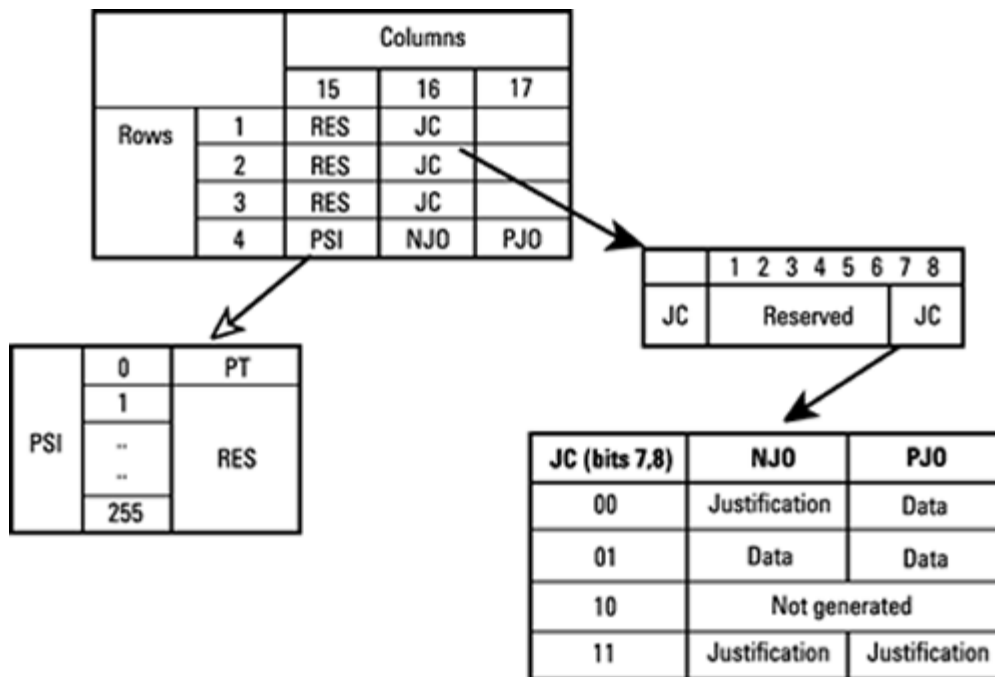

OPU2, O/H for synch mapping of 10 Gb/s SDH/SONET

[Go back to top](#) [Go back to TOC](#)

9.3 Payload Label (Payload Structure Identifier)

Tap the **Payload Label** button to display the screen shown below. Tabs for Tx and Rx label settings are provided.



Payload Label

PSI[0] contains a one-byte Payload type. PSI[1] to PSI[255] are mapping and concatenation specific.

MSB 1 2 3 4	LSB 5 6 7 8	Hex code (Note 1)	Interpretation
0 0 0 0	0 0 0 1	01	Experimental mapping
0 0 0 0	0 0 1 0	02	Asynchronous CBR mapping
0 0 0 0	0 0 1 1	03	Bit synchronous CBR mapping
0 0 0 0	0 1 0 0	04	ATM mapping
0 0 0 0	0 1 0 1	05	GFP mapping
0 0 0 0	0 1 1 0	06	Virtual Concatenated signal
0 0 0 1	0 0 0 0	10	Bit stream with octet timing mapping
0 0 0 1	0 0 0 1	11	Bit stream without octet timing mapping
0 0 1 0	0 1 1 0	20	ODU multiplex structure
0 1 0 1	0 1 0 1	55	Not available
0 1 1 0	0 1 1 0	66	Not available
1 0 0 0	x x x x	80-8F	Reserved codes for proprietary use
1 1 1 1	1 1 0 1	FD	NULL test signal mapping
1 1 1 1	1 1 1 0	FE	PRBS test signal mapping
1 1 1 1	1 1 1 1	FF	Not available

Additional Payload types include the following:

Hex Code	Interpretation
07	PCS Ethernet
08	FC-1200 into OPU2e
0A	STM-1 mapping into OPU0
0B	STM-4 mapping into OPU0

[Go back to top](#) [Go back to TOC](#)

9.4 Trace Identifier (Trail Trace Identifier)

Tap the **Trace Identifier** button to display the screen shown below. There are tabs for Tx and RX settings of the TTI.

TX		RX	
OTU		ODU1	
Expected SAPI		VEEX SAPI TRACE	
Expected DAPI		VEEX DAPI TRACE	
TIM		OFF ▼	
Received SAPI	Copy	VEEX SAPI TRACE	
Received DAPI	Copy	VEEX DAPI TRACE	
Received User		OPERATION BYTES FOR USER DEFINE	

Trace Identifier (Trail Trace Identifier)

Trail Trace Identifier

TTI similar to the J0 byte in SONET/SDH, is used to identify the signal from the source to the destination within the network. The TTI contains the so called Access Point Identifiers (API) which are used to specify the Source Access Point Identifier (SAPI) and Destination Access Point Identifier (DAPI). The APIs contain information regarding the country of origin, network operator and administrative details.

[Go back to top](#) [Go back to TOC](#)

9.5 TCM Tasks (Tandem Connection Monitoring)

Tap the **TCM Tasks** button to display the screen shown below.

LEDs		ODU1			ODU0				
		1	2	3	4	5	6		
Signal									
Frame									
Pattern									
ALM/ERR									
History									
		Setup							
		Enabled			ON ▼				
		Results							
		LTC	0 AIS		0				
		OCI	0 LCK		0				
		BDI	0 BIAE		0				
		IAE			0				
		IEC			0 0.0E+00				
		BEI			0 0.0E+00				

Stop

Err inj.

Alarm

Alarm/Err

LASER off

TCM Tasks

Results are available for up to six tandem connections. The counts are numbers of seconds containing the error or indication.

Tandem connections and corresponding source and sink functions are defined in ITU-T G.707, G.709, and G.783.

TCM enables the user and its signal carriers to monitor the quality of the traffic that is transported between segments or connections in the network. SONET/SDH allowed a single level of TCM to be configured, while ITU G.709 allows six levels of tandem connection monitoring to be configured. The assignment of monitored connections is currently a manual process that involves an understanding

between the different parties. There are various types of monitored connection topologies: cascaded, nested, and overlapping.

- **LTC:** Loss of Tandem Connection Signal
- **OCI:** Open Connection Indication
- **AIS:** TC Alarm Indication Signal
- **LCK:** Locked Defect
- **BDI:** Backward Defect Indication
- **IAE:** Incoming Alignment Error
- **BIAE:** Backward Incoming Alignment Error
- **BEI:** TC Backward Error Indication

[Go back to top](#) [Go back to TOC](#)


10.0 SDH/SONET Tools

10.1 SDH/SONET Tools

Accessing SDH/SONET Tools

Tap on **Home (main menu) >SONET/SDH Tools**

10.1.1 Shortcuts

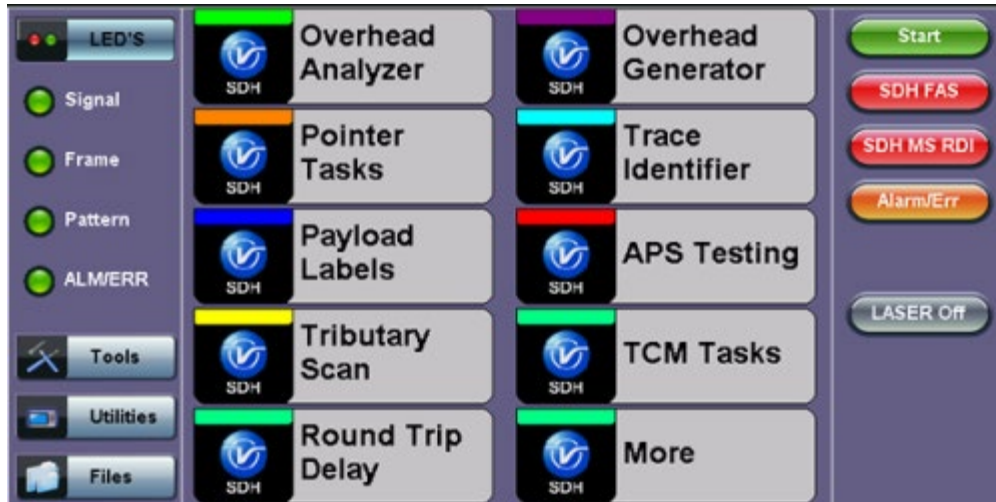

SDH/SONET Tools Menu

- **Overhead Analyzer:** Displays the Section Overhead (SOH) and Path Overhead (POH) bytes of the received channel.
- **Overhead Generator:** SDH mode. Used to edit Section Overhead (SOH) and Path Overhead (POH) bytes of the transmitted channel.
- **Pointer Tasks:** Displays both AU and TU pointer values and generates AU and TU pointer movements.
 - Pointer sequences according to ITU-T G.783 recommendations are also possible.
- **Trace Identifier:** Used to generate and edit J0, J1 and J2 path traces and set expected trace for received channel according to G.831 recommendations.
- **Payload Labels:** Used to set the C2 and V5 Path Signal Labels which indicate the content of the High order/STS path and Low order VCs/ VTs.
- **APS Testing:** Used to measure Automatic Protection Switching limits. Using selectable triggers, the drop out times of tributary connections are measured and compared with preset values.
- **Tributary Scan:** Used to scan individual or multiple tributaries to verify routing and error free operation. Only available in VC-12 or VC-11 mode
- **TCM Tasks:** Used to analyze or edit the sequence of N1 and N2 TCM bytes by generating alarms and errors in the Tandem connection sub-layer.
- **Round Trip Delay (Propagation Delay):** Measurement works by sending a test pattern. Bit errors are transmitted in the pattern. The time it takes for the error to reach the receiver is the propagation time through the network.


[Go back to top](#) [Go back to TOC](#)

10.1.2 Overhead Analyzer

Tap the **Overhead Analyzer** button to display the SOH screens shown below. There are tabs for:

- SOH RX, which displays the bytes associated with the Section/LINE Overhead
- POH RX, which displays the bytes associated with the Path Overhead
- Summary, which displays the Path Traces (J0, J1, J2), APS (K1, K2), Synchronization status (S1), STS Path (C2), and VT Path (v5) Signal Label bytes

- An 8-bit even parity code used to check for transmission errors over the regenerator section
- Its value is calculated over all the bits of the STM-1 frame before scrambling
- The checksum value is placed in the RS overhead of the following STM-1 before scrambling

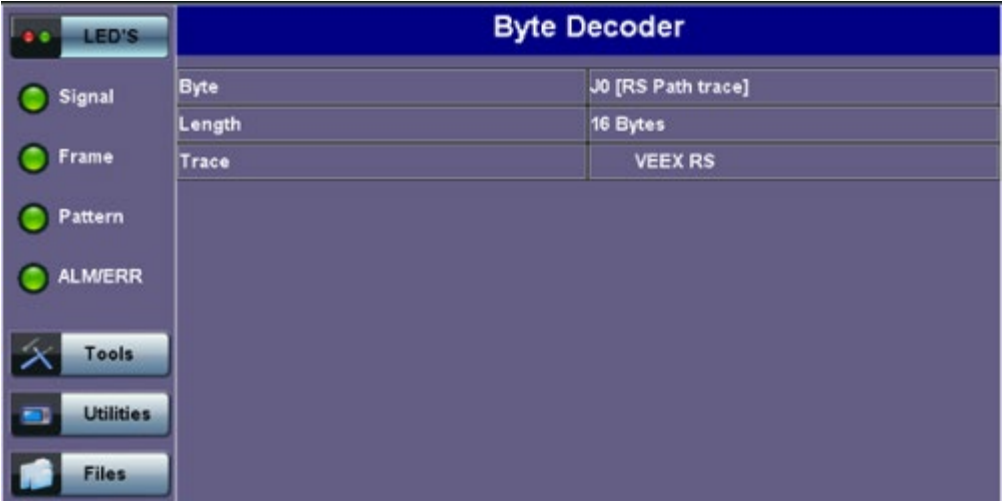

Path Trace Byte (J0)

Order Wire Byte (E1)

- Local order wire channel for voice communication between regenerators, cross connects, hubs and remote terminal locations

F1 Byte

- Section user channel
- Byte is allocated for user purpose to carry proprietary messages
- The channel is terminated at each regenerator location


Data Communications Channel Bytes (D1/D2/D3)

- Data Communications Channel (DCC)
- D1, D2 and D3 together form a 192kbps message channel for OAM purposes
- It can generate internal or external messages
- It can also be used as a BER function

Pointers

AU Pointers Bytes (H1/H2/H3)

- Enable transfer of STM-1 frames with STM-N frames and are processed by the MS terminating equipment

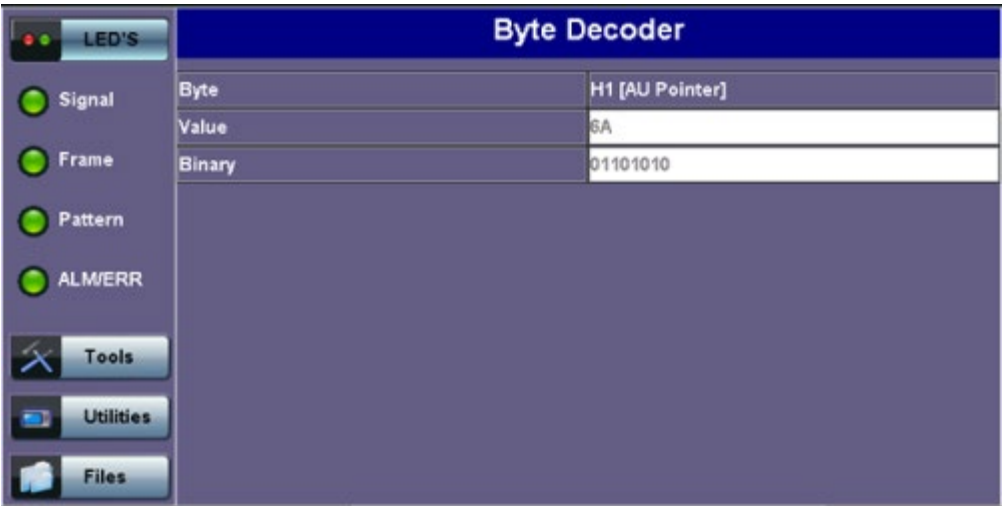

[Go back to top](#) [Go back to TOC](#)

Line Layer / Multiplexer Section

B2 Byte (MS-BIP)

- A 24-bit interleaved even parity code used to determine if transmission errors have occurred over the Multiplexer Section
- Its calculated over all the bits of the STM-1 frame except those in the Regenerator Section overhead
- The computed checksum is placed in the MSOH of the following STM-1 frame

K1 Byte (APS-Linear)

- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- APS message type conforms to ITU-T G.783 and Bellcore GR.253 for Linear network architectures
 - Bits 1-4 (G.783 Protocol)
 - 1111 Lockout of protection
 - 1110 Forced switch
 - 1101 Signal fail, high priority (1:n only)
 - 1100 Signal fail, low priority
 - 1011 Signal degrade, high priority (1:n only)
 - 1010 Signal degrade, low priority
 - 1000 Manual switch
 - 0110 Wait to restore
 - 0100 Exercise
 - 0010 Reverse request (bidirectional systems only)
 - 0001 Do not revert
 - 0000 No request
 - Other codes are unused
 - Bits 5-8 selects channel used by APS messages
 - 0000 Null channel
 - 0001 to 1110 Channels 1 thru 14
 - 1111 Extra traffic channel



K1 Byte (APS-Linear)

[Go back to top](#) [Go back to TOC](#)

K1 Byte (APS-Ring)

- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- APS message type conforms to ITU-T G.841/ Bellcore GR.253 Ring Network architectures
 - Bits 1-4 are the condition
 - 1111 Lockout of protection

- 1110 Forced switch (span)
 - 1101 Forced switch (ring)
 - 1100 Signal fail (span)
 - 1011 Signal fail (ring)
 - 1010 Signal degrade (protection)
 - 1001 Signal degrade (span)
 - 1000 Signal degrade (ring)
 - 0111 Manual switch (span)
 - 0110 Manual switch (ring)
 - 0101 Wait to restore
 - 0100 Exercise (span)
 - 0011 Exercise (ring)
 - 0010 Reverse request (span)
 - 0001 Reverse request (ring)
 - 0000 No request
- Bits 5-8 are the destination node ID
 - 0000 Null channel
 - 0001 to 1110 Channels 1 thru 14
 - 1111 Extra traffic channel

K2 Byte (APS-Linear)

- Conforms to ITU-T G.783 and Bellcore GR.253
- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- Used to communicate Alarm Indication Signal (AIS) and Remote Defect Indication (RDI) conditions
 - Bits 1-4 selects bridged channel used
 - Bit 5 determines APS architecture
 - 1+1
 - 1:N
 - Bits 6-8
 - 110 MS-RDI
 - 111 MS-AIS
 - Others Not used

K2 Byte (APS-Ring)

- Conforms to and follows ITU-T G.841 Bellcore GR.253 recommendations
- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- Used to communicate Alarm Indication Signal (AIS) and Remote Defect Indication (RDI) conditions
 - Bits 1-4 are the source node ID
 - Bit 5 is the path code
 - 0 Short path
 - 1 Long path
 - Bits 6-8
 - 000 Idle
 - 001 Bridged
 - 010 Bridged and switched
 - 110 MS-RDI
 - 111 MS-AIS
 - Others Not used



K2 Byte (APS-Linear)

[Go back to top](#) [Go back to TOC](#)

Data Communications Channel (DCC) Bytes (D4-D12)

- DCC – together these nine bytes form a 576kbps message channel for OAM purposes.
- They can be used for internally or externally generated messages or BER function.

S1 Byte (Synchronization Status)

- Synchronization status message byte contains information about the quality of the embedded timing and is used to inform the remote Multiplexer of the clock quality used to generate signals.
 - Bits 1-4 carry synchronization messages
 - Bits 5-8
 - 0000 Synchronized - Traceability Unknown
 - 0001 Stratum 1
 - 0100 Transit Node Clock
 - 0111 Stratum 2
 - 1010 Stratum 3
 - 1100 SDH Minimum Clock
 - 1101 Stratum 3e
 - 1110 Provisional by the Network Operator
 - 1111 Not used for synchronization
 - Other bytes are reserved



S1 Byte (Synchronization Status)

Order Wire Byte (E2)


- A 64kbps voice communication channel between multiplexers.
- It's a channel used by craft persons and will be ignored as it passes through regenerators.
- The relief byte is used for ring protection

[Go back to top](#) [Go back to TOC](#)

Path Overhead Layer


The following is a partial list of POH bytes and their corresponding functions:

- **J1 byte (STS Path Trace)**
 - High Order VC-N path trace byte
 - A unique message is assigned to each path in a SDH network – therefore the path trace can be used to check continuity between any location on a transmission path and the path source
 - This user programmable byte repeatedly transmits a 15-byte string plus 1 (CRC-7) byte so that a receiver can continually verify its connection with the transmitter
 - A 64-byte free-format string is also permitted
 - The message is transmitted one byte per VC-4 frame

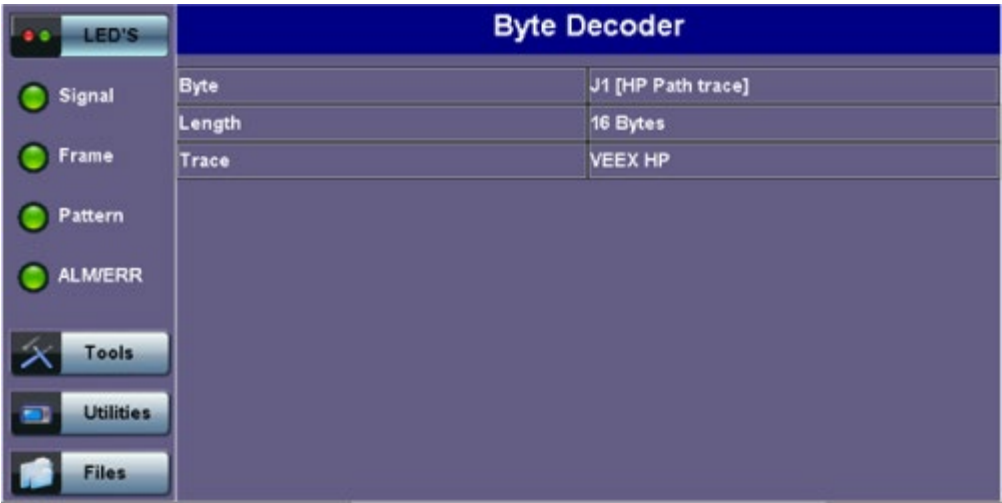

J1 Byte (HP Path Trace)

- **B3 byte**
 - Even code parity which determines if a transmission error has occurred over a path
 - Its value is calculated over all the bits of the previous VC-4
 - The computed checksum is placed in the B3 byte before scrambling
- **C2 byte (HP signal label) for SDH mode**
 - Indicates mapping of the VC-n.
 - The table below indicates the standard C2 binary values:

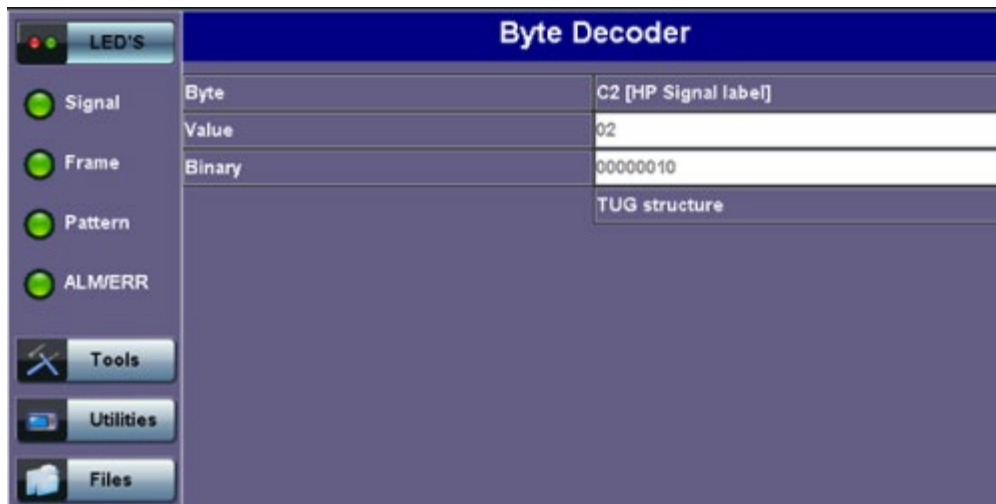


C2 Byte (HP signal label)

C2 byte structure per ITU-T G.707 recommendations			
Bits 1 to 4	Bits 5 to 8	Hex value	Description
0000	0000	00	Unequipped
0000	0001	01	Equipped non-specific
0000	0010	02	TUG structure
0000	0011	03	Locked TU-n
0000	0100	04	Asynchronous mapping of 34Mbit/s or 45Mbit/s into a C3 container
0001	0010	12	Asynchronous mapping of 140Mbit/s into a C4 container
0001	0011	13	ATM mapping
0001	0100	14	MAN DQDB mapping
0001	0101	15	FDDI mapping
0001	1000	18	HDLC/LAPS
0001	1010	1A	10 Gigabit Ethernet mapping (IEEE 802.3)
0001	1011	1B	Generic Framing Protocol (GFP)
0001	1100	1C	10 Gigabit Fiberchannel mapping
0010	0000	20	Asynchronous mapping of ODUk
1111	0000	FE	ITU-T 0.181 test signal mapping
1111	1111	FF	VC-AIS (TCM)

[Go back to top](#) [Go back to TOC](#)

- **G1 byte (Path status)**

- High Order path status byte
- Used to convey the path terminating status back to the originating path, thus allowing bidirectional monitoring of the complete path
- Bits 1-4: Remote Error Indication (HP-REI) indicates number of bit errors detected by B3
- Bit 5: Remote Defect indication (HP-RDI) set to 1 if signal failure is detected
- Bits 6-7: Enhanced RDI information to differentiate between payload defects (HP-PLM), connectivity defects (HP-TIM, HP-UNQ) and server defects (HP-AIS, LOP)

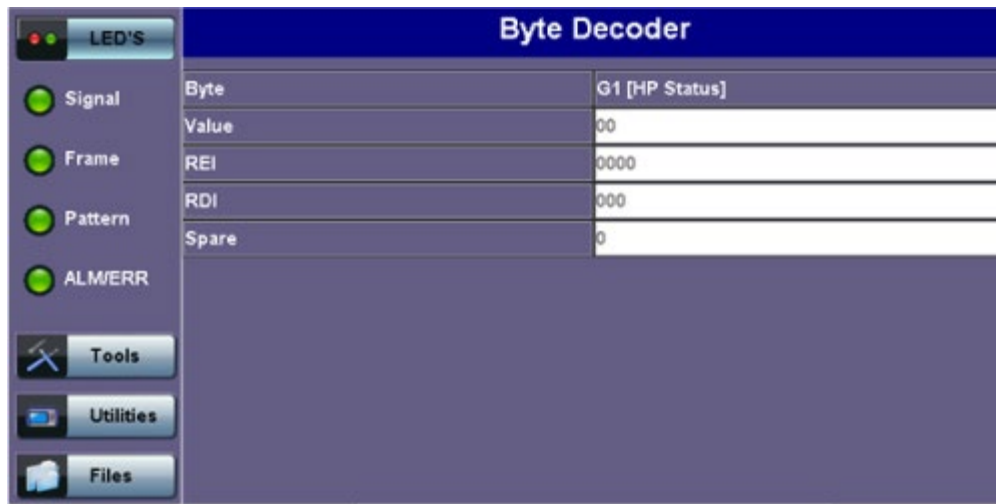

G1 Byte (HP Status)

[Go back to top](#) [Go back to TOC](#)

- **F2 byte (HP user channel)**
 - High Order Path user channel
 - VC-4 path user channel used for communication between path elements
- **H4 byte (TU Indicator)**
 - Position or Sequence Indicator
 - Multiframe phase indicator used for tributary structured payloads
- **F3 byte (LP) user channel**
 - Used for communication between path elements and is payload dependent.
- **K3 byte (HP APS)**
 - Bits 1-4 are used for protection switching of VC-3 & 4 paths.
 - Bits 5-8 are currently not used
- **N1 byte (HP)**
 - Allocated to provide a High Order (HP) Tandem Connection monitoring function for contiguously concatenated VC-4, VC-4 and VC-3 levels.
 - Bits 1-4: Used as an Incoming Error Count (IEC) per G.707
 - Bit 5: Operates as the TC-REI to indicate errored blocks occurring within the tandem connection
 - Bit 6: Operates as the OEI to indicate errored blocks egressing the VC-n
 - Bits 7-8: Operate in 76 multi-frame structure;
 - Frames 1-8 > Frame Alignment Signal (FAS)
 - Frames 9-72 > The Access Point Identifier of the tandem connection (TC-API)
 - Frames 73-76 > TC-RDI indicating defects that have occurred in the tandem connection to the far-end
 - Frame 74 > ODI indicating to the far-end that AU/TU-AIS has been inserted into egressing AU-n TU-n due to defects before or within the tandem connection
 - Frames 73-76 > Reserved capacity
- **V5 byte (LP signal label)**
 - Byte contains error analysis, signal label and path status information
 - Continuous monitoring of anomalies or defects and payload composition at the path end or along the path
 - Bits 1-2 provides error checking (BIP-2)
 - Bit 3 is the LP-REI (0 = no error, 1 = errors)
 - Bit 4 is the LP-RFI (0 = no error, 1 = errors)
 - Bits 5-7 provide the VC-12 signal label
 - 000 Unequipped
 - 001 Equipped (non-specific)
 - 010 Asynchronous
 - 011 Bit synchronous
 - 100 Byte synchronous
 - 101 Extended

- 110 0.181 test signal (TSS4)
- 111 VC-AIS
- Bit 8 is the VC12 path LP-RDI normally set to zero unless there is an error condition (AIS)



V5 Byte (VT signal label)

[Go back to top](#) [Go back to TOC](#)

• J2 byte (LP)

- Used to transmit a configurable 16-byte identifier that enables the receiving path to continuously verify its connection with the transmitter
- Uses the same byte structure as the J0 and J1 bytes

• N2 byte (LP)

- Provides LP/VT tandem connection monitoring function (LP-TCM) for the VC-11 and VC-12 levels
 - Bits 1-2: even parity error checking BIP-2 for the tandem connection
 - Bit 3: Set to "1"
 - Bit 4: Incoming AIS indicator (0 = no defect; 1 = defect occurred before tandem connection)
 - Bit 5: TC-REI indicating errored blocks caused in the tandem connection
 - Bit 6: OEI indicating errored blocks of the egressing VC-n
 - Bits 7-8: Operate in a 76 multi-frame structure:
- Multiframe structure consists of:
 - Frames 1-8 > Frame Alignment Signal (FAS)
 - Frames 9-72 > The Access Point Identifier of the tandem connection (TC-API)
 - Frames 73-76 > TC-RDI indicating defects that have occurred in the tandem connection to the far-end
 - Frame 74 > ODI indicating to the far-end that AU/TU-AIS has been inserted into egressing AU-n/ TU-n due to defects before or within the tandem connection
 - Frames 73-76 > Reserved capacity

N2 byte structure per ITU-T G.707 recommendations							
Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Bit 8
BIP-2		Fixed [1]	I-AIS	TC-REI	OEI	TC-API, TC-RDI, ODI, Reserved	

• K4 byte (LP path Extended Label)

- When bits 5-7 of V5 byte are set to 101 (value = 5), then the signal label in K4 byte becomes valid where:
 - Bit 1 is allocated to the extended signal label
 - Bit 2 is allocated to virtual concatenation
 - Bits 3 and 4 are unassigned and are reserved for LP APS signaling
 - Bits 5, 6, 7 are allocated for optional use
 - Bit 8 is unassigned
 - Bits 12-19 contain the

K4 multiframe structure per ITU-T G.707 recommendations																															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Multiframe Alignment Signal												Extended Signal Label								0	R	R	R	R	R	R	R	R	R	R	R
Frame count						Seq. Indicator																									

K4 byte structure per ITU-T G.707 recommendations							
Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Bit 8
Extended Signal Label	Virtual concatenation Overhead	Unassigned		Optional Use			Unassigned

[Go back to top](#) [Go back to TOC](#)

• Summary

- The Summary tab displays the summary screen listing the major bytes of the received SDH signal.
- Displays the Path Trace Identifiers (J0, J1, J2), APS (K1, K2), Synchronization status (S1), and HP (C2) and LP (V5) Signal Label bytes.
 - Column #1 - Indicates the byte type
 - Column #2 - Provides the hexadecimal value of the byte (if applicable)
 - Column #3 - Provides a byte decode (Please refer to the byte definitions for an explanation of the listed bytes)

LED'S	SOH	POH	Summary
Signal	J0 N/A	VEEX RS^	~^tz.@6y.@^
Frame	J1 N/A	VEEX HP	
Pattern	J2 N/A	VEEX LP	
ALM/ERR	K1 00	0:No Request	
	K2 00	0:Future use;1+1	
	S1 00	Quality unknown	
	C2 02	TUG structure	
	V5 C4	Async	
Tools			
Utilities			
Files			

Summary




Path Traces

(SP) indicates a space between the message characters.
The message is displayed in red when an alarm condition is detected.

[Go back to top](#) [Go back to TOC](#)

10.1.3 Overhead Generator

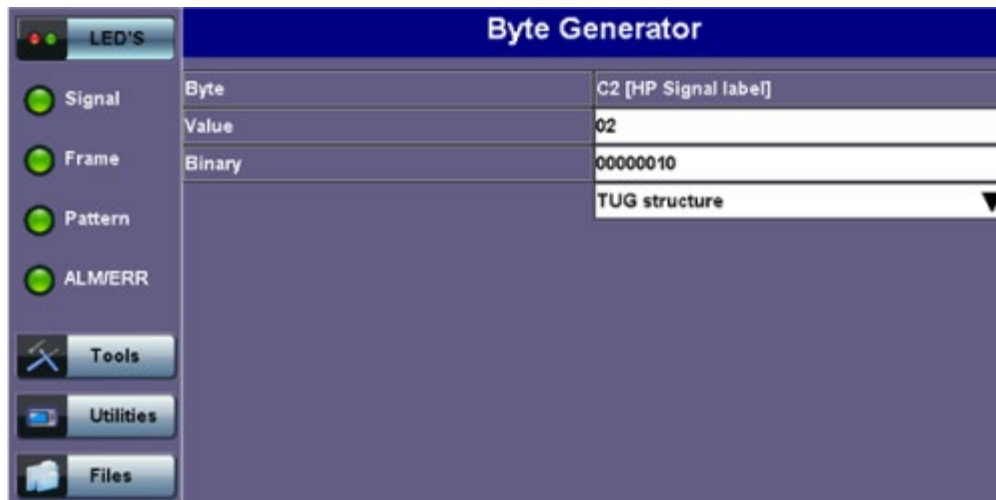

C2 Byte from POH

Overhead Generator

Programming most overhead bytes is possible using the OH Generator feature, however dedicated test functions are available for Pointer Tasks, Payload Labels, Trace Identifier, APS Testing, TCM testing. In some instances, more advanced editing is possible using the dedicated functions.

[Go back to top](#) [Go back to TOC](#)

10.1.4 Pointer Tasks

Tap the **Pointer Tasks** button to display the Pointer testing screens.



SDH/Sonet Tools Menu


10.1.4.1 Pointer Analysis

Pointers keep SDH signals synchronous by compensating for timing differences without having to use stuffing bits. Pointers are allowed to move up or down every three frames however the actual rate should be slower. The Administrative Unit (AU) and the Tributary Unit (TU) each has its own pointer and the unit has two tabs for displaying the values and measurements.

- **For AU pointers:**


- SS bits – Displays bits 5 and 6 of the H1 byte to indicate SDH [10], SONET [00], Unknown [01] and [11] signal type
- Pointer value – Displays the H1 and H2 values (addresses) indicating the offset in bytes between the pointer and first byte of the AU-n

- LOP (Loss of Pointer)
- PJE and NJE
- NDF or New Data Flag. NDF is enabled when all bits match "1001" (or "0001", "1101", "1011" and "1000") and is disabled when all bits match "0110" (or "1110", "0010", "0100", "0111").
- Difference and Sum

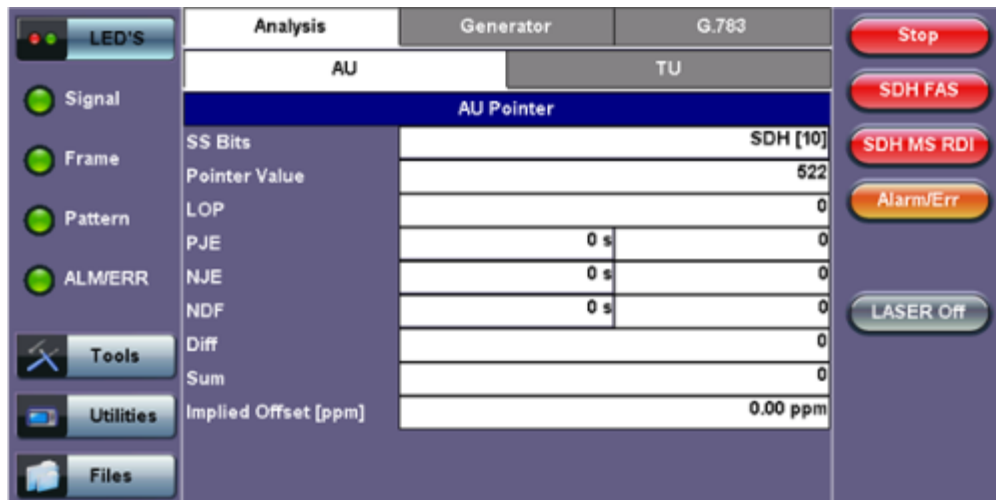

Analysis > AU tab

- For TU pointers:
 - Pointer value
 - LOP (Loss of Pointer)
 - PJE and NJE
 - NDF or New Data Flags
 - Difference and Sum

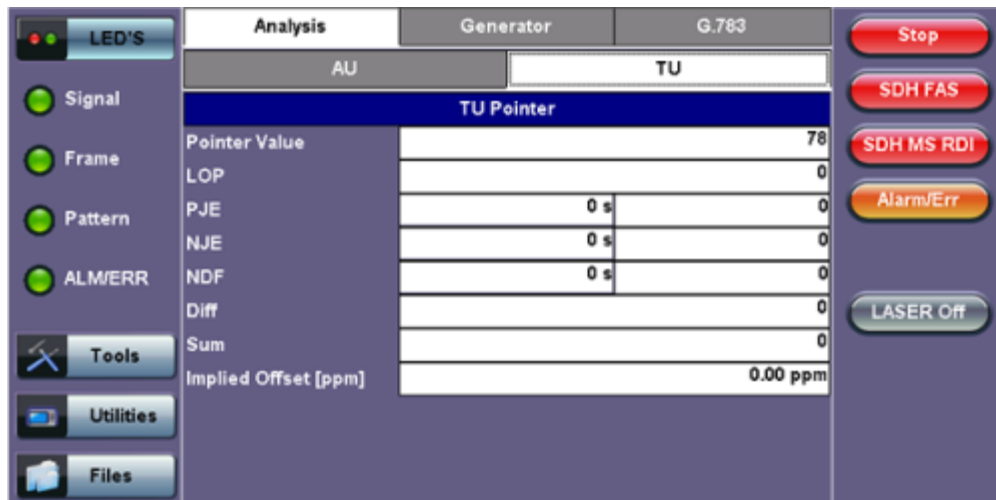


Analysis > TU tab

[Go back to top](#) [Go back to TOC](#)

10.1.4.2 Pointer Generation

The Pointer generator is able to generate individual pointer movements as follows:


- For AU pointers:
 - SS bits: Program bits 5 and 6 of the H1 byte to be either SDH [10], SONET [00], Unknown [01] or [11].
 - Pointer value: Transmits a new pointer address or value with or without a new data flag (NDF). Configurable in a range of 0 to 782 pointers.
 - Increment (INC) or Decrement (DEC) pointers with identical polarity by 1 byte in single steps.

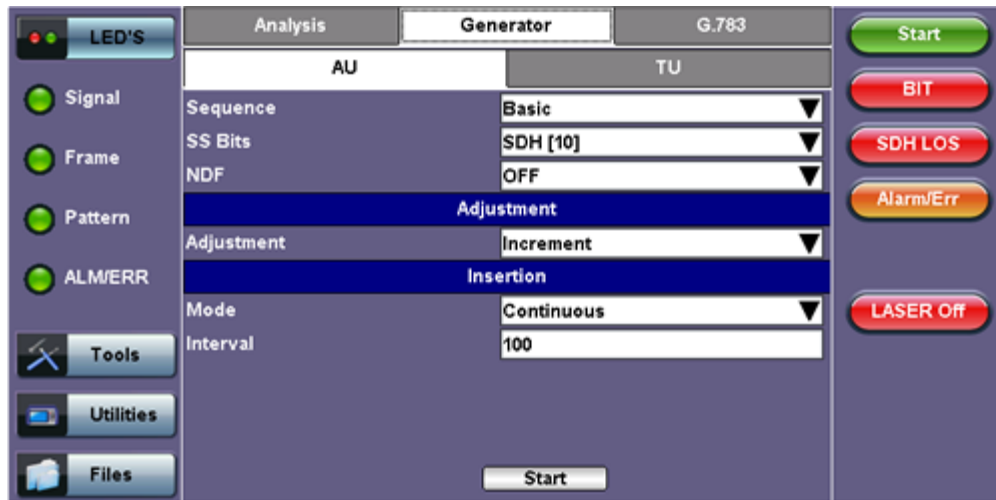

Generator > AU tab

- **For TU pointers**

- TU Pointer value: Set value in a range of 0 to 784 (TU-3) and 0 to 139 (TU-12)
- TU-11 Pointer value: Set value in a range of 0 to 109 (TU-11)
- Increment (INC) or Decrement (DEC) pointer value by 1 byte is single steps

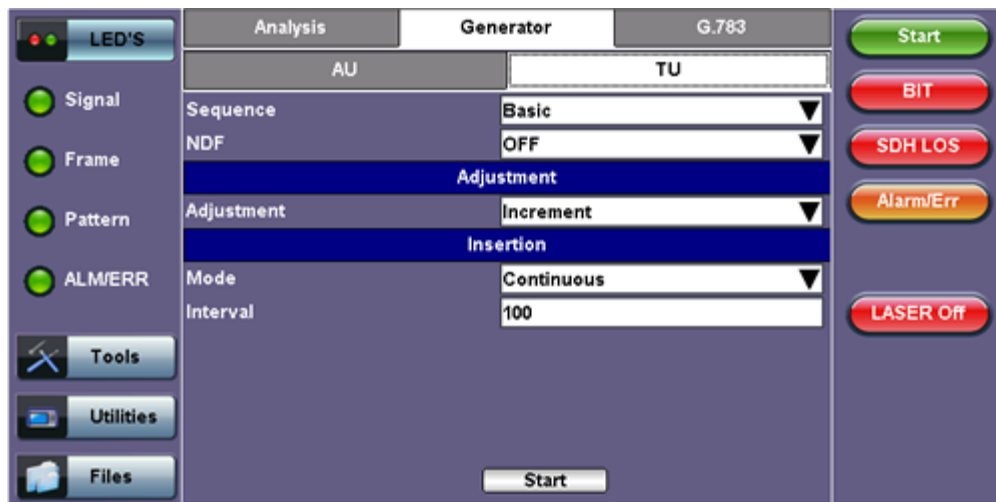

Generator > TU tab

[Go back to top](#) [Go back to TOC](#)

10.1.4.3 Pointer Sequences

The Pointer generator is also able to generate Standard ITU-T G.783 and ANSI T1.105.03 and Bellcore GR-253 sequences as follows:

- **Sequence:** Decide how to affect the pointer sequence
- **Basic:** Specify whether the pointer is increasing or decreasing
 - Select Inc to increase the pointer value
 - Select Dec to decrease the pointer value
 - Select New Value to set new pointer value
- **Single Alternating:** Increase or decrease the pointer value
- **Burst:** Generate a sequence of changes in the pointer value in one direction only (increase or decrease)
- **Transient Burst:** Generate changes in the phase of the pointer adjustment
- **Periodic:** Generate periodic changes in the pointer value
- **87-3:** Generate an 87-3 pattern (87 consecutive pointer adjustments, 3 consecutive pointer value, with no adjustments)
- **87-3 Add:** Generate an 87-3 pattern (87 consecutive pointer adjustments, 3 consecutive pointer value, added to have an additional pointer value)

- **87-3 Cancel:** Generate an 87-3 pattern (87 consecutive pointer adjustments, 3 consecutive pointer value, reduced the number of adjustments by one)
- **Unit:** Select the type of unit to count: Frames
 - N: Specify the number of pointer adjustments in a row: 1—9999 (default=6)
 - T: Specify the average pointer spacing in time. T is known as T1 to T5 in G.783: (default=4)
 - T1, T4: 0.25ms to 600s or 2 to 4,800,000 frames/multiframes
 - T2, T3: 0.25ms to 10s or 2 to 80,000 frames/multiframes
 - T5: 0ms to 600s or 0 to 4,800,000 frames/multiframes

G.873 > AU tab

G.783 Identifier	Pointer adjustments	Mnemonic
Single Alternating	Single of opposite polarity	+~
Regular Add	Regular plus one double	+&Add
Regular Cancel	Regular with one missing	+&Cancel
Double Alternating	Double of opposite polarity	++~
Single	Single	+
Burst	Burst	+++Burst
87-3	STS periodic 87-3 pattern	+87/3
87-3 Add	STS periodic 87-3 Add position	+87/3 & Add
87-3 Cancel	STS periodic 87-3 Cancel position	+87/3 & Cancel
Periodic Add	Periodic Add position	+Periodical & Add
Periodic Cancel	Periodic Cancel position	+Periodical & Cancel

G.873 > TU tab



Pointer Sequence Testing

- It is recommended to run one sequence with positive adjustments followed by a sequence with negative adjustments. Performing the measurement at the maximum positive and negative frequency offset applicable to the line rate increases the stress on the pointer processor.
- The test procedure includes an initialization period followed by a cool down period of 30 seconds with no pointer movements.

[Go back to top](#) [Go back to TOC](#)

10.1.5 Trace Identifier

Tap the **Trace Identifier** button to display the path trace testing application and screens.



SDH/SONET Tools Menu


There are dedicated tabs for Transmitted and Received (expected) path traces and setups.

10.1.5.1 Transmitted Traces (TX)

- J0 [RS]: Regenerator section trace
 - Program a 1 or 16-byte identifier to check the connection between regenerators
- J1 [HP]: High order path section trace
 - Program a 16 or 64-byte identifier to check the high order transmission path
- J2 [LP]: Low order path section trace
 - Program a 16 or 64-byte identifier to check the low order transmission path



To program or edit the transmitted trace, tap the applicable trace box to display the pop-up keyboard.

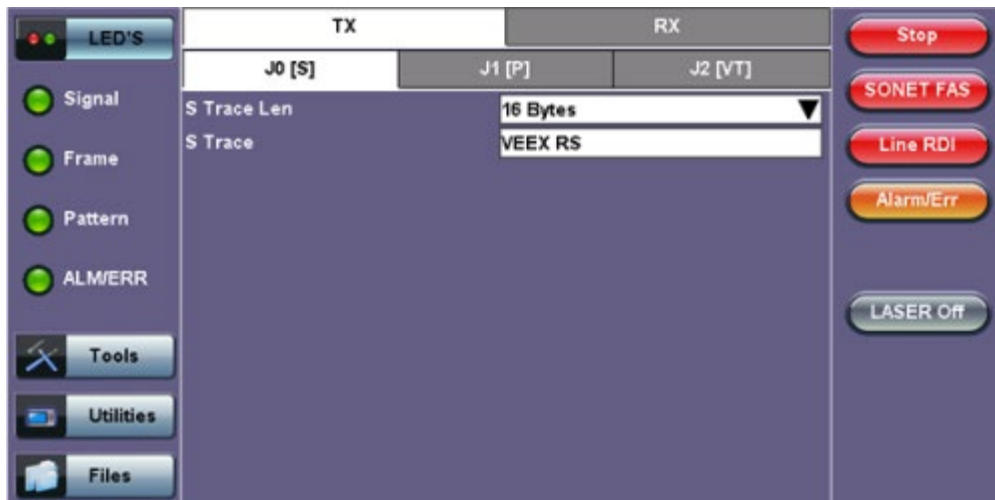

TX - JO [S]

[Go back to top](#) [Go back to TOC](#)

10.1.5.2 Received Traces (RX)

- J0 [RS]: Regenerator section trace
 - Program a 1 or 16-byte identifier to set and check the expected trace
 - Enable or disable the TIM (Trace Identifier Mismatch) alarm
- J1 [HP Path]: High order path section trace.
 - Program a 16 or 64-byte identifier to set and check the expected trace
 - Enable or disable the TIM (Trace Identifier Mismatch) alarm
- J2 [LP Path]: Low order path section trace
 - Program a 16 or 64-byte identifier to set and check the expected trace
 - Enable or disable the TIM (Trace Identifier Mismatch) alarm




RX - JO [S]

[Go back to top](#) [Go back to TOC](#)

10.1.6 Payload Labels


This function is used to set the C2 and V5 Path Signal Labels which indicate the content of the High order and Low order VCs.

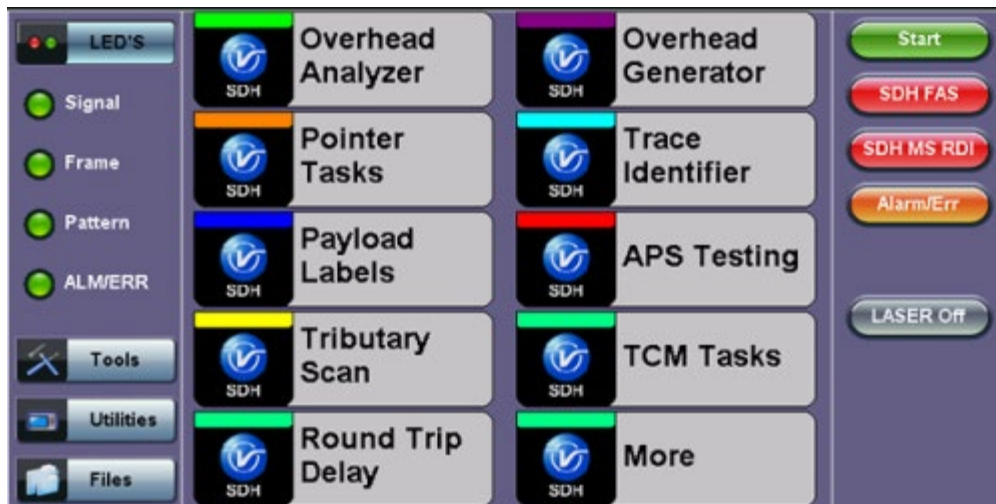

SDH/SONET Tools Menu

Tap the **Payload Label** Button to display the payload label screens. There are dedicated tabs for Transmitted and Received payload labels and setups:

- **C2 [HP Path]: Path signal label**
 - Specifies the mapping type in the VC-n
 - Program the TX or RX label by editing the hexadecimal value or by using the convenient drop-down menu selection
 - For the RX label, enable or disable the Payload Mismatch (PLM) Alarm

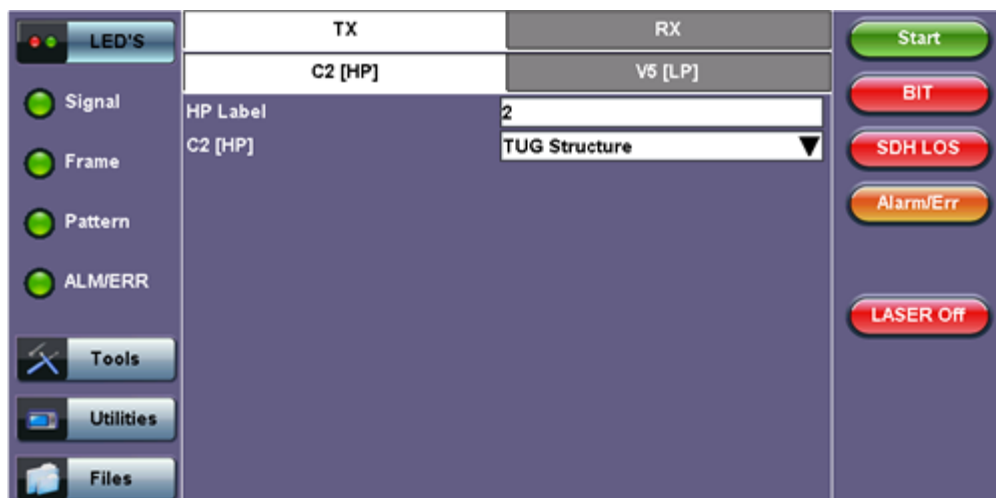

TX C2 [HP]

- **V5 [LP Path]: Path signal label**
 - Program the TX and RX label by editing the hexadecimal value or by using the convenient drop-down menu selection
 - For the RX label, enable or disable the Payload Mismatch (PLM) Alarm



TX V5 [LP]

[Go back to top](#) [Go back to TOC](#)

10.1.7 APS Tasks

10.1.7.1 APS Timing

This function measures the Automatic Protection Switching (APS) limits of the network. APS applies only to the Multiplex sections of a SDH network and enables network elements to re-route traffic to a backup circuit in the event of network failure or problems. The protection mechanism is coordinated by the K1 and K2 bytes in the Multiplexer Section Overhead.

- **APS Standards**


The principles and protocols of APS in SDH networks are defined in ITU-T G.783 and G.841 and Bellcore GR-253 recommendations for Linear and Ring network architectures respectively. According to recommendations, the re-routing of the signal has to occur within 50ms. Protection switching is initiated as a result of one of the following conditions:

- “Hard” Failure (SF) condition – Loss of Signal (LOS), MS-AIS, $BER > 1 \times 10^{-3}$.
- “Soft” Failure (SD) condition – Signal degradation when BER exceeds a predetermined threshold. Normally over a provisioned range of 1×10^{-5} to 1×10^{-9} .

See section 6.7.5 Service Disruption Test (SDT) for APS (SDT) setup.

Tap the APS Testing button to display the APS testing screen shown below.

- **Start:** Press to begin the test.
- **APS Test Procedure:**
 - The test set should be connected to a tributary port of network element or transmission system to ensure that the switching time is measured for the service transported by the SDH network
 - Ensure that no errors or alarms are present on the transmission system because this will impact the measurement
 - The measurement will be triggered depending on the condition configured
 - The test set measures how long the AIS event remains present after the event is first recognized and will continue to measure the total disruption time in the event of multiple disruptions

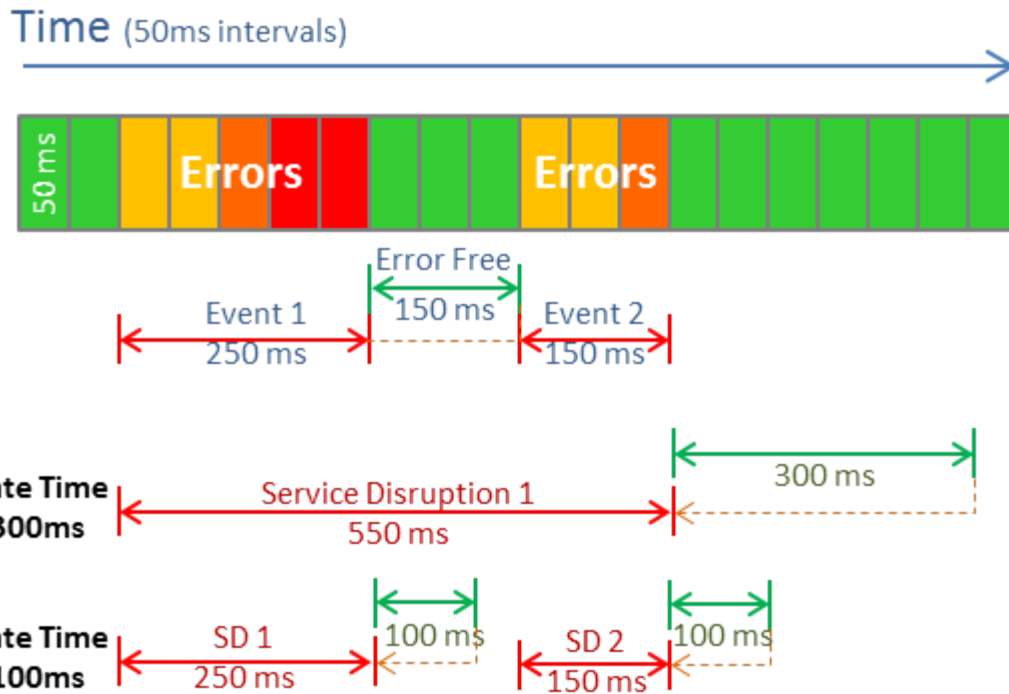


Service Disruptions

[Go back to top](#) [Go back to TOC](#)

10.1.7.2 APS Sequence


The associated K1/K2 sequence and received K1/K2 bytes may be captured.

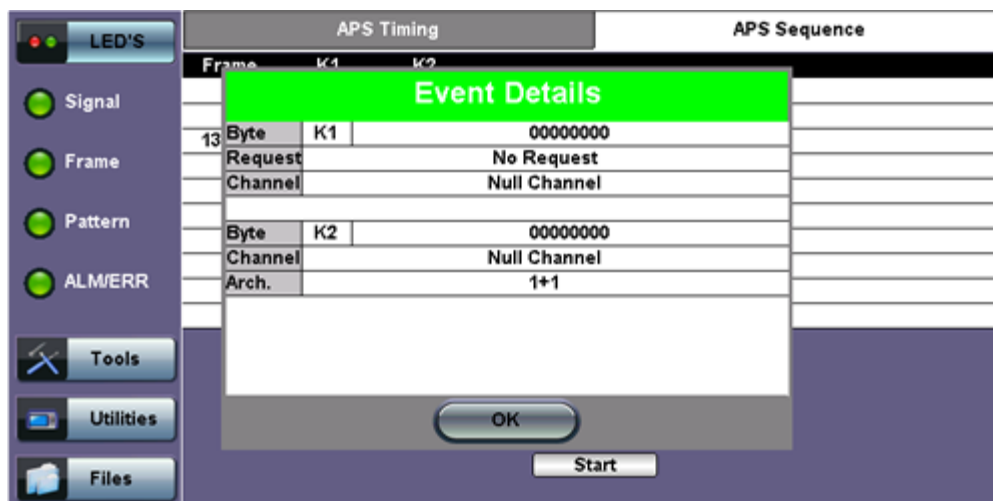

Event Details

[Go back to top](#) [Go back to TOC](#)

10.1.8 Tandem Connection Monitoring (TCM)

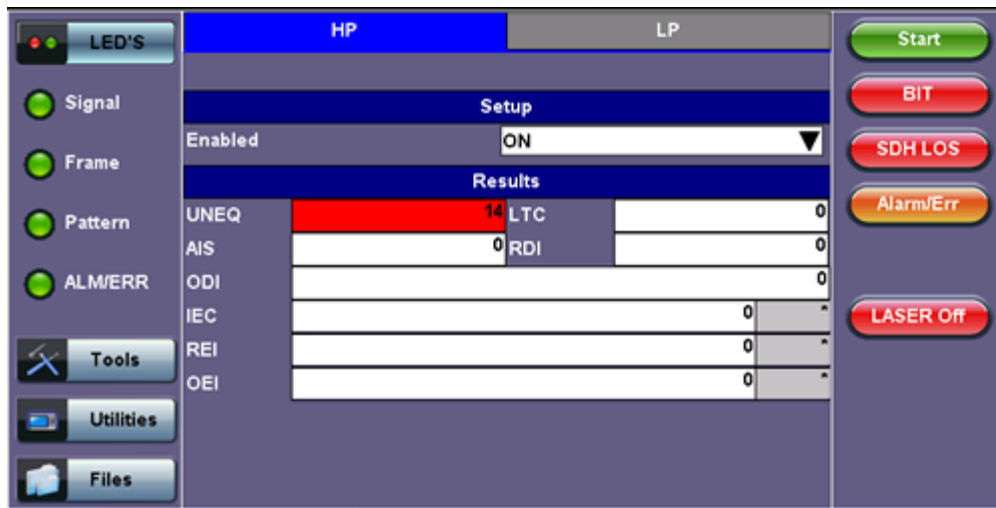

HP Setup

• TCM Standards

The Tandem paths are defined in ITU recommendation G.707 Annex D and Annex E

- G.707 Annex D for VC4 and VC3
- G.707 Annex E for VC2 and VC1
- G.707 defines a tandem connection source and sink and describes the responses of each when defect (alarm) and error conditions are detected
- Tandem connection maintenance signals are carried in:
 - N1 byte for VC4 and VC3
 - N2 byte for VC2 and VC
 - These two bytes are structured similarly, but their functions are not identical

N1 byte structure

b1	b2	b3	b4	b5	b6	b7	b8
IEC (IAIS)				TC-REI	OEI	TC-APId, TC-DI, ODI, reserved	

N2 byte structure

b1	b2	b3	b4	b5	b6	b7	b8
TC-BIP		'1'	IAIS	TC-REI	OEI	TC-APId, TC-RDI, ODI, reserved	

IEC:	Incoming Error Count. Indicates IAIS when set to '1110' (see below)
IAIS:	Incoming AIS alarm
TC-REI:	Tandem Connection Remote Error Indication
OEI:	Outgoing Error Indication
TC-APId:	Tandem Connection Access Point Identifier (16-byte message)
TC-RDI:	Tandem Connection Remote Defect Indication
ODI:	Outgoing Defect Indication
TC-BIP:	2-bit Bit Interleaved Parity for Tandem Connection

[Go back to top](#) [Go back to TOC](#)

10.1.9 Tributary Scan

This function requires VC12 or VT-1.5 mapping and allows for a quick check of the signal structure, trace identifier, and the payload.

An important part of any Add Drop Multiplexer (ADM) installation process is the verification of the path routing. Considering that an STM-1 contains 63 x VC-12's and a STM-4 contains 252 x VC-12's checking each path manually can be very time consuming.

The unit automatically performs a sequential BER test on each SDH tributary (C12 channel) - mapping can be either via AU-4 or AU-3. The unit checks for alarms in the received signal, the SDH structure, and for synchronization of the selected test pattern in all

channels. The result for each channel is entered in a table:

- K.L.M.: ITU-T Tributary numbering scheme
- Report: Pass (OK)
- J2 trace: Corresponds to the VT trace being transmitted
- Label: Corresponds to the V5 byte signal label being transmitted

K.L.M.	Report	J2 Trace	Label
1.1.1	OK	VEEX LP	0x2
1.1.2	OK	VEEX LP	0x2
1.1.3	OK	VEEX LP	0x2
1.1.4			
1.2.1			
1.2.2			
1.2.3			
1.2.4			
1.3.1			

Tributary Scan

[Go back to top](#) [Go back to TOC](#)

10.1.10 Round Trip Delay

The Round Trip Delay (Propagation Delay) measurement works by sending a test pattern with an error. The time it takes for the error to reach the receiver is the propagation time through the network.

- Select SDH as TX/RX standard.
- View the Round Trip Delay of a looped back signal.
- Set check box on Setup RX pattern to Out-of-Service.

Time [ms]	Result
0.00 ms	Complete

Round Trip Delay Results

10.1.11 Jitter and Wander

For more information on Jitter and Wander, please see the [Jitter and Wander Application](#) section.


[Go back to top](#) [Go back to TOC](#)

10.2 SONET Tools

Accessing SDH/SONET Tools

Tap on **Home (main menu) >SONET/SDH Tools**

10.2.1 Shortcuts

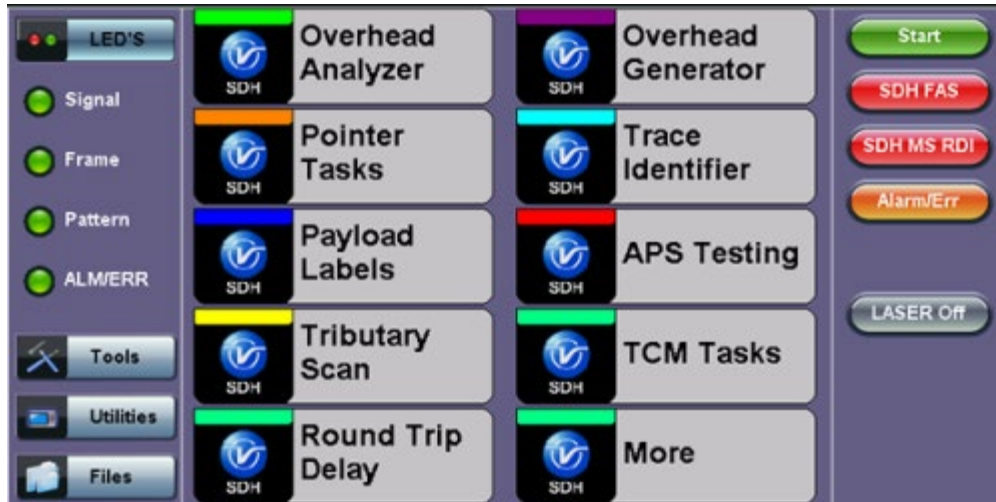

SDH/SONET Tools Menu

- **Overhead Analyzer:** Displays the Section/Line Overhead (SOH) and STS Path Overhead (POH) bytes of the received channel.
- **Overhead Generator:** Used to edit Section/Line Overhead (SOH) and STS Path Overhead (POH) bytes of the received channel.
- **Pointer Tasks:** Displays both STS and VT pointer values and generates STS and VT pointer movements. Pointer sequences according to Bellcore GR.253 recommendations are also possible.
- **Trace Identifier:** Used to generate and edit J0, J1 and J2 path traces and set expected trace for received channel according to G.831 recommendations.
- **Payload Labels:** Used to set the C2 and V5 Path Signal Labels which indicate the content of the STS path and VTs.
- **APS Testing:** Used to measure Automatic Protection Switching limits. Using selectable triggers, the drop out times of tributary connections are measured and compared with preset values.
- **TCM Tasks:** Used to analyze or edit the sequence of Z5 and Z6 TCM bytes by generating alarms and errors in the Tandem connection sub-layer.
- **Tributary Scan:** Used to scan individual or multiple tributaries to verify routing and error free operation. Available in VT-1.5 or VT-2 mode
- **Round Trip Delay (Propagation Delay):** Measurement works by sending a test pattern. Bit errors are transmitted in the pattern. The time it takes for the error to reach the receiver is the propagation time through the network.

[Go back to top](#) [Go back to TOC](#)

10.2.2 Overhead Analyzer

Tap the **Overhead Analyzer** button to display the OH screens shown below. There are tabs for:

- SOH RX, which displays the bytes associated with the Section/LINE Overhead
- POH RX, which displays the bytes associated with the Path Overhead
- Summary, which displays the Path Traces (J0, J1, J2), APS (K1, K2), Synchronization status (S1), STS Path (C2), and VT Path (v5) Signal Label bytes

- An 8-bit even parity code used to check for transmission errors over the regenerator section.
- Its value is calculated over all the bits of the STS-N frame before scrambling
- The checksum value is placed in the SECTION overhead of the following STS-N before scrambling



B1 (Section-BIP) Byte

Order Wire Byte (E1)

- Local order wire channel for voice communication between regenerators, cross connects, hubs and remote terminal locations

F1 Byte

- Section user channel
- Byte is allocated for user purpose to carry proprietary messages
- The channel is terminated at each regenerator location

Data Communications Channel Bytes (D1/D2/D3)

- Data Communications Channel (DCC)
- D1, D2 and D3 together form a 192kbps message channel for OAM purposes
- It can generate internal or external messages
- It can also be used as a BER function



D1 Byte

Pointers

H1/H2/H3 Bytes (STS Pointers)

- Enable transfer of STS-3 frames with STS-N frames and are processed by the MS terminating equipment



H1 Pointer Byte

[Go back to top](#) [Go back to TOC](#)

Line Layer

B2 Byte

- A 24-bit interleaved even parity code used to determine if transmission errors have occurred over the Section Layer
- Its calculated over all the bits of the STS-3 frame except those in the Section overhead
- The computed checksum is placed in the TOH of the following STS-N frame



B2 Byte

K1 Byte (APS-Linear)

- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- APS message type conforms to ITU-T G.783 and Bellcore GR.253 for Linear network architectures
 - Bits 1-4 (G.783 Protocol)
 - 1111 Lockout of protection
 - 1110 Forced switch
 - 1101 Signal fail, high priority (1:n only)
 - 1100 Signal fail, low priority
 - 1011 Signal degrade, high priority (1:n only)
 - 1010 Signal degrade, low priority
 - 1000 Manual switch

- 0110 Wait to restore
- 0100 Exercise
- 0010 Reverse request (bidirectional systems only)
- 0001 Do not revert
- 0000 No request
- Other codes are unused
- Bits 5-8 selects channel used by APS messages
 - 0000 Null channel
 - 0001 to 1110 Channels 1 thru 14
 - 1111 Extra traffic channels



K1 Byte (APS-Linear)

K1 Byte (APS-Ring)

- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- APS message type conforms to ITU-T G.841/ Bellcore GR.253 Ring Network architectures
 - Bits 1-4 are the condition
 - 1111 Lockout of protection
 - 1110 Forced switch (span)
 - 1101 Forced switch (ring)
 - 1100 Signal fail (span)
 - 1011 Signal fail (ring)
 - 1010 Signal degrade (protection)
 - 1001 Signal degrade (span)
 - 1000 Signal degrade (ring)
 - 0111 Manual switch (span)
 - 0110 Manual switch (ring)
 - 0101 Wait to restore
 - 0100 Exercise (span)
 - 0011 Exercise (ring)
 - 0010 Reverse request (span)
 - 0001 Reverse request (ring)
 - 0000 No request
 - Bits 5-8 are the destination node ID
 - 0000 Null channel
 - 0001 to 1110 Channels 1 thru 14
 - 1111 Extra traffic channel

K2 Byte (APS-Linear)

- Conforms to ITU-T G.783 Bellcore GR.253
- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- Used to communicate Alarm Indication Signal (AIS) and Remote Defect Indication (RDI) conditions
 - Bits 1-4 selects bridged channel used

Bit 5 determines APS architecture

- 1+1
- 1:N
- Bits 6-8
 - 110 RDI-L
 - 111 AIS-L
 - Others Not used

K2 Byte (APS-Ring)

- Conforms to and follows ITU-T G.841 Bellcore GR.253 recommendations
- Used to activate and deactivate the switching between the main and protection paths on a multiplexer section
- Used to communicate Alarm Indication Signal (AIS) and Remote Defect Indication (RDI) conditions
 - Bits 1-4 are the source node ID
 - Bit 5 is the path code
 - 0 Short path
 - 1 Long path
 - Bits 6-8
 - 000 Idle
 - 001 Bridged
 - 010 Bridged and switched
 - 110 RDI-L
 - 111 AIS-L
 - Others Not used

The screenshot shows a software interface titled "Byte Decoder". On the left is a sidebar with "LED'S" and four status indicators (Signal, Frame, Pattern, ALM/ERR), all of which are green. Below these are buttons for "Tools", "Utilities", and "Files". The main area is a table with two columns: "Byte" and "K2 [APS Linear]". The table contains the following rows:

Byte	K2 [APS Linear]
Value	00
Channel	0000
	NULL
Path	0
	1+1
Message	000
	Future use

K2 Byte (APS-Linear)

Data Communications Channel (DCC) Bytes (D4-D12)

- Data Communications Channel (DCC) – together these nine bytes form a 576kbps message channel for OAM purposes.
- They can be used for internally or externally generated messages or BER function.

S1 Byte (Synchronization Status)

- Synchronization status message byte contains information about the quality of the embedded timing and is used to inform the remote Multiplexer of the clock quality used to generate signals.
 - Bits 1-4 carry synchronization messages
 - Bits 5-8
 - 0000 Synchronized - Traceability Unknown
 - 0001 Stratum 1
 - 0100 Transit Node Clock
 - 0111 Stratum 2
 - 1010 Stratum 3
 - 1100 SONET Minimum Clock
 - 1101 Stratum 3e

- 1110 Provisionable by the Network Operator
- 1111 Not used for synchronization
- Other bytes are reserved



S1 Byte (Synchronization Status)

Order Wire Byte (E2)


- A 64 kbps voice communication channel between multiplexers.
- It's a channel used by craft persons and will be ignored as it passes through regenerators.
- The relief byte is used for ring protection

[Go back to top](#) [Go back to TOC](#)

Path Overhead Layer

The following is a partial list of POH bytes and their corresponding functions:

- **J1 byte (STS Path Trace)**
 - High Order STS-N path trace byte
 - An unique message is assigned to each path in a SONET network – therefore the path trace can be used to check continuity between any location on a transmission path and the path source
 - This user programmable byte repeatedly transmits a 15-byte string plus 1 (CRC-7) byte so that a receiver can continually verify its connection with the transmitter
 - A 64-byte free-format string is also permitted
 - The message is transmitted one byte per STS-3 frame

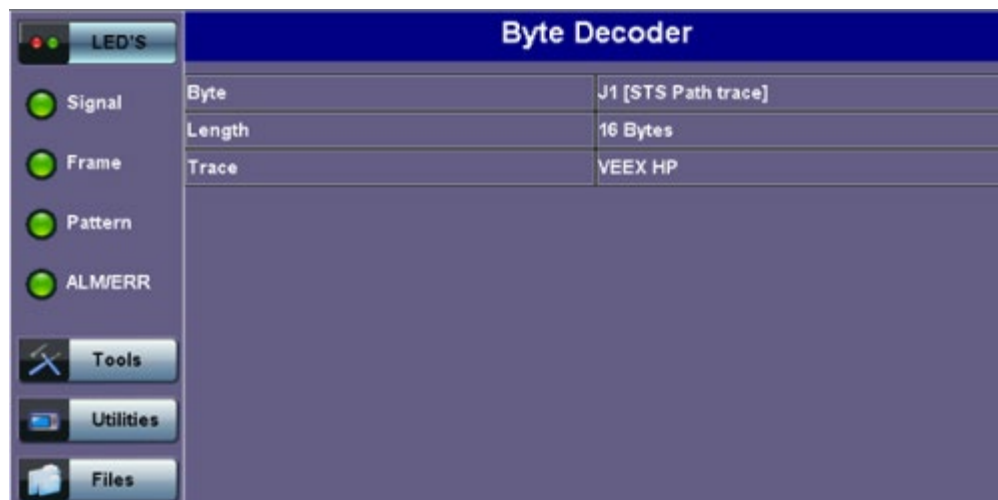

J1 Byte (STS Path Trace)

- **B3 byte**


- Even code parity which determines if a transmission error has occurred over a path
- Its value is calculated over all the bits of the previous STS-3
- The computed checksum is placed in the B3 byte before scrambling



B3 Byte (STS Path BIP)

- **C2 byte (STS path signal label)**

- Indicate the type of payload being transported in the STS, SPE, including the status of the mapped payloads.
- The table below indicates the standard C2 binary values:

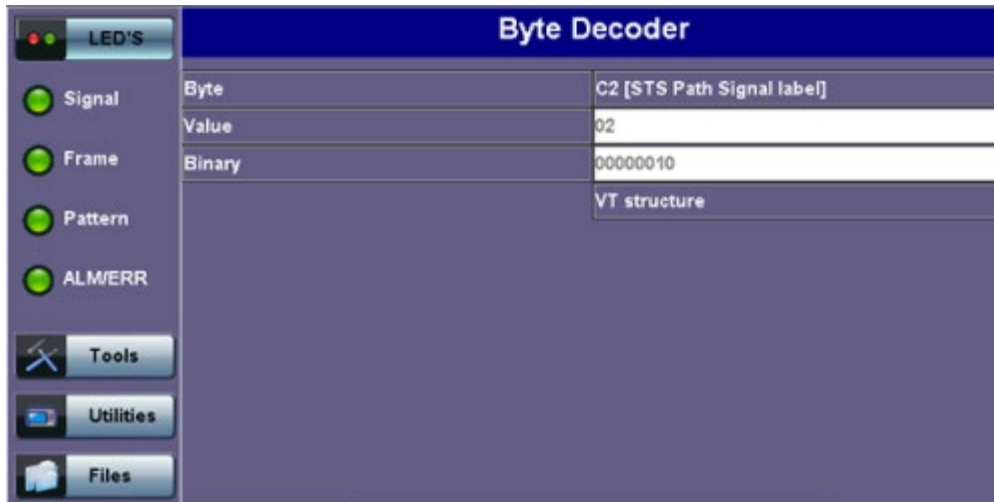


C2 Byte (STS Path signal label)

C2 byte structure per GR.253 recommendations	
Code[hex]	Payload type
00	Unequipped
01	Equipped non-specific (standard payload)
02	Floating VT mode
03	Locked VT mode
04	Asynchronous mapping for DS3
12	Asynchronous mapping for 139.264Mbps
13	Mapping for ATM
14	Mapping for DQDB
15	Asynchronous mapping for FDDI

16	Mapping for HDLC over SONET
E1	STS-1 payload with 1 VT-x payload defect
E2	STS-1 payload with 2 VT-x payload defects
E3	STS-1 payload with 3 VT-x payload defects
E4	STS-1 payload with 4 VT-x payload defects
E5	STS-1 payload with 5 VT-x payload defects
E6	STS-1 payload with 6 VT-x payload defects
E7	STS-1 payload with 7 VT-x payload defects
E8	STS-1 payload with 8 VT-x payload defects
E9	STS-1 payload with 9 VT-x payload defects
EA	STS-1 payload with 10 VT-x payload defects
EB	STS-1 payload with 11 VT-x payload defects
EC	STS-1 payload with 12 VT-x payload defects
ED	STS-1 payload with 13 VT-x payload defects
EE	STS-1 payload with 14 VT-x payload defects
EF	STS-1 payload with 15 VT-x payload defects
F0	STS-1 payload with 16 VT-x payload defects
F1	STS-1 payload with 17 VT-x payload defects
F2	STS-1 payload with 18 VT-x payload defects
F3	STS-1 payload with 19 VT-x payload defects
F4	STS-1 payload with 20 VT-x payload defects
F5	STS-1 payload with 21 VT-x payload defects
F6	STS-1 payload with 22 VT-x payload defects
F7	STS-1 payload with 23 VT-x payload defects
F8	STS-1 payload with 24 VT-x payload defects
F9	STS-1 payload with 25 VT-x payload defects
FA	STS-1 payload with 26 VT-x payload defects
FB	STS-1 payload with 27 VT-x payload defects
FC	STS-1 payload with 28 VT-x payload defects, or STS-1, STS-3C, etc., with a non-VT payload defect (DS3, FDDI, etc.)

- **G1 byte (Path status)**

- High Order path status byte
- Used to convey the path terminating status back to the originating path thus allowing bidirectional monitoring of the complete path
- Bits 1-4: Remote Error Indication (REI-P) indicates number of bit errors detected by B3
- Bit 5: Remote Defect indication (RDI-P) set to 1 if signal failure is detected
- Bits 6-7: Enhanced RDI information to differentiate between payload defects (PLM-P), connectivity defects (TIM-P, UNQ-P) and server defects (AIS-P, LOP-P)

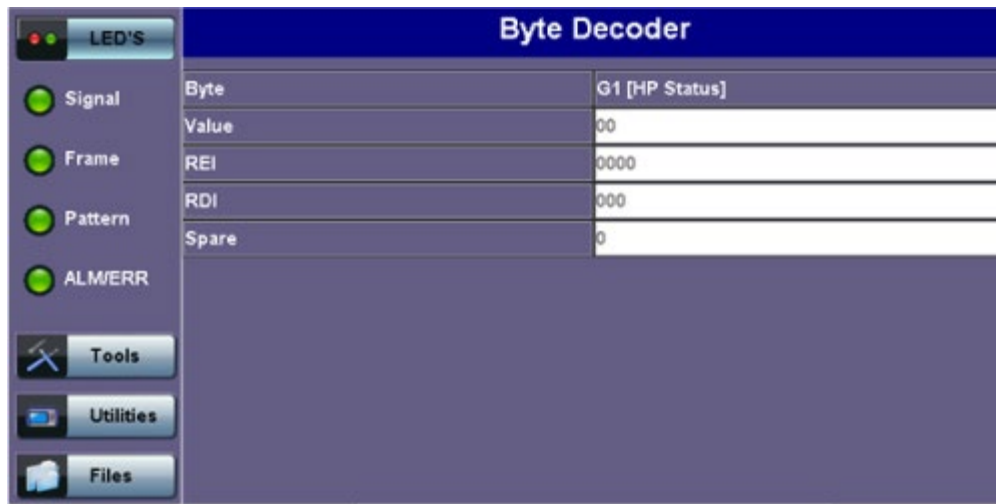

G1 Byte (HP Status)

- **F2 byte (Path user channel)**
 - STS Path user channel
 - STS-3# path user channel used for communication between path elements
- **H4 byte (VT Indicator)**
 - Position or Sequence Indicator
 - Multiframe phase indicator used for tributary structured payloads




H4 Byte (VT Indicator)

- **Z3/Z4 byte (STS Path)**
 - Allocated for future use. Have no defined value. The receiver is required to ignore their content.
- **Z5 byte (STS Path TCM)**
 - Allocated to provide a STS Path Tandem Connection monitoring function for contiguously concatenated STS-3 levels.
 - Bits 1-4: Used as an Incoming Error Count (IEC)
 - Bit 5: Operates as the TC-REI to indicate errored blocks occurring within the tandem connection
 - Bit 6: Operates as the OEI to indicate errored blocks egressing the STS-n
 - Bits 7-8: Operate in 76 multi-frame structure:
 - Frames 1-8 > Frame Alignment Signal (FAS)
 - Frames 9-72 > The Access Point Identifier of the Tandem Connection (TC-API)
 - Frames 73-76 > TC-RDI indicating defects that have occurred in the tandem connection to the far-end
 - Frame 74 > ODI indicating to the far-end that AU/TU-AIS has been inserted into egressing STS-n VTG-n due to defects before or within the tandem connection

Z5 byte structure

b1	b2	b3	b4	b5	b6	b7	b8
IEC (IAIS)				TC-REI	OEI	TC-APId, TC-DI, ODI, reserved	

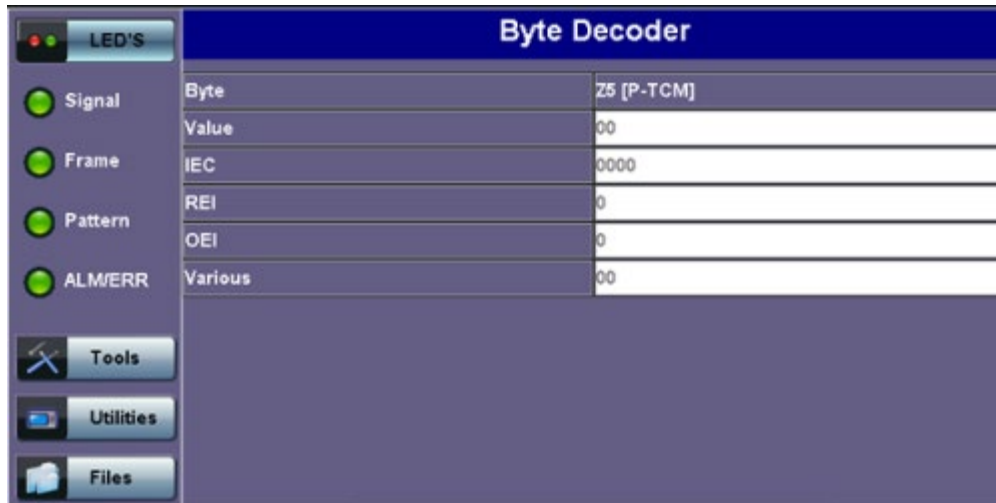Z5 Byte (Path TCM)

- **V5 byte (VT path overhead)**

- The first byte of a VT SPE provides the functions of error checking, signal label and path status.
- Continuous monitoring of anomalies or defects and payload composition at the path end or along the path
 - Bits 1-2 provides error checking (BIP-2)
 - Bit 3 is the REI-V (0 = no error, 1 = errors), that is sent back towards an originating VT PTE if errors were detected by the BIP-2.
 - Bit 4 is reserved for mapping-specific functions.
 - Bits 5-7 provide the VT signal label
 - 000 Unequipped
 - 001 Equipped (non-specific)
 - 010 Asynchronous mapping for DS1
 - 011 Bit synchronous mapping for DS1
 - 100 Byte synchronous mapping for DS1
 - Bit 8 is the VT path RDI-V normally set to zero unless there is an error condition (AIS)

BIP-2		REI-V RFI-V		Signal label			RDIV
1	2	3	4	5	6	7	8


Bits 1 and 2: Performance monitoring

Bit 3: REI-V (remote error indication) for VT path

Bit 4: RFI-V (remote failure indication) for VT path

Bits 5 to 7: Allocated for a VT path signal label

Bit 8: RDI-V (remote defect indication) for VT path

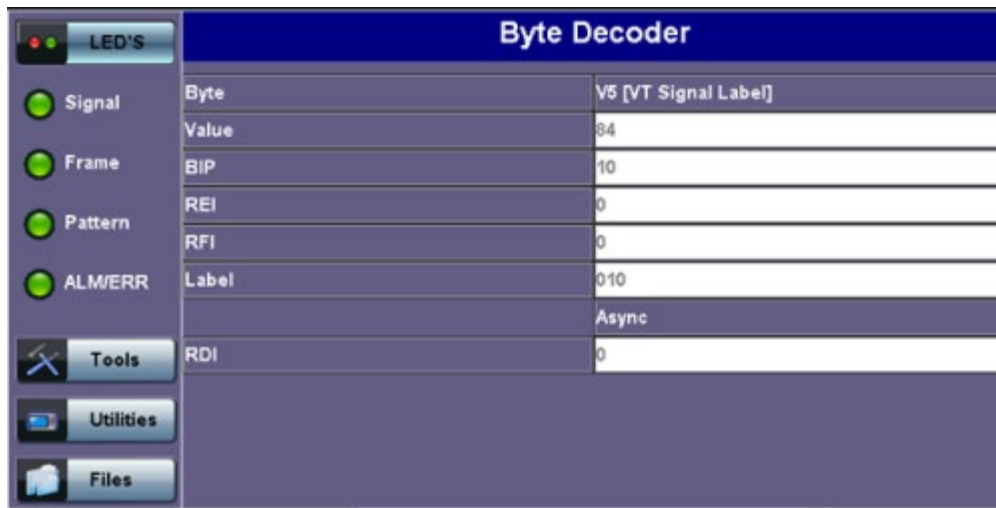

V5 Byte (VT signal label)

- **J2 byte (VT path trace)**
 - Used to transmit a configurable 16-byte identifier that enables the receiving path to continuously verify its connection with the transmitter
 - Uses the same byte structure as the J0 and J1 bytes
- **Z6 byte (VT-TCM)**
 - Provides VT tandem connection monitoring function (TCM-V) for the VT-1.5, VT-2 levels.
 - Bits 1-2: even parity error checking BIP-2 for the tandem connection
 - Bit 3: Set to "1"
 - Bit 4: Incoming AIS indicator (0 = no defect; 1 = defect occurred before tandem connection)
 - Bit 5: TC-REI indicating errored blocks caused in the tandem connection
 - Bit 6: OEI indicating errored blocks of the egressing STS-1n
 - Bits 7-8: operate in a 76 multi-frame structure:
- Multiframe structure consists of:
 - Frames 1-8 > Frame Alignment Signal (FAS)
 - Frames 9-72 > The Access Point Identifier of the Tandem Connection (TC-API)
 - Frames 73-76 > TC-RDI indicating defects that have occurred in the tandem connection to the far-end
 - Frame 74 > ODI indicating to the far-end that AIS-P/V has been inserted into egressing STS-1n VT-n due to defects before or within the tandem connection
 - Frames 73-76 > Reserved capacity

Z6 byte structure

b1	b2	b3	b4	b5	b6	b7	b8
TC-B1P		"1"	IAIS	TC-REI	OEI	TC-APId, TC-RDI, ODI, reserved	

Byte Decoder		
LED'S	Byte	Z6 [VT-TCM]
Signal	Value	00
Frame	BIP	00
Pattern	SET	0
ALM/ERR	AIS	0
	REI	0
	OEI	0
Tools	Various	00
Utilities		
Files		

Z6 Byte (VT-TCM)

- **Z7 byte (VT path Extended Label)**

- If bits 5-7 of V5 byte are set to 101 (value = 5), then:
 - The signal label in Z7 byte becomes valid where:
 - This is a 32-bit multi-frame string
 - Bit 1 is allocated to the extended signal label
 - Bit 2 is allocated to virtual concatenation
 - Bits 3 and 4 are unassigned and are reserved for VT APS signaling
 - Bits 5, 6, 7 are allocated for optional use
 - Bit 8 is unassigned

[Go back to top](#) [Go back to TOC](#)

- **Summary**

- The Summary tab displays the summary screen listing the major bytes of the received SONET signal.
 - Column #1 - Indicates the byte type
 - Column #2 - Provides the hexadecimal value of the byte (if applicable)
 - Column #3 - Provides a byte decode (Please refer to the byte definitions for an explanation of the listed bytes)

- For Path traces, (SP) indicates a space between the message characters.
- The message will be displayed in red when an alarm condition is detected. In the example below, the C2 byte has a PLM alarm (Payload Mismatch) (i.e., the received signal label does not match the transmitted signal label).

LED'S			SOH	POH	Summary
Signal	J0	N/A	VEEX RS8^	~^tz.@8y.@4^	
Frame	J1	N/A	VEEX HP		
Pattern	J2	N/A	VEEX LP		
ALM/ERR	K1	00	0:No Request		
	K2	00	0:Future use;1+1		
	S1	00	Qual unknown		
	C2	02	VT structure		
	V5	84	Async		
Tools					
Utilities					
Files					

Summary

10.2.3 Overhead Generator

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

SOH			POH			Summary		
STS # 1								
A1 F6	A1 F6	A1 F6	A2 28	A2 28	A2 28	J0 xx	AA	AA
B1 xx	00	00	E1 00	00	00	F1 00	00	00
D1 00	00	00	D2 00	00	00	D3 00	00	00
H1 6A	H1 93	H1 93	H2 0A	H2 FF	H2 FF	H3 00	H3 00	H3 00
B2 xx	B2 xx	B2 xx	K1 00	00	00	K2 00	00	00
D4 00	00	00	D5 00	00	00	D6 00	00	00
D7 00	00	00	D8 00	00	00	D9 00	00	00
D10 00	00	00	D11 00	00	00	D12 00	00	00
S1 00	Z1 00	Z1 00	Z2 00	Z2 00	Z2 00	E2 00	00	00

SOH

Tap the **Overhead Generator** button to display the OH screens shown below. There are three tabs:

- **SOH TX**, which allows editing of select bytes associated with the Section Overhead. Editing of J0, K1, K2, S1 is permitted as follows:
 - Hexadecimal value using pop-up keypad.
 - Binary values using simple on-screen bit toggle or pop-up keypad.
 - Convenient drop-down selections. In some instances, the selections will be available over multiple pages.

While programming of most overhead bytes is possible using the OH Generator feature, dedicated functions are available for Pointer Tasks, Payload Labels, Trace Identifier, APS Testing, TCM testing. In some instances, more advanced editing is possible using the dedicated functions.

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities


Files

Byte Generator

Byte	S1 [Sync Status]
Value	00
Channel	0000
Message	0000
	Qual unknown ▼

S1 Byte from SOH

- **POH TX**, which allows editing of select bytes associated with the Path Overhead.
 - Editing of J1, C2, H4, G1, Z5, and J2, V5, Z6 is permitted as follows:
 - Hexadecimal value using pop-up keypad
 - Binary values using simple on-screen bit toggle or pop-up keypad
 - Convenient drop-down selections. In some instances, the drop-down options will be available over multiple pages

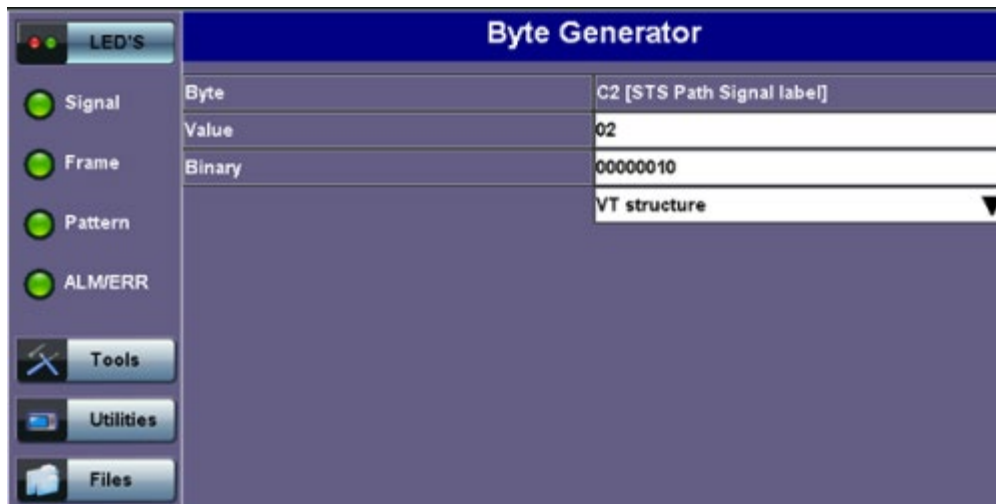

C2 Byte from POH

Overhead Generator

Programming most overhead bytes is possible using the OH Generator feature, however dedicated test functions are available for Pointer Tasks, Payload Labels, Trace Identifier, APS Testing, TCM testing. In some instances, more advanced editing is possible using the dedicated functions.

- **Summary** displays the Path Trace Identifiers (J0, J1, J2), APS (K1, K2), Synchronization status (S1), HP (C2), and LP (V5) Signal Label bytes. The operation is the same as the Overhead Analyzer function.

[Go back to top](#) [Go back to TOC](#)

10.2.4 Pointer Tasks

Tap the **Pointer Tasks** button to display the Pointer testing screens.



SDH/Sonet Tools Menu


[Go back to top](#) [Go back to TOC](#)

10.2.4.1 Pointer Analysis

Pointers keep SONET signals synchronous by compensating for timing differences without having to use stuffing bits. Pointers are allowed to move up or down every three frames however the actual rate should be slower. The Administrative Unit (AU) and the Tributary Unit (TU) each has its own pointer and the unit has two tabs for displaying the values and measurements.

- **For STS pointers:**


- SS bits – displays bits 5 and 6 of the H1 byte to indicate SONET [10], SONET [00], Unknown [01] and [11] signal type
- Pointer value – displays the H1 and H2 values (addresses) indicating the offset in bytes between the pointer and first byte of the STS-n
- LOP (Loss of Pointer)
- PJE and NJE
- NDF or New Data Flag. NDF is enabled when all bits match "1001" (or "0001", "1101", "1011" and "1000") and is disabled when all bits match "0110" (or "1110", "0010", "0100", "0111").
- Difference and Sum

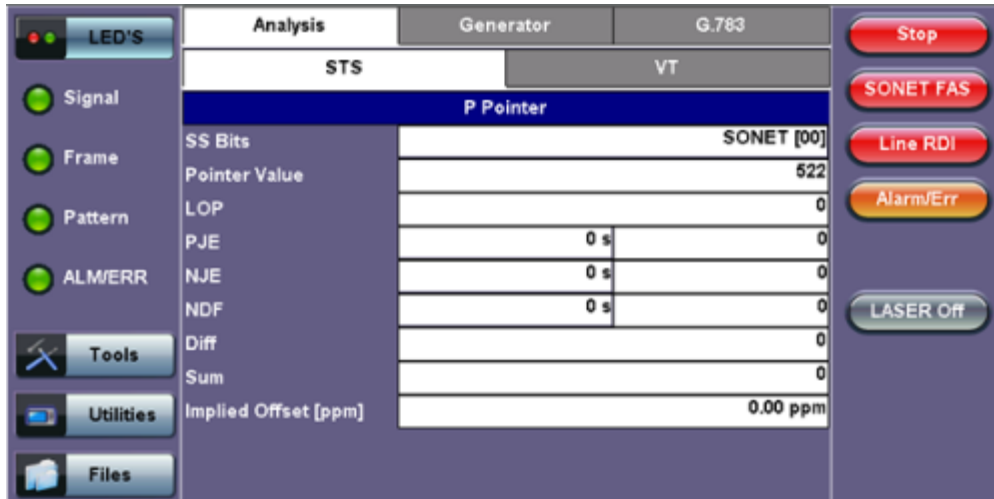

Analysis > P Pointer

- **For TV pointers:**

- Pointer value
- LOP (Loss of Pointer)
- PJE and NJE
- NDF or New Data Flags
- Difference and Sum

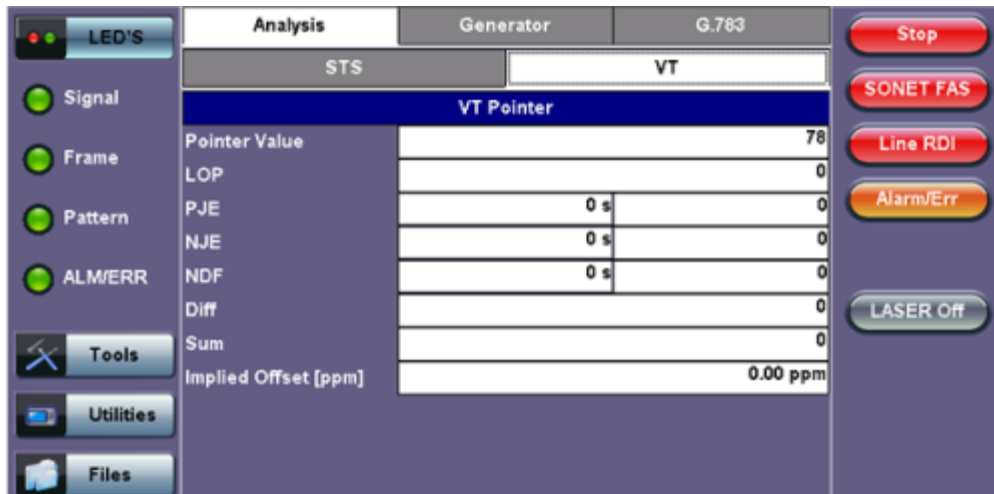

Analysis > VT tab


[Go back to top](#) [Go back to TOC](#)

10.2.4.2 Point Generator

The **Pointer generator** is able to generate individual pointer movements as follows:

For STS pointers:


- SS bits: Program bits 5 and 6 of the H1 byte to be either SONET [10], SONET [00], Unknown [01] or [11].
- Pointer value: Transmits a new pointer address or value with or without a new data flag (NDF). Configurable in a range of 0 to 782 pointers.
- Increment (INC) or Decrement (DEC) pointers with identical polarity by 1 byte in single steps.

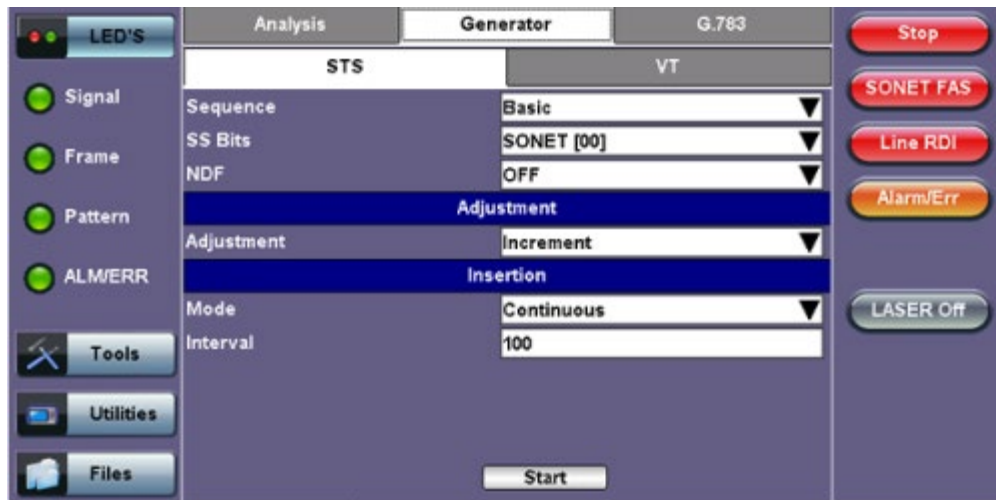

Generator > STS tab

• For VT pointers

- VT Pointer value: Set value in a range of 0 to 109 (VT-1.5) and 0 to 139 (VT-2)
- Increment (INC) or Decrement (DEC) pointer value by 1 byte in single steps

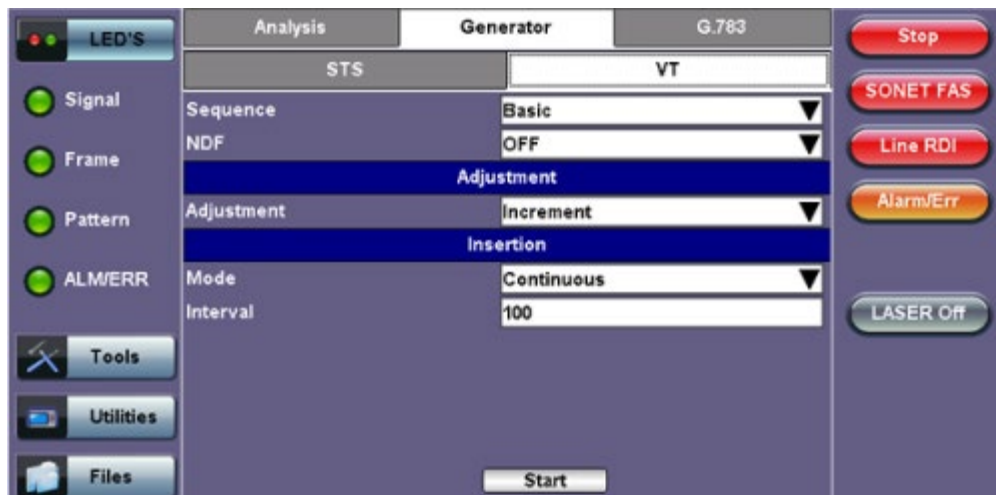

Generator > VT tab

[Go back to top](#) [Go back to TOC](#)


10.2.4.3 Pointer Sequences

The **Pointer generator** is also able to generate Standard ITU-T G.783 and ANSI T1.105.03 and Bellcore GR-253 pointer sequences as follows:

- **Sequence:** Decide how to affect the pointer sequence
 - **Basic:** Specify whether the pointer is increasing or decreasing
 - Select Inc to increase the pointer value
 - Select Dec to decrease the pointer value
 - Select New Value to set new pointer value
- **Single Alternating:** Increase or decrease the pointer value.
- **Burst:** Generate a sequence of changes in the pointer value in one direction only (increase or decrease).

- **Transient Burst:** Generate changes in the phase of the pointer adjustment
- **Periodic:** Generate periodic changes in the pointer value.
- **87-3:** Generate an 87-3 pattern (87 consecutive pointer adjustments, 3 consecutive pointer value, with no adjustments)
- **87-3 Add:** Generate an 87-3 pattern (87 consecutive pointer adjustments, 3 consecutive pointer value, with added to have an additional pointer value)
- **87-3 Cancel:** Generate an 87-3 pattern (87 consecutive pointer adjustments, 3 consecutive pointer value, with reduce the number of adjustments by one)
- **Unit:** Select the type of unit to count :Frames
 - N: Specify the number of pointer adjustments in a row: 1—9999 (default=6)
 - T: Specify the average pointer spacing in time. T is known as T1 to T5 in G.783: (default=4)
 - T1, T4: 0.25ms to 600s or 2 to 4,800,000 frames/multiframes
 - T2, T3: 0.25ms to 10s or 2 to 80,000 frames/multiframes
 - T5: 0ms to 600s or 0 to 4,800,000 frames/multiframes

G.783 Identifier	Pointer adjustments	Mnemonic
Single Alternating	Single of opposite polarity	+~
Regular Add	Regular plus one double	+"&Add
Regular Cancel	Regular with one missing	+"&Cancel
Double Alternating	Double of opposite polarity	++~
Single	Single	+
Burst	Burst	+++Burst
87-3	STS periodic 87-3 pattern	+87/3
87-3Add	STS periodic 87-3 Add position	+87/3 & Add
87-3 Cancel	STS periodic 87-3 Cancel position	+87/3 & Cancel
Periodic Add	Periodic Add position	+Periodical & Add
Periodic Cancel	Periodic Cancel position	+Periodical & Cancel

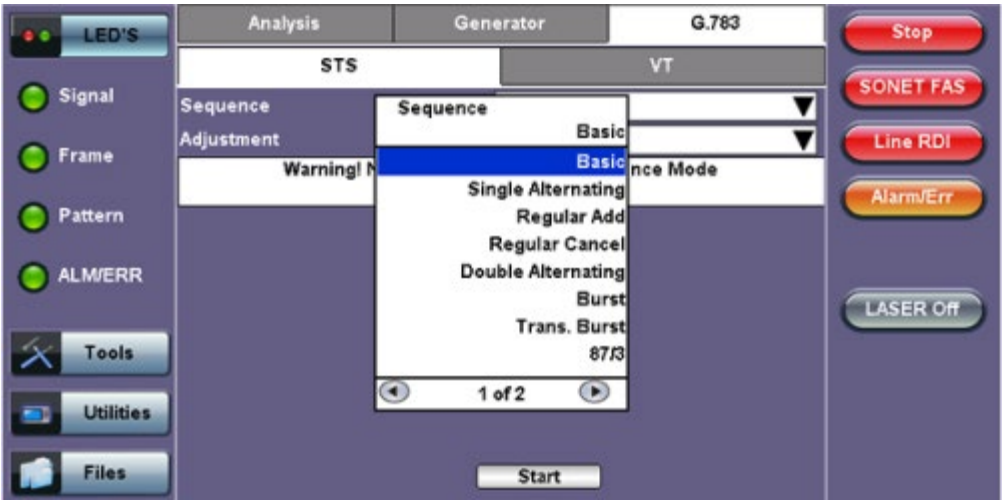

G.873 > STS tab



Pointer Sequence Testing

- It is recommended to run one sequence with positive adjustments followed by a sequence with negative adjustments. Performing the measurement at the maximum positive and negative frequency offset applicable to the line rate increases the stress on the pointer processor.
- The test procedure includes an initialization period followed by a cool down period of 30 seconds with no pointer movements.

[Go back to top](#) [Go back to TOC](#)

10.2.5 Trace Identifier

Tap the **Trace Identifier** button to display the path trace testing screens shown below. There are dedicated tabs for Transmitted and Received (expected) path traces and setups.



SDH/SONET Tools Menu

[Go back to top](#) [Go back to TOC](#)

10.2.5.1 Transmitted Traces (TX)

- J0 [Section]: Regenerator section trace
 - Program a 1 or 16-byte identifier to check the connection between regenerators
- J1 [STS Path]: High order path section trace
 - Program a 16 or 64-byte identifier to check the high order transmission path
 - The message is transmitted one byte per STS-3 frame
- J2 [VT Path]: Low order path section trace
 - Program a 16 or 64-byte identifier to check the low order transmission path

 To program or edit the transmitted trace, tap the applicable trace box to display the pop-up keyboard.



[Go back to top](#) [Go back to TOC](#)

10.2.5.2 Received Traces (RX)

- J0 [Section]: Regenerator section trace/Section Layer trace
 - Program a 1 or 16-byte identifier to set and check the expected trace
 - Enable or disable the TIM (Trace Identifier Mismatch) alarm

J1 [STS Path]: High order path section trace/STS path section trace.

- Program a 16 or 64-byte identifier to set and check the expected trace
- Enable or disable the TIM (Trace Identifier Mismatch) alarm

• J2 [VT Path]: Low order path section trace

- Program a 16 or 64-byte identifier to set and check the expected trace
- Enable or disable the TIM (Trace Identifier Mismatch) alarm



To program or edit the received trace, tap on the applicable trace box and this will launch the QWERTY keyboard.



RX - JO [S]

[Go back to top](#) [Go back to TOC](#)

10.2.6 Payload Labels

This function is used to set the C2 and V5 Path Signal Labels which indicate the content of the High order and Low order VCs.




SDH/SONET Tools Menu

Tap the Payload Label button to display the payload label screens. There are dedicated tabs for Transmitted and Received payload labels and setups:

• **C2 [STS Path]: Path signal label**


- Specifies the mapping type in the STS-1n
- Program the TX or RX label by editing the hexadecimal value or by using the convenient drop-down menu selection
- For the RX label, you can enable or disable the Payload Mismatch (PLM) Alarm

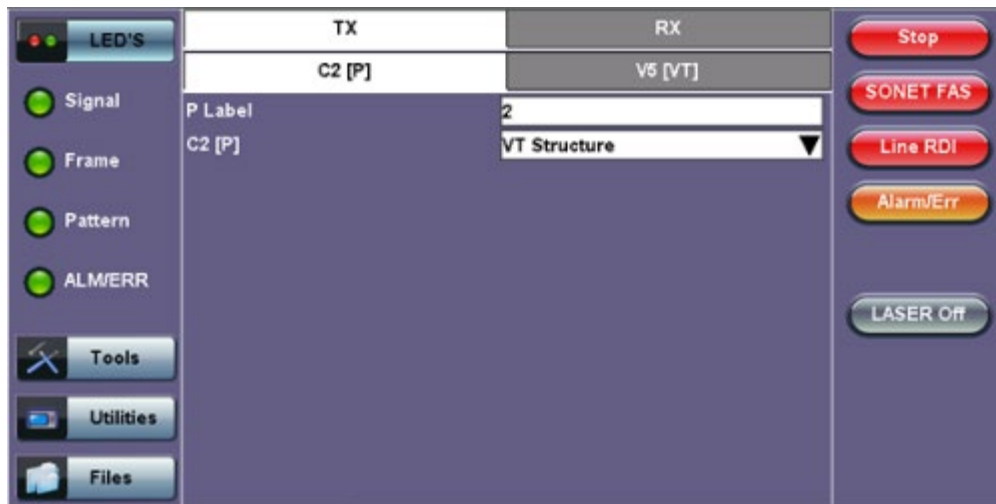

TX C2 [P]

- **V5 [VT Path]: Path signal label**

- Program the TX and RX label by editing the hexadecimal value or by using the convenient drop-down menu selection
- For the RX label, you can enable or disable the Payload Mismatch (PLM) Alarm

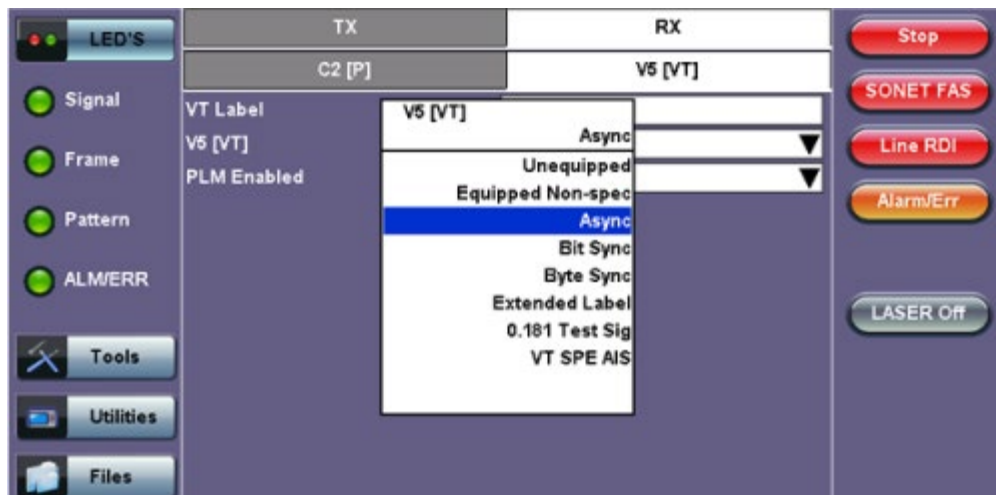

[Go back to top](#) [Go back to TOC](#)

10.2.7 APS Tasks

10.2.7.1 APS Timing

This function measures the Automatic Protection Switching (APS) limits of the network. APS applies only to the Multiplex sections of a SONET network and enables network elements to re-route traffic to a backup circuit in the event of network failure or problems. The protection mechanism is coordinated by the K1 and K2 bytes in the Multiplexer Section Overhead.

- **APS Standards**

The principles and protocols of APS in SONET networks are defined in ITU-T G.783 and G.841 and Bellcore GR-253 recommendations for Linear and Ring network architectures respectively. According to recommendations, the re-routing of the signal has to occur within 50ms. Protection switching is initiated as a result of one of the following conditions:


- “Hard” Failure (SF) condition – Loss of Signal (LOS), MS-AIS, $BER > 1 \times 10^{-3}$.
- “Soft” Failure (SD) condition – Signal degradation when BER exceeds a predetermined threshold. Normally over a provisioned range of 1×10^{-5} to 1×10^{-9} .



See section 6.7.5 Service Disruption Test (SDT) for APS (SDT) setup.

Tap the **APS** Testing button to display the APS testing screen shown below.


- **Start:** Press to begin the test.
- **APS Test Procedure:**
 - The test set should be connected to a tributary port of network element or transmission system to ensure that the switching time is measured for the service transported by the SONET network
 - Ensure that no errors or alarms are present on the transmission system because this will impact the measurement
 - The measurement will be triggered depending on the condition configured
 - The test set measures how long the AIS event remains present after the event is first recognized and will continue to measure the total disruption time in the event of multiple disruptions

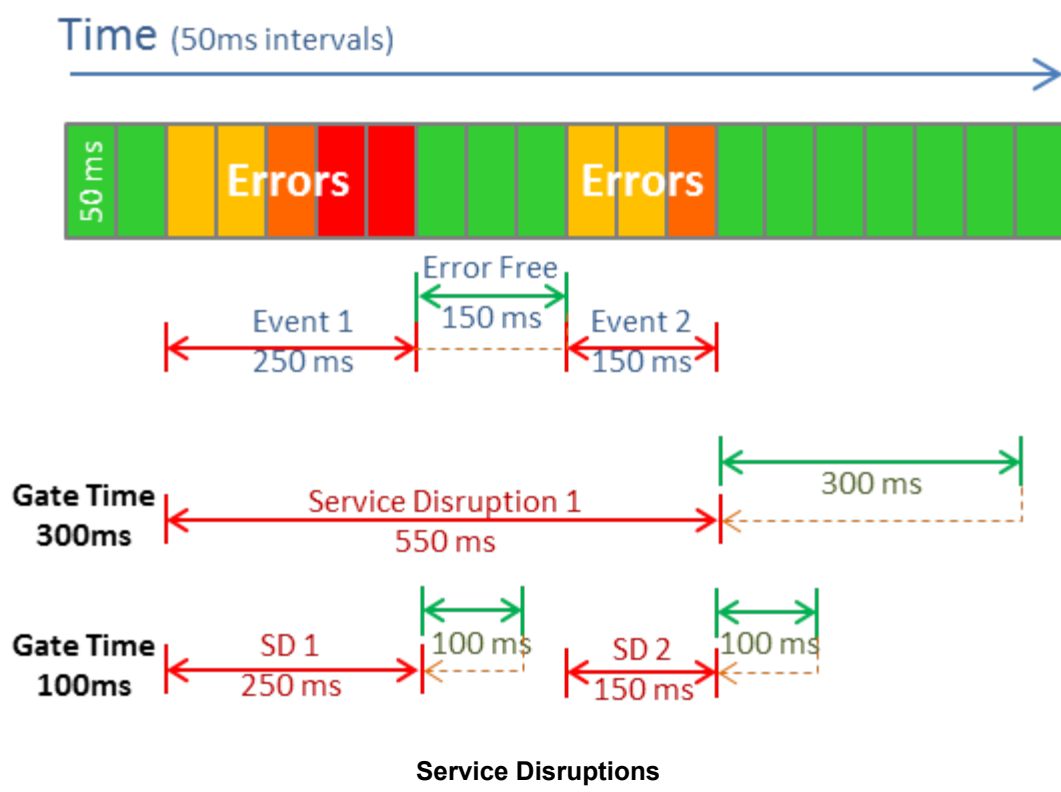

[Go back to top](#) [Go back to TOC](#)

10.2.7.2 APS Sequence


The associated K1/K2 sequence and received K1/K2 bytes may be captured.

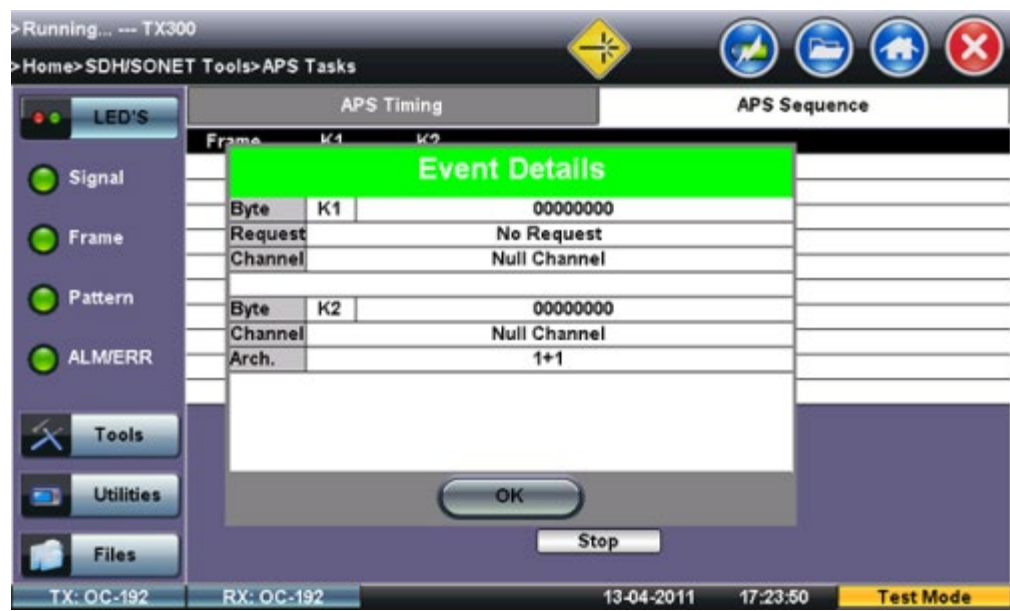

Event Details

[Go back to top](#) [Go back to TOC](#)

10.2.8 Tandem Connection Monitoring (TCM)

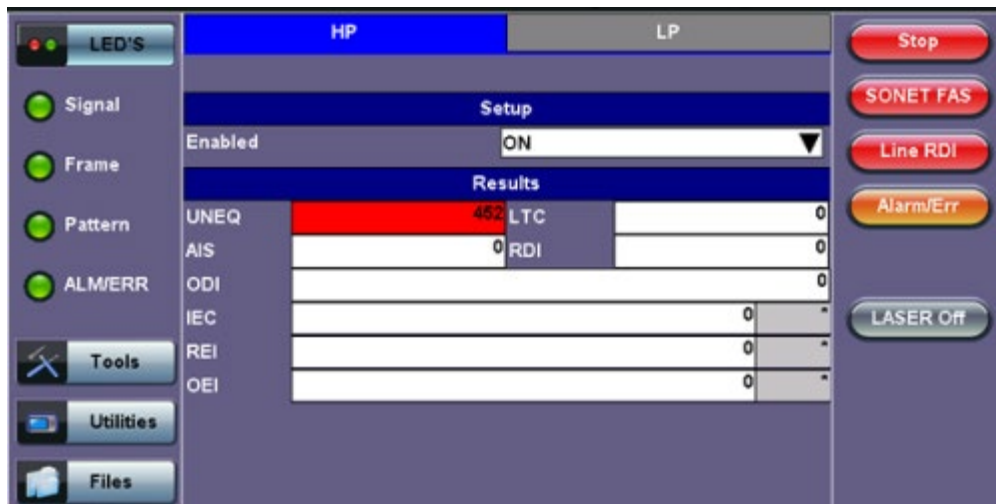

HP Setup

TCM Standards

The Tandem paths are defined in ITU recommendation G.707 Annex D and Annex E. ITU-T recommendation G.707 defines a tandem connection source and sink and describes the responses of each when defect (alarm) and error conditions are detected. Tandem connection maintenance signals are carried in the Z5 byte for STS-N and in the Z6 byte for VT's. These two bytes are structured similarly, but their functions are not identical.

N1 byte structure

b1	b2	b3	b4	b5	b6	b7	b8
IEC (IAIS)				TC-REI	OEI	TC-APId, TC-DI, ODI, reserved	

N2 byte structure


b1	b2	b3	b4	b5	b6	b7	b8
TC-BIP		'1'	IAIS	TC-REI	OEI	TC-APId, TC-RDI, ODI, reserved	

IEC:	Incoming Error Count. Indicates IAIS when set to '1110' (see below)
IAIS:	Incoming AIS alarm
TC-REI:	Tandem Connection Remote Error Indication
OEI:	Outgoing Error Indication
TC-APId:	Tandem Connection Access Point Identifier (16-byte message)
TC-RDI:	Tandem Connection Remote Defect Indication
ODI:	Outgoing Defect Indication
TC-BIP:	2-bit Bit Interleaved Parity for Tandem Connection

[Go back to top](#) [Go back to TOC](#)

10.2.9 Tributary Scan

This function requires VC12 or VT-1.5 mapping and allows you to quickly check the signal structure, trace identifier and the payload.

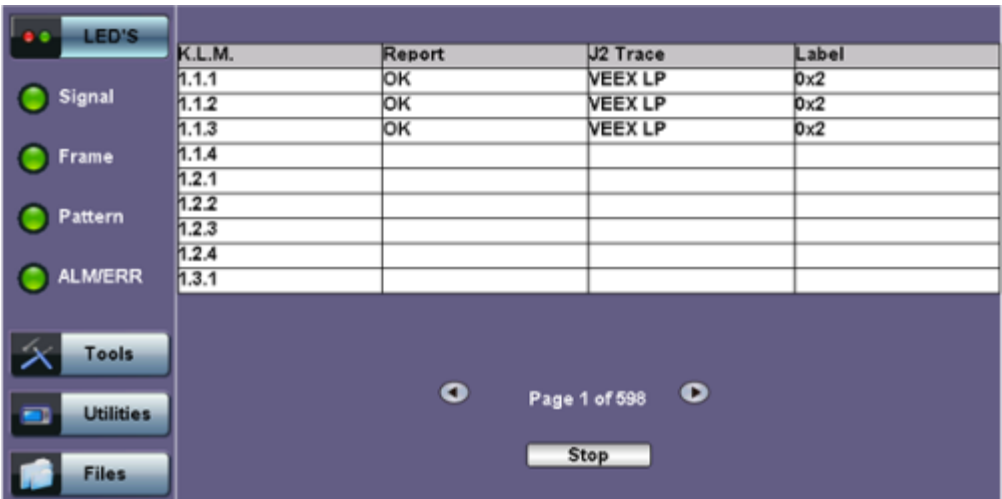

Tributary Scan


An important part of any Add Drop Multiplexer (ADM) installation process is the verification of the path routing. Considering that an STS-3 contains 84 x VT-1.5's and a STS-12 contains 336 x VT-1.5's checking each path manually can be very time consuming.

The test set automatically performs a sequential BER test on each SONET tributary (VT channel) - mapping can be via STS-N. The unit checks for any alarms in the received signal, the SONET structure, and for synchronization of the selected test pattern in all channels. The result for each channel is entered in a table:

- K.L.M.: ITU-T Tributary numbering scheme
- Report: Pass (OK)
- J2 trace: Corresponds to the VT trace being transmitted
- Label: Corresponds to the V5 byte signal label being transmitted

[Go back to top](#) [Go back to TOC](#)

10.2.10 Round Trip Delay

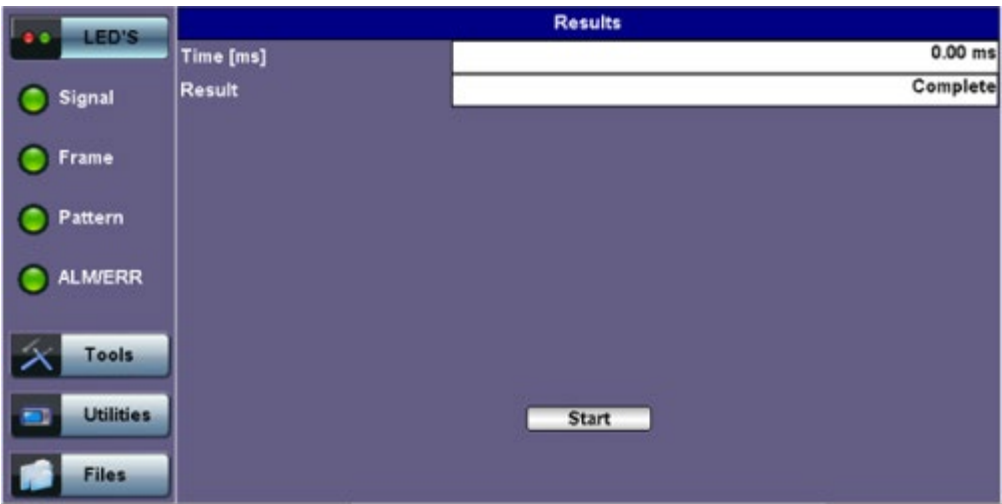

Round Trip Delay Results

The Round Trip Delay (Propagation Delay) measurement works by sending a test pattern. A errors is transmitted in the pattern. The time it takes for the error to reach the receiver is the propagation time through the network.

- Select SONET as TX/RX standard.
- View the Round Trip Delay of a looped back signal.
- Set check box on Setup RX pattern to Out-of-Service.


[Go back to top](#) [Go back to TOC](#)

10.2.11 Jitter and Wander

For more information on Jitter and Wander, please see the [Jitter and Wander Application](#) section.

[Go back to top](#) [Go back to TOC](#)

10.2.12 STS-1 Monitor

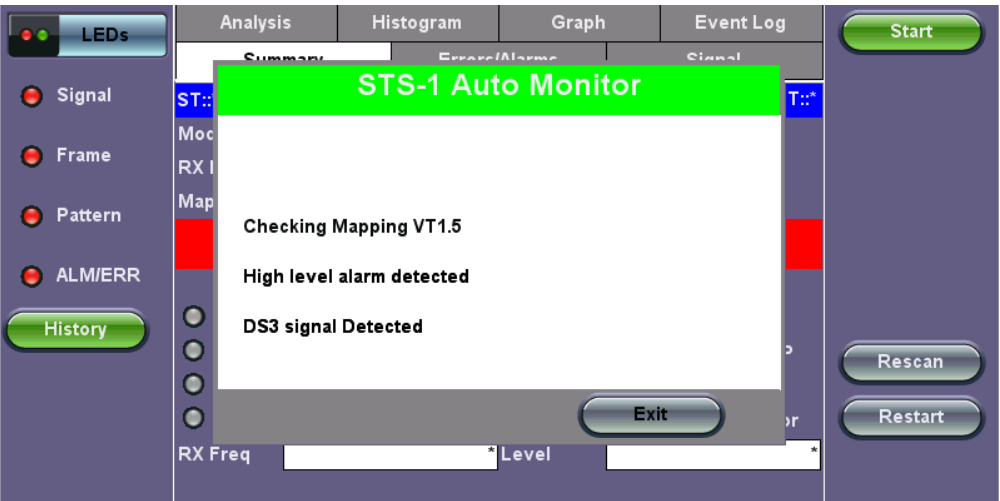

STS-1 Auto Monitor scanning the signal

STS-1 Auto Monitor mode automatically configures the unit to the incoming (receiving) signal structure. Once the signal structure is configured, tap **OK** to begin testing or **Exit** to exit the screen. The Summary tab displays SONET test results and measurements alarms, errors, or signal failure pertaining to the SONET signal and payload.

Refer to [Results: SONET](#) for more information on the test result tabs.


[Go back to top](#) [Go back to TOC](#)

10.2.13 SONET BERT

The Summary screen combines a simplified test interface setup and alarm/error monitor in a single convenient screen. For more complex scenarios refer to **Advanced Mode > Setup**.

Hierarchy, Interface, Payload, and test Pattern settings can be configured in the Summary tab using the drop-down menus. Signal status, error and alarms, and Pass/Fail indicators are also displayed.

Refer to [Results: SONET](#) for more information on the test result tabs.

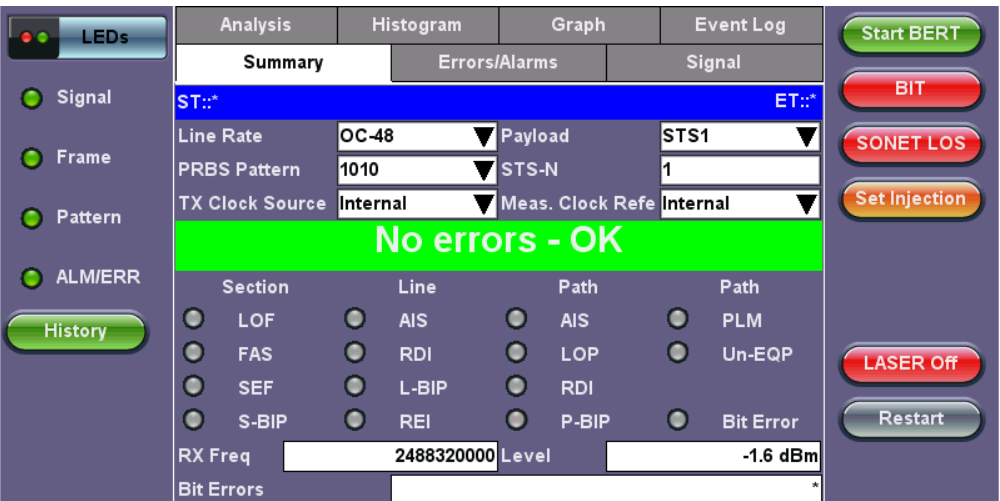

[Go back to top](#) [Go back to TOC](#)

11.0 PDH Tools

Accessing PDH Specific Tools

Tap on **Home (main menu) > PDH Tools**



PDH Menu


[Go back to top](#) [Go back to TOC](#)

11.1 E1 Pulse Mask

This function captures and analyzes E1 (2.048Mbps) pulse shape. The purpose of maintaining the correct pulse shape is to reduce inter-symbol interference – if the logic 1s and 0s cannot be detected by the receiver correctly, bit and code errors will result.

The pulse amplitude and overall shape are superimposed and compared with the ITU-T G.703 pulse conformance template. Telecommunications signals require specific load impedance for pulse mask compliance testing to be accurate. When high frequency pulses are transmitted down a transmission line, a portion of the pulse will be reflected when and wherever it encounters an impedance mismatch. The reflection is proportional to the impedance mismatch (i.e., the greater the mismatch, the greater the reflection of the pulse). To avoid reflections impacting the E1 measurement, the test set will terminate twisted pair cables with 120 ohms and coax cable with 75 ohms impedance. Note that 75 Ohm and 120 Ohm twisted pair cables each have different nominal amplitudes associated with them; for the 75 Ohm coax cable, the pulse amplitude must be $2.37V \pm 10\%$ while for 120 Ohm twisted pair cables, the pulse amplitude must be $3.0V \pm 10\%$.

According to the G.703 recommendation, E1 pulses need only be measured at the transmitter output, and are *not* required to meet the pulse template over a variety of cable lengths. This of course will not provide information on distortions caused by misalignment and other impairments of the line. The test set on the other hand can connect to a live system at the TX output port via a Protected Monitoring Point (PMP) or at the far-end of a transmission line. In either case, the signal will be attenuated or amplified as necessary to compensate for test point or cable attenuation characteristics.

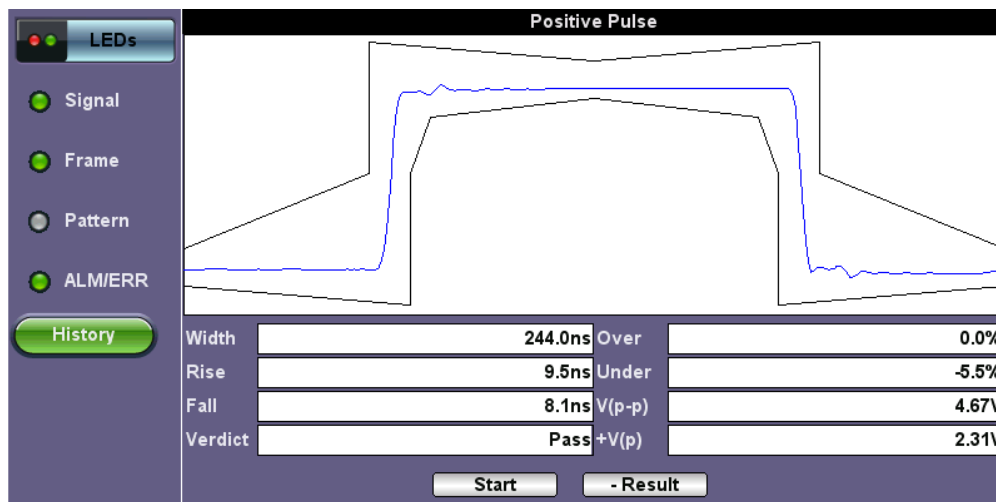


E1 Pulse Mask

[Go back to top](#) [Go back to TOC](#)

11.2 E3 Pulse Mask

This function captures and analyzes E3 (34.368Mbps) pulse shape. The purpose of maintaining the correct pulse shape is to reduce inter-symbol interference – if the logic 1s and 0s cannot be detected by the receiver correctly, bit and code errors will result.

The pulse amplitude and overall shape are superimposed and compared with ITU-T G.703 pulse conformance template. Telecommunications signals require specific load impedance for pulse mask compliance testing to be accurate. When high frequency pulses are transmitted down a transmission line, a portion of the pulse will be reflected when and wherever it encounters an impedance mismatch. The reflection is proportional to the impedance mismatch (i.e., the greater the mismatch, the greater the reflection of the pulse).

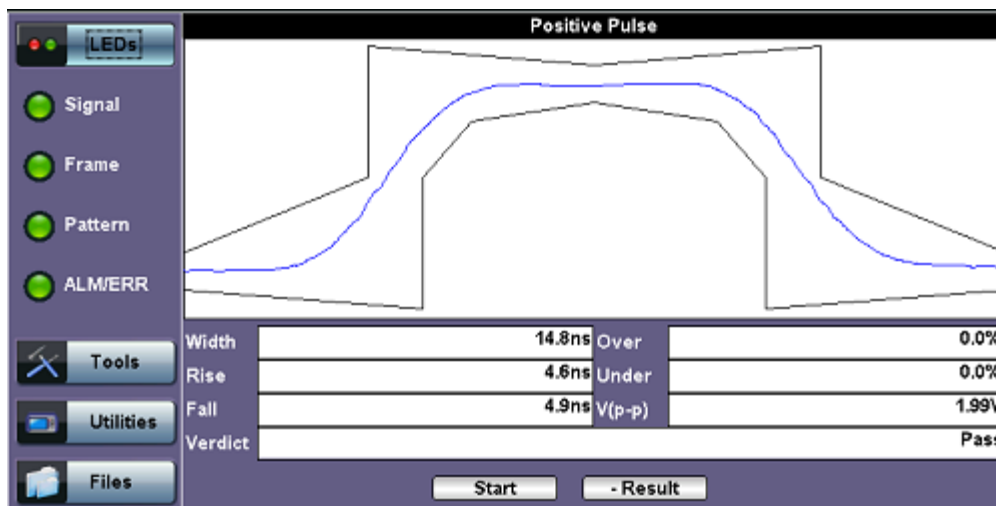

E3 Pulse Mask

[Go back to top](#) [Go back to TOC](#)

11.3 E1 Sa Bits & SSM QL (Clock Quality Level)

The Sa bits, or spare bits, are part of the NFAS (non-Frame Alignment Signal), which is sent at the beginning (time slot 0) of each odd frame.

1	2	3	4	5	6	7	8
E	1	A	Sa4	Sa5	Sa6	Sa7	Sa8

NFAS Word

- E = Ebit (Far-end CRC block error indication)
- A = Alarm (Remote Defect Indication)
- San = Sa bits

The Sa bits have multiple applications, including point-to point serial communications or messaging. One of their applications is to carry the Synchronization Signaling Message (SSM), which notifies the far end of the Clock Quality Level (QL) being used to generate the E1 signal and whether it could be used as a timing source for other signals. The SSM is a repetitive four bit code.

The test set allows monitoring of all Sa bits simultaneously. Users can manually edit/encode each of the Sa TX fields by tapping on the TX fields and using the keypad to enter any 8-bit sequence.

The SSM functionality is available for PCM31C, PCM30C, and PCM30 framing modes. When SSM is turned ON by selecting an Sa channel, users can select pre-encoded 4-bit codes to transmit in the selected channel. The SSM code is repeated continuously (displayed as an 8-bit word). If an invalid SSM QL sequence is manually entered, the test set will decode the first four bits.

By default, the SSM selection field is set to OFF (no TX encoding or RX decoding).

If SSM = SaN (N=4-8), users will be able to use the TX "Sync QL" field pull-down to encode the desired Quality Level.

- The default encoding is still "Do not use for Sync 1111"
- Selecting a Sync QL value for the TX will update the affected Sa Bits TX field
- Editing the affected Sa Bit Field will update the encoding label shown in Sync QL field

Sync Quality Level Values	
Quality Unknown	0000
Reserved	0001
G.811 PRC	0010
Reserved	0011
SSU-A	0100
Reserved	0101
Reserved	0110

Reserved	0111
SSU-B	1000
Reserved	1001
Reserved	1010
SETS/SEC	1011
Reserved	1100
Reserved	1101
Reserved	1110
Do not use for sync	1111

LEDs

Signal

Frame

Pattern

ALM/ERR

History

E1 Sa Bits / SSM Sync Quality Level

	RX	TX
SA4	11111111	11111111
SA5	11111111	11111111
SA6	11111111	01000100
SA7	11111111	11111111
SA8	11111111	11111111
SSM	SA6 ▼	
Sync QL	Do not use for sync 1111	SSU-A 0100 ▼

Start

Err Inj.

Alarm

Alarm/Err

E1 Sa Bits SSM QL

[Go back to top](#) [Go back to TOC](#)


11.4 Round Trip Delay

Refer to [Round Trip Delay in SDH/SONET Tools](#) for more information.

[Go back to top](#) [Go back to TOC](#)

11.5 E1 RX Data

The PDH E1 RX data shows received data and captures the current timeslots.

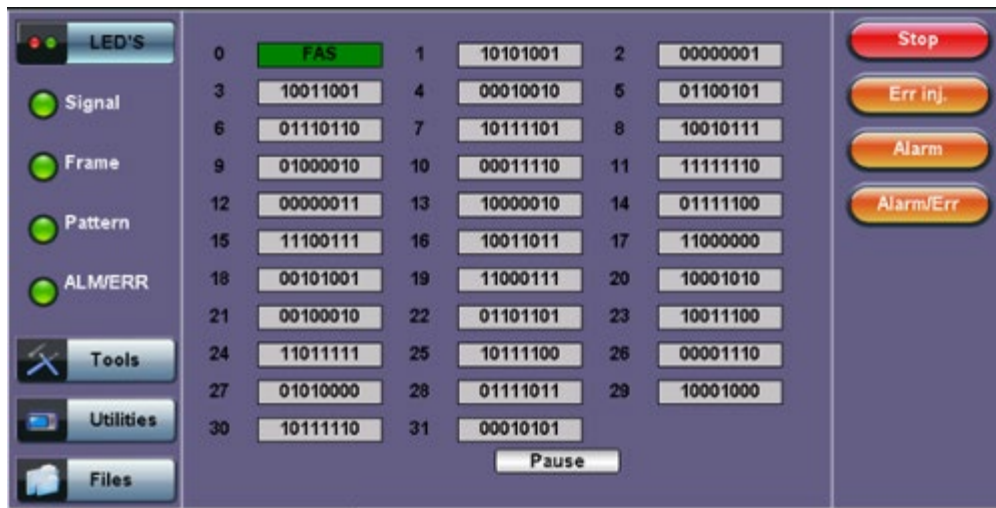


E1 RX Data

[Go back to top](#) [Go back to TOC](#)


11.6 V.54

The V.54 menu features the **Loop Up** and **Loop Down** functions for Loopback testing. To access V.54, set the payload to Nx64 (**Setup button (Home menu) > Signal > Payload > Rate > Nx64**).

Tap **Loop Up** or **Loop Down** to create or cancel a loopback.

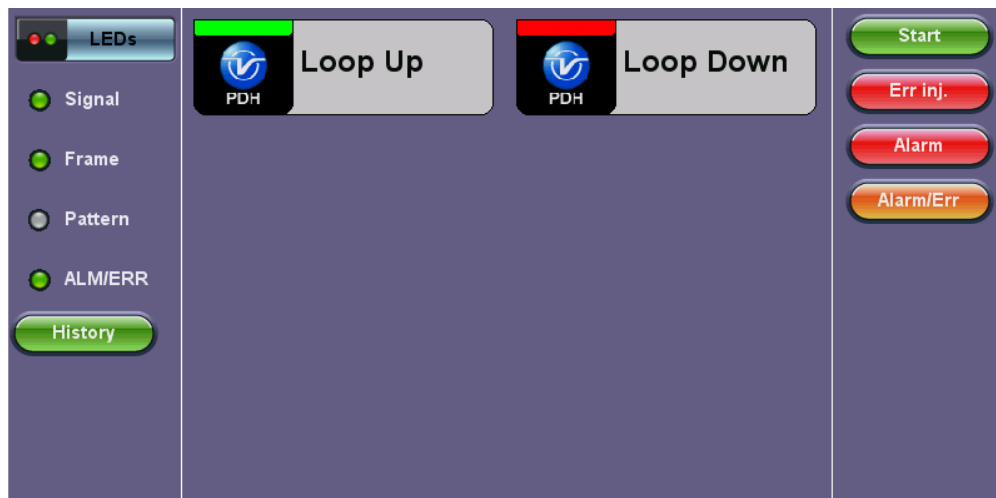

V.54 Menu

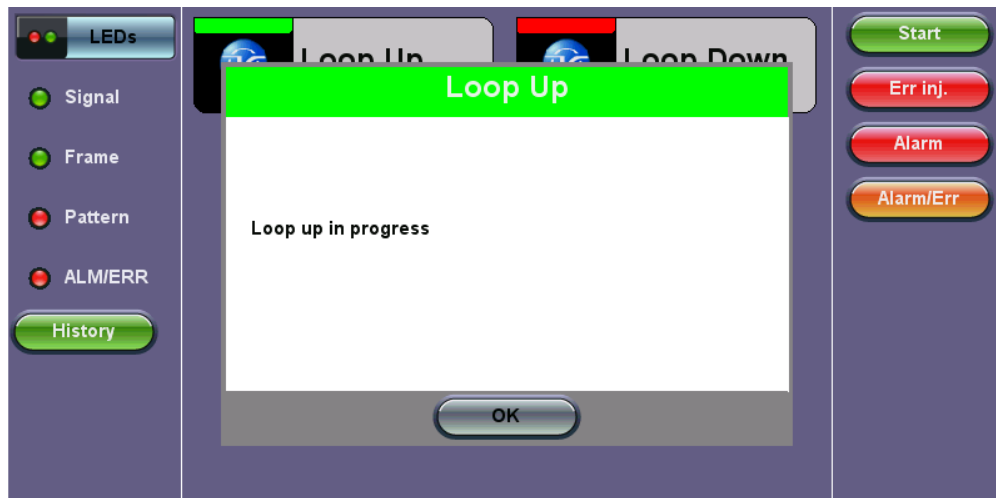

Loop Up Message

11.7 E1 ISDN PRI



E1 and DS1 ISDN PRI offer identical test options. Setup instructions for both E1 and DS1 are discussed below.

11.7.1 ISDN PRI Call

11.7.1.1 Setup (PRI Call Setup)

Configuration parameters for ISDN PRI Call are as follows:

Page 1

- **Mode:** TE, NT, or Monitor. In TE or NT mode, the test set can place up to 2 simultaneous data or audio calls on any primary line
 - **TE (PBX):** Terminating Equipment used when the test set is emulating customer equipment. TE generally uses the received signal to clock the transmitter.
 - **NT (CO):** Network Terminal is used when the test set is emulating an ISDN switch, such as DMS-100, 5ESS. NT generally uses the internal clock.
 - **Monitor:** Trace message details:
 - D Channel decodes help to verify that a call is successfully established, or determine why a call was not completed by examining the protocol cause values.
- **Call Control:** The Q.931 specification indicates which type of ISDN switch is to be tested. AT&T and NTI are only available for DS1.
 - AT&T relates to the 5ESS switch
 - NTI relates to the Northern Telecom DMS-100 switch
 - ETSI is the ETSI standard
- **D Channel:** Designates the time slot to transmit D Channel messages. The D Channel decoder helps to verify that a call is successfully established, or determine why a call was not completed by examining the protocol cause values.
- **My num type:** Unknown, International, National, or Local
- **My num plan:** Unknown, Telephony, or Private
- **My phone#:** Tap on the box and enter the phone number using the alphanumeric keyboard

LEDs	Result	Multi Call	Supp. Scan	DTMF	DBackup
Signal	Setup	Signal	Trace	Call	
Frame	Mode	TE			
Pattern	Call Control	ETSI			
ALM/ERR	D Channel	16			
History	My num type	Local			
	My num plan	Telephony			
	My phone#				

Page 1 of 2

Start
Err inj.
Volume 1
Call 1
Call 2

ISDN Setup (Page 1)

Page 2

- **Caller ID:** Blocked/Allow.
- **Call Answer:** Prompt, Accept or Cancel.
 - **Prompt:** Prompts the user to answer or reject incoming calls. Selecting Prompt displays an answer and reject button on the Call tab.
 - **Accept:** Automatically answers incoming calls.
 - **Cancel:** Automatically rejects incoming calls.
- **Sub Addr Type:** NSAP or User.
- **My sub#:** Tap on the box and enter the sub address number using the alphanumeric keyboard.
- **Codec Type:** A law or U law.
- **L2 Filter:** Turn ON or OFF layer 2 filter. Turning on the filter prevents layer 2 messages from displaying in the captured trace.
- **Idle Code:** Code to be transferred on unused channels. Tap on the box and use the alphanumeric keyboard to enter the code.
- **Line 1 Intf Id:** Line interference ID. Tap on the box and enter the line interference ID using the alphanumeric keyboard.

LEDs	Result	Multi Call	Supp. Scan	DTMF	DBackup
Signal	Setup	Signal	Trace	Call	
Frame	Caller ID	Allow			
Pattern	Call answer mode	Prompt			
ALM/ERR	Sub Addr Type	User			
History	My sub#				
	Codec Type	A law			
	L2 Filter	Off			
	Idle Code	01010100			
	Line 1 Intf Id	0			

Page 2 of 2

Start
Err inj.
Volume 1
Call 1
Call 2

Setup (Page 2)

The symbols RDY and OOS are port status indicators. Below each status is the port number.

Status

Description



OOS indicates that the port is **Out of Service** and will be unable to run any tests. If OOS displays on the unit, check for proper connection between the physical ports and cables and that both units' setup screens are configured correctly. The port number in this example is 2.



RDY indicates that the test port is **Ready** for use.
The port number in this example is 1.

[Go back to top](#) [Go back to TOC](#)

11.7.1.2 Signal

- **Line Code:** HDB3 or AMI
- **Clock Source:** Internal, External, Rx, or Offset. If the test set is in TE mode, select Rx to receive timing signals from the master clock
- **Termination:** Terminated, Monitor, or Bridge
- **DS1/E1 Framing:** Unframed, PCM31, PCM31C for E1; SF or ESF for DS1.

LEDs	Result	Multi Call	Supp. Scan	DTMF	DBackup
Signal	Setup	Signal	Trace	Call	
Frame	Line Code			HDB3	
Pattern	TX Clock Source			RX	
ALM/ERR	Termination			Terminated	
History	E1 Framing			PCM31C	

Signal

Main Setup

- Connect to the CPE or Network.
- Connect headsets to the 2.5mm audio jack port (or use the 3.5mm to 2.5mm headset adaptor)
- Select Call Control protocol type
- Select the emulation type (TE or NT)

[Go back to top](#) [Go back to TOC](#)

11.7.1.3 Call - Voice and 3.1K Audio Setup

Once the unit is ready, as indicated by the **RDY** status symbol, the **Call** buttons will appear. Press **Call** to bring up the Call Setup menu. Voice and 3.1K Audio calls follow the same setup procedure. Both are outlined below:

- **Call Type:** Select Voice or 3.1K Audio
- **Channel**
- **Numbering Type:** Unknown, International, National, or Local
- **Numbering Plan:** Unknown, Telephony, or Private
- **Dial To:** Tap on the corresponding box and use the alphanumeric keypad to enter the number of the receiving line.
- **Sub Addr Type:** NSAP or User
- **Sub Addr:** Tap on the corresponding box and use the alphanumeric keypad to enter a subaddress

LEDs	Call	Pattern
Signal	Call Type	Voice
Frame	Channel	1
Pattern	Numbering Type	Local
ALM/ERR	Numbering Plan	Telephony
	Dial To	
	Sub Addr Type	User
	Sub Addr	
History		
		Call
		Cancel

Call - Voice Setup

Press the **Call** button to initiate a call to the receiving number. If Prompt was selected for Call Answer in the Setup tab, the unit receiving the call will ring and the user can press **Answer** or **Reject** to accept or reject the call. The caller can tap **Hangup** on the transmitting unit while the call is in progress. Use the left and right arrows below **Volume** to adjust ringing and call volume.

LEDs	Result	Multi Call	Supp. Scan	DTMF	DBackup
Signal	Setup	Signal	Trace	Call	
Frame	My number:				
Pattern	Call 1: OFF HOOK TS: 1 Line: 1 Delivered				
ALM/ERR	Voice -> Name				
History	Call 2: ON HOOK				
	Volume 1				
	Hangup 1				
	Call 2				

Call In Progress

Trace: ISDN Protocol Decode

D-Channel Decodes help to verify that a call is successfully established or determine why a call was not completed by examining the protocol cause values. We can monitor the release cause code in Layer 3 (Q.931) messages on the D-channel in both terminate and monitor modes. Layer 2 results give technicians the ability to check link and D-channel status, verify LAPD frames and check utilization rates. Following link establishment, Layer 3 decodes allow technicians to verify such factors as call state, who made or dropped the call, why the call was dropped, where the call is being carried (Interface ID/B-Channel), and call types.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Result	Multi Call	Supp. Scan	DTMF	DBackup
Setup	Signal	Trace	Call	
#	Direction	Time	Message	
1	TX1	21/04/17 10:42:40	SABME	
2	TX1	21/04/17 10:42:41	SABME	
3	TX1	21/04/17 10:42:42	SABME	
4	TX1	21/04/17 10:42:43	SABME	
5	TX1	21/04/17 10:42:44	SABME	
6	TX1	21/04/17 10:42:45	SABME	
7	TX1	21/04/17 10:42:46	SABME	
8	TX1	21/04/17 10:42:47	SABME	
9	TX1	21/04/17 10:42:48	SABME	

Clear

◀

▶

Page 1 of 37

Start

Err inj.

◀

Volume 1 ▶

Call 1

Call 2

ISDN Trace

The image is a screenshot of a mobile application interface. At the top, there is a navigation bar with several tabs: 'LED', 'Result', 'Multi Call', 'Supp. Scan', 'DTMF', and 'DBackup'. Below this, on the left side, is a vertical menu with options: 'Signal', 'Frame', 'Pattern', 'ALM/EF', and 'History'. The 'History' option is highlighted with a green background. The main content area is titled 'Message Details' in a large, bold, black font. Below the title, there is a table with two columns: 'Direction' and 'Time'. The 'Direction' column contains the text 'TX' and the 'Time' column contains '21/04/17 10:42:40'. Below the table, there is a section labeled 'Hex: 00 01 7f' followed by three lines of text: 'SAPI=0 Call control procedures Command', 'TEI=0 Non-automatic TEI assignment user equipment', and 'Set Asynchronous Balance Mode Extended P/F=1'. At the bottom of the screen, there is a grey bar with a central 'OK' button. On the right side of the screen, there are several buttons: 'Start', 'Err inj.', 'Volume 1', 'Call 1', and 'Call 2'. The 'Volume 1' button has a play icon next to it.

Message Details

[Go back to top](#) [Go back to TOC](#)

11.7.1.4 Call - Data Setup

Press the **Call** button to bring up the Call Setup menu. Data calls follow the same setup procedure as voice calls but with a few minor differences.

- Fill out the call setup as described in [Call - Voice and 3.1K Audio Setup](#), but select Data as the Call Type.
- Select a **Bearer Rate** in the call setup options.
- Press the **Pattern** tab and select a test pattern to be transmitted on the B channel during data calls.



Test pattern is only applied when call button is pressed.

Call		Pattern
Call Type	Data ▼	
Bearer Rate	64K ▼	
Line	LINE1 ▼	
Channel	1	
Numbering Type	Local ▼	
Numbering Plan	Telephony ▼	
Dial To	4547	
Sub Addr Type	NSAP ▼	
Sub Addr		

LEDs

☒ Signal

☒ Frame

☐ Pattern

☒ ALM/ERR

Tools

Utilities

Files

Call

Cancel

Call - Data Setup

Call	Pattern
TX	
PRBS Pattern	2 ³¹ -1 ▼
Invert	OFF ▼
RX	
PRBS Pattern	2 ¹⁵ -1 ▼
Invert	OFF ▼

LEDs

☒ Signal

☒ Frame

☐ Pattern

☒ ALM/ERR

Tools

Utilities

Files

Call

Cancel

Pattern Setup

Press **Call** and the other unit should ring.

[Go back to top](#) [Go back to TOC](#)

11.7.1.5 Data Call BERT Results (Result tab)

After successfully placing a data call, the BER is available. The Result tab presents the measurement parameters specified in G.821. Only DATA-64/56 and Nx64 Data Call Type in the CALL mode can give BER measurements. When viewing BER measurements, verify that both the PAT SYNC LED and the appropriate framing LED are green. These two LEDs signify that the patterns and framing match for the transmitting and receiving patterns.

PDH and SDH Results are discussed in [Results: PDH](#) and [Results: SDH](#), respectively.

LEDs	Setup	Signal	Trace	Call	
	Result	Multi Call	Supp. Scan	DTMF	DBackup
	Errors/Alarms	Signal	Analysis		
☒ Signal ☒ Frame ☐ Pattern ☒ ALM/ERR History	PDH : [2M] ET: 00/00:03:25 LOS 0 AIS 0 LOF 0 LOMF 0 RDI 0				
◀ Page 1 of 3 ▶					

Volume 1

◀ 1 ▶

Data Call - BERT - Errors/Alarms

LEDs	Setup	Signal	Trace	Call	
	Result	Multi Call	Supp. Scan	DTMF	DBackup
	Errors/Alarms	Signal	Analysis		
☒ Signal ☒ Frame ☐ Pattern ☒ ALM/ERR History	Frequency 2M current (bps) 2047999 Offset (ppm): -0.5 Min (ppm): -0.5 Max (ppm): 0.0 Clock slip ref. OK Clock slip 90 Level V(p-p) 4.7 V				
◀ Page 1 of 1 ▶					

Volume 1

◀ 1 ▶

Data Call - BERT - Signal

LEDs	Setup	Signal	Trace	Call	
	Result	Multi Call	Supp. Scan	DTMF	DBackup
	Errors/Alarms	Signal	Analysis		
☒ Signal ☒ Frame ☐ Pattern ☐ ALM/ERR Tools Utilities Files	G.821 ES 0 % SES 0 % AS (s) 0 UAS (s) 333 EFS Result				
◀ Page 1 of 1 ▶					

Volume 5

◀ 5 ▶

Data Call - BERT - Analysis

[Go back to top](#) [Go back to TOC](#)

11.7.1.6 Supplementary Service Scan

In ETSI protocol, a Supplementary Service Scan scans a line to determine which of a variety of supplementary services are available on it.

Supplementary Scan Setup

SubAddress Type:

- NSAP to select the Network Service Access Point subaddress
- User to use a subaddress defined by a user (no standard applied)

When the test is finished, the screen displays a list of these services:

Supplementary Scan Results

- **CLIP**: Calling Line Identification Presentation - presents the Calling Party Number to the called user.
- **CLIR**: Calling Line Identification Restriction - prevents the Calling Party Number from showing to the called user.
- **CFU**: Call Forwarding Unconditional - diverts a received call to a specified different number.
- **COLP**: Connected Line Identification Presentation - the answering party's number is conveyed to the calling party.
- **COLR**: Connected Line Identification Restriction - allows the connected subscriber to stop COLP from operating.
- **CFB**: Call Forwarding Busy - Calls are forwarded to a specified number only when the subscriber's (called party) number is busy.
- **SUB**: Sub Address - a digit is added to an incoming call to specify an extension.
- **MSN**: Multiple Subscriber Number - multiple full numbers are assigned to one BRI line.
- **CFNR**: Call Forwarding No Reply - Calls are forwarded to a specified number only when the subscriber (called party) does not pick up the line in a specified amount of time.
- **DDI**: Direct Dialing In - adds a number of telephone number to a circuit which can be used to dial that BRI (common use is a company number with individual 4 or 4 digit extension numbers that can be dialed)
- **HOLD**: Call Hold - the user may interrupt a call, then reestablish it later. Interruption frees the associated B-channel.

- **UUS:** User to User Signaling - allows a user to send an Information message in the Setup, Alerting, or Connect message on the D-channel, without connecting the call; the message shows on the ISDN phone display.
- **TP:** Terminal Portability; the ability to suspend and reconnect a call; for example, to move a phone from one plug to another.
- **AOC-D/E/S:** Advice of Charge - Determines when charging information is available to the served user; during the call, when the call is terminated, when the call is established.
- **MCID:** Malicious Call Identification - the called party, on a per call basis, requests the network to register the called party phone number, the calling party number, and the date and time of the calls.
- **CW:** Call Waiting - informs a user of an incoming call which has no B-ch available; user may accept, reject, or ignore.
- **CUG:** Closed User Group; a private network which restricts communication between members and nonmembers.

[Go back to top](#) [Go back to TOC](#)

11.7.1.7 Multi-Call Tests

In E1 and DS1 ISDN test modes, the Multi-Call tab offers different ways to test more than one channel or destination number, in sequence or parallel, to stress the whole PRI link or to verify that numbers and services are routed correctly. These types of tests require an auto answer device or function to terminate the test calls at the far end (e.g. just answer, answer with a voice message, or answer with a data loop).

Type: Single Number (Single PRI destination)

This mode allows users to place multiple calls to a single PRI destination (same phone number), with each call placed in different channels, in sequential or parallel mode.

Page 1 of 2

- **Mode:** Sequential or Parallel calling. In Sequential mode, the test set places test calls one channel at a time, increasing the time slot number, until all (or a group of) PRI channels have been tested. The Parallel mode places calls in all (or a group of) PRI channels at once and keeps them active until the test is stopped.
- **Call Type:** Voice.
- **Numbering Type:** Local, National, International, Unknown.
- **Numbering Plan:** Telephony, Private, Unknown.
- **Dial Number:** Enter destination phone number.

Page 2 of 2

- **Ring Wait (sec):** Number of ringing seconds before abandoning the call.
- **Duration (sec):** Duration of the test call once it has been answered. In sequential mode, once this time has elapsed, the test set will hang up.
- **Start B Channel:** To limit the time slots (channels) to be tested, users can program a block of time slots to be used for the test. Enter the first channel to be tested.
- **Stop B Channel:** To limit the time slots (channels) to be tested, users can program a block of time slots to be used for the test. Enter the last channel to be tested.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Setup

Signal

Trace

Call

Result

Multi Call

Supp. Scan

DTMF

DBackup

Setup

B Map Ln1

Result

Type

Mode

Call Type

Numbering Type

Numbering Plan

Dial Number

Single Number

Parallel

Voice

Local

Telephony

4547

Start

Page 1 of 2

Stop

Err Inj.


Volume

1

Call 1

Call 2

Multi Call Setup (Page 1)

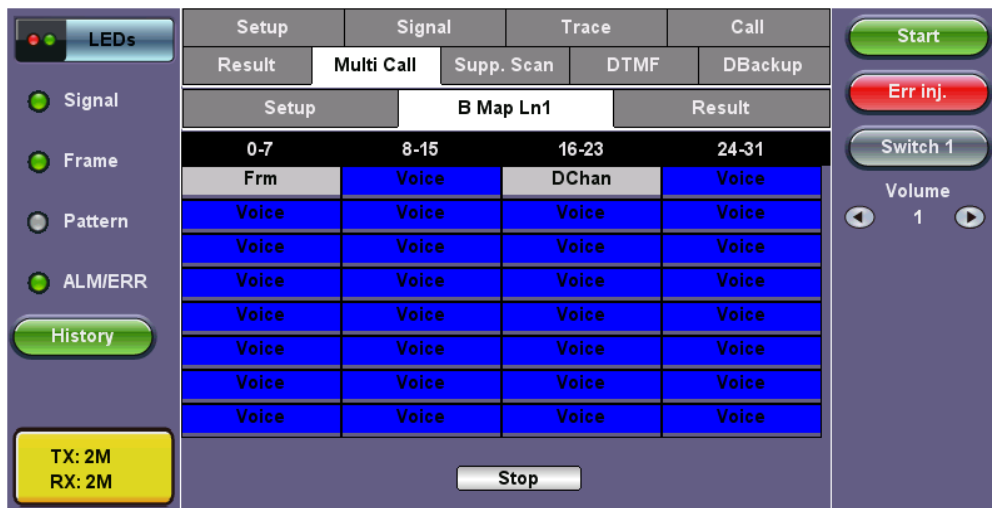


Parallel Call Results

Type: Number Script (Multiple Destinations)

This mode displays a phone number list to place calls to multiple PRI or BRI destinations, using specific channels and services to test routing and bearer services capabilities. The calls are placed in sequence, following a list created with ReVeal RXTS. The test set requires the phone list to perform this type of test.

- **Ring Wait (sec):** Number of ringing seconds before abandoning the call.
- **Duration (sec):** Duration of the test call, once it has been answered. In sequential mode, once this time has elapsed, the test set will hang up.

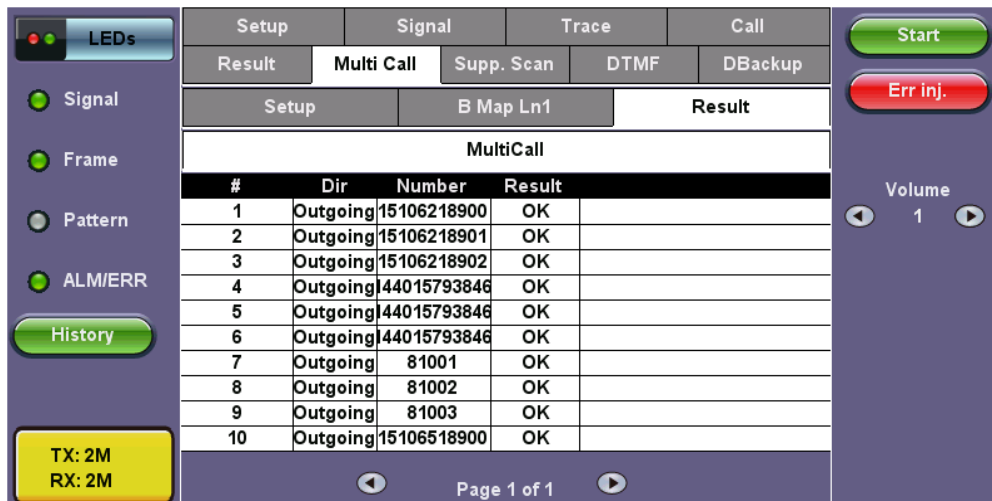


Phone Number Script Results

Creating a Phone Number List

Use VeEX ReVeal RXTS PC software's ISDN Phone Number List function (**Home > Profiles > ISDN Phone Number List**) to create a customized Number List. After creating the list, use the **Upload** function (**Home > Profiles > Upload**) to transfer it to test sets. The list can contain multiple destination phone numbers with individual characteristics:

- **Call Type:** Voice, Data64K, Audio3.1K
- **Number Type:** Local, National, International, Unknown
- **Number Plan:** Telephony, Private, Unknown
- **B Channel:** Specific time slot to be used for the call

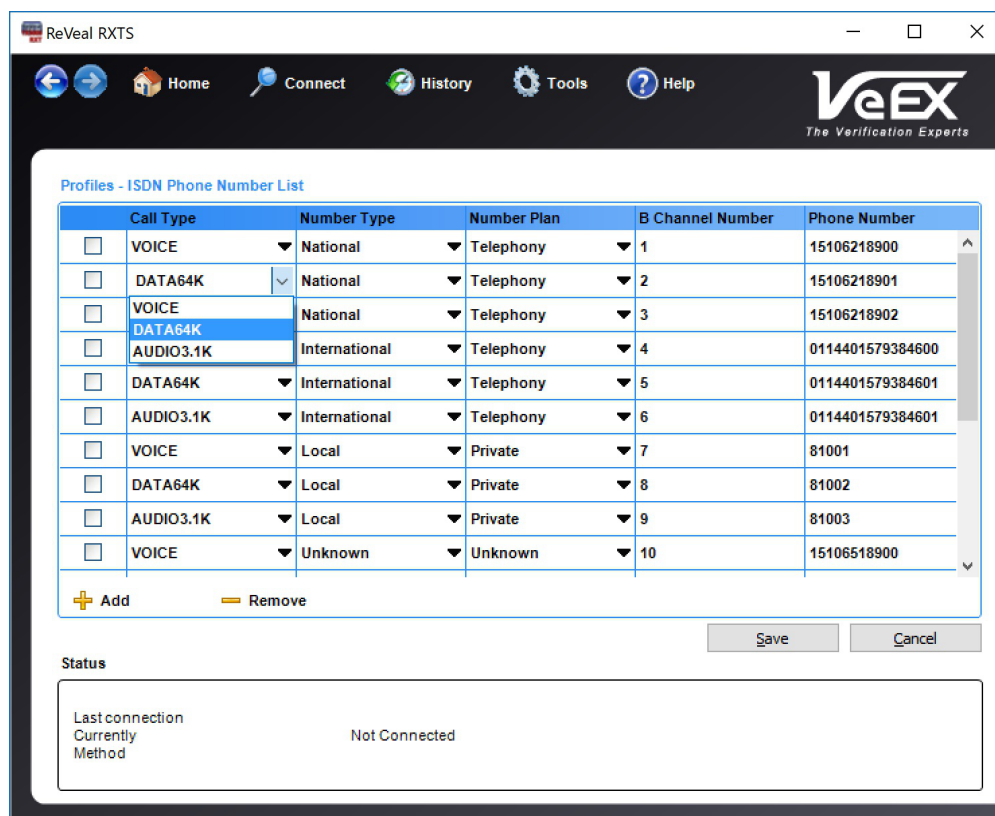


Multi Call List Using ReVeal RXTS

[Go back to top](#) [Go back to TOC](#)

11.7.1.8 DTMF

During the call DTMF tones can be transmitted.

To transmit DTMF tones, access the DTMF tab. An alphanumeric keypad will be displayed. DTMF tones are transmitted as soon as they are typed.

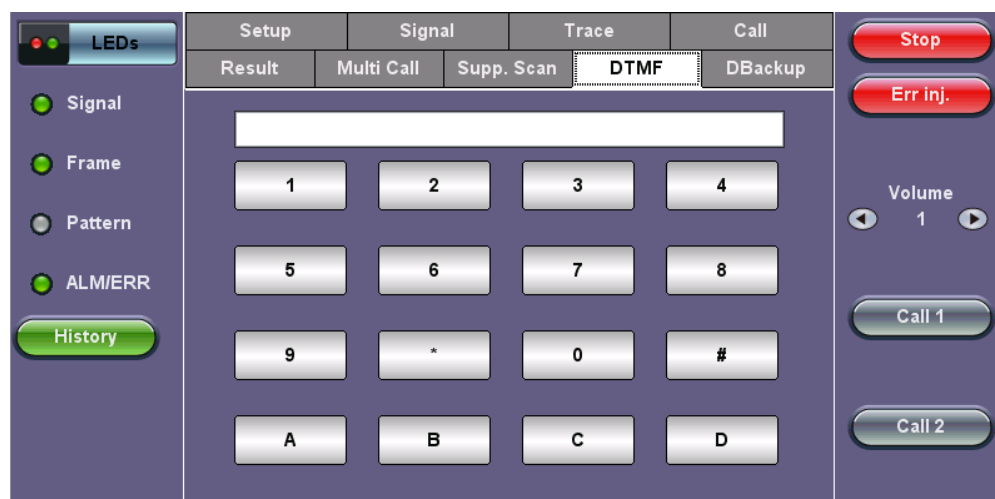

DTMF

[Go back to top](#) [Go back to TOC](#)

11.7.2 ISDN PRI Monitor



VF Testing

Do not attempt to enter VF Tasks if the Frame LED is not green.

Green LEDs indicate that the framing found on the received signal matches the framing selected in the Setup screen.

It is impossible to talk, listen, or perform other channelized functions in the absence of frame synchronization, since channels can be identified only within a framed signal.

Setup:

- **Time Slot:** Channel to test for both transmitting and receiving. Input a number from 1 - 31.
- **Mode:** Talk or send a tone on the transmit signal. It is possible to transmit audio data from the external headset into selected timeslot.
- **Code:** u-Law or A-Law.
- **Transmitted Frequency (Tone only):** 50 to 3950Hz.
- **Transmitted Level (Tone only):** -60 to 3dBm.
- **Programmable ABCD:** Change the signalling bits transmitted with the associated transmit channel. These bits will be transmitted only if the test set is using MFAS (PCM-30) framing, found in Setup > Payload. Pressing IDLE(1001), SEIZE(0001), User (manually set) will place that signal onto the A/B/C/D position. D: Manual edit ABCD (User) or IDLE, SEIZE.

Results:

- Measure signal frequency and level in selected timeslot
- Listen to the voice channel in selected timeslot via external headset
- ABCD: View the received Channel Associated Signalling System (CAS) bits
- Data: View the live 8-bit channel data as it is received from the selected channel
- ABCD bits monitor and view data in selected T/S channel

[Go back to top](#) [Go back to TOC](#)

11.9 Jitter and Wander

For more information on Jitter and Wander, please see [13.0 Jitter and Wander Application](#).

[Go back to top](#) [Go back to TOC](#)


12.0 DS1/3 Tools

Accessing DS1 and DS3 Specific Tools


Tap on **Home (main menu)** > **DS3/1 Tools**



DS1/3 Tools Home Menu (International version)

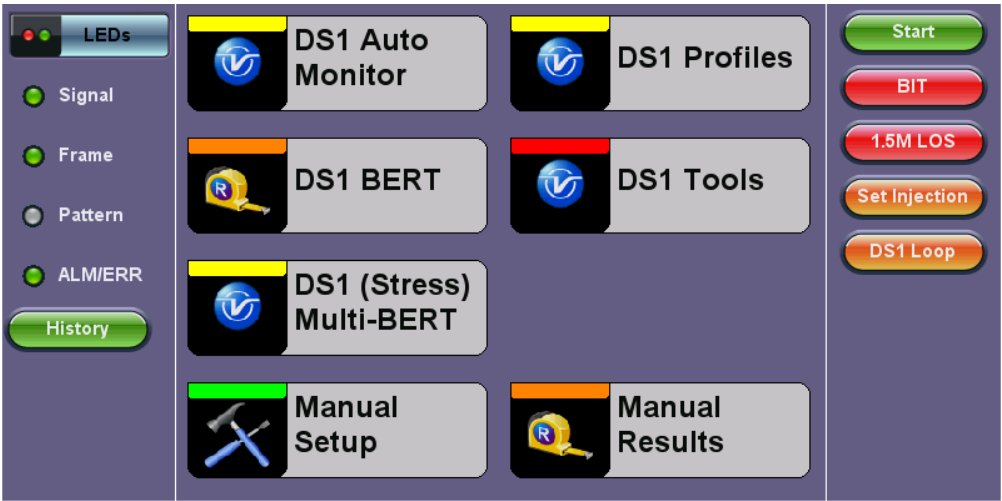

DS1 Tools Home Menu (USA version)

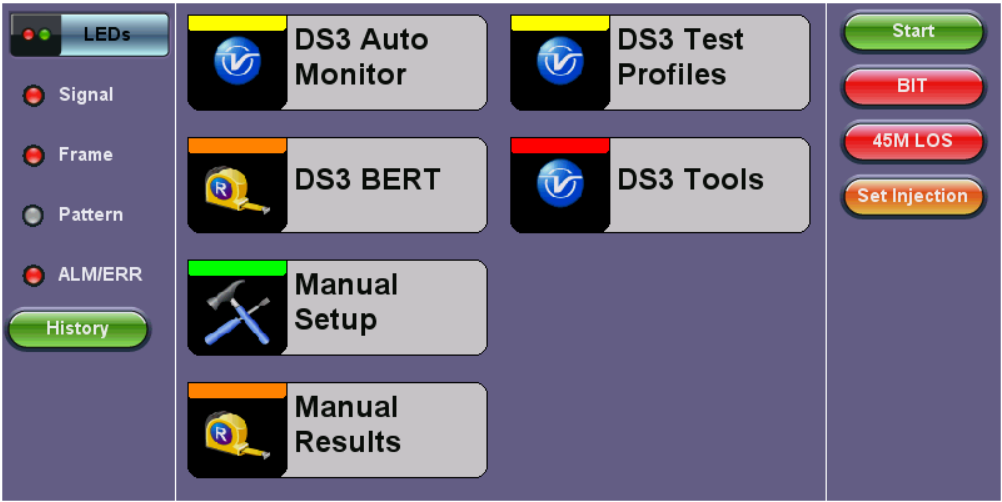

DS3 Tools Home Menu (International version)


The user interface (GUI) appearance can be changed in **>Utilities > Settings > Global >General Settings >User Interface**. The simplified USA menus and function are customized for the North American (T1, T3 and SONET) market.

[Go back to top](#) [Go back to TOC](#)

12.1 DS1 Pulse Mask

This function captures and analyzes DS1 (1.544Mbps) pulse shape. The purpose of maintaining the correct pulse shape is to reduce inter-symbol interference – if the logic 1s and 0s cannot be detected by the receiver correctly, bit and code errors will result.

The pulse amplitude and overall shape are superimposed and compared with the Telcordia TR-TSY-000499 and ITU-T G.703 pulse conformance template. Telecommunications signals require specific load impedance for pulse mask compliance testing to be accurate. When high frequency pulses are transmitted down a transmission line, a portion of the pulse will be reflected when and wherever it encounters an impedance mismatch. The reflection is proportional to the impedance mismatch (i.e., the greater the mismatch, the greater the reflection of the pulse).

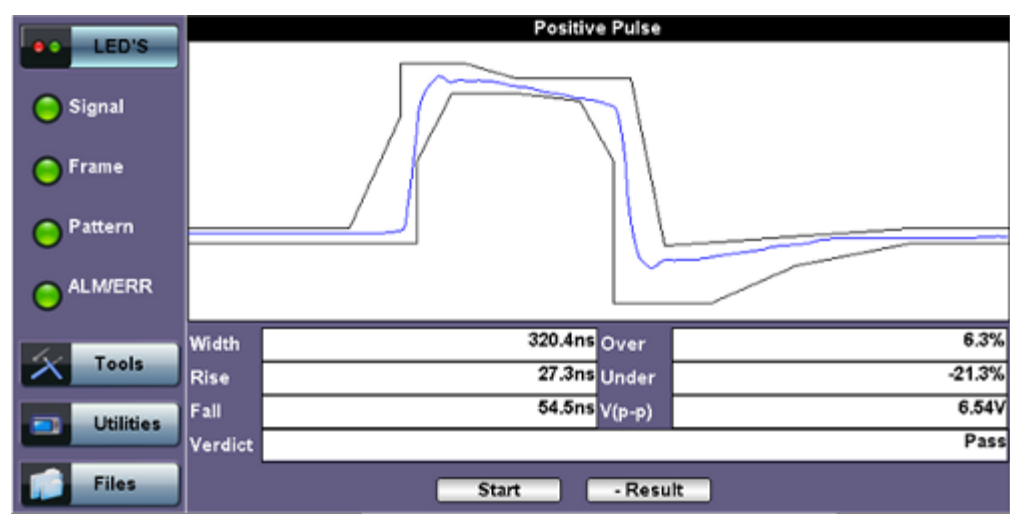


DS1 Pulse Mask

[Go back to top](#) [Go back to TOC](#)

12.2 DS3 Pulse Mask

This function captures and analyzes the DS3 (44.736Mbps/s) pulse shape. The purpose of maintaining the correct pulse shape is to reduce inter-symbol interference – if the logic 1s and 0s cannot be detected by the receiver correctly, bit and code errors will result.


The pulse amplitude and overall shape are superimposed and compared with the Telcordia TR-TSY-000499 and ITU-T G.703 pulse conformance template. Telecommunications signals require specific load impedance for pulse mask compliance testing to be accurate. When high frequency pulses are transmitted down a transmission line, a portion of the pulse will be reflected when and wherever it encounters an impedance mismatch. The reflection is proportional to the impedance mismatch (i.e., the greater the mismatch, the greater the reflection of the pulse).

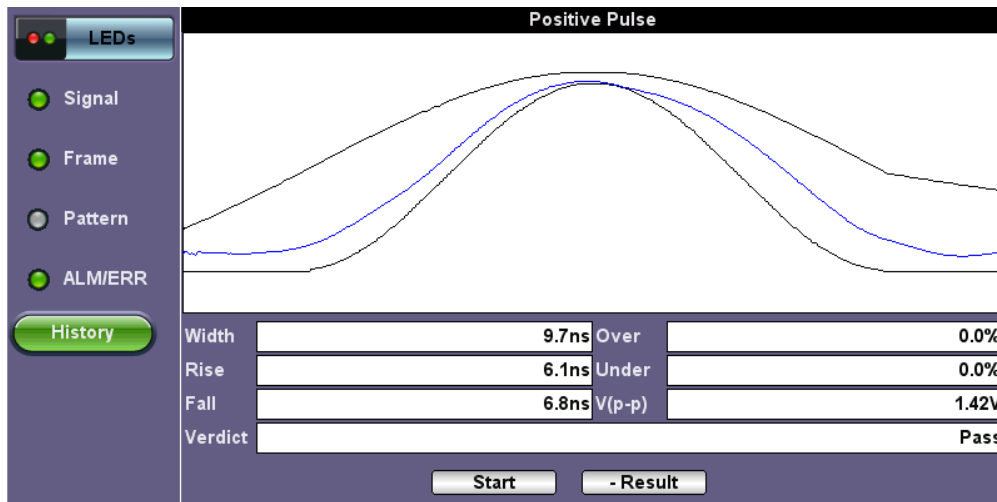

DS3 Pulse Mask

[Go back to top](#) [Go back to TOC](#)

12.3 DS1/3 Loop

When in DS1 mode, users can tap the **DS1 Loop** button  on the right side of the screen. In DS3 mode, this appears as a DS3 button with DS3 Loopback features. Select the appropriate loopback command set by pressing on the corresponding check box. Testing interfaces allow the user to troubleshoot problems and to check the quality of links at the T1 Layer. Depending on the module installed, available loopback features will vary.

The screenshot shows the 'DS1 Loop (USA version)' configuration interface. It features a sidebar with 'LEDs' (Signal, Frame, Pattern, ALM/ERR) and a 'History' button. The main area contains several sections for configuring loopback tests:

- Inband**: Includes checkboxes for ☒ CSU, ☐ NIU FAC1, and ☐ NIU FAC2.
- ESF Facility Data Link**: Includes checkboxes for ☐ Line and ☐ Payload.
- HDSL Abbreviated Loopback Codes**: Includes a 'Your location' dropdown set to 'CO/Network', a 'CO' dropdown, and checkboxes for ☐ HTU-C/HLU, ☐ NDU1, ☐ NDU2, and ☐ HTU-R. A 'CPE' dropdown is also present.
- HDSL Long Loopback codes (Requires arming the link)**: Includes a 'Your location' dropdown set to 'CO/Network', a 'Line type' dropdown set to '4-Wire', a 'CO' dropdown, and checkboxes for ☐ HTU-C, ☐ H4R1, ☐ H4R2, ☐ H4R3, and ☐ HTU-R. A 'CPE' dropdown is also present.
- User defined codes (3 to 16 bit sequences)**: Includes a text input field with '011111' and a 'Timeout (s)' input field with '7'.

On the right side, there are two buttons: 'Loop up' and 'Loops down'.

DS1 Loop (USA version)

DS1 Loop (International version)

Select the loopback command set.

 *In-band, ESF DFL, and HDSL Abbreviated Loopbacks functions allow only one element in loopback mode. Loop down any previous element before addressing a new one, or else a warning message "Error - Pre-existing loop found" will display.*

In-band

Use this mode to loop up and loop down CSU and NIU using in-band loop codes. **Loop up** sends the loop command and **Loop down** sends the release command. This function will only allow one element in loopback mode. NIU FAC1 requires T1 framing to be set as ESF, otherwise the item will be grayed out.

ESF (Out-of-band)


Uses the Extended Super Frame Facility Data Link control to send a repeating 16-bit ESF data link code word to the remote end requesting a Payload or Line loopback. ESF DFL loop codes require T1 framing to be set as ESF, otherwise the items will be grayed out.

HDSL Abbreviated Loopbacks (Short)

Also known as short loop codes, HDSL abbreviated loopbacks are used to loop specific network elements of a compatible line, including CO, repeaters, CPE equipment and line cards. Users must select the location from which the test is to be conducted (CO/Network or CPE), select the network element to be addressed and send the Loop up or Loop down command. The white arrow is used as a visual indicator to remind the user in which direction the codes are being sent. NDU1 requires T1 framing to be set as ESF, otherwise the item will be grayed out.

HDSL In-band Loopbacks (Long)

Also known as long loopback codes, HDSL in-band loopbacks are a more complete loopback system that uses 16-bit code-words to loop specific network elements and provide confirmation and status. These confirmations are based on a burst of errors sent back to the test set. The number of errors sent depend on the type of confirmation and meaning. The status pop-up messages will show the meaning of those confirmation "codes" and the respective number of errors in brackets; for example: [111] indicates "Attenuation and Margin OK." See [HDSL2 and HDSL4 Command Reference Table](#) for code meanings.

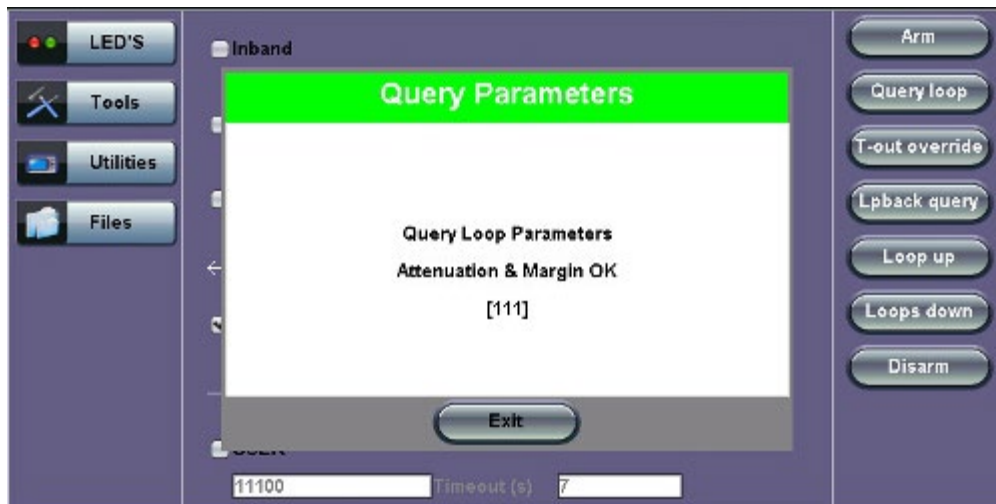

Query Parameters Message


User must select the type of HDSL cards being tested (2-wire vs. 4-wire), the location from which the test is to be conducted (CO/Network or CPE), the network element to be addressed, and the Loop up or Loop down command. The white arrow is used as a visual indicator to remind the user in which direction the codes are being sent.

DS3 Loopback Commands

DS3 Loopback is possible with NIU and Line commands.

Procedure

Before sending any loop command, the line must be armed, otherwise loop commands will be ignored. When the user enters the function, the GUI will only show commands to Arm the link, loop down any element previously looped up, or disarm an already armed link. Once the Arm command is sent, the GUI will make other functions available.

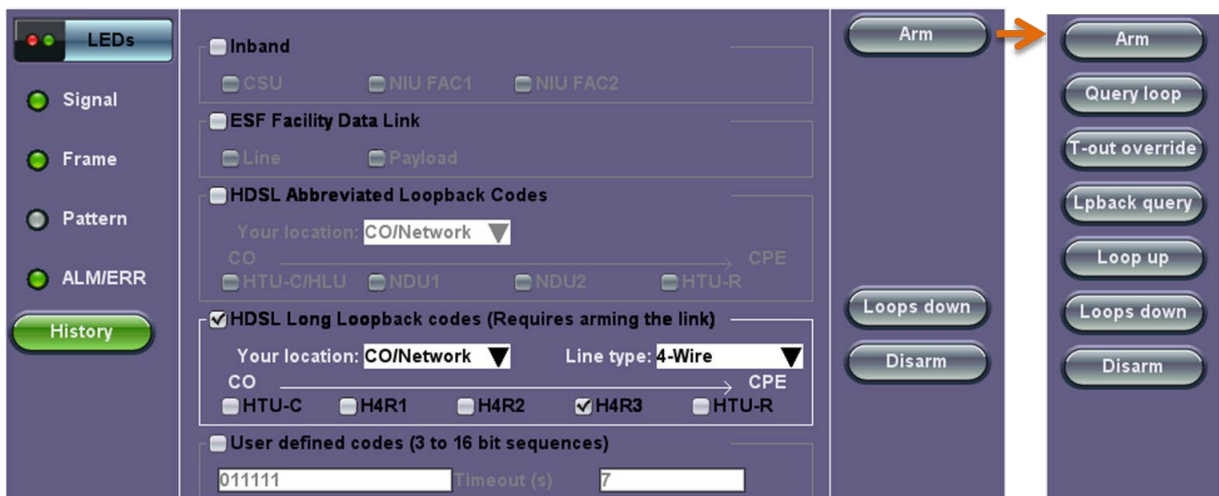

- **Arm:** Sends the arming code (11000b) to the link. The status of the link can be confirmed by looking at the Arm/Lbk LEDs on any of the line cards in the link. **Note:** Some HTU-Rs configured in NIU/Smartjack mode will loop up with the Arm command. The test set will notify the user when this is the case.
- **Query Loop:** When sent from the CO and the HTU-C is in loopback mode, it reports the status of the physical link based on attenuation and margin characteristics.
- **Time Out Override:** Disables any automatic (timed) loop down feature in the link, so any loop will stay permanently until it is manually looped down.
- **Loopback Query:** Send the loopback query code to identify the first device in loopback mode. Once detected, the test set will display which device is in loopback mode.
- **Loop Up:** Sends the appropriate loop code to the selected network element (HTU-C, repeaters, or HTU-R), a confirmation message will be shown to indicate whether the loop was successful or not. Upon successful completion of a Loop up, a status message will display "Loop up success" and the user can press **Start Test** to proceed to BERT testing. The soft LEDs in the

test set should all be green and can be used as a confirmation, as the test pattern should be coming back.

- **Loops down:** Sends the loop down without disarming code. The link will remain armed and ready to receive new commands.
 - *Some HTU-Rs configured as NIU/Smartjack will not loop down with this command and the instrument will notify the user if that is the case.*
- **Disarm:** Sends the disarming code and brings down any loopbacks in the link, including the HTU-R in NIU/Smartjack mode.



"Loop up success" Message



Loop Command Status Message

The long codes will allow multiple elements to be in loopback mode, as long as the elements are looped up from farthest to nearest. The white arrow on the DS1 Loop Setup screen is used as a visual indicator to remind the user in which direction the codes are being sent.

Adtran 4 Wire and 2 Wire Commands

4W	Arm	Disarm	HTUC	H4R1	H4R2	H4R3	HTUR Ext	HTUR Cust	Loop Down w/o Disarm	Timeout Override	Loop Back Query	Query Loop
From CO	11000	111000	D3D3	C741	C754	C743	C742	3F02	9393	D5D6	D5D5	DBDB
	2 in 5	3 in 5										
From CPE	11000	111000	D3D3	C741	C754	C743	C742	3F02	9393	D5D6	D5D5	
	2 in 5	3 in 5										
2w	Arm	Disarm	HTUC	H4R1	H4R2	H4R3	HTUR Ext	HTUR Cust	Loop Down w/o Disarm	Timeout Override	Loop Back Query	Query Loop
From CO	11000	111000	D3D3				C754	3F02	9393	D5D6	D5D5	DBDB
	2 in 5	3 in 5										
From CPE	11000	111000	D3D3				C754	3F02	9393	D5D6	D5D5	
	2 in 5	3 in 5										

Command Responses				
Response (BIT Errors)	4W		2W	
	From CO	From CPE	From CO	From CPE
HTUC	231	231	231	231
HRE1	10	10		
HRE2	200	200		
HRE3	30	30		
HTUR	20	20	200	200
Query Loop	111 Loop Good	NA	111 Loop Good	NA
	11 Loop Bad		11 Loop Bad	
LoopBack query	Same as Above		Same as Above	Same as Above
LoopBack Time Out	Same as Above		HTUC 231	HTUC 231
			HTUR 20	HTUR 20

HDSL2 and HDSL4 Command Reference Table



Confirmation based on number of errors received.

User

The user code allows sending programmable codes of up to 16 bits (LSB first) and can be used for those codes or elements not directly supported by the DS1 Loopback feature. Tap in the binary field and use the on-screen keypad to enter the binary combination, and press the Apply button to return to the main screen. The Timeout field allows the user to set the exact time, in seconds, in which the code will be sent and constantly repeated. User can adjust the period between 1 to 99 seconds. Entering 0 would send the loop pattern continuously until a new loop pattern is sent. A confirmation message will be displayed once the time is up.

User Code

Send: Press this button to send the programmed code for the amount of time set in the time out field. The test set will stop sending the code once time is up.

[Go back to top](#) [Go back to TOC](#)

12.4 Round Trip Delay

DS1/3 Round Trip Delay is the same measurement described as the [Round Trip Delay](#) in SDH/SONET Tools. Please see that section for more details.

[Go back to top](#) [Go back to TOC](#)

12.5 DS1 RX Data

DS1 RX data shows received data and captures the current timeslots.

DS1 RX Data																																																	
0	F	1	01001100	2	00001000	3	01010111	4	11001110	5	00001111	6	01010111	7	11011100	8	00100111	9	00110111	10	00101101	11	01001101	12	00010000	13	01010001	14	10011110	15	00011010	16	10111011	17	10100000	18	01100110	19	00111110	20	10101011	21	01111000	22	00000100	23	11101111	24	11100101

DS1 Data

[Go back to top](#) [Go back to TOC](#)

12.6 DS3 FEAC Tasks

DS3 FEAC responses (Far End Alarm and Control Channel Responses)

Enabling this option allows loopback to be configured from any “far-end” equipment connected on the other end of the line. These can be used to send and receive loop up codes and information from the far-end T3 device. Enable or disable this option through a drop-down menu in this field.

- Loop Up Activate: 00010010 11111111 sent >10 repetitions
- Loop Down Deactivate: 00100100 11111111 sent >10 repetitions

FEAC alarms are sent from the remote end device towards the local device by means of the C bit in the Subframe. When a failure is declared on the remote end unit, this is how it notifies the near end unit. Some FEAC Codes are shown below.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

TX

Mode

FEAC

RX

NIU

DS3 EQFAIL SA

Loop up

Loop down

FEAC Tasks TX Setup

Alarm TYPE

- DS3 Equip. Failure (Service Affecting)
 - DS3 LOS
 - DS3 OOF
 - DS3 AIS RCV
 - DS3 IDLE RCV
- DS3 EQUIQ FAIL (NON-SERVICE AFFECT)
- COMMON EQUIP. FAIL (NSA)
- MULTIPLE DS1 LOS
- DS1 EQUIP FAIL
- SINGLE DS1 LOS
- DS1 EQUIP FAIL (NON-SERVICE AFFECT)

LOOP TYPE: Options: NIU, LINE

LEDs

Signal

Frame

Pattern

ALM/ERR

History

TX

LOS

OOF

AIS

Idle

EQ FAIL SA

EQ FAIL NSA

RX

Loop up

Loop down

Page 1 of 2

FEAC Tasks RX

12.7 DS1 ISDN PRI

E1 and DS1 ISDN PRI offer identical test options. DS1 ISDN PRI instructions are discussed in [11.7 E1 ISDN PRI](#).

[Go back to top](#) [Go back to TOC](#)

12.8 DS1 VF Tasks

The VF Tasks menu performs a variety of talk/listen functions.

Setup	
Tx T/S	1
Rx T/S	1
Mode	Tone
Code	u-Law
Frequency	50
Level	3.00
ABCD	On Hook - 0000

Results	
ABCD	1110
Data	11100100
Frequency	2013 Hz
Level	-19.9

DS1 VF Tasks Setup

 Do not attempt to enter VF Tasks if the Frame LED is not green. Green LEDs indicate that the framing found on the received signal matches the framing selected in the Setup screen. It is impossible to talk, listen, or perform other channelized functions in the absence of frame synchronization, since channels can be identified only within a framed signal.

The VF Tasks screen features the following options:

Setup

- **Tx and Rx T/S:** Input the number of channels (1-24) to test for transmitting and receiving time slots.
- **Mode:** Talk or send a tone on the transmit signal. Transmit audio data from the external headset into the selected timeslot.
- **Code:** Select u-Law or A-Law.
- **Transmitted Frequency:** Input a frequency to transmit from 50 to 3950 Hz.
- **Transmitted Level:** Input a frequency to transmit from -60 to 3dBm.
- **ABCD:** Options are ON-HOOK, OFF-HOOK, WINK, or User (Manually set). Change the signalling bits transmitted with the associated transmit channel. In SF-D4 framing these will be A/B and ESF framing will place that signal onto the A/B/C/D position.
- **Programmable ABCD:** Manual (User) or IDLE, SEIZE.

Results:

- Measure signal frequency and level in selected timeslot.
- Listen to the voice channel in selected timeslot via external headset. **Volume** can be adjusted using the left and right arrow keys.
- **ABCD:** View the received Channel Associated Signalling System(CAS) bits.
- **Data:** View the live 8-bit channel data as it is received from the selected channel.
- ABCD bits monitor and view data in selected T/S channel.

[Go back to top](#) [Go back to TOC](#)


12.9 Jitter and Wander

For more information on Jitter and Wander, please see [Jitter and Wander Application](#).

[Go back to top](#) [Go back to TOC](#)

12.10 CSU/NIU Emulation for DS1

The test set can emulate DS1 customer premises equipment, simulating a CSU or NIU. CSU/NIU emulation allows the test set to be looped up from the central office to verify DS1 service across the entire length of the span.

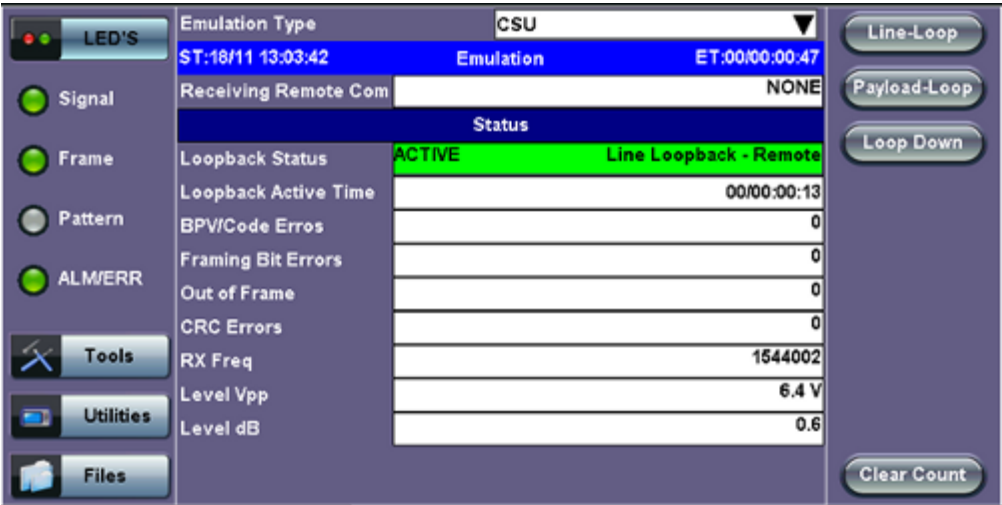

CSU/NIU Emulation

Emulation Type: NIU or CSU

Receiving Remote Command: “None”. After the remote command disappears, “None” is displayed. When receiving command, the following are displayed:

- In-band loop up
- In-band loop down
- ESF FDL Line loop up
- ESF FDL Line loop down
- ESF FDL payload loop up
- ESF FDL payload loop down

When in un-loop state, Line 1 TX sends AIS

Loopback Statuses:

- Payload Loopback – Local: Activated by the Payload-Loop button
- Line Loopback – Local: Activated by the Line-Loop button
- Payload loopback – Remote: Activated when remote ESF FDL command has been received
- Line Loopback – Remote: Activated when remote ESF FDL command has been received
- None (when in un-loop state)

The **Status** screen also displays the following:

- Loopback Active Time: Loopback time elapsed (s)
- BPV/code errors
- Framing Bit Errors
- Out of Frame errors
- CRC Errors
- Receiving frequency (Hz)
- Peak-to-peak voltage and voltage level

Button	Command	Description
	Line-Loop	Loopback RX to TX, unchanged

Line-Loop

Payload-Loop

Payload-Loop Loopback RX to TX, only the payload

Loop Down

Loop Down Can be used to unloop at anytime

Clear Count

Clear Count Clear all the counters to 0.
Loopback state, no change

CSU/NIU Buttons

In SF mode, only in-band commands can be checked.

In ESF mode, FDL and in-band commands are both checked.


Remote loopback control qualification time is 5 seconds (that is, must receive loopback commands for 5 seconds before activate or deactivate loopback state)

[Go back to top](#) [Go back to TOC](#)


12.11 DS1/3 Auto Monitor

Auto Monitor mode automatically configures the unit to the incoming (receiving) signal structure. Once the signal structure is configured, tap **OK** to begin testing or **Exit** to exit the screen. The Summary tab displays DS1 test results and measurements alarms, errors, or signal failure pertaining to the DS1/3 signal and payload.

Refer to [Results: PDH](#) for more information on the test result tabs.

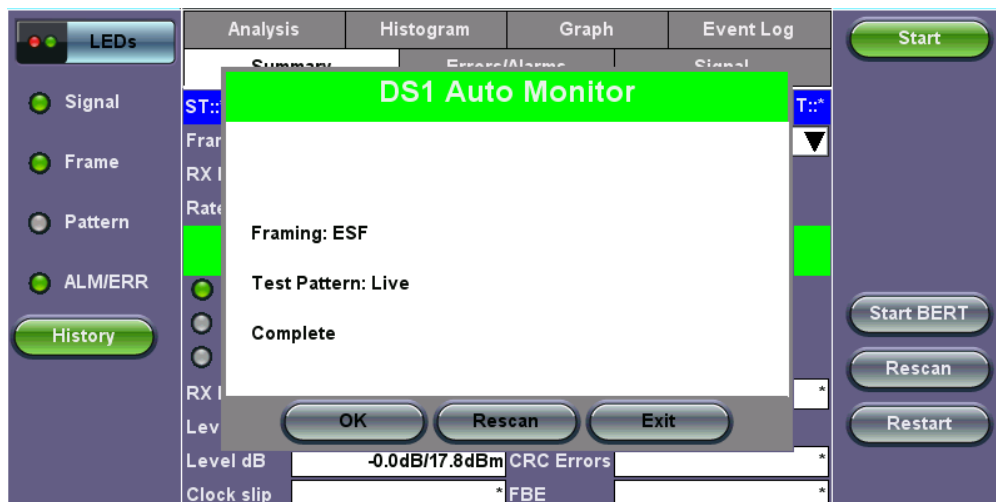

DS1 Auto Monitor Scan

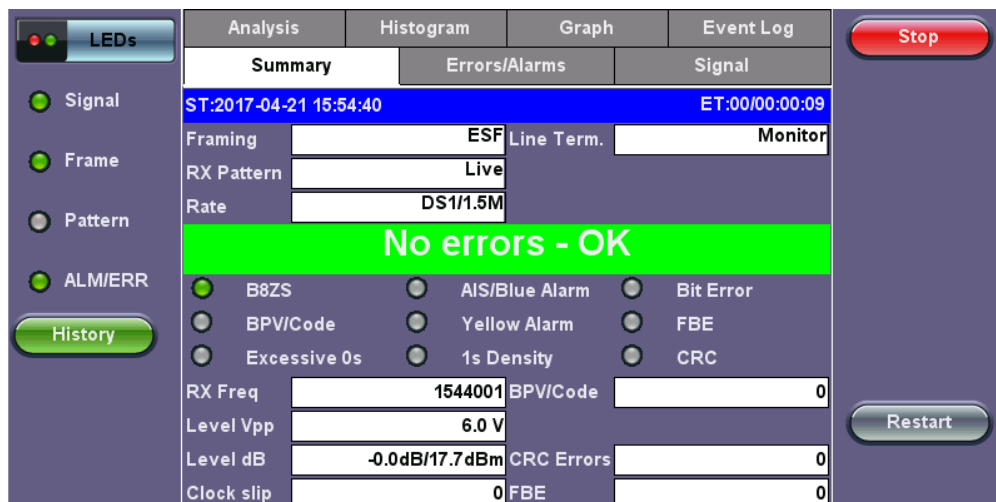

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Analysis

Summary

ST:2017-05-10 10:57:17

Framing

Line Code

Rate

C-BIT

B3ZS

DS3/45M

No errors - OK

BPV/Code

AIS/Blue Alarm

Yellow Alarm

Idle

RX Freq

Level Vpp

Level dB

44735988

1.4 V

-3.1dB/5.1dBm

Histogram

Errors/Alarms

Line Term.

RX Pattern

Monitor

Live

BPV/Code

Bit Errors

FBE

0

*

0

Graph

Signal

Event Log

ET:00/00:00:42

Stop

Restart

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Analysis

Summary

ST:2017-05-10 09:43:48

ET:00:00:00:06

Errors/Alarms

No errors - OK

B8ZS

BPV/Code

Excessive 0s

AIS/Blue Alarm

Yellow Alarm

1s Density

Bit Error

FBE

CRC

Signal

Start BERT

BIT

1.5M LOS

Set Injection

DS1 Loop

Restart

RX Freq	1544000	BPV/Code	0
Level Vpp	6.0 V	Bit Errors	0
Level dB	-0.0dB/17.8dBm	CRC Errors	0
Clock slip	0	FBE	0

LEDs	Analysis	Histogram	Graph	Event Log
☒ Signal ☒ Frame ☒ Pattern ☒ ALM/ERR History	Summary ST:2017-05-10 11:13:58 ET:00/00:00:32 Framing: C-BIT Line Term.: DSX Line Code: B3ZS PRBS Patte: 2^7-1 Rate: DS3/45M		Errors ☐ BPV/Code ☐ FBE ☐ AIS/Blue Alarm ☐ C-Parity ☐ Yellow Alarm ☐ Bit Error ☐ Idle	
	RX Freq: 44735990 BPV/Code: 0 Level Vpp: 1.4 V Bit Errors: 0 Level dB: -3.1dB/5.1dBm FBE: 0		Stop BERT BIT 45M LOS Set Injection DS3 Loop Restart	

DS3 BERT In Progress

[Go back to top](#) [Go back to TOC](#)

12.13 DS1 (Stress) Multi-BERT

DS1 (Stress) Multi-BERT brings into service and troubleshoots DS1 links quickly by automatically generating different test patterns in a sequential BER test. Since certain test patterns can help identify and test for specific problems or behaviors, the test sequence can be customized with specific test patterns and timings to target these test scenarios, like checking for proper line coding settings, framing, or clock recovery. Up to 8 BER tests can run in sequence. Setting Continuous to ON will repeat the test sequence after the last Pattern is generated.

LEDs	Multi-BERT Setup					
☒ Signal ☒ Frame ☒ Pattern ☒ ALM/ERR History	Pattern 1	2^15-1	Time (s)	5	Enabled	ON
	Pattern 2	2^31-1	Time (s)	10	Enabled	ON
	Pattern 3	2^15-1	Time (s)	15	Enabled	ON
	Pattern 4	2^20-1	Time (s)	15	Enabled	ON
	Pattern 5	1010	Time (s)	15	Enabled	OFF
	Pattern 6	All 1s	Time (s)	15	Enabled	OFF
	Pattern 7	QRSS	Time (s)	15	Enabled	OFF
	Pattern 8	2^15-1	Time (s)	15	Enabled	OFF
	Continuous	ON				
	Start BIT 1.5M LOS Set Injection					

DS1 (Stress) Multi-BERT Setup

[Go back to top](#) [Go back to TOC](#)

12.14 DS1 FDL & SSM QL

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Manual FDL Code Word

Category

Code Word to encode

Code Word

Flow

Time(s)

Protection Switching

Prot. Switch Ack

0001100011111111

Timed

3

Send

Clear

Monitor FDL Code Word

0111111011111111

0011111011111111

0001100011111111

0011000011111111

Idle

Unknown

Prot. Switch Ack

Don't Use for Sync

DS1 FDL & SSM QL

DS1 Synchronization Status Messages (SSM) indicate the clock source quality level. They are only carried by the Extended Super Frames (ESF) Facility Data Link (FDL) channel. The data link is a bit-oriented code (BOC) or Bit-patterned Message (BPM) defined by T1.403. SSMs have the format of 0xxxxxx0 11111111 (right-to-left), where xxxxxx are the six information bits of the message. ANSI standard T1.101 lists the SSM codes carried by DS1 timing signals.

Sync Status Messaging (SSM) provides a means for Network Elements downstream from the BITS system to be alerted the Stratum Level of the timing signal. With a system of coded messages transmitted “out-of-band” on a T1 ESF or E1 signal, SSM allows Network Elements to follow an automatic, pre-determined process for selecting the timing source of the highest Stratum Level; thereby eliminating outages due to timing failures. For T1-ESF, the Facility Data Link carries the SSM codes as shown below.

For SSM to be useful, connected Network Elements must be configured with instructions for actions to be taken in event of degradation of the SSM code. For example, a normal SSM message of Stratum 1 (PRS) indicates the T1 or E1 signal is traceable back to a Stratum 1 source. While the SSM is not a guarantee of signal quality, it can be used to automatically alert connected Network Equipment if the BITS knowingly becomes degraded.

T1 Sync Status Message DS1 Data Link/FDL (Binary) DS1 Data Link/FDL (HEX)		
0000100	11111111	Stratum 1 (PRS) Traceable
00001000	11111111	Sync Traceability Unknown (STU)
00001100	11111111	Stratum 2 Traceable
01111100	11111111	Stratum 3E Traceable
00010000	11111111	Stratum 3 Traceable
00101000	11111111	Stratum 4 Traceable
01111000	11111111	Transit Node Clock
00110000	11111111	Do Not Use for Sync


[Go back to top](#) [Go back to TOC](#)

13.0 Jitter and Wander

Accessing Jitter and Wander

Go to **OTN/SDH/SONET Testing** from the **Test Mode Selection**, then select the following:

- For **PDH** or **DS3/1** signals: Home (Main Menu) > PDH or DS3/1 Tools > (DS1/3) Jitter & Wander
- For **SONET** or **SDH** signals: Home (Main Menu) > SONET/SDH Tools > More > Jitter & Wander

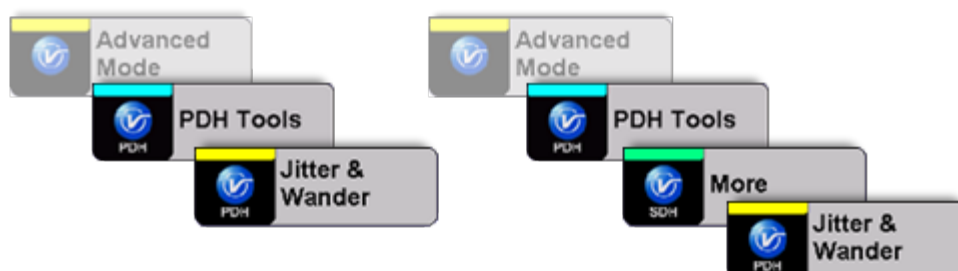

Jitter & Wander displays the Jitter Measurements showing measurements and analysis of jitter in received signal.



Jitter and Wander (PDH E3 Menu)

Jitter and Wander are usually described as the phase noise in digital signals. This is a natural occurrence in telecommunication networks.

Excessive jitter can lead to transmission errors and deterioration in network quality. ITU defines jitter as follows: "The short-term variations of the significant instances of a digital signal from their ideal positions in time (where short-term implies these variations are of frequency greater than or equal to 10 Hz)." The long-term variation (less than 10 Hz) of a digital signal is called wander.


In simple terms, jitter is an unwanted phase modulation of the digital signal that may cause errors or bit slips in a digital circuit and deteriorate the performance of a transmission network.

In lower-rate digital systems, systematic jitter is dominant. In higher-rate systems, random jitter may become more important. Test environment parameters that affect jitter performance are test sequences, bit rate, pulse shape, cable characteristics, temperature, cross-talk, and noise.

[Go back to top](#) [Go back to TOC](#)

13.1 Jitter Measurement & Generation (Jitter button)

Tapping the **Jitter** button displays the **Jitter Measurement and Generation** screen.

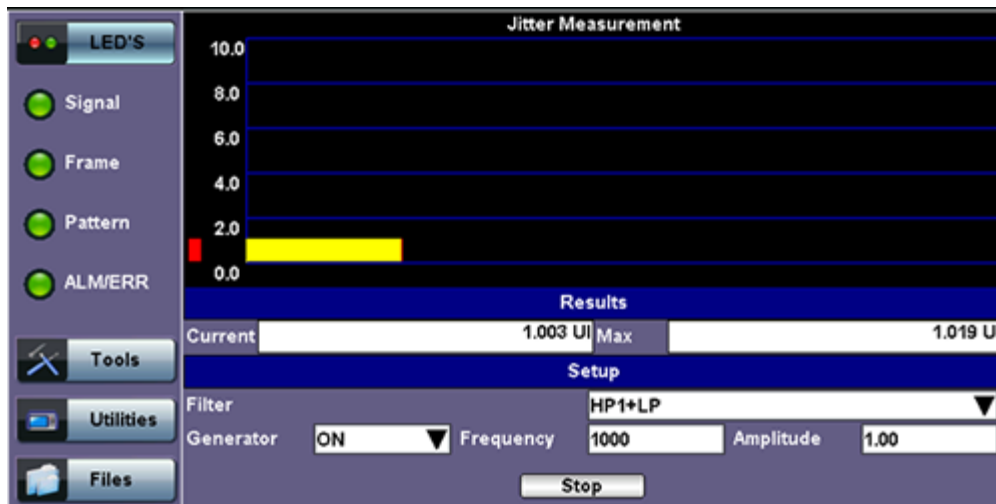

Jitter Measurement and Generation Menu

The Jitter measurements menu allows the user to measure and analyze received signal jitter. The measurement example is shown above (the vertical grid spacing is 2.0 UIpp). The red bar indicates Max. peak jitter during testing and the yellow bar indicates the current peak jitter.

Setup

Configure the following settings before starting the test:

- **Filter:** HP1+LP or HP2+LP. The frequency for each filter varies depending on the setup mode (E1/E3, DS1/DS3). Frequency ranges for each filter and setup mode are listed as follows:
 - E1: HP1+LP (20Hz to 100KHz); HP2+LP (18 Hz to 100KHz)
 - E3: HP1+LP (100Hz to 800KHz); HP2+LP (10KHz to 800KHz)
 - DS1: HP1+LP (10Hz to 40kHz); HP2+LP (8kHz to 40kHz)
 - DS3: HP1+LP (10Hz to 400kHz); HP2+LP (30kHz to 400kHz)
- **Generator:** ON or OFF
- **Frequency:** 2 Hz to 10,000 Hz for E1(2M) options, 2 Hz to 800,000 Hz for E3 (34M) options. 2 Hz to 40,000 Hz for DS1 (1.5M) options, 2 Hz to 400,000 Hz for DS3(45M) options.
- **Amplitude:** Enter the amplitude at which peak to peak jitter generation occurs. See O.172 for the ITU recommendation on minimum jitter generation.

Press **Start** to start measurements.

Results

Results are displayed for the current jitter value and maximum jitter value during measurement.

[Go back to top](#) [Go back to TOC](#)

13.2 Max Jitter Tolerance (MTJ)


Jitter Tolerance or jitter accommodation is defined in terms of the sinusoidal jitter amplitude which causes a designated error when applied to digital equipment input. Jitter tolerance is a function of applied jitter's amplitude and frequency. Equipment must pass the lower limit of maximum jitter tolerance, which is specified in ITU-T G.823, G.824, and G.825 standards.

The unit will transmit jitter from point-to-point or low to high frequency at different amplitudes to determine where errors occur. This is known as maximum jitter tolerance (MTJ).

Defects and Anomalies Check

The Max Jitter Tolerance feature checks the health of the incoming signal prior to starting the test. If any alarms or errors are detected, the test set will notify the user that the test cannot be performed and present configuration suggestions to correct the


problem.

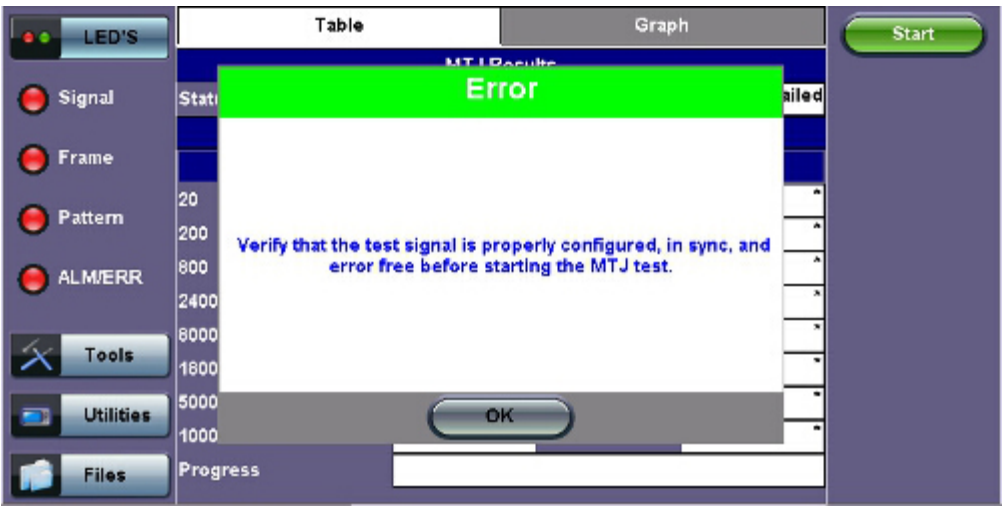

Error Message: Configuration Suggestions

Loss of Signal (LOS) Check

If the LOS condition is detected at any time during the MTJ test, the data will become invalid and the test will stop automatically. An error message will appear to notify the user to correct the condition before running the test again.

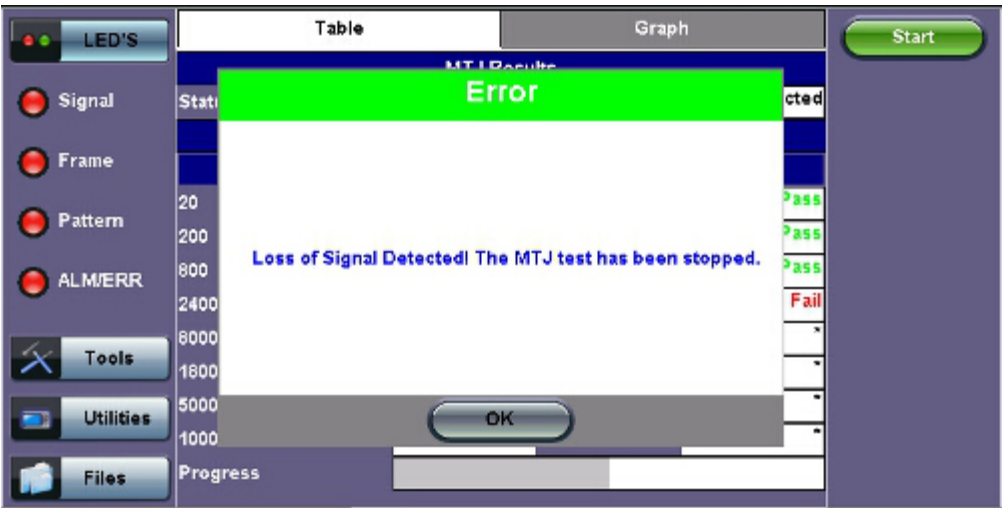

LOS Error Message

Table

Table values include:


- Frequency tested (Hz)
- **MTJ (UI):** Maximum Tolerable Jitter (in Unit Intervals).
- **Mask (UI):** Peak-to-Peak jitter limit (in UI) as defined by ITU standard. This is the minimum jitter value to pass (i.e., the MTJ value must exceed the Mask value for the data point to pass).
- **Status:** Pass/Fail status.
- **Start/Stop:** Starts or stops the test.
- **Progress:** A green bar at the bottom of the graph shows the test progress.

Table		Graph		Start
MTJ Results				
Status	Passed			
ITU-T G.823 2M Mask				
Frequency (Hz)	MTJ (UI)	Mask (UI)	Status	
20	>10.00	1.50	Pass	
200	>10.00	1.50	Pass	
800	>10.00	1.50	Pass	
2400	>3.75	1.50	Pass	
8000	>1.12	0.45	Pass	
18000	>0.50	0.20	Pass	
50000	0.33	0.20	Pass	
100000	0.28	0.20	Pass	
Progress				

MTJ Table

Graph

A cross (x) indicates the maximum jitter value tolerated at the frequency. Yellow triangles (▲) indicate that the data point is greater than, while the green "X" symbols represent actual measured values. Greater than implies that the jitter tolerance of the DUT (device under test) is much better than the value measured by the test set. Users should expect all data points above the mask (curve) to pass. For this example, the table results and graphical example confirm that all points have passed.

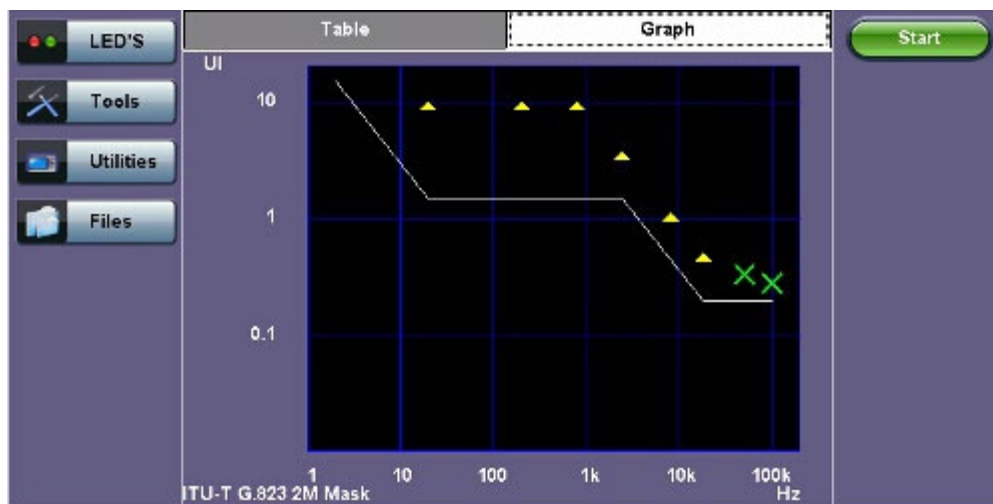

Graph


[Go back to top](#) [Go back to TOC](#)

13.3 Jitter Transfer Function (JTF)

Jitter Transfer defines the ratio of output jitter to input jitter amplitude versus jitter frequency for a given bit rate. Often, a portion of received jitter is transmitted at a piece of the equipment's output. If LOS is detected during the JTF test, the test will be stopped.

1. Calibration


Using a short and clean patch cord, connect the test set's TX back to the RX to form a local reference loop.

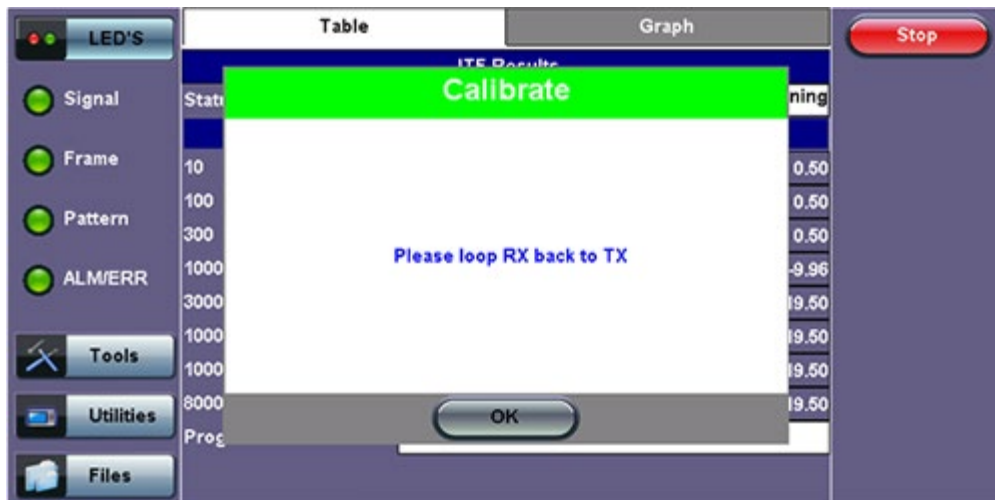


Loop Message

2. Device Under Test (DUT)

Before starting the test, "Connect Device Under Test" will appear. Connect the test set to the DUT then press **Start** to begin testing.

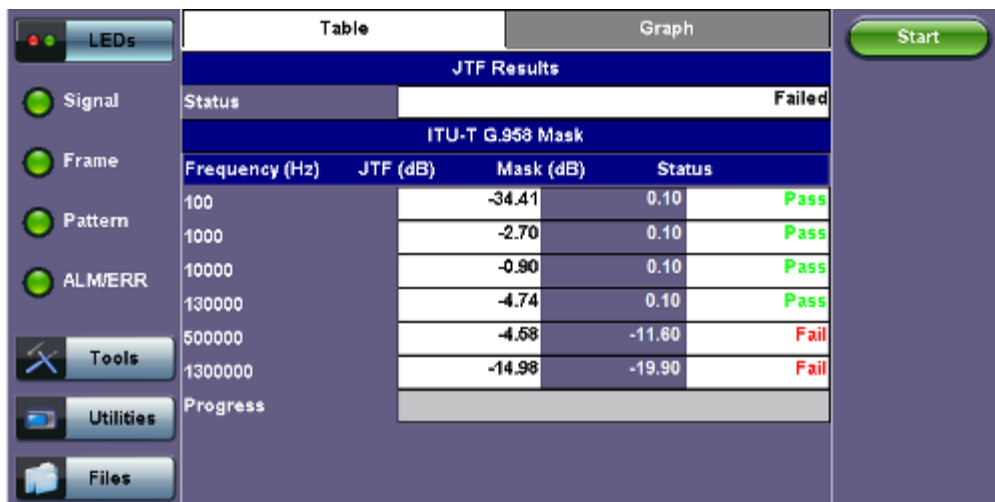

- **Frequency (Hz):** Frequency measured
- **JTF (Jitter Transfer Function) (dB):** Jitter in divided by jitter out value (in dB)
- **Mask (dB):** Jitter output in relationship to the input
- **Progress:** The bar at the bottom of the graph shows the test progress

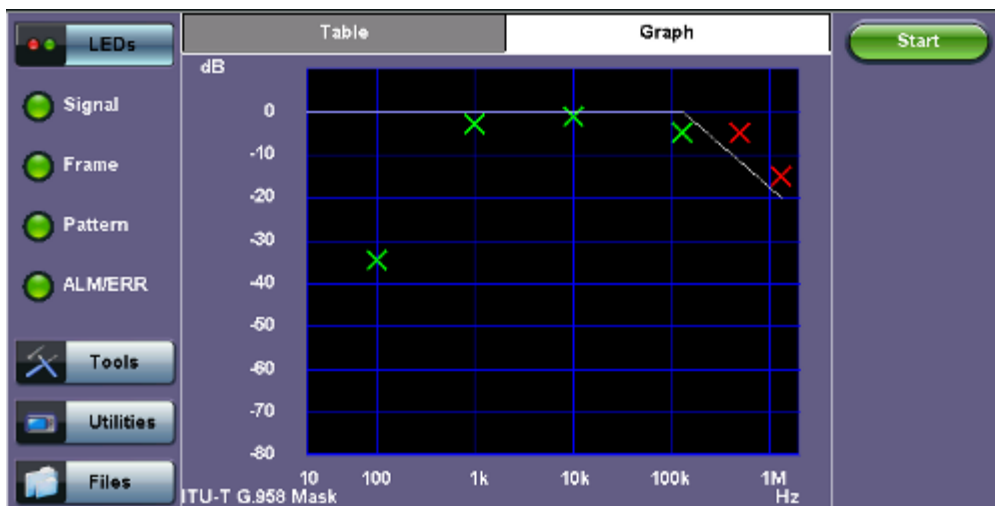

A green cross (x) indicates the the jitter transfer value has passed.

A red cross (x) indicates that the jitter transfer value has failed.

Yellow triangles (▲) indicate that the jitter transfer value is greater than the value measured by the test set.

[Go back to top](#) [Go back to TOC](#)

13.4 Wander Measurements and Analysis

The test set may be equipped with wander measurement options (or licenses) that add verification of stability (wander) and accuracy for different types of data interfaces. Those signals under test could be SDH/SONET (STM-1/OC-3), PDH/DSn (E3, E1, T3, T1), SyncE slave, CPRI, or 1588v2 precision timing protocol.

Besides measuring time interval error (TIE) on datalink interfaces like CPRI, other complementary wander measurement and analysis applications may also be offered by the test set (all optional), along with an off-line MTIE/TDEV analysis software for Windows® PC. The last three are required for post-analysis and standard masks fitting (Pass/Fail) evaluations.

- Clock Wander & Phase Measurements for physical clock interfaces (1.544, 2.048, 10 MHz and 1PPS)
- Wander TIE logging and real-time export to USB
- Built-in MTIE/TDEV Wander Analysis
- VeEX MTIE/TDEV Wander Analysis PC software

Individual screens, fields and selections may vary among products or technologies, and depend on the options/licenses loaded or available for each test set. Nonetheless, the concepts and procedure flow are very similar.

13.4.1 Recovered Clock Wander Measurements

Each individual transmission technology may require its own wander measurement license. The Recovered Clock Wander Measurement features can usually be found within the test options that the intended technology offers.

- In 1GE and 10GE test modes, the Wander Measurement function may be found under the Advanced Tools menu, provided that SyncE or 1588v2 slave modes have been enabled.
- In PDH test modes, the wander measurement function may be found in >PDH Tools >Jitter & Wander >Wander
- In SDH/SONET test modes, the wander measurement function may be found in >SONET/SDH Tools >Jitter & Wander >Wander
- In DSn test modes, the wander measurement function may be found in >DS1/DS3 Tools >DS1/3 Jitter & Wander >Wander
- In CPRI Layer 2 Framed test mode, the wander measurement function may be found in its dedicated Wander menu, provided that the test set is configured as a CPRI slave

[Go back to top](#) [Go back to TOC](#)

13.4.1.1 Test Setup

Setup	
Meas. Clock Reference	External
Clock Port	SMA
External Clock Type	2Mbit/s
Mode	Manual
Save TIE	ON
Sampling Rate	30/s
Filename	MySTM1wanderTest
ET:	
Current TIE	0 ns
Max +TIE	0 ns
Min -TIE	0 ns
MTIE	0 ns

Setup

- Measurement Clock Reference or Reference Clock Source offers a selection of external or internal (optional) frequency references. Internal or built-in reference options could be “Atomic 10 MHz” or “Atomic 1PPS”, disciplined by GPS or free running.
- External Clock Type allows users to select from a list of supported clock signals (e.g. 1.544 MHz, 2.048 MHz, 1544 Mbps, 10 MHz, 2.048 Mbps, 1PPS). The traceable external clock reference source of choice shall be connected to the CLK (SMA) port.
-  *Avoid using rigid BNC-to-SMA adapters to prevent any stress on the test set's connector. Flexible adapters or cables are recommended.*
- Test Mode lets user select between Manual start/stop and Timed measurements. If Timed is selected, users can set the length of the test in seconds, minutes, hours or days. Once the selected time has elapsed the test automatically stops.
- Save TIE can be turned ON to write all wander measurements to a FAT32 USB Memory stick in real time, to be analyzed later on.
- The Sampling Rate (samples per second) can be set to 1/s, 5/s, 10/s or 30/s, depending on the application. 30/s is recommended.
- File Name identifies the new folder in which all configuration and measurement data will be stored. This folder will be created in the root of the memory stick.
- Tap on the Start button to initiate the measurements and data logging.
- Tap on the Stop button to force the measurement and data logging to stop. This will also stop a Timed test, even if the total time has not finished yet.
- After stopping the test, and if the built-in MTIE/TDEV option is enabled, users can also tap on the Analysis button to view the TIE graph and perform the MTIE/TDEV analysis on the recorded TIE data. Refer to the following sections for more details.
- Users may also be allowed to perform run-time MTIE/TDEV analysis with all the data collected up to that point, without having to stop an ongoing long-term wander test.

[Go back to top](#) [Go back to TOC](#)

13.4.1.2 Test Result

Numerical counters are provided to let users know the status of the test, with a basic summary of the TIE information.

- **Current TIE:** Shows the current time interval error measurement.
- **Max TIE:** Maximum positive TIE value that has been recorded since the beginning of the test.
- **Min TIE:** lowest or negative TIE value that has been recorded since the beginning of the test. Since wander measurements always start with a TIE=0, then the minimum value can only be zero or negative.
- **MTIE:** Denotes the maximum span of TIE values recorded since the beginning of the test. In this summary, MTIE = MaxTIE – MinTIE. It gives users an idea of how much the signal under test is wandering.
- **A real-time TIE monitor graph** may also be included in the summary screen for users to see the TIE for the last 7 or 10 minutes of the ongoing test.

[Go back to top](#) [Go back to TOC](#)

13.4.2 Advanced Clock Wander & Phase Measurements

The test set may offer clock wander and phase error measurement options (or licenses) that add verification of stability (wander) and accuracy (absolute phase error) on external (physical) clock signals. Those signals could be from reference clocks or recovered clock outputs from remote or slave terminals (SDH/SONET, PDH/DSn, SyncE, PTP, GNSS/GPS, Rb clocks, etc.)

The results are the similar to the ones obtained by measuring wander on data interface ports (SDH/SONET, PDH/DSn, SyncE or PTP). The main difference is that the advanced clock wander measurements are performed on a physical (not internally recovered) clock signal.

This feature is usually an independent Test Mode and not linked to any particular data transmission interface.

13.4.2.1 Clock Wander and Phase Measurements (Optional)

The “Clock Wander & Phase Measurements” option offers short and long term Wander measurements for frequency sources (e.g. 1.544, 2.048Mbps or 1.544, 2.048, 10MHz or 1PPS) and Phase Error measurements for timing sources (i.e. 1PPS) and can save the TIE or TE measurements to a FAT32 USB Memory stick for further analysis. The test set itself may also offer a built-in MTIE/TDEV Wander Analysis option to analyze the data or it can also be done by using the free VeEX Wander Analysis PC Software that can be downloaded from www.veexinc.com.

Both, Wander and Phase Error, measurements require a stable and accurate reference clock source, which can be an external

source connected to the CLK (SMA) input port or optional optional built-in GPS and Chip-scale Atomic Clock references.

- The built-in GPS hardware option provides a (raw) 1PPS timing signal (clock), aligned to the standard second, and can be used to discipline the built-in atomic clock. The direct use of this raw “GPS 1PPS” alone is not recommended for wander or phase measurements. It should be combined with the Atomic Clock to filter and stabilize the timing signal
- The built-in Atomic Clock hardware option can provide highly stable frequency references on its own (Atomic 1PPS and Atomic 10 MHz), suitable for wander measurements
- When disciplined by the internal GPS receiver, the Atomic Clock 1PPS can also be used as a very stable and accurate absolute timing reference aligned to the standard second (1PPS) or very accurate and stable frequency reference (10 MHz)
- External clock signals, directly traceable to PRC or PRTC, can also be used as a reference for even more accurate results (e.g. high-quality GPS-disciplined OCXO, Rb or Cs clock sources)

While wander (stability) measurements use high precision frequency references, the absolute phase error (also known as Time Error or TE) requires an accurate 1PPS timing signal, aligned to the standard second (UTC). The 1PPS can be sourced from a high precision GPS-disciplined clock (built-in option or external).

The Wander (TIE) and Phase (TE) data logs can be saved in real time to a USB Memory using VeEX proprietary format (to be analyzed by the built-in or PC-based MTIE/TDEV Analysis software) or exported to an open CSV format.

Test Setup

Test Setup	Results
Test Type	1PPS Absolute Phase Error
Reference Clock Source	1PPS (SMA)
Test Signal	1PPS (RX1 BNC)
Test Mode	Manual
Save to USB	ON
File Type	VeEX
File Name	Wander1

Start


Restart

Analysis

Setup


1. Test Type offers a selection of “1PPS Absolute Phase Error” for timing error measurements or “Clock Wander Measurement” for frequency stability measurements
2. Reference Clock Source offers a selection of external or internal (optional) frequency or timing references
3. The Test Signal is the clock that needs to be measured for stability and/or accuracy
4. Test Mode lets user select between Manual start/stop and Timed measurements. If Timed is selected, users can set the length of the test in seconds, minutes, hours or days. Once the selected time has elapsed the test automatically stops.
5. Save to USB can be turned ON to write all wander or phase measurements to a FAT32 USB Memory stick in real time, to be analyzed later on. User can also set the sampling rate (samples per second).
6. File Types available are the proprietary “VeEX” format (compatible with VeEX Wander Analysis PC software) and an open CSV format that can be analyzed or formatted with a spreadsheet program (e.g. Excel or Numbers) or could be imported to other analysis software.
7. File Name identifies the new folder in which all configuration and measurement data will be stored. This folder will be created in the root of the memory stick.
8. Tap on the **Start** button to initiate the measurements and data logging.
9. Tap on the **Stop** button to force the measurement and data logging to stop. This will also stop a Timed test, even if the total time has not finished yet.

Results

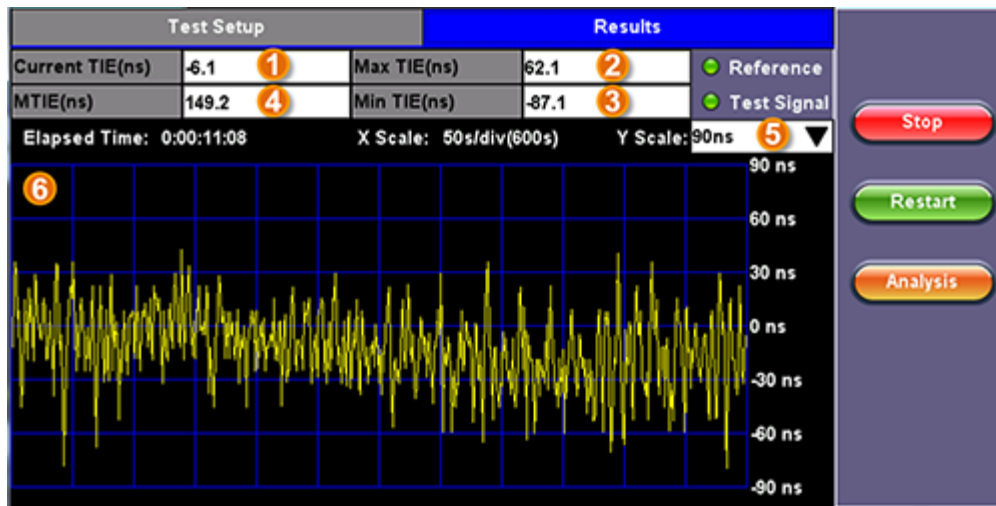

Results

Wander results are presented in nanoseconds and include: (1) Current TIE, (2) Highest TIE recorded, (3) Lowest or negative TIE recorded, (4) MTIE for the whole test data, (5) Y scale zoom level, (6) the last 600s of TIE values, Start/Stop/Restart buttons, and Analysis button (if the built-in MTIE & TDEV Analysis option is loaded in the test set)

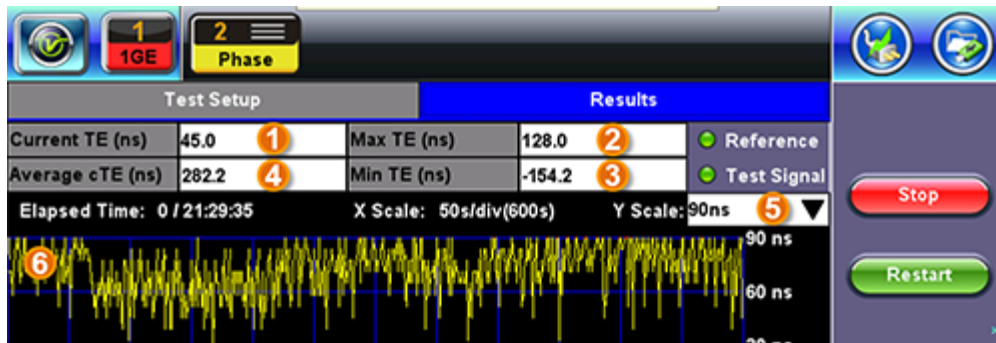

Results

Phase results are also presented as the difference in nanoseconds between the rise of the reference timing pulse and the signal under test. It includes (1) Current timing or phase error (TE), Maximum time error recorded, (3) Minimum or negative time error recorded, (4) Average time error (cTE) for the whole test.

The 600s graph is provided as a tool to confirm the settings and signals stability before running a long term test, so time is not wasted in testing an unstable signal or with frequency offset. It also gives users a glance of the current status of long term tests.


13.4.2.2 Built-in MTIE & TDEV Analysis (Optional)

This option enables the test set to analyze up to 72 hours' worth of wander measurement data and compare it against standard masks for a PASS/FAIL assessment, without the need for a PC. The test set may allow the analysis to be performed while the test is still running for run-time verification. Longer test take a lot longer to be analyzed, so the VeEX Wander Analysis PC Software is recommended for tests longer than 24 hours.

Features:

- Provides further post-processing of clock stability data, such as MTIE and TDEV
- Frequency offset calculation and removal for relative TIE analysis
- Standard MTIE and TDEV masks can be selected
- MTIE and TDEV results and mask export to CSV for further report generation using spreadsheets
- Direct PDF report generation to USB


TIE Results

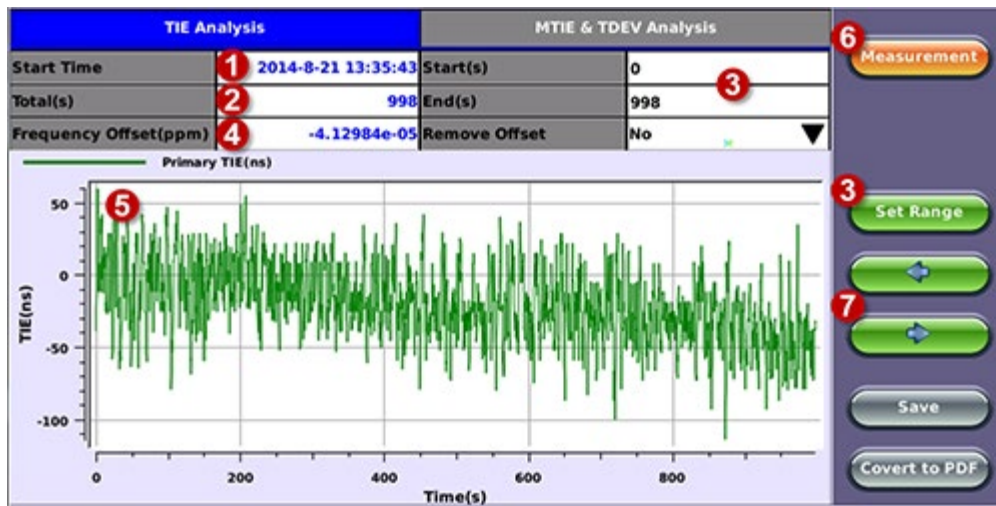

TIE Results

1. Date and Time stamp indicating when the test was started
2. Total of seconds recorded during the test
3. Beginning and end of the data set to be analyzed and displayed in the graph (5) below. Tap in the Start and/or End field and enter the desired time limits, then press the Set Range button to apply these changes.
4. Based on all the TIE measurements captured, the test set automatically calculates any small difference in frequency between the signal under test and the reference clock. Once the frequency difference is known, users can remove it to perform Relative TIE measurements. The offset removal tool is important for field tests when the local reference clock used is highly accurate and stable but not traceable to the PRC in the network core (e.g. a portable frequency reference). Even if the frequency of the local reference is a few ppb (parts per billion) different than the PRC, it can still be used for wander measurements, as long as it is highly stable, because the Offset Removal feature can mathematically remove the know difference and make it as if a traceable reference had been used. Once removed, user can perform relative MTIE (or MRTIE) and TDEV analysis.
5. Auto-scale TIE graph, based on the limits set.
6. Press the Measurement button to return to the current wander measurements
7. Fine cursor controls. User can use the stylus to tap on the screen to position the cursor and then use these arrow buttons to position the cursor and read specific TIE values. The rubber cursor keys can also be used to move the cursor.

MTIE & TDEV Pass/Fail Analysis

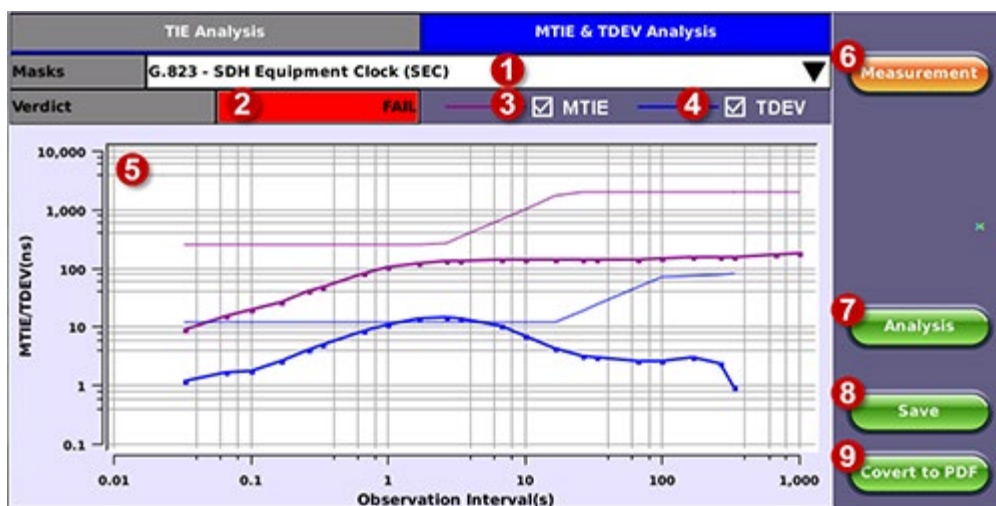


MTIE Results

1. Standard MTIE & TDEV masks selection
2. Pass or Fail indicator, evaluated depending on selected masks
3. MTIE line color indicator and Enable/Disable check box
4. TDEV line color indicator and Enable/Disable check box
5. MTIE & TDEV logarithmic graphs and standard masks

6. Press this button to return to the wander measurements screen
7. Once the mask has been selected, press Analysis to run the MTIE and/or TDEV calculations. Depending on the number of samples collected, this calculation could take a few minutes.
8. Save the MTIE, TDEV and mask calculations in CSV format to a USB Memory stick. The graph can be recreated using a spreadsheet program like Microsoft® Excel, printed as a report or shared via email or any other electronic media
9. Generates a MTIE and TDEV report in PDF format to a USB Memory stick.

MTIE & TDEV Results Exported to CSV

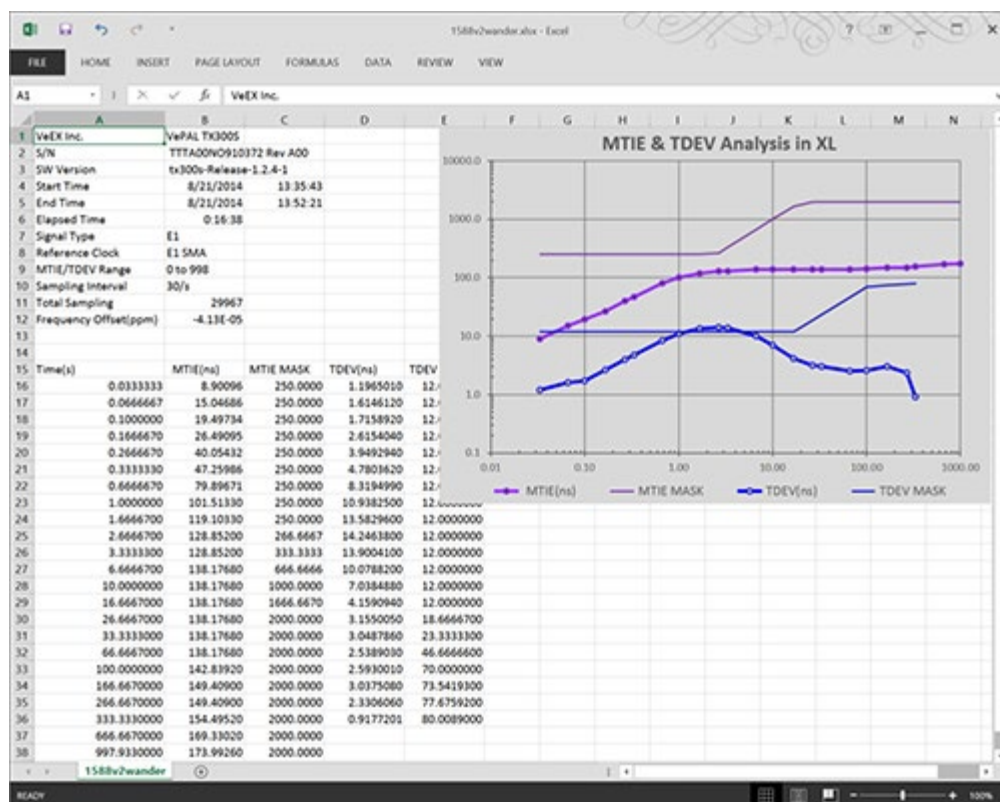


13.4.3 VeEX MTIE/TDEV Wander Analysis PC Software

- Provides further post-processing of clock stability data, such as MTIE and TDEV for long-term tests
- Frequency offset calculation and removal for relative TIE analysis
- Standard and user-programmable masks
- PDF report generation
- Conversion of TIE data file, from VeEX's proprietary format to an open CSV format
- Fully resizable window, to accommodate any screen size and provide detailed zoom levels
- Compact stand-alone Windows® software. It can be carried in the same USB memory as the TIE data. No installation is necessary.

For added convenience, the software doesn't need installation and can be stored on and run from the same USB stick where the wander log files are being stored.

13.4.3.1 TIE Measurement Results


Click on the **Open** button to load the desired MTIE or Phase file and see the TIE behavior on the screen. Use the Compare button to load a secondary trace for comparison purposes. Up to two traces can be displayed and analyzed simultaneously.

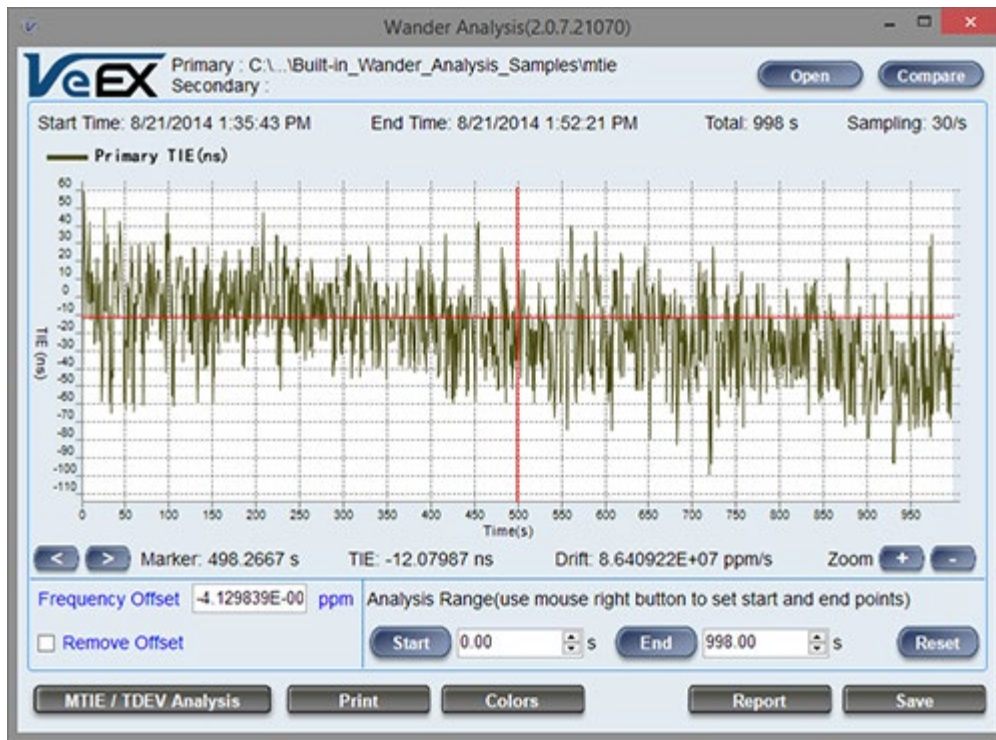

Click on the **MTIE/TDEV** Analysis button to go to the wander analysis function.

13.4.3.2 MTIE & TDEV Analysis


Select the desired tolerance masks from the pull-down list and click on the Analyze button to perform the MTIE and/or TDEV analysis.

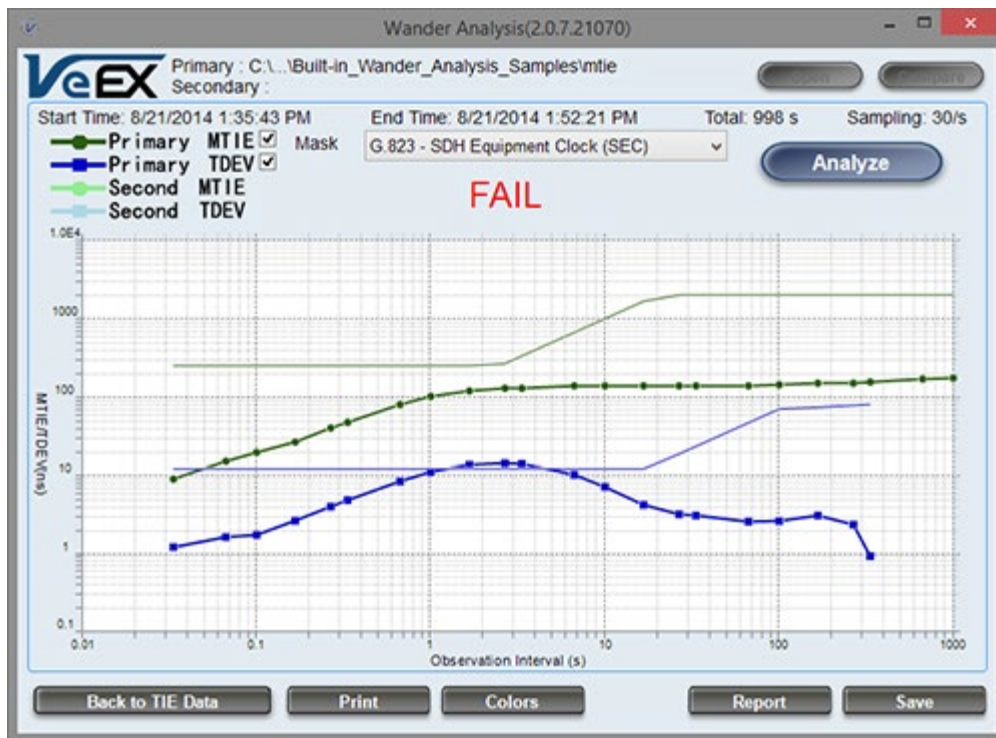


13.4.3.3 MTIE & TDEV Analysis Report in PDF

Click on the **Report** button to generate a copy of the measurement and analysis in PDF format.

File: C:\Users\... \Documents\TX Series\Wander Analysis\TIE log files\E1warmup 28min\mtie
Start Time: 1/17/2012 11:05:30 AM
End Time: 1/17/2012 11:33:13 AM
ET: 1663 s
MTIE/TDEV Range: 0 to 1663
Sampling Interval: 30/s
Total Sampling: 49916
Frequency Offset(ppm): -0.00000003628156 Not Removed
— TIE (ns)

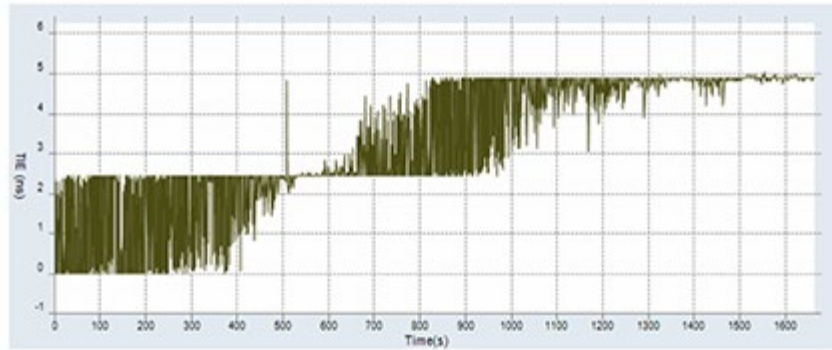

MTIE/TDEV Masks: G.813 - Option 1 SDH Equipment Slave Clock (SEC) at constant temperature ☒ Pass
— MTIE
— TDEV

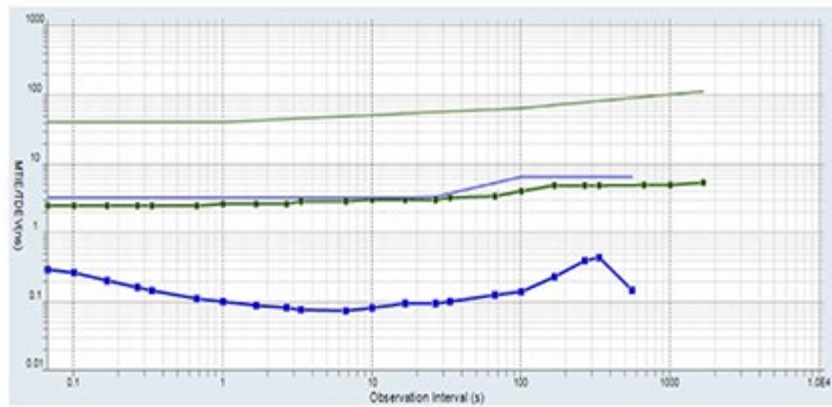

[Go back to top](#) [Go back to TOC](#)


14.0 Ethernet over OTN (EoOTN)

ODU0, ODUflex, OTU2e and OTU1e are commonly used for Ethernet over OTN (EoOTN) transport applications.

14.1 OTU2e & OTU1e Overview

Overclocked OTN Testing

An Overclocked option verifies extended bit rates to ITU-T series G supplement 43 standards. Overclocked OTN compensates for the rate mismatch between 10 GbE LAN and OPU2 payload by raising the overall OTU2 data rate from the standard 10.709 Gbps to fit the 10GbE LAN client signal.

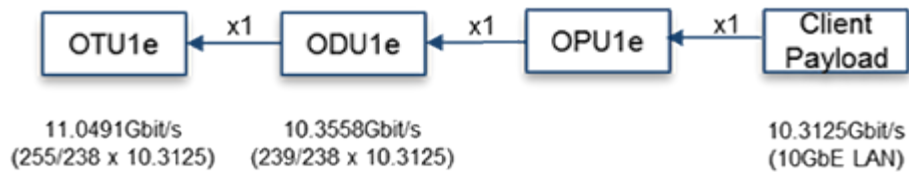

OTU1e (11.0491Gbps) bit rate support (without fixed stuffing)



OTU2e (11.0957Gbps) bit rate support (with fixed stuffing)

Overclocked OTN supports the following two optical line rates for mapping 10GbE LAN signals.

G.709 Interface	Line Rate	SONET/SDH and Ethernet rate	Line Rate
OTU-1	2.666 Gbit/s	STM-16/OC-48	2.488 Gbit/s
OTU-2	10.709 Gbit/s	STM-64/OC-192	9.953 Gbit/s
OTU-1e	11.0491 Gbit/s	10GbE LAN	10.3125 Gbit/s
OTU-2e	11.0957 Gbit/s	10GbE LAN	10.3125 Gbit/s

[Go back to top](#) [Go back to TOC](#)


14.2 OTU2e & OTU1e with Ethernet Payloads

OTU2e (11.1 Gbps), OTU1e (11.05 Gbps), or OTUXe, also referred to as overclocking, is an adaptation technology that increases the frequency (data rate) of the standard OTU2 (10.7 Gbps) interface, in order to better accommodate 10GE payloads (which the standard ODU2 was not capable to achieve transparently). Although the use of physical overclocked interfaces has faded away (and is considered non-standard), the use of the ODU2e container became a permanent part of the G.709 standard.

Tap on the **Setup** button to access the tabs featured in this section.

[Go back to top](#) [Go back to TOC](#)

14.2.1 Signal Setup

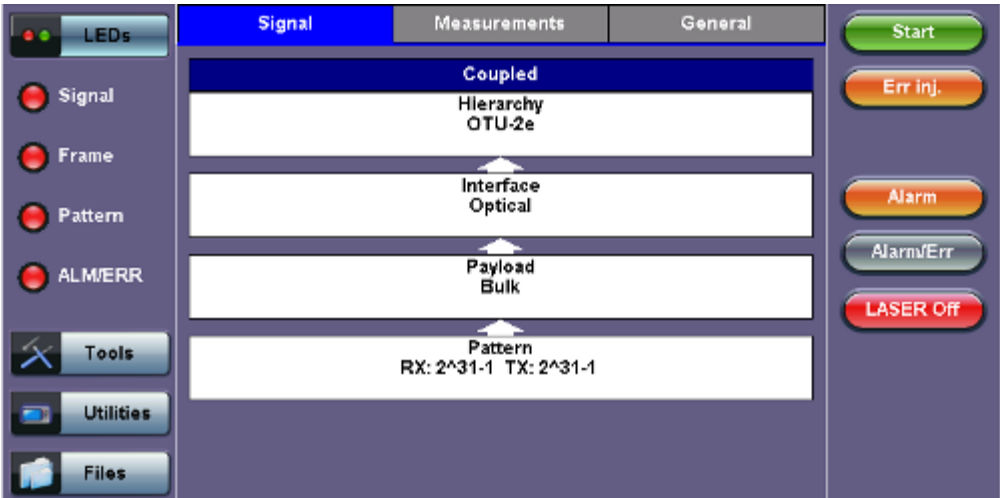

Signal Setup

Tap on the **Signal** tab to set up the Transmitter and Receiver interfaces and associated test parameters prior to running a test.

The TX and RX ports setup can be **Coupled** to share the same configuration. For more complex test scenarios in which the TX and RX port settings need to be different, tap on the blue bar (on top of the Hierarchy box), to select **Independent** mode. This enables the TX and RX to be set to different rates.

[Go back to top](#) [Go back to TOC](#)

14.2.1.1 Hierarchy

To access the physical interface and rate setting, tap on the **Hierarchy** box from the Signal tab.




Hierarchy Setup

- **Test Rate:** Options are OTU-1e and OTU-2e (referring to 11.049G and 11.095G respectively).
- **OTN Mapping:** 10GE SYNC, 10GE ASYNC, and Test pattern (Bulk)
- **Scrambler:** ON/OFF.
- **FEC:** FEC encoder can be ON/OFF

[Go back to top](#) [Go back to TOC](#)

14.2.1.2 Interface

Tapping the **Interface** box opens the Interface Setup screen.

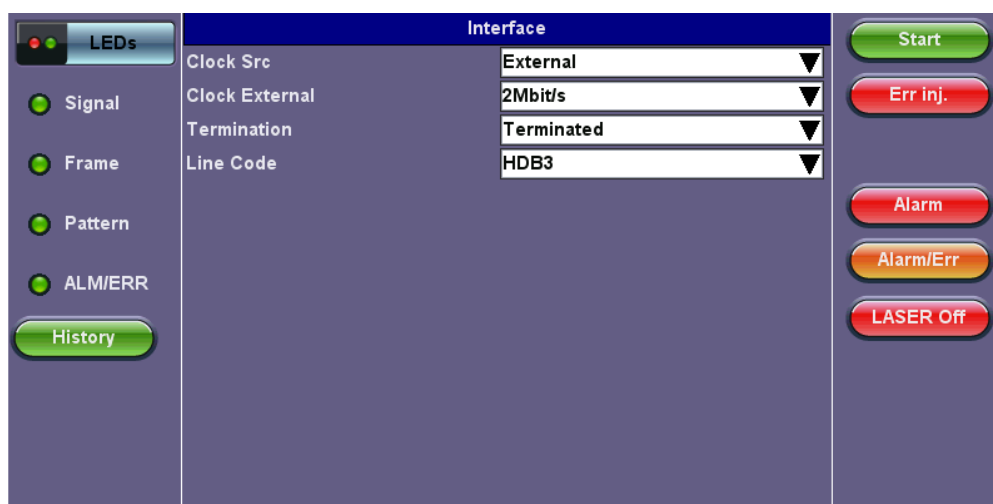


Interface Setup

- **Clock Source:** Internal, External, Rx, or Offset.
 - **Internal clock:** The clock for the transmitter is derived from the internal clock. The internal clock has an accuracy of +/- 3.5ppm conforming to G.812 recommendations.
 - **External clock:** The clock for the transmitter is derived from
 - 2Mbps (or 1.5Mbps) signal
 - 2MHz (or 1.5MHz) BITS clock
 - 64Kbps (co-directional) present on the SMA connector
 - 2Mbps signal present on the RX2 balanced or RX2 BNC unbalancedThese options can be selected from them **Clock Src** box.
 - **Rx:** The clock for the transmitter is derived from the received signal and the jitter of the incoming signal is suppressed.
 - **Offset:** The clock for the transmitter is derived from the internal clock generator. It can change the offset while measurements are running. Use the numeric key to increase and decrease the frequency shift, up to 0.01ppm. Frequency offset: ± 50ppm with 1, 0.1, 0.01ppm resolution.
- **Termination** (2 Mbps only):
 - **Terminated:** The received signal is terminated with a 75 ohm or 100 ohm (120 ohm in E1) impedance enabling the unit to decode the signal over a wide range of cable losses.
 - **Monitor:** To be used when the measurement is made at a Protected Monitoring Point (PMP) of network equipment. The PMP level can range between -20 and -26dB.
 - **Bridge:** Available on in DS1 or E1 mode. Select this mode for a high impedance monitor test or when the receiver is connected directly in parallel to a DS1 or E1 line carrying live traffic. The isolation circuit of the unit protects the DS1 or E1 signal from any possible disruption.
- **Line Code** (1.5 Mbps, 2 Mbps only): HDB3, B8ZS, AMI.

[Go back to top](#) [Go back to TOC](#)

14.2.1.3 Pattern

Tapping the **Pattern** box opens the Pattern Setup screen. The pattern setup will show when OTN Mapping is set to Test Pattern.

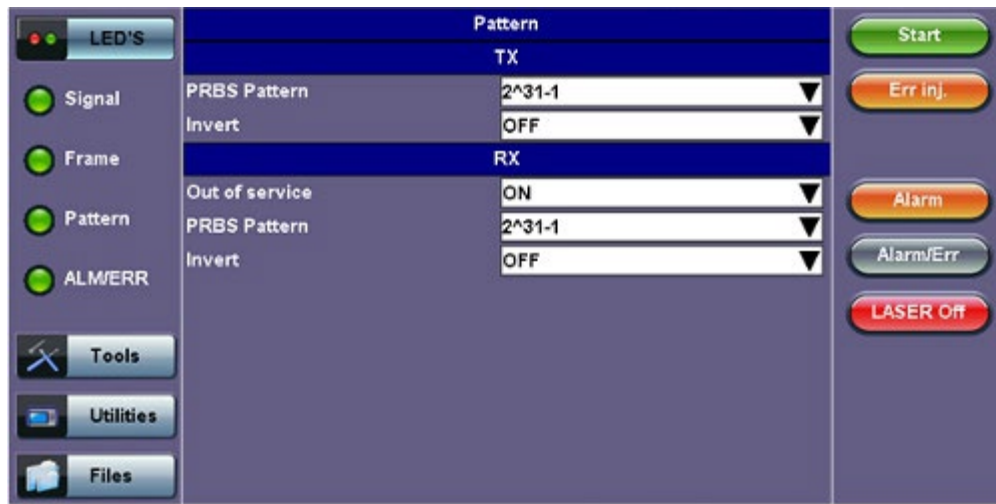


Pattern Setup

- **PRBS Pattern:** Use the pattern drop-down box to select the test pattern which will be inserted into the transmitted signal. Pseudo Random Bit Sequences (PRBS) defined by ITU-T 0.150 and 0.151 standards, fixed words and 24-bit or 32 bit user defined patterns are available. Note, if the 32 bit user pattern entered is incorrect, the default pattern will be 0xFFFFFFFF.
- **Invert:** Inversion of PRBS polarity is also available. Inversion of fixed words is not permitted.

[Go back to top](#) [Go back to TOC](#)

14.2.2 Measurements

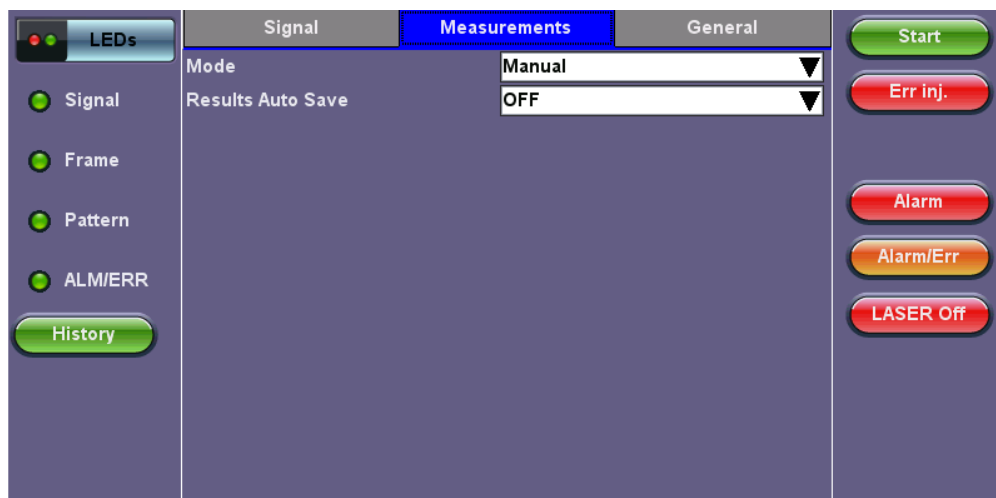

Measurements tab


Manual mode is chosen as the default configuration for starting/stopping the test.

Interval Save/Results Auto Save and Auto Server Upload is available in all modes. Depending on the V300 unit and test module installed, Interval Save will appear as Results Auto Save.

- **Interval Save or Results Auto Save:** Test results automatically save at a specified interval. To enable interval save, select **ON** and enter the **Save Interval** (in minutes).
- **Auto Server Upload:** Automatically uploads results to the server. The unit needs to be connected and registered to an R-Server or FTP-Server to use this function. Selecting a server type will display a message prompt with the option to connect and register to the server.

[Go back to top](#) [Go back to TOC](#)

14.2.3 General

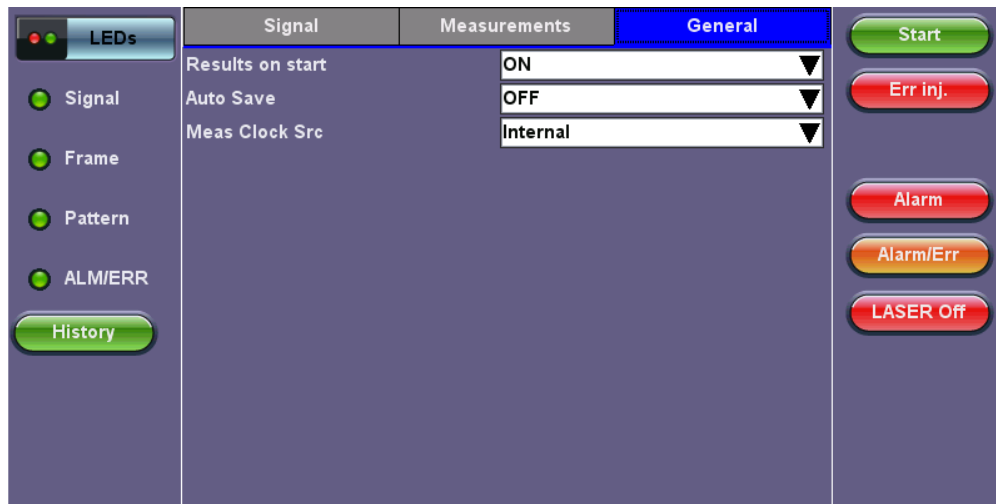

General tab


- **Results on start:** On or Off. Provides an automatic move to Result screen when it starts.
- **Auto Save:** Automatically saves the results file, when the test is stopped.
- **Measurement Clock Source:** Select Internal Clock or Tx Clock Source as the references for rates, frequency and offset measurements.

[Go back to top](#) [Go back to TOC](#)

14.3 OTU2e & OTU1e Results

Accessing Results

Measurements are accessed by tapping the **Results** button in the main menu. The results comprise of a range of tabbed pages, similar to the setup pages. If Ethernet options are enabled, the Results button will not be available on the Home menu. To access

results, press the **OTN Results** button  from the selected Ethernet application.

For information on Ethernet payloads, refer to the [Ethernet](#) section for more information.

For Bulk (PRBS) payloads, refer to [Results: OTN/SDH and OTN/SONET](#).

[Go back to top](#) [Go back to TOC](#)

14.4 OTU2e & OTU1e Ethernet Applications

Accessing Ethernet Applications from OTU-Xe

To enable and access Ethernet applications from the Home menu (RFC 2544, BERT, Throughput), tap on **Setup** [Home menu] > **Hierarchy** > **OTN Mapping** and select 10GE SYNC or 10GE ASYNC from the drop-down menu.



Hierarchy Setup

After configuring the OTU-Xe signal, press the **Home Key**  on the keypad and tap on the desired Ethernet test.



OTN Home Menu with Ethernet Options

Setup and results for Ethernet applications featured in OTU-x (-1e, -2e) are the same as those featured in Ethernet Testing mode. Please refer to the corresponding Ethernet testing section for more information on the following applications:

- 14.4.1 OTU2e & OTU1e with 10GE BERT redirects to [BERT](#)
- 14.4.2 OTN/10GE RFC 2544 Conformance Testing redirects to [RFC 2544 Conformance Testing](#)
- 14.4.3 OTN/10GE Throughput Testing (Multiple Streams) redirects to [Throughput Testing](#)

[Go back to top](#) [Go back to TOC](#)

14.5 ODU0 and ODUFlex Overview

ODU0 (1.25 Gbps) can accommodate a 1GE client transparently. As its name implies, ODUFlex adds flexibility in the data rate and is capable of carrying Nx1.25 Gbps payloads, including Ethernet. Refer to VeEX's OTN Reference Guide, QG20, for a technological overview of ODU0 and ODUFlex.

[Go back to top](#) [Go back to TOC](#)

14.6 ODU0 and ODUFlex Setup Menu

14.6.1 Signal Setup

The screenshot displays the 'Signal Setup for ODUFlex (Ethernet)' configuration window. The 'Signal' tab is selected, showing a hierarchy of settings. The 'Network Type' is set to 'OTN', 'Test Rate' to 'OTU-2', and 'OTN Mapping' to 'ODUFlex (Ethernet)'. The 'Tx Test Rate' is 1.25 Gbps and the 'Rx Test Rate' is 3.75 Gbps. The 'T/S' (Tributary Slots) are configured as 1, 2, 3, 4, 5, 6, 7, 8. The 'Scrambler' and 'FEC' are both set to 'ON'. The 'GFP-F' section shows 'Scrambler' and 'Payload FCS' both set to 'ON'. On the left, there are LED indicators for OTN, ETH, P1, and P2, and buttons for Signal, Frame, Pattern, ALM/ERR, and History. On the right, there are buttons for Err inj., Alarm, Alarm/Err, and LASER Off. The bottom of the screen shows 'Page 1 of 1'.

Signal Setup for ODUFlex (Ethernet)

Soft LED Indicators

For OTN Mapping modes with Ethernet payload testing, **OTN** and **ETH** refer to the test signal health status while **P1** or **P2** indicates the port in operation.


Tap on the **Signal** tab to set up the Transmitter and Receiver interfaces and associated test parameters prior to running a test.

- **Network Type:** This is applicable to OTN links only.
- **Test Rate:** OTU1 (2.7 Gbps) or OTU2 (10.7 Gbps) test interface selection.
- **OTN Mapping:** These are the different test payload options available, including basic PRBS (Bulk) and Ethernet. OTU2 interfaces can carry lower rate payloads (e.g. 1GE) by multiplexing multiple ODU0s (e.g. OTU1-ODU1-ODU0-1GE, OTU2-ODU2-ODU0-1GE, or OTU2-ODU2-ODU1-ODU0-1GE).
 - When Bulk is selected, the test set runs a typical BER test, filling the payload with the selected test pattern.
 - When an Ethernet payload is selected, then ethernet-centric tests such as BERT, Throughput or RFC25544 must be used to test the link and payload.
 - ODUFlex allows flexible selection of multiple ODU0s, contiguous or non-contiguous, within an OTU2 interface, to achieve the desired (or closer) Nx1.25 Gbps rate required for the payload. Tap on the Tx and Rx tributary slot blocks to select the channels and data rate. N = 1 to 8.
- **Tx/Rx Test Rate (ODUFlex Ethernet only):** Tap on the numbered blocks representing tributary slots to select a test rate
- **Tx and Rx ODUk Channels:** Depending on the physical interface (OTU2 or OTU1), the test payload rate and the multiplexing structure, the test set offers these fields to generate and identify the test payload position, within the OTN signal.
- **ODU0 GE, ODU1->0 PRBS, ODU1->0 GE:**
 - Tx/Rx ODU0 Channel
 - **Scrambler:** Turns the standard scrambler function ON and OFF. It is recommended to leave it ON.
 - **FEC:** Turns the standard Forward Error Correction function ON and OFF. It is recommended to leave it ON.
 - **Payload FCS:** When an Ethernet test payload is selected, this turns the standard Frame Check Sum generation and evaluation ON and OFF. It is recommended to leave it ON.
- **ODU0 PRBS and ODU1 PRBS:** PRBS Patterns are configurable on Page 2.

[Go back to top](#) [Go back to TOC](#)

Pattern

The pattern setup appears when OTN Mapping is set to a PRBS Test Pattern.

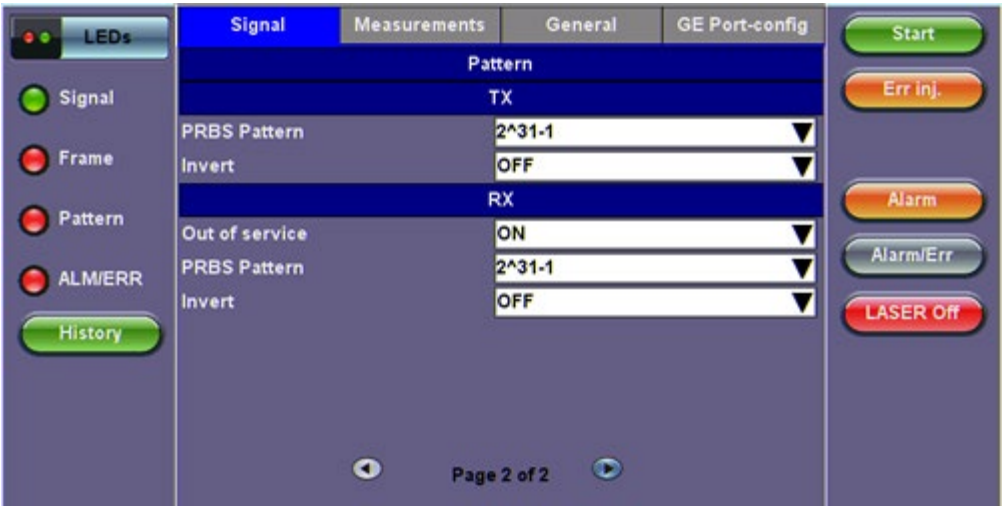


Pattern Setup

- **PRBS Pattern:** Use the pattern drop-down box to select the test pattern which will be inserted into the transmitted signal. Pseudo Random Bit Sequences (PRBS) defined by ITU-T 0.150 and 0.151 standards, fixed words and 24-bit or 32 bit user defined patterns are available. **Note:** If the 32 bit user pattern entered is incorrect, the default pattern will be 0xFFFFFFFF.
- **Invert:** Inversion of PRBS polarity is also available. Inversion of fixed words is not permitted.
- **Out of Service:** Should be selected if the incoming signal is expected to contain a known test pattern. Deselect this option if signal is expected to contain live network traffic – this will disable the pattern detection process and will enable the reporting of LSS.

[Go back to top](#) [Go back to TOC](#)

14.6.2 Measurements

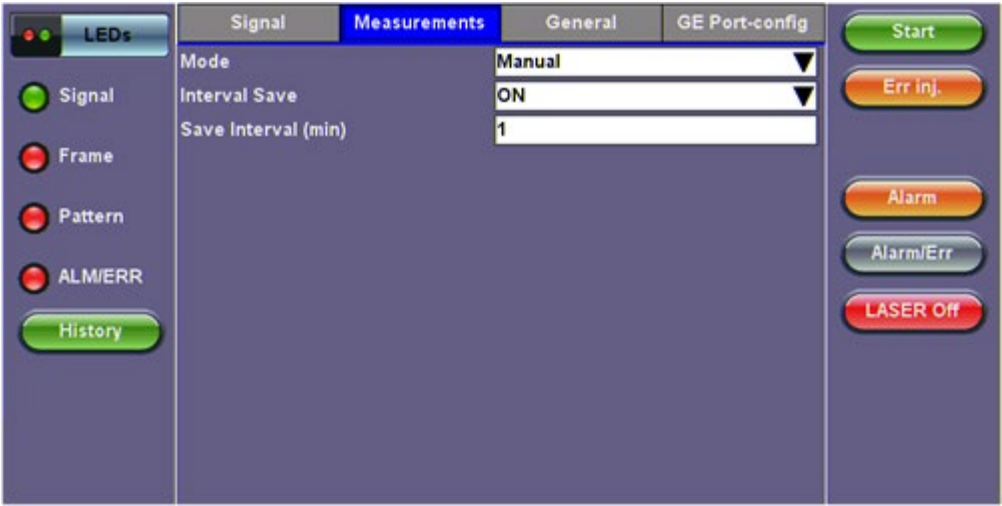

Measurements tab

Manual mode is chosen as the default configuration for starting/stopping the test.


Configure a test to run for a fixed duration or a delayed start. Manual mode is chosen as the default configuration for starting/stopping the test.

Mode: Manual, Timed, and Auto selections are available.

- **Manual:** This is linked to the Start/Stop function on the drop-down menu.
- **Timed:** The test duration can be set by the user. The test duration can be set in seconds, minutes, hours or days. The test is activated by the Start/Stop function on the drop-down menu.
- **Auto:** A predetermined start time can be set by the user. The test duration can be set in seconds, minutes, hours or days. After programming the start time and duration, press the **Start** button and the test will be activated automatically when the programmed start time is reached.


Interval Save/Results Auto Save and Auto Server Upload is available in all modes. Depending on the V300 unit and test module installed, Interval Save will appear as Results Auto Save.

- **Interval Save or Results Auto Save:** Test results automatically save at a specified interval. To enable interval save, select **ON** and enter the **Save Interval** (in minutes).
- **Auto Server Upload:** Automatically uploads results to the server. The unit needs to be connected and registered to an R-Server or FTP-Server to use this function. Selecting a server type will display a message prompt with the option to connect and register to the server.

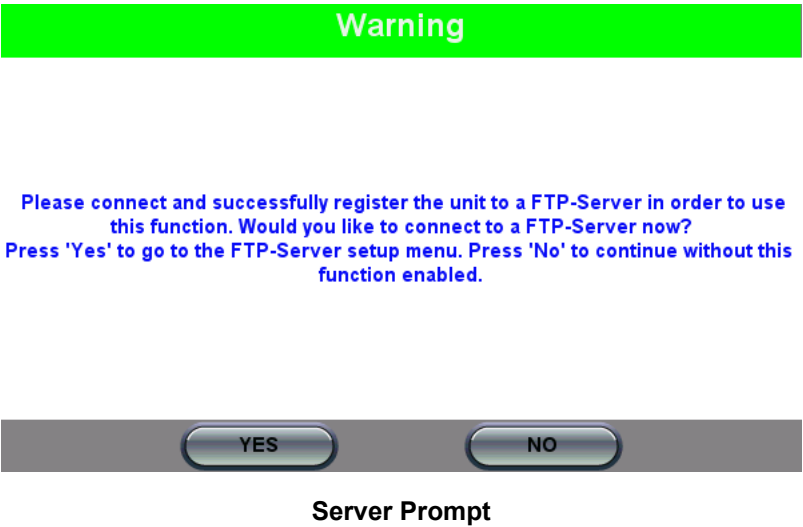

[Go back to top](#) [Go back to TOC](#)


14.6.3 General

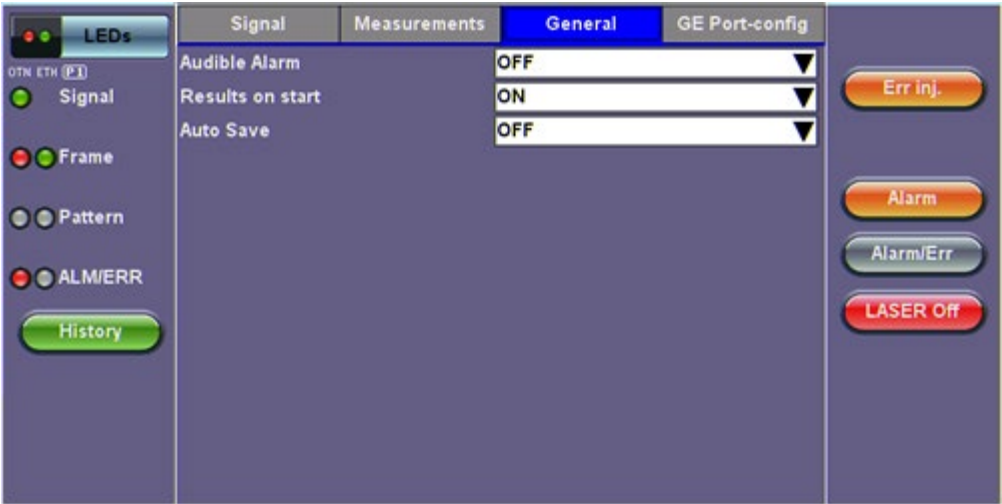

General tab

- **Audible Alarm:** OFF, ON. Unit beeps every time an alarm is detected. This feature is not available on all test sets.
- **Results on start:** On or Off. Provides an automatic move to Result screen when it starts.
- **Auto Save:** Automatically saves the results file.

14.6.4 GE Port-config

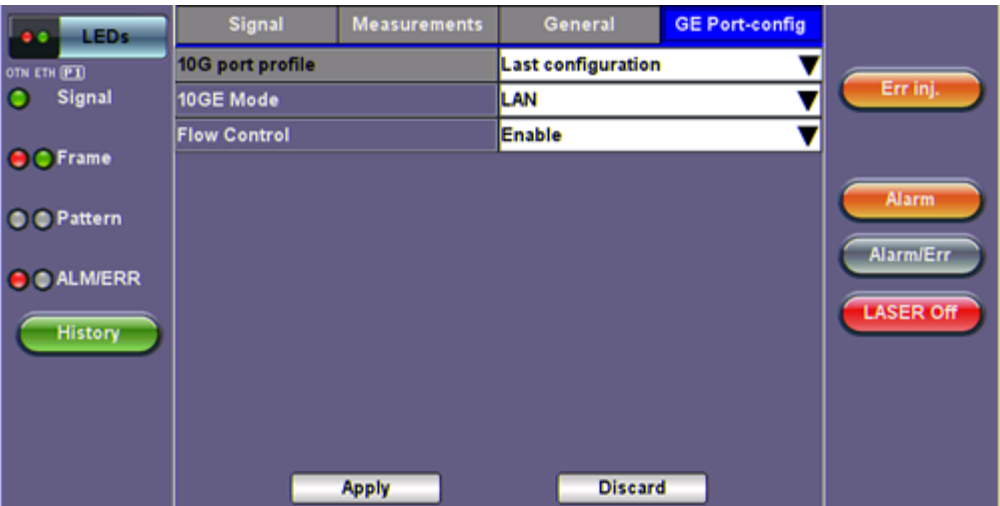

GE Port-config tab

GE Port-configuration is available for GE OTN Mapping.

- **Auto Negotiation:** On or Off. Matches the test set's negotiation settings to those of the link partner.
- **Speed:** Default set to 1000 Mbps.
- **Duplex:** Default set to Full.
- **Flow Control:** TX On, RX On, Both On, or Off.
 - When flow control is enabled, the test set will respond to pause frames received by the link partner by adjusting the transmit rate.
 - When flow control is disabled, the test set ignores all incoming pause frames from the link partner and continues transmitting at the configured transmit rate.

For ODUflex (Ethernet), 10GE Mode LAN and enabled Flow Control are set as default.


[Go back to top](#) [Go back to TOC](#)

14.7 ODU0 & ODUflex Results

Tap the green **Start** button to view the OTN Results page.

For information on Ethernet payloads, refer to the [Ethernet](#) section for more information.


For Bulk (PRBS) payloads, refer to [Results: OTN](#).

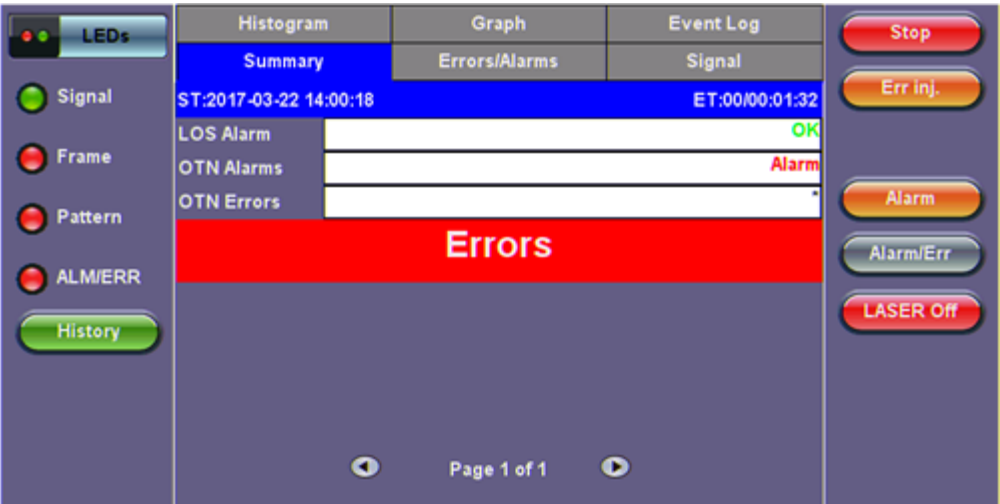

Results

14.8 OTN Tools

The OTN Tools applications featured in ODU0 and ODUflex Test Mode are the same as the ones featured in OTN/SDH Single and Dual Test Modes. Refer to [OTN Tools](#) in the OTN/SDH section for more information on these test applications.

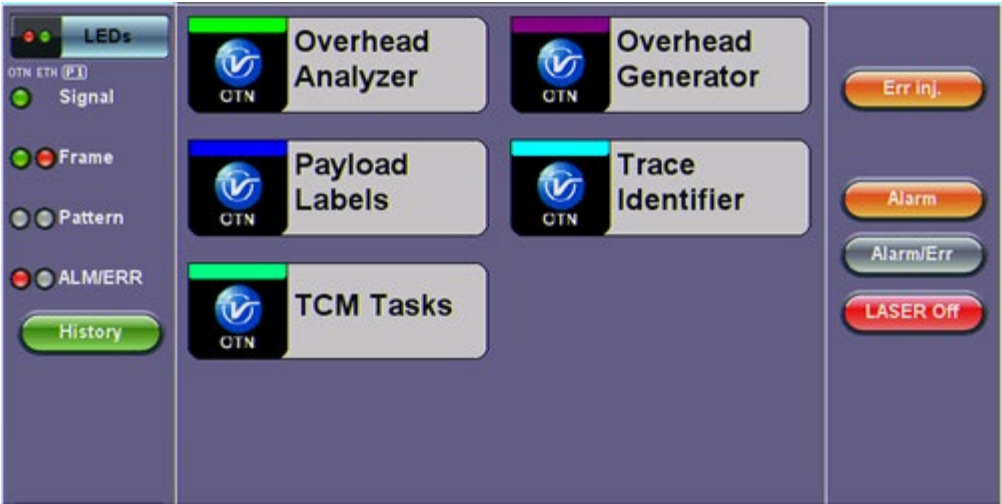

OTN Tools in ODU0 and ODUflex Test Mode

[Go back to top](#) [Go back to TOC](#)

14.9 Alarm/Error

The Alarm/Error application featured in ODU0 and ODUFlex Test Mode is the same as the application in OTN/SDH Single and Dual Test Modes. Refer to [Alarm/Error](#) in the OTN/SDH section for more information.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Alarm

Alarm ModeOTN

OTN Alarm TypeOTN LOS

Alarm FlowCount

Alarm Length1s

Error

Error ModeOTN

OTN Error TypeCOR FEC

Error FlowSingle

Stop

Err Inj.

Alarm

Alarm/Err

LASER Off

Alarm/Error in ODU0 and ODUFlex Test Mode

[Go back to top](#) [Go back to TOC](#)

15.0 Ethernet

- [Setup](#)
 - [Test Port Selection](#)
 - [Port Setup](#)
- [Measurement Settings](#)
- [MX Discover and Control](#)
- [OAM Discover](#)
- [ViPAG/V-Route Router Test](#)
 - [ViPAG/V-Route Setup](#)
 - [ViPAG/V-Route Results](#)

15.1 Ethernet Setup

15.1.1 Test Port Selection

Test mode, test port(s), and network settings are required prior to performing any measurements or applications.

Ethernet test modes are accessed by selecting the Test Application button at the top of the screen . Tap on a technology group then select a test interface. Depending on interface options purchased, the following selections are possible:

Test Port Selection TX300S


This menu is accessed via the Test Port button located at the top right hand side of the screen. Depending on interface options purchased, the following selections are possible:

- Single port 10GE (10 GE XFP Port 1)
- Single Copper port 1GE (1 GE Copper Port 1)
- Single Fiber port 1GE (1 GE Fiber Port 1)
- Dual port 10GE and Copper 1GE (10 GE XFP Port 1 and 1 GE Copper Port 2)
- Dual port 10GE and Fiber 1GE (10 GE XFP Port 1 and 1 GE Fiber Port 2)
- Dual Copper port 1GE (1 GE Copper Port 1 and 1 GE Copper Port 2)
- Dual Fiber port 1GE (1 GE Fiber Port 1 and 1 GE Fiber Port 2)
- Dual Copper Fiber port 1 GE (1 GE Copper Port 1 and 1 GE Fiber Port 1)
- Pass Through Monitor Copper 1 GE (1 GE Copper Port 1 and 1 GE Copper Port 2)
- Pass Through Monitor Fiber 1 GE (1 GE Fiber Port 1 and 1 GE Fiber Port 2)

TX320s/TX340s

- Single/Dual Fiber port 1GE (1GE SFP+)
- Single/Dual Fiber port 10GE (10GE SFP+)
- Single/Dual Fiber port 1GE Pass Through Monitor (1GE SFP+ Port 1/2)
- Single/Dual Fiber port 10GE Pass Through Monitor (10GE SFP+ Port 1/2)
- Single/Dual Fiber port 1GE Layer 4 Testing (1GE SFP+ Port 1/2)
- Single/Dual Fiber port 10GE Layer 4 Testing (10GE SFP+ Port 1/2)
- Single/Dual Fiber port 1GE V-Suite Testing (1GE SFP+)
- ViPAG/V-Route Testing
- Single/Dual Fiber port 1GE 1588v2/PTP Through Mode & PDV Analysis Testing (1GE SFP+ Port 1/2)
- Single/Dual Fiber port 10GE 1588v2/PTP Through Mode & PDV Analysis Testing (10GE SFP+ Port 1/2)
- Single/Dual Copper port 1GE (1GE RJ45)
- Single/Dual Copper port 1GE Pass Through Monitor (1GE RJ45)
- Single/Dual Copper port 1GE Layer 4 Testing (1GE RJ45)
- Single/Dual Copper port 1GE V-Suite Testing (1GE RJ45)
- Single/Dual Copper port 1GE V-Route (1GE RJ45)
- Single/Dual Copper port 1GE 1588v2/PTP Through Mode & PDV Analysis Testing (1GE SFP+)

After selecting the test interface, tap **OK** or **Accept** button (depending on your interface) located at the bottom of the pop-up window.

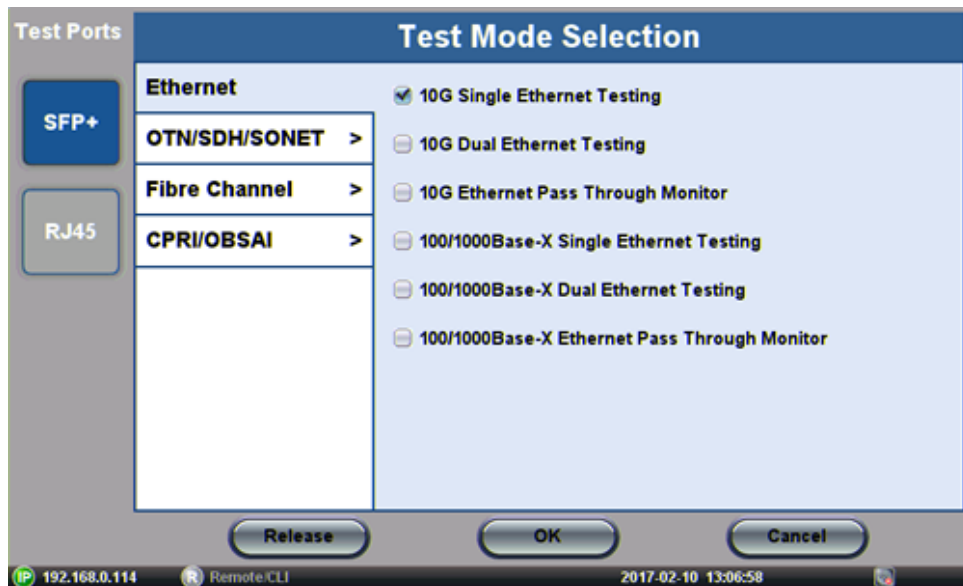

Test Mode Selection

The Test Mode Selection screen may appear differently depending on the unit you are using.

When the dual port interfaces and software options are enabled, the test module can operate a combination of two ports at the same time.



Port selection buttons are available on the left side panel below the History tab.

The configuration parameters (header, bandwidth, etc. for each application (on each of the ports) are completely independent from one another. All test feature combinations are allowed and completely independent (Loopback, BERT, Throughput, RFC2544, VSAM) in dual port operation. However, some advanced tools, such as IPTV, VLAN scan, Packet Capture, etc. are available in single port testing mode only. The user interface will provide an error message when a feature is not available in dual port operation.

When the soft LEDs are steady green, this indicates that the module is ready to perform different tests. This may require turning the **LASER On** button for optical interfaces or tapping the **History** tab to clear blinking LED reminders of past Errors and Alarms (test results are not affected).

[Go back to top](#) [Go back to TOC](#)

15.1.2 Port Setup



Port setup or test interface configurations are accessed via the **Setup** menu located on the Home page. The available configuration settings depend on the interface selected in the Test Mode selection.

Select the operation mode and the interfaces that will be used to carry out tests. Once the operating mode and interfaces are selected, independently configure the auto-negotiation, speed, duplex, and flow control settings for each port (where applicable).

After configuring settings, tap **Apply** to save changes. Tap **Discard** to revert to previous selections.

[Go back to top](#) [Go back to TOC](#)

Port	Measurement
Port Selection	1000Base-X
Port 1 fiber profile	Last configuration
Auto Negotiation	On
Speed	1000 Mbps
Duplex	Full
Flow Control	Both On

10/100/1000Base-X and 10/100/1000Base-T Port Setup

10/100/1000Base-X and 10/100/1000Base-T Port

- **Auto Negotiation:** On or Off. Matches the test set's negotiation settings to those of the link partner
 - **Speed (only when Auto Negotiation is Off):** 10 Mbps, 100 Mbps, or 1000 Mbps
 - **Duplex (only when Auto Negotiation is Off):** Half or Full
 - **Advertisement (only when Auto Negotiation is On):** Default-All or Custom. Custom options include 10/100/1000M/Half or 10/100/1000M/Full.
 - **Flow Control:** TX On, RX On, Both On, or Off
 - When flow control is On, the test set will respond to pause frames received by the link partner by adjusting the transmit rate
 - When flow control is Off, the test set ignores all incoming pause frames from the link partner and continues transmitting at the configured transmit rate
 - **MDIX: Off, On, or Auto.** When MDIX is set to Auto, the test set detects the required cable connection type and configures the port connection properly for interfacing the partner device, eliminating the need for crossover cables.
 - **Clock Offset (ppm):** The frequency may be offset in parts per million
 - **Transmit clock offset (10/100/1000Base-T only):** Disabled or Enabled. Due to hardware limitation, transmit clock offset is only valid when PHY is working on Master mode. Clock offset measurement is only valid when PHY is working on Slave mode.
 - **PHY working mode:** Master or Slave.
- Synchronous Ethernet:** (SyncE) Disabled or Enabled. When Enabled, makes the signal traceable to an internal or external reference clock.



For information on configuring SyncE operation, see Port Page 2 - Mode Selection in the Synchronous Ethernet section

[Go back to top](#) [Go back to TOC](#)

LED'S	Port	Measurement
Tools	Port Selection	1000Base-X
Utilities	Port 1 fiber profile	Last configuration ▼
Files	Auto Negotiation	On ▼
	Speed	1000 Mbps
	Duplex	Full
	Flow Control	Both On ▼
		LASER On/Off MX Discover
		Apply Discard

1 GE Fiber Port Setup

1 GE Fiber Port

- **Auto Negotiation:** On or Off. Matches the test set's negotiation settings to those of the link partner
- **Speed:** Default set to 1000 Mbps
- **Duplex:** Default set to Full
- **Flow Control:** TX On, RX On, Both On, or Off
 - When flow control is enabled, the test set will respond to pause frames received by the link partner by adjusting the transmit rate
 - When flow control is disabled, the test set ignores all incoming pause frames from the link partner and continues transmitting at the configured transmit rate


[Go back to top](#) [Go back to TOC](#)

LEDs	Port	Status	Measurement
Tools	Port Selection	10/100/1000Base-T	
Utilities	Port 1 copper profile	Last configuration ▼	
Files	Auto Negotiation	On ▼	
	Advertisement	Default-ALL ▼	
	Flow Control	Both On ▼	
	MDIX	Auto ▼	
		MX Discover	
		Apply Discard	

1 GE Copper Port Setup

1 GE Copper Port

- **Auto Negotiation:** On or Off. Matches the test set's negotiation settings to those of the link partner.
 - **Speed** (only when Auto Negotiation is Off): 10 Mbps, 100 Mbps, 1000 Mbps.
 - **Duplex** (only when Auto Negotiation is Off): Half or Full.
 - **Advertisement** (only when Auto Negotiation is On): Default-All or Custom. Custom options include 10/100/1000M/Half or 10/100/1000M/Full.
- **Flow Control:** TX On, RX On, Both On, or Off.
 - When flow control is On, the test set will respond to pause frames received by the link partner by adjusting the transmit rate.
 - When flow control is Off, the test set ignores all incoming pause frames from the link partner and continues transmitting at the configured transmit rate.
- **MDIX:** Off, On, or Auto. When MDIX is set to Auto, the test set detects the required cable connection type and configures the port connection properly for interfacing the partner device, eliminating the need for crossover cables.

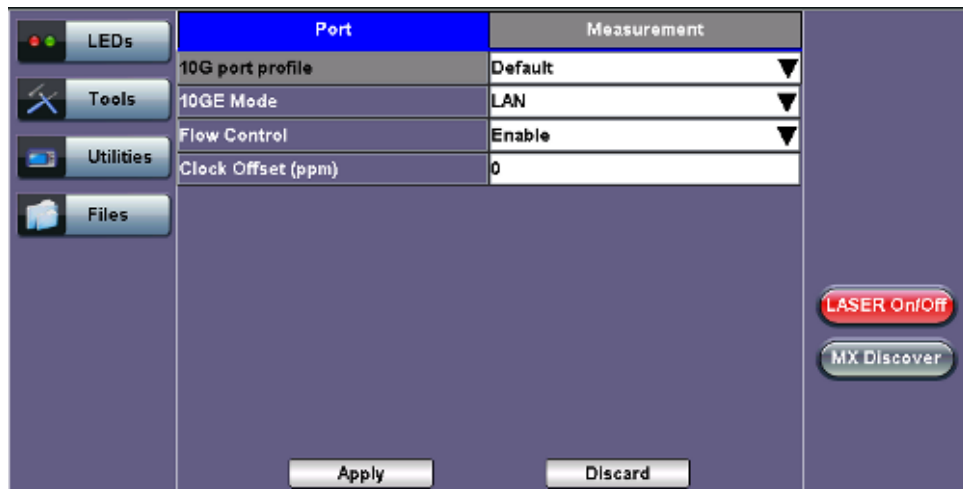

The screenshot shows the '10GE Port Setup' window. On the left is a sidebar with buttons for 'LEDs', 'Tools', 'Utilities', and 'Files'. The main area is divided into two columns: 'Port' and 'Measurement'. The 'Port' column contains settings for '10G port profile' (Default), '10GE Mode' (LAN), 'Flow Control' (Enable), and 'Clock Offset (ppm)' (0). The 'Measurement' column is empty. At the bottom are 'Apply' and 'Discard' buttons. On the right side of the window are two buttons: 'LASER On/Off' and 'MX Discover'.

Port	Measurement
10G port profile	Default
10GE Mode	LAN
Flow Control	Enable
Clock Offset (ppm)	0

10GE Port Setup


[Go back to top](#) [Go back to TOC](#)

10 GE Port

- **10GE Mode:** LAN or WAN
- **WIS Mode** (only available in WAN mode): SDH or SONET
- **Flow Control:** Enable chosen as default option
- **Clock Offset (ppm):** The frequency may be offset in parts per million
- **Link Fault Response:** Disable or Enable (also enables Local link and failure, remote, failure)
- **Transmit Ignore Link Status:** On/Off
- **Synchronous Ethernet:** (SyncE) Disabled or Enabled. When Enabled, makes the signal traceable to an internal or external reference clock.

 For information on configuring SyncE operation, see Port Page 2 - Mode Selection in the Synchronous Ethernet section.

Status

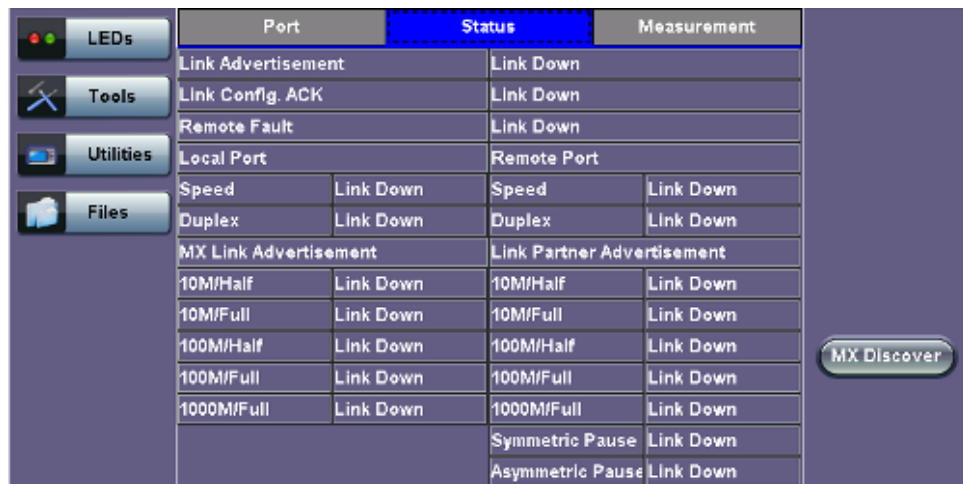

The screenshot shows the 'Status' tab in the configuration interface. The sidebar is the same as in the previous screenshot. The main area is divided into three columns: 'Port', 'Status', and 'Measurement'. The 'Status' column is highlighted. The 'Port' column contains settings for 'Link Advertisement', 'Link Config. ACK', 'Remote Fault', 'Local Port', 'Speed', 'Duplex', 'MX Link Advertisement', and 'Symmetric Pause'. The 'Status' column contains 'Link Down' for the first four items, and 'Link Down' for the last three. The 'Measurement' column contains 'Link Down' for the first four items, and 'Link Down' for the last three. At the bottom are 'Apply' and 'Discard' buttons. On the right side of the window is a button: 'MX Discover'.


Port	Status	Measurement
Link Advertisement	Link Down	
Link Config. ACK	Link Down	
Remote Fault	Link Down	
Local Port	Remote Port	
Speed	Link Down	Speed
Duplex	Link Down	Duplex
MX Link Advertisement	Link Partner Advertisement	
10M/Half	Link Down	10M/Half
10M/Full	Link Down	10M/Full
100M/Half	Link Down	100M/Half
100M/Full	Link Down	100M/Full
1000M/Full	Link Down	1000M/Full
	Symmetric Pause	Link Down
	Asymmetric Pause	Link Down

Status tab

The **Status** tab lists current port settings. Please note that the Status tab is only available if a fiber port option is selected from the **Test Port Selection** menu.

 Test units shipped before January 2012 support up to +/- 50 ppm offset only. Units shipped from 2012 onwards, support up to +/- 150 ppm offset. This applies to both 10GE WAN and 10GE LAN modes.

15.1.3 Measurement Settings

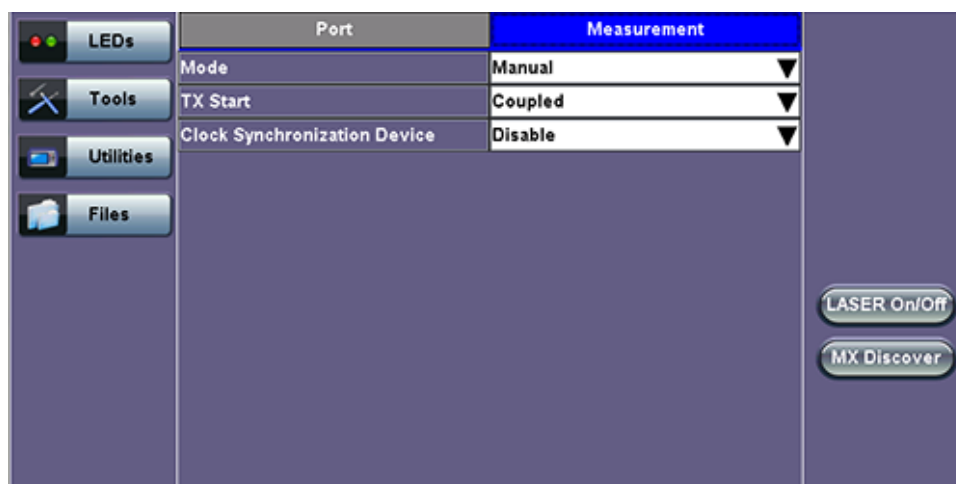

10GE Measurement Setup

The measurement and event log settings are configured in this screen.

- **Mode:** Manual, timed, or auto mode are available.
 - **Manual mode:** Starts and stops the measurements manually.
 - **Timed mode:** Defines the duration of the test; after the test is started, the test will run for the configured duration and stop automatically.
- **Event Log:** Logs up to 1000 event entries. If there are more than 1000 events,
 - **Circular** keeps the latest entries. The oldest entry will be deleted so that the new event can be added.
 - **Blocked** stops recording new events after 1000 entries. The latest entries will not be logged.
- **TX Start:** Separated or Coupled. Configures how the measurements are started when in BERT and Multiple Streams test modes.
 - **Separated:** Independent control (Start/Stop) of the transmitter is enabled. At the start of the test only the receiver is turned on -- the user must start the transmitter manually.
 - **Coupled:** Transmitter and receiver are turned on at the same time, and the Tx and Rx measurements start at the same time at the start of the test.
- **Clock (ToD) Synchronization Device:** Disable, GPS, 1PPS, Local, Atomic 1PPS. Select the device to be used to synchronize the clock to perform the One Way Delay measurement.

When a device is selected the following fields can be seen on the screen:

- **External Clock Input:** 1pps (SMA Port). The SMA Port must be used for the 1pps signal.
 - **UTC ToD:** Displays the Coordinated Universal Time (UTC) Time of Day once it is acquired.
 - **Clock Sync Time:** Time field to configure the UTC ToD that both test sets, carrying out a one-way delay test between each other, will be synchronizing their internal time stamping at.
- Note:** Both test sets must be configured to the same Clock Sync Time.



Clock Synchronization is not supported on all the test set models. Check with customer care for availability.

- **Gratuitous ARP:** ON or OFF. If set to ON, a gratuitous ARP is performed. When the test port has an IP connection, an ARP request will be transmitted at regular intervals to keep the router/gateway ARP table aware of the test set's IP address. This setting is useful for long-term L3 routed testing.
- **Results Auto Save:** ON or OFF. If set to ON, results will be saved automatically.

15.1.4 MX Discover and Control


Before proceeding with MX Discover or Control, be sure to assign an IP address to each test port. To assign an IP address, proceed to the home menu and select the IP button.

 If using OAM Discover, it is unnecessary to assign an IP address to the local or remote unit.

Using MX Discover

MX Discover enables the test set to discover other VeEX VePal test sets and devices with an assigned IP address on the same subnet. To discover other devices using **MX Discover**:

1. Tap on the **MX Discover** button and then press **Discover**.
2. A list of discovered devices on the same IP subnet will appear. Select a unit to connect to from the list of devices.
3. Tap on **Close** to exit the window.

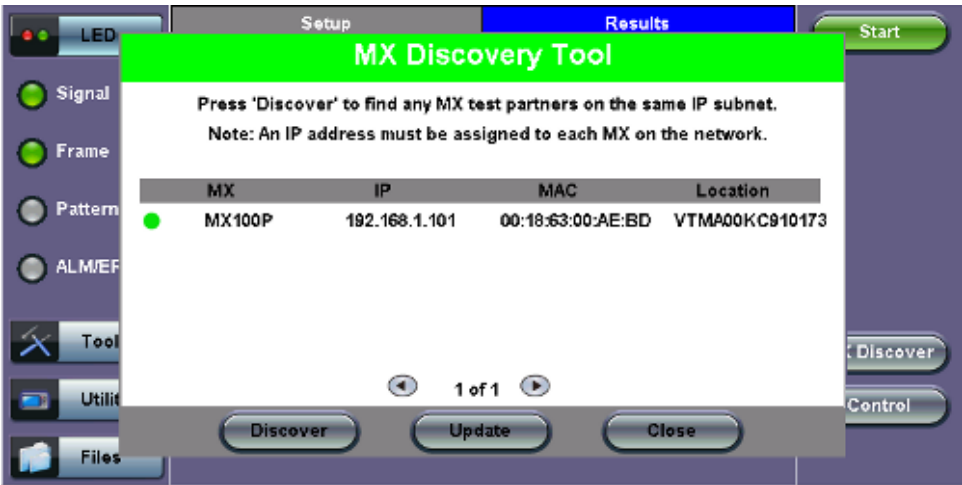

MX Discovery Tool


Loop Control

The **Loop Control** button becomes available on the right side menu when any Ethernet application (V-SAM, RFC 2544, Throughput, BERT) is selected. Press the **Loop Control** button to configure loop up and loop down commands necessary to control a far-end unit. The loop up command contains information about the test layer. Looping back test traffic is possible as follows:

- **Layer 1:** All incoming traffic is looped back unchanged
- **Layer 2:** All incoming unicast traffic is looped back with the MAC source and destination addresses swapped
- **Layers 3 & 4:** All incoming unicast traffic is looped back with MAC/IP source and destination addresses swapped

To configure loopback control on the unit, select from the following options under **Partner Address**:

- **MX Discovered:** Lists MX discovered devices. Select from the list of discovered devices to loop up/down
- **User Defined:** Input the destination IP address of the far-end device
- **OAM Discover:** Lists OAM discovered devices. Select from the list of discovered devices to loop up/down

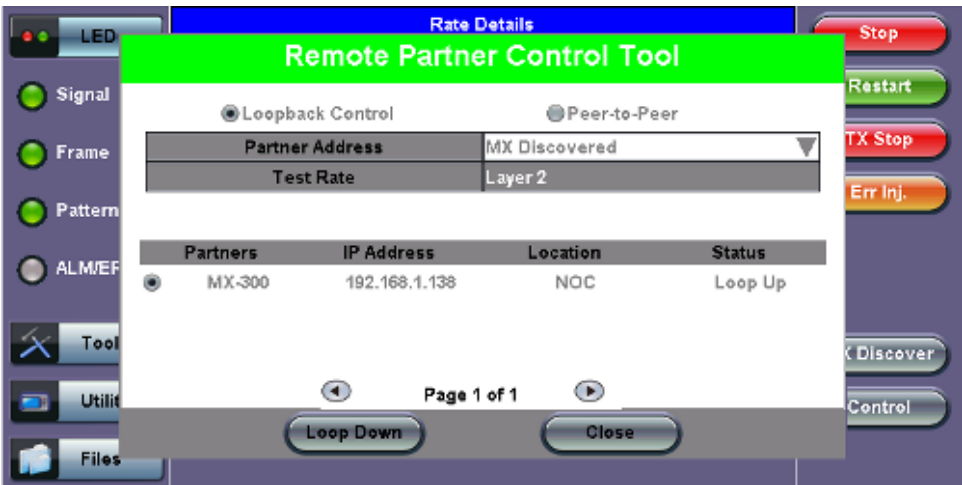

Remote Partner Control

The **Peer-to-Peer** option is available only for RFC 2544 testing. For more information on **Peer-to-Peer** mode, please see [Peer-to-Peer and Asymmetric Testing](#).


[Go back to top](#) [Go back to TOC](#)

OAM Discover

Like MX Discover, OAM Discover can also be used to discover far-end test units without manually configuring the local or remote unit's destination address. If OAM is enabled on the test set, any link partner that supports the IEEE 802.3ah protocol will be discovered automatically and displayed under the **OAM Discover** tab. To access OAM Discover:

- 1. Go to **Throughput > OAM > Link OAM** and tap on the 802.3ah check box to activate Link OAM. Select Active from the **OAM Mode** drop-down menu (only Active mode can send loop commands).
- 2. Tap **OAM Loopback Loop Control** button and select the **OAM Discover** tab to see a list of discovered OAM devices. You can also see a list of OAM devices by tapping the **Loop Control** button and selecting **OAM Discover** tab. Select an OAM device and press **Loop Up** to send a loop up command to the selected remote unit.

For detailed descriptions of Discovery Capabilities, Link Events, and Notification Settings, please see [Ethernet OAM Testing](#).

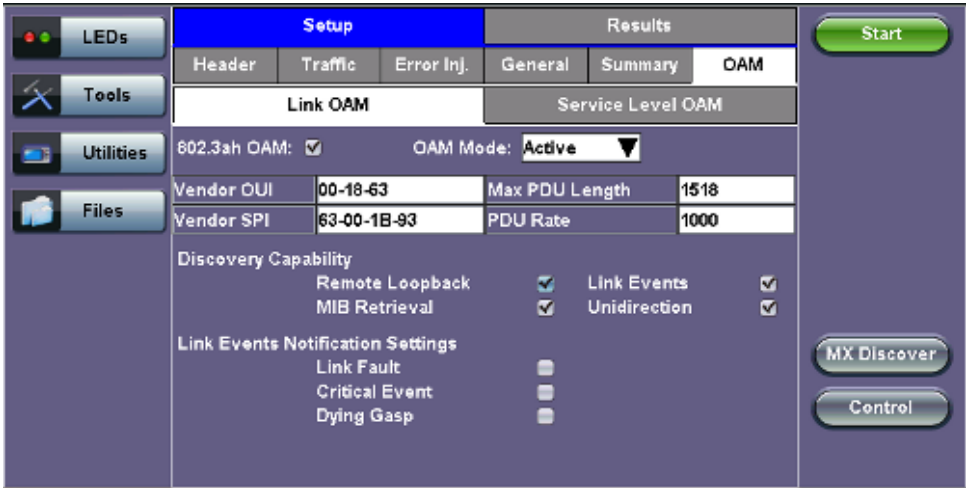

Activating 802.3ah Link OAM

[Go back to top](#) [Go back to TOC](#)

15.1.5 ViPAG/V-Route Test

ViPAG/V-Route can be accessed from the Test Mode menu. Refer to [Test Port Selection](#) for instructions on selecting Ethernet test modes.

The following selections are available on the unit:

- **SILO/Router Wrap Test:** "On local unit" testing on a single unit
- **End-to-End Test (VeEX to VeEX):** "With remote test unit" testing
 - Controller: Carries out the peer-to-peer/asymmetric handshaking, loads the remote profile to the remote unit, and initiates the test
 - Responder: Establishes IP connectivity and waits for the controller to connect/initiate the test
- **End to Loopback Test:** One unit generates test traffic, while the other unit is set to loopback mode.

[Go back to top](#) [Go back to TOC](#)

ViPAG/V-Route Setup



Note: Quick Test menu options may vary depending on the unit you are using.

Quick Test Setup Welcome Page

Quick Test Setup

Fill out each screen and press **NEXT** to proceed to the next page or **Previous** to go back to the previous screen.

- **Select the test type:** SILO/Router Wrap Test, End-to-End Test (VeEX to VeEX), End to Loopback Test
- **Step 1:** Select the router test interface. "Local unit" denotes a router wrap test while "end-to-end" conducts an end-to-end test. For End-to-End testing, select whether this unit will be a **Controller** or **Responder**. For **End to Loopback** testing, select whether this unit will be Generating Traffic or in Loopback Mode. The frame size for each option listed below is 256 bytes. The following options are available:
 - 1G to 1G: 1G interface is always set to 100% of the line rate.
 - 1G to 10G: 10G interface is always set to 100% of the line rate.
 - 1G-10G with remote test unit: For Copper or Fiber, Controller is set to 100% of the line rate; remote is 100% of the line rate.
 - 10G to 10G: 10G interface is always set to 100% of the line rate.
 - 10G to 1G: 1G interface is always set to 10% of the line rate.
- **Step 2 (SILO/Router Wrap only):** Select the Layer.
- **Step 3:** Configure port settings for port 1. Refer to [Port Setup](#) for detailed instructions.
- **Step 4:** Configure port settings for port 2.
- **Step 5:** The wavelength for the test ports are displayed. The **Change** button turns off the laser on the optical ports and pauses setup.
- **Step 6:** Enter the local IP address for port 1. Press **Apply** and configure the subnet mask address. Press **Apply** and enter the gateway address. At the end of Step 4, the screen will display a summary of the IP address, Subnet, and Gateway. Tap on any of the corresponding fields to make any changes, if necessary.

- **Step 7:** Enable up to 3 VLAN tags. Configure ID, Priority, Type, and Drop Eligible.
- **Step 8:** Enter the IP address, Subnet, and Gateway for port 2, following the same procedure detailed in Step 4.
- **Step 9:** Enter the frame size. The default frame size for each option is 256 bytes.
- **Step 10:** Review the settings for both ports. Press **Start** to begin testing. Pressing **Reconfigure** will restart the Quick Test Setup and return the screen to Step 1.

LEDs

P1 P2

Signal

Frame

Pattern

ALM/ERR

History

Quick Test

Setup

Results

SILO/Router Wrap Test

Step 10

Frame Size

256 bytes

10GE LAN P1 Configuration - Fiber 1310 nm

IP Address

192.168.1.211

#1 ID 12 Priority 3

Subnet

255.255.255.0

VLAN #2 ID N/A Priority N/A

Gateway

192.168.1.1

#3 ID N/A Priority N/A

10GE LAN P2 Configuration - Fiber 1310 nm

IP Address

192.168.1.212

#1 ID 12 Priority 3

Subnet

255.255.255.0

VLAN #2 ID N/A Priority N/A

Gateway

192.168.1.1

#3 ID N/A Priority N/A

Please review configuration.

Previous

Start

Reconfigure

Step 10: Review Configuration

Quick Test View

After starting the test, the Error Injection button for each port becomes available and the screen displays Quick Test view and the following results for both ports:

- Link Up/Down status
- Optical Power in dBm
- ARP - Pass/Fail status
- PING - Pass/Fail status
- Round Trip Delay (To Ping Round Trip Test Time) measurement in ms
- Throughput - Pass/Fail status
- Transmitted Rate
- Received Rate

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Quick Test

Setup

Results

VIPAG

10G Traffic Genera

Stopped

2017-05-24 13:09:24

Traffic Generator: 10GE LAN 1310 nm

Link

Up

Optical Power

-2.15 dBm

ARP

PASS

10G LAN Traffic Generator to Remote Loopback

PING

PASS

RTD

0.913 ms

Throughput

PASS

Transmitted Rate

10.000G

Received Rate

1.637G

Errors Detected

Bit Errors CRC Errors IP Chk Error Lost Frames

LASER Off


Restart

Save

Reconfigure

Quick Test View


In case of link or IP related test failure, ViPAG will indicate the possible failure in red text and give instructions on what to check for.

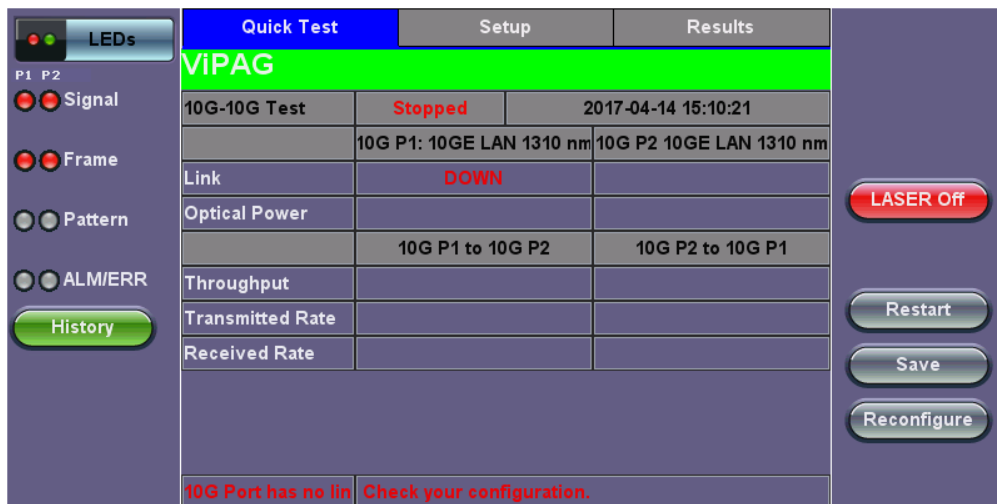

Test Failure

Setup


Test sets come preconfigured. To customize settings for both ports, go to the **Setup** tab. For configuration instructions, please refer to [BERT](#).

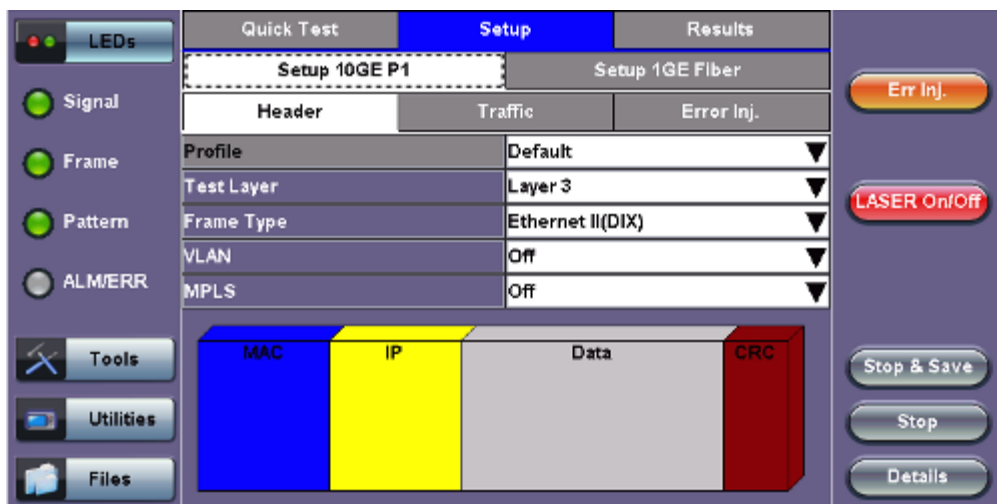

Setup

[Go back to top](#) [Go back to TOC](#)


Results

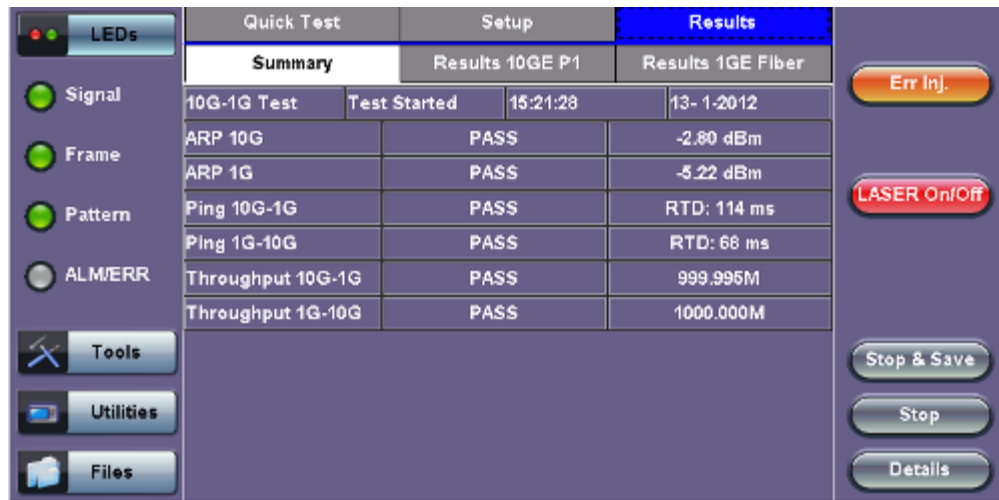

Summary Results

The **Summary** tab lists the Pass/Fail status of each ARP, Ping, and Throughput test along with test measurements.

The **Results** tabs for each port lists statistical results similar to those featured in the BERT Results section. Please see [BERT Results](#) for more information.

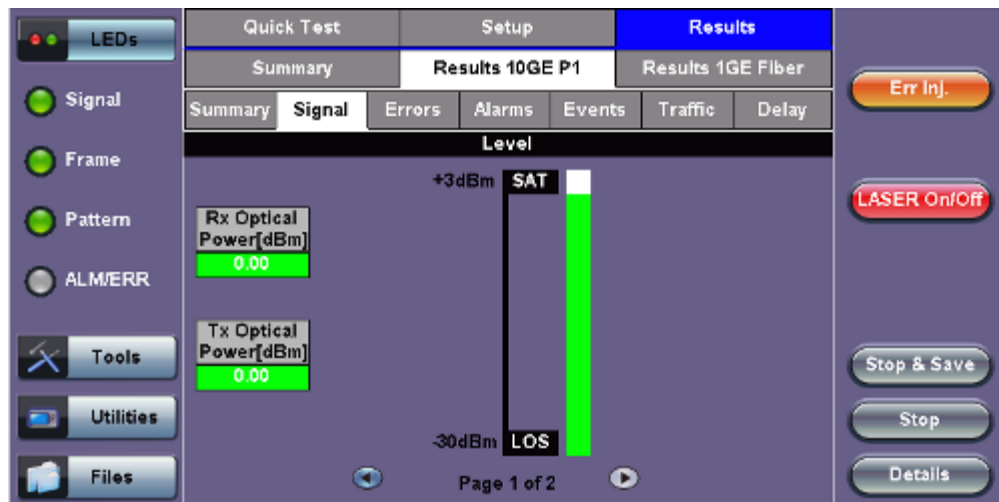

Port Results

[Go back to top](#) [Go back to TOC](#)

15.2 IP

15.2.1 IP Connection

Port setup and IP connection are required prior to performing the following Ethernet applications: Ping, Trace Route, Web/FTP, ARP Wiz, VoIP, IPTV testing, and 1588v2 (except Layer 2).

Tap on **IP** from the Ethernet home menu to access Port and IP settings.

15.2.1.1 Setup

Select PPOE, IPv4, or IPv6 from the Mode menu.

Point-to-Point Protocol over Ethernet (PPOE)

- **Authentication:** PAP, CHAP, or CHAP & PAP.
- **VLAN:** Off or 1 Tag.

- **ID:** VLAN ID. Enter value 0 to 4095.
- **Pri:** VLAN priority 0 to 7.
- **DNS:** Selecting Manual DNS opens another menu. Select from Off, Primary, or Primary & Secondary. Enter the Primary and/or Secondary DNS if required.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Trace Route

Setup

ARPWiz

Status

VoIP

Ping

Network

Port

Mode

IPv4

Profile

Last configuration

IP Address

Static

Local IP

192.168.0.101

Subnet

255.255.255.0

Gateway and DNS

Enable

Gateway

On

192.168.0.1

DNS

Primary

192.168.0.1

Connect

PCAP Start

Page 1 of 2

IP Setup - IPv4


IPv4 or IPv6

- **IP Type:** IPv4 or IPv6
- **IP Address:** Static, DHCP (IPv4 only) or AUTO (IPv6 only)
- **Static:** The user is required to enter a Local IP, Gateway address, and Subnet. All Static fields can be filled by tapping on the section to access an alphanumeric keyboard
 - **Local IP:** IPv4/IPv6 address of the test set
 - **Gateway:** IPv4/IPv6 address of the network gateway
 - **CIDR** (IPv6 only): The user can enter a Classless Inter -domain Routing Network
 - **Subnet** (IPv4 only): The user can enter a subnet mask
- **DNS:** Off, Manual, or Auto. If Manual is selected, a DNS IP is required in order to use the URL as a destination. Enter the IP address of the Domain Name System (DNS) Server providing domain name translation to IP addresses.
- **VLAN:** Off, 1 Tag, 2 Tags. For each VLAN tag, enter the following:
 - **ID:** VLAN ID. Enter value 0 to 4095.
 - **Pri:** VLAN priority 0 to 7.

[Go back to top](#) [Go back to TOC](#)

15.2.1.2 Status

Ensure the Status is **PASS** before continuing with any IP tests. If the connection fails, go back to the setup screen to verify that the parameters are entered correctly. Verify that the Ethernet cable is properly connected on the management port on the left hand side of the unit.

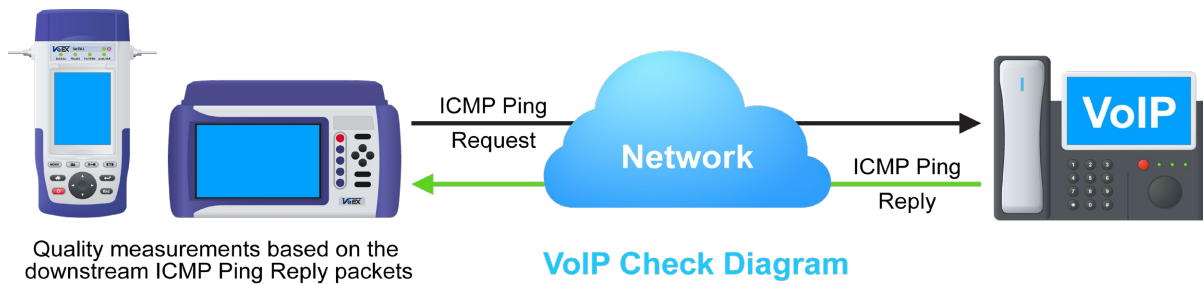

VoIP Check Setup

In the Setup tab, make the following configurations:

- **Mode:** Select VoIPCheck from the drop-down menu.
- **Profile:** Select from Delete, Save, Save as..., or Default.
- **Server:** Type in the destination server (the ICMP ping will be sent to this address). Make sure that the destination address is representative of the VoIP calls. For example, use SIP Proxy address or destination SIP phone. Make sure that ICMP Ping Requests are not blocked by the network.
- **Test Duration:** Specify the duration of the test.
- **Encoding:** Select Codec. The ICMP ping will be sent with a payload content and size similar to the selected codec. Supported codecs are G.711 A-law, G.711 μ -Law, G.729, G.723.
- **Jitter Buffer:** Enter the size in ms of the jitter buffer. This value is used to emulate a jitter buffer on the received traffic. ICMP Ping Replies received after this duration will be discarded, and negatively impact the quality scores.

Press **Start** to begin the test. It will run for the duration indicated in Test Duration.

LEDs	Setup	Status	Ping
Signal	Trace Route	ARPWiz	VoIP
Frame	Setup	Status	Trace
Pattern	Mode	IP Phone	DTMF
ALM/ERR	Profile	Default	
History	Protocol	SIP	
1000-TFULL	Registrar	On	192.168.8.20:6060
	Proxy	Off	
	Outbound	Off	
	User name		
	Password		
	Login ID	Off	
	Codec	G.711U	

Page 1 of 3

Register

PCAP Start

VoIP Check Setup

"VOIP Test Complete" will display on the status screen upon completion.



VoIP Check Results - Status

Trace and DTMF functions are not accessible in VoIP Check mode.

[Go back to top](#) [Go back to TOC](#)

VoIP Check Test Results

MOS/R, **Packets**, and **Events** are discussed in [VoIP Expert - Client/Server Results](#).

All VoIP Check measurements are provided for the downlink direction, from the remote server to the test set.


[Go back to top](#) [Go back to TOC](#)

15.2.5.2 VoIP Expert - Client/Server Mode

VoIP Expert is a simple and effective tool for pre-qualifying VoIP service and verifying triple play implementations. It allows the user to assess end-to-end VoIP QoS under simulated or live network conditions where packet loss, latency, jitter, bandwidth congestion, link disconnects, IP version type, VLAN and MPLS routing and concurrent triple play traffic all play a role.

The Client/Server mode allows a pair of VePAL100+/300 series test sets or a test set connected to a VX1000 server to exchange upstream and downstream files to exercise the connection under VoIP calls conditions. Bidirectional Mean-Opinion-Score (MOS), Transmission-Rating-Factor (R-factor) and other critical network related parameters are measured, and test results are displayed on both field test units and the VX1000 software and can be saved and retrieved for future reference and benchmarking.

The VX1000 software can be installed on any server and accepts up to 16 simultaneous VoIP test calls from compatible VePAL100+/300 series products. The Server test mode can be enabled on either the VX1000 software or VePAL 100+/300 product series. The remote device configured in Client mode can initiate a test to the Server, files are transmitted in both directions and measured.

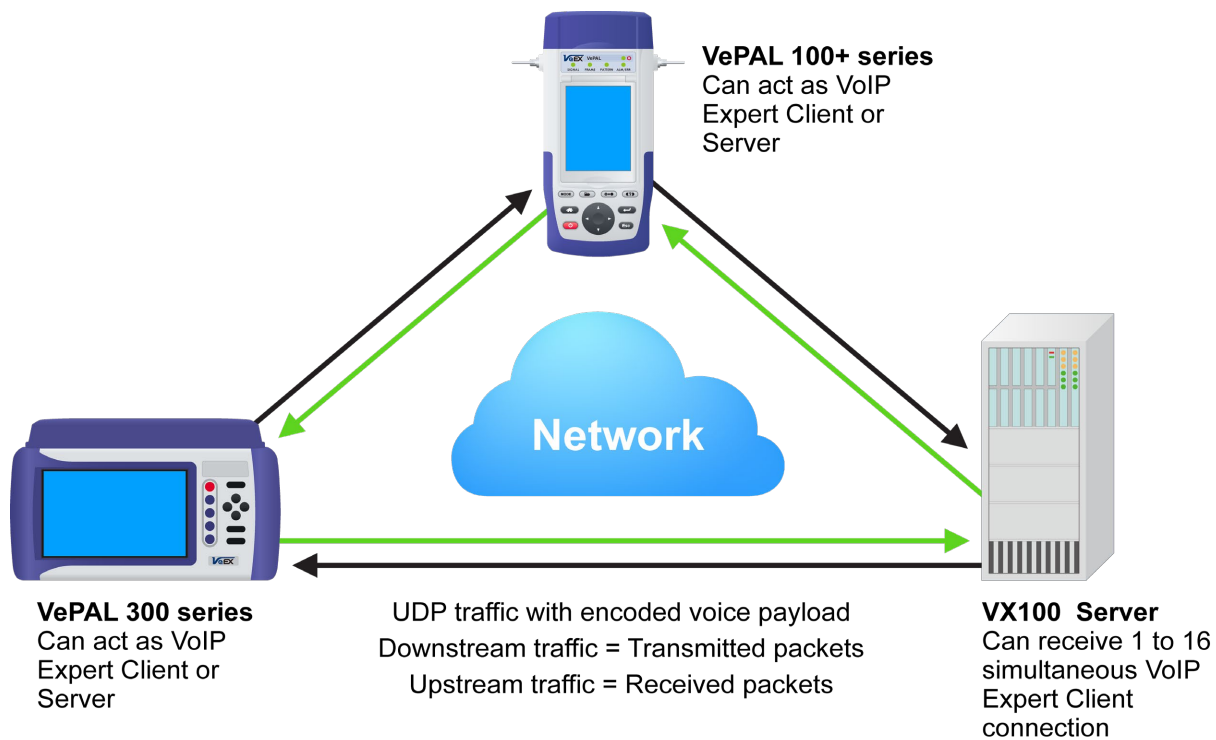

Client/Server Mode Setup

Client and Server mode simulate a VoIP call between two test sets or one test set and a server, and measure the VoIP quality parameters.

Client Mode

LEDs	Setup	Status	Ping
Signal	Trace Route	ARPWiz	VoIP
Frame	Setup	Status	Trace
Pattern	Mode	Client	DTMF
ALM/ERR	Profile	Default	
History	Server	192.168.8.56	
	Encoding	G.711U	
	Test Duration	10	Sec
	Jitter Buffer	100	

1000-TFULL

Start

PCAP Start

Client Setup

In the Setup tab, make the following configurations:

- **Mode:** Select Client from the drop -down menu.
- **Server:** Type in the destination server address (Test set configured in Server mode or VX1000 server).
- **Test Duration:** Configures the duration of the voice test file.
- **Encoding:** Select the codec from the drop -down menu. The voice file transmitted will use the selected encoding. Supported codecs are G.711 A-law, G.711 μ -Law, G.729 (optional), G.723.1 (optional).
- **Jitter Buffer:** Enter the size in ms of the jitter buffer. Packets received after this duration, will be discarded and negatively impact the quality scores. This setting emulates the jitter buffer configured in the IP phones.

[Go back to top](#) [Go back to TOC](#)


Server Mode

In the Setup tab, for **Mode**, select **Server** from the drop -down menu.

Press **Start** to begin the test. The test set will wait for Client to initiate connection.

VoIP Expert VX1000 - Server Mode

- Status
 - My IP: Automatically detects the IP address of the Ethernet LAN card
- Setup
 - Mode: Select Server from the drop -down menu
 - Result file path: Select the path where results files will be stored
 - Results are automatically saved when the test is completed

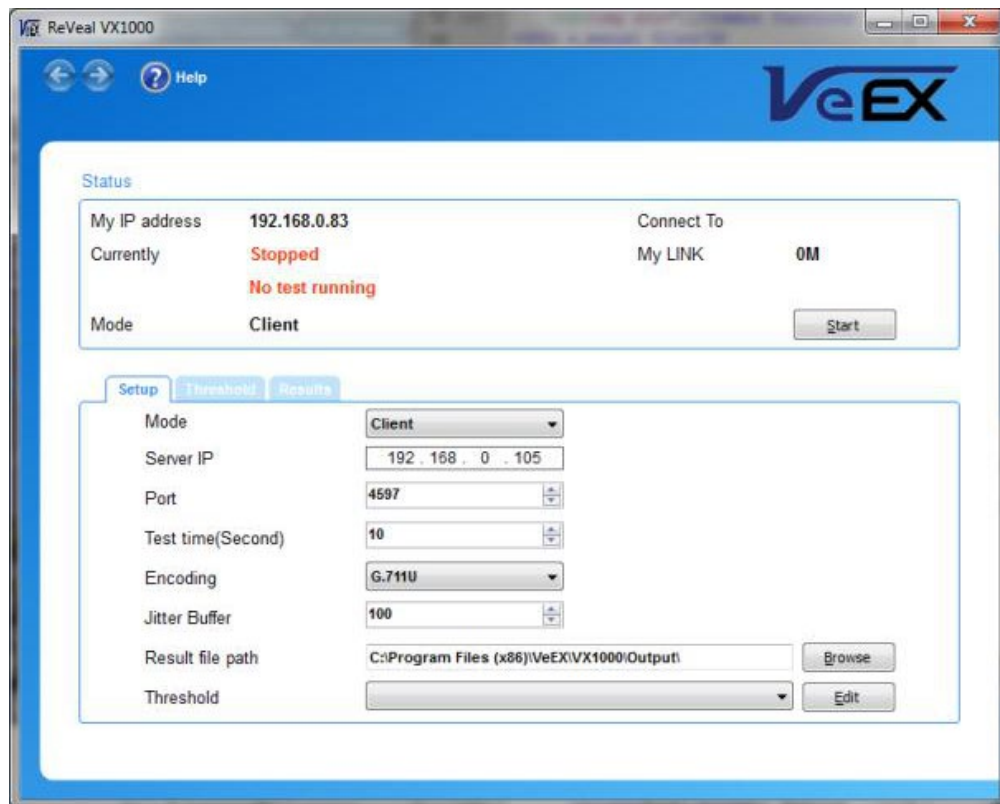

VoIP Expert VX1000 - Client Mode

VoIP Expert Status

Server side:

- Start the test.
- The Server waits for a connection from the Client.
- If the server is running on a V100+/V300 series unit, only one Client connection can be active.
- If the server is running on a VX1000 server, up to 16 connections can be active simultaneously.

Client side:

- Start the test.
- Client initiates a connection to the Server.
- If the connection is successful, the Client transmits the test file (UDP traffic with audio file payload) in the upstream direction towards the Server.
- Once the upstream transmission completes, the Server transmits the test file (UDP traffic with audio file payload) in the downstream direction towards the Client.
- Once the downstream transmission completes, Client and Server exchange test results and the results are displayed on both sides.



Client/Server Test Results

[Go back to top](#) [Go back to TOC](#)

VoIP Expert - Client/Server Results


Voice Quality measurements are displayed for both directions.

- Upstream results = Outgoing stream
- Downstream results = Incoming stream

MOS/R tab indicates:

The Mean Opinion Score (MOS) and R-factor measurements are performed by a **Telchemy™ VQmon®** VoIP quality measurement engine which is integrated into the test set. **The VQmon/SA** feature supports:

- Listening and conversational quality metrics
- MOS scores and R-factors
- Detailed packet/RTP statistics
- Jitter buffer emulation

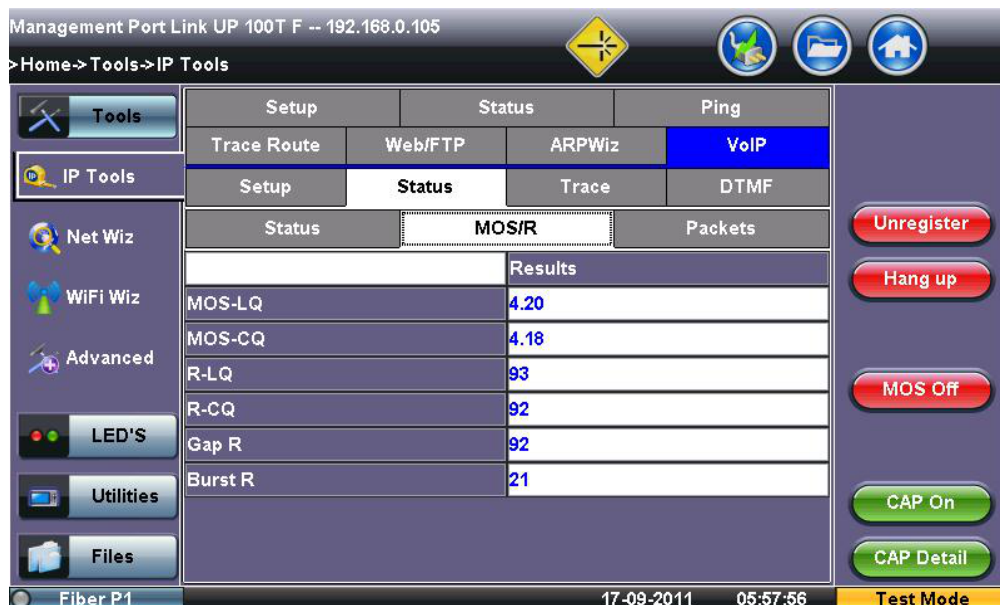

MOS/R Results

<i>User Opinion</i>	<i>R Factor</i>	<i>MOS (ITU Scaled)</i>
<i>Maximum Obtainable For G.711</i>	<i>93</i>	<i>4.4</i>
<i>Very Satisfied</i>	<i>90-100</i>	<i>4.3-5.0</i>
<i>Satisfied</i>	<i>80-90</i>	<i>4.0-4.3</i>
<i>Some Users Satisfied</i>	<i>70-80</i>	<i>3.6-4.0</i>
<i>Many Users Satisfied</i>	<i>60-70</i>	<i>3.1-3.6</i>
<i>Nearly All Users Dissatisfied</i>	<i>50-60</i>	<i>2.6-3.1</i>
<i>Not Recommended</i>	<i>0-50</i>	<i>1.0-2.6</i>

VoIP MOS Ratings

- **UP:** Indicates that the results are for the upstream direction - transmitted packets.
- **DN:** Indicates that the results are for the downstream direction - received packets. Note that Client and Server results will show with reversed measurements.
- **MOS-LQ:** Listening Quality MOS score, this score is based on packet metrics -codec, packet loss, discard and jitter. Per ITU-T G.107 converted on a MOS scale.
- **MOS-CQ:** Conversational Quality MOS score, this score is based on listening quality metrics and also includes network delay. Per ITU-T G.107 converted on a MOS scale.
- **R-LQ:** Listening Quality R-factor, this score is based on packet metrics - codec, packet loss, discard and jitter. Per ITU-T G.107.
- **R-CQ:** Conversational Quality R-factor, this score is based on listening quality metrics and also includes network delay. Per ITU-T G.107.
- **Gap R:** Conversational Quality R-factor during Gap period. A Gap is a period of no loss or low loss density.
- **Burst R:** Conversational Quality R-factor during Burst period. A Burst is a period of high packet loss or packet discard density (> 5%).

Packets tab indicates:

- Analysis on packet loss
- Duplicated packets
- Out of sequence packets
- Packet rate
- Packet jitter



Packet Statistics are only displayed for the incoming stream (downstream traffic). Only VX1000 server displays packets statistics for both directions.

Management Port Link UP 100T F -- 192.168.0.105			
>Home>Tools>IP Tools			
Tools IP Tools Net Wiz WiFi Wiz Advanced LED'S Utilities Files	Setup	Status	Ping
	Trace Route	Web/FTP	ARPWiz
	Setup	Status	Trace
	Status	MOS/R	Packets
		UP	DN
Data Throughput		64.0 kbits/s	64.0 kbits/s
Packets Received		N/A	500
Packet Loss Rate		0.00 pk/s	0.00 pk/s
Packet Loss Count		N/A	0
Packet Discard Rate		0.00 pk/s	0.00 pk/s
Packet Discard Count		N/A	0
Burst Loss Rate		0.00	0.00
Page 1 of 3			
Fiber P1		17-09-2011 04:52:00	Test Mode

Packet Statistics (Page 1) - Sample from VoIP Expert - Client/Server Mode

Packet Statistics (Page 1)

- **Data Throughput:** Average Data rate in kbps.
- **Packets Received:** Number of packets received.
- **Packet Loss Rate:** Average Packet Loss rate in kbps. A lost packet is never received by the application.
- **Packet Loss Count:** Number of packets not received.
- **Packet Discard Rate:** Average Packet Discard rate in kbps. A discarded packet is received, but too late, and thus discarded by the jitter buffer.
- **Burst Loss Rate:** Average percentage of packets lost or discarded during a Burst condition. A Burst condition is a period of high loss density (over 5%).

Management Port Link UP 100T F -- 192.168.0.105			
>Home>Tools>IP Tools			
Tools IP Tools Net Wiz WiFi Wiz Advanced LED'S Utilities Files	Setup	Status	Ping
	Trace Route	Web/FTP	ARPWiz
	Setup	Status	Trace
	Status	MOS/R	Packets
		UP	DN
Burst Length		0	0
GAP Loss Rate		0.00	0.00
GAP Length		10000	10000
OOS Packet		0	0
Duplicate Packets		0	0
PPDV Jitter		0.0110 ms	0.0090 ms
MAPDV Jitter		0.0630 ms	0.0150 ms
Page 2 of 3			
Fiber P1		17-09-2011 04:52:27	Test Mode

Packet Statistics (Page 2) - Sample from VoIP Expert - Client/Server Mode

Packet Statistics (Page 2)

- **Burst Length:** Average Burst Length in ms.
- **Gap Loss Rate:** Average percentage of packets lost or discarded during a Gap condition. A Gap condition is a period of no loss or low loss density.
- **Gap Length:** Average Gap Length in ms.

- **OOS Packets:** Number of packets received out-of-sequence.
- **Duplicate Packets:** Number of duplicate packets received.
- **PPDV Jitter:** The packet-to-packet delay variation in milliseconds as defined in RFC 3550. The interarrival jitter is defined to be the mean deviation of the difference in packet spacing at the receiver compared to the sender for a pair of packets. If S_i is the timestamp from packet i , and R_i is the time of arrival for packet i , then for two packets i and j , $D(i,j) = (R_j - R_i) - (S_j - S_i)$. The interarrival jitter is calculated continuously as each data packet i is received from source according to the formula $J(i) = J(i-1) + (|D(i-1,i)| - J(i-1))/16$.
- **MAPDV Jitter:** The true average mean-absolute packet delay variation in milliseconds. Per ITU-T G.1020. If the nominal arrival time (denoted below a_i) for a packet is known or can be determined, then the absolute delay variation is $\text{abs}(t_i - a_i)$. The mean absolute packet delay variation is therefore $\text{MAPDV} = \text{mean}(\text{abs}(t_i - a_i))$.



Packet Statistics (Page 3) - Sample from VoIP Expert - Client/Server Mode

- **Average PDV:** The running average mean-absolute packet delay variation in milliseconds. This average takes the difference of the average positive and average negative envelopes. Per ITU-T G.1020. Mean delay $D_i = (15 \cdot D_{i-1} + t_{i-1}) / 16$ positive deviation $P_i = t_i - D_i$ if $t_i > D_i$ negative deviation $N_i = D_i - t_i$ if $t_i < D_i$ $\text{MAPDV} = \text{mean}(P_i) + \text{mean}(N_i)$.
- **Max Avg MAPDV:** The maximum of the average mean-absolute packet delay variation in milliseconds.
- **Maximum PPDV**

[Go back to top](#) [Go back to TOC](#)

Events


Events tab displays a time stamped log of the various test steps with Pass/Fail criteria.

[Go back to top](#) [Go back to TOC](#)

VX1000 VoIP Expert Results

VX1000 displays the list of available test results.


It automatically stores the results for all the client connections.

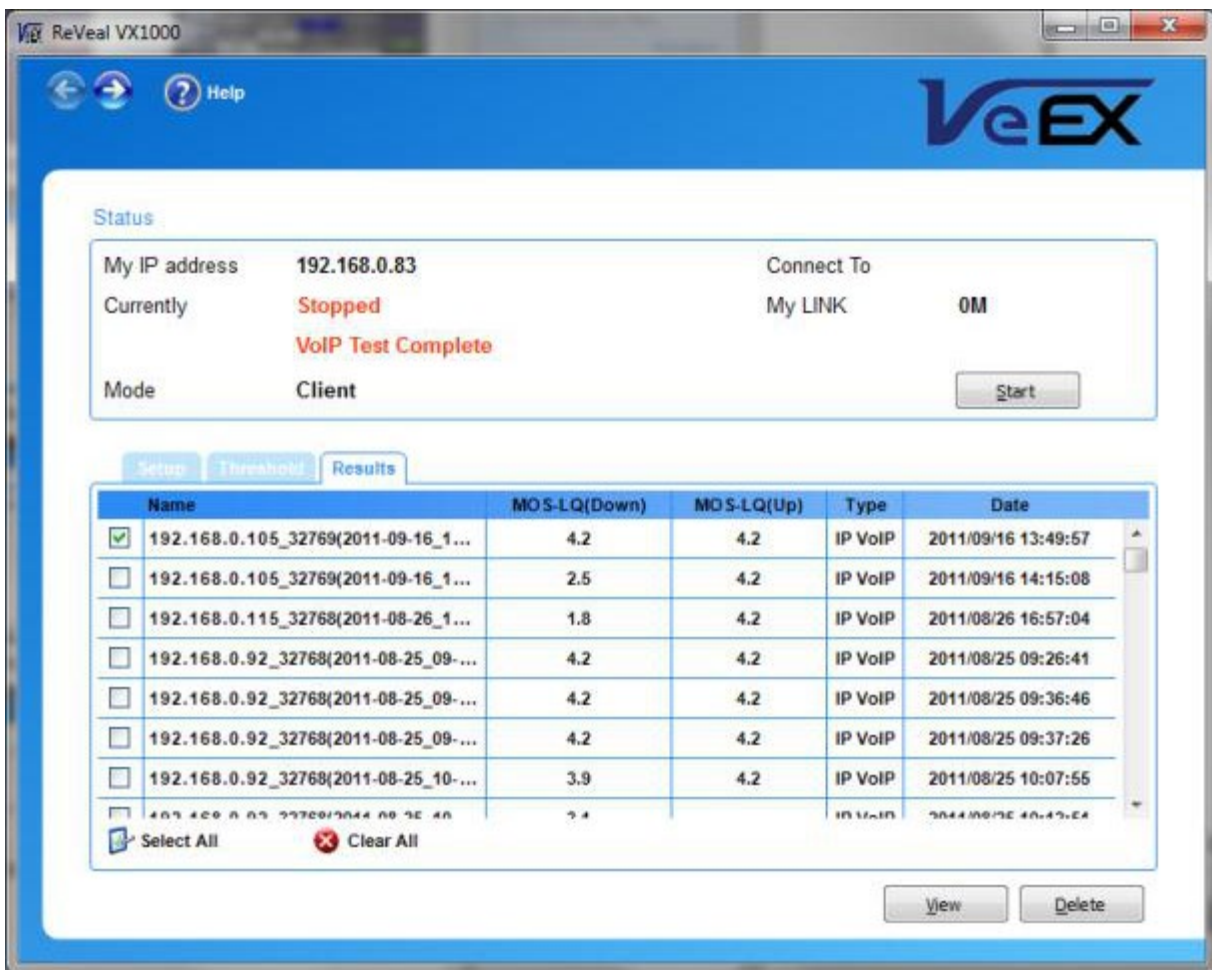

VX1000 Results Tab

Select the result(s) you would like to view by clicking the corresponding check box.

Click the **View** button to display the selected result(s).

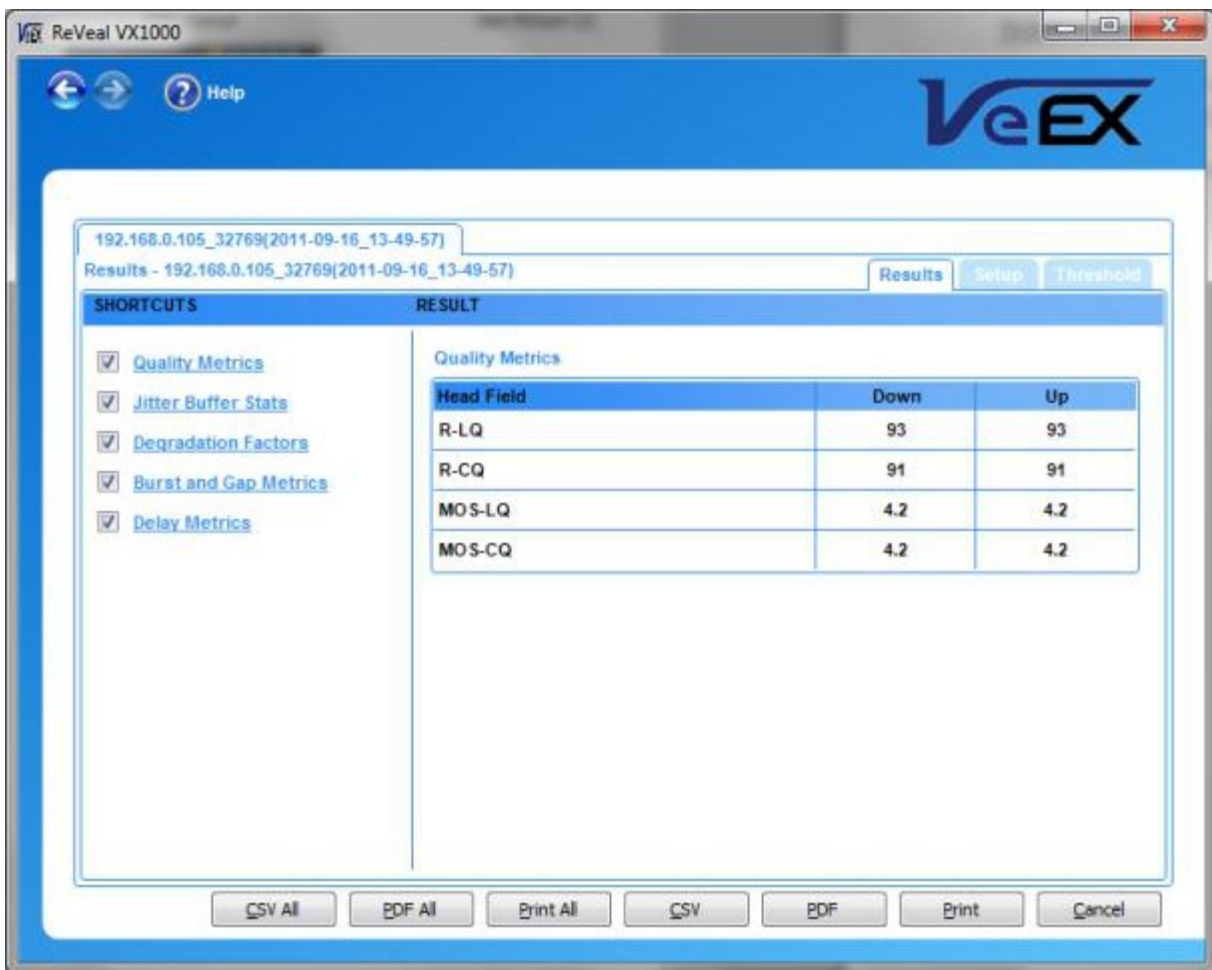

MOS/R Results

[Go back to top](#) [Go back to TOC](#)


MOS/R Results

- **UP:** Indicates that the results are for the upstream direction - transmitted packets. **DN:** Indicates that the results are for the downstream direction - received packets. Note that Client and Server results will show with reversed measurements.
- **MOS-LQ:** Listening Quality MOS score, this score is based on packet metrics - codec, packet loss, discard and jitter. Per ITU-T G.107 converted on a MOS scale.
- **MOS-CQ:** Conversational Quality MOS score, this score is based on listening quality metrics and also includes network delay. Per ITU-T G.107 converted on a MOS scale.
- **R-LQ:** Listening Quality R-factor, this score is based on packet metrics - codec, packet loss, discard and jitter. Per ITU-T G.107.
- **R-CQ:** Conversational Quality R-factor, this score is based on listening quality metrics and also includes network delay. Per ITU-T G.107.
- **Gap R:** Conversational Quality R-factor during Gap period. A Gap is a period of no loss or low loss density.
- **Burst R:** Conversational Quality R-factor during Burst period. A Burst is a period of high packet loss or packet discard density (> 5%).



Jitter Buffer Statistics

- **Packets received:** Number of packets received.
- **Packets lost:** Number of packets not received.
- **Packets discarded:** Number of packets received too late that have been dropped by the jitter buffer. **Packets early:** Number of voice stream packets arriving early, but still within the jitter buffer range. **Packets late:** Number of voice stream packets arriving late, but still within the jitter buffer range.
- **Packets out-of-order:** Number of voice stream packets that arrive out of sequence, as detected by the jitter buffer.
- **Packets duplicated:** Number of duplicate voice stream packets discarded by the jitter buffer.
- **Underrun discards:** Number of voice stream packets discarded by the jitter buffer due to the late arrival (exceeds the configured jitter buffer depth).
- **Overrun discards:** Number of voice stream packets discarded by the jitter buffer because the jitter buffer is already full.
- **Delay increases:** Number of adaptive jitter buffer emulator delay increases.
- **Delay decreases:** Number of adaptive jitter buffer emulator delay decreases.
- **Re sync count:** Number of jitter buffer emulator resynchronizations due to DTX/VAD/silence suppression.
- **Reset count:** Number of jitter buffer emulator resets due to complex error occurrence. For example, if the jitter buffer emulator is unable to properly resynchronize to the incoming packet stream, a reset is performed.

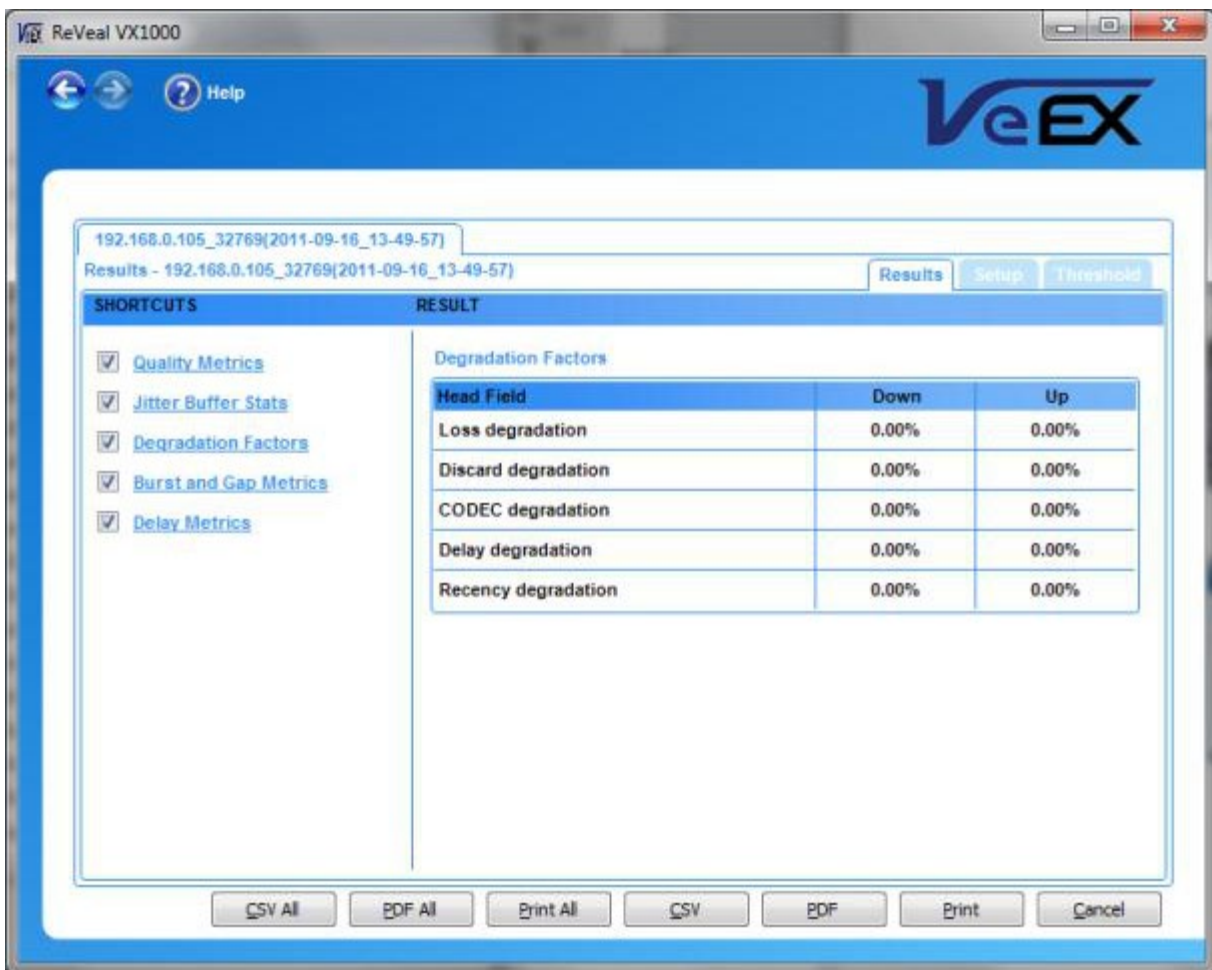

MOS/R - Degradation Factors

[Go back to top](#) [Go back to TOC](#)

MOS/R - Degradation Factors

- **Loss Degradation:** The percentage of the overall quality degradation that can be attributed to network packet loss
- **Discard Degradation:** The percentage of the overall quality degradation that can be attributed to jitter buffer discard (i.e. jitter)
- **CODEC Degradation:** The percentage of the overall quality of degradation that can be attributed to codec
- **Delay Degradation:** The percentage of the overall quality of degradation that can be attributed to delay
- **Recency Degradation:** The percentage of the overall quality of degradation that can be attributed to loss or discard recency



Burst and Gap Metrics

- **Burst/Gap Count:** Number of bursts that occur on the voice stream
- **Avg Burst/Gap Loss rate:** The average percentage of MIUs lost and/or discarded during burst conditions
- **Avg Burst/Gap Length (ms):** The average burst length in ms
- **Avg Burst/Gap Length (pkts):** The average burst length in packets
- **Burst/Gap R:** The average listening R-factor for the gap periods
- **Avg. Loss Rate:** The total average percentage of MIUs lost and/or discarded
- **Avg. Net Loss Rate:** The total average percentage of MIUs lost in the network
- **Avg. Discard Rate:** The total average percentage of MIUs discarded

[Go back to top](#) [Go back to TOC](#)

Packet Statistics - Delay Metrics

- **PPDV Jitter:** The packet-to-packet delay variation in milliseconds as defined in RFC 3550. The interarrival jitter is defined to be the mean deviation of the difference in packet spacing at the receiver compared to the sender for a pair of packets. If S_i is the timestamp from packet i , and R_i is the time of arrival for packet i , then for two packets i and j , $D(i,j) = (R_j - R_i) - (S_j - S_i)$. The interarrival jitter is calculated continuously as each data packet i is received from source according to the formula $J(i) = J(i-1) + (|D(i-1,i)| - J(i-1))/16$.
- **MAPDV Jitter:** The true average mean-absolute packet delay variation in milliseconds. Per ITU-T G.1020. If the nominal arrival time (denoted below a_i) for a packet is known or can be determined then the absolute delay variation is $\text{abs}(t_i - a_i)$. The mean absolute packet delay variation is therefore $\text{MAPDV} = \text{mean}(\text{abs}(t_i - a_i))$.
- **Average PDV:** The running average mean-absolute packet delay variation in milliseconds. This average takes the difference of the average positive and average negative envelopes. Per ITU-T G.1020. Mean delay $D_i = (15 \cdot D_{i-1} + t_i) / 16$ positive deviation $P_i = t_i - D_i$ if $t_i > D_i$ negative deviation $N_i = D_i - t_i$ if $t_i < D_i$ $\text{MAPDV2} = \text{mean}(P_i) + \text{mean}(N_i)$.

- **Max PDV:** The maximum of the average mean-absolute packet delay variation in milliseconds.


[Go back to top](#) [Go back to TOC](#)

15.2.5.3 VoIP Expert - IP Phone Mode

IP Phone mode emulates an IP phone and can place and receive calls using SIP or H.323 protocols, sending or receiving live audio (with headset) or prerecorded file.


Comprehensive Codec support and call destination options verify voice encoding and translation provisioning.

Real-time evaluation of voice quality with a complete set of measurements available at the end of the call, including packet statistics, jitter statistics, and MOS and R-factor call quality scores.

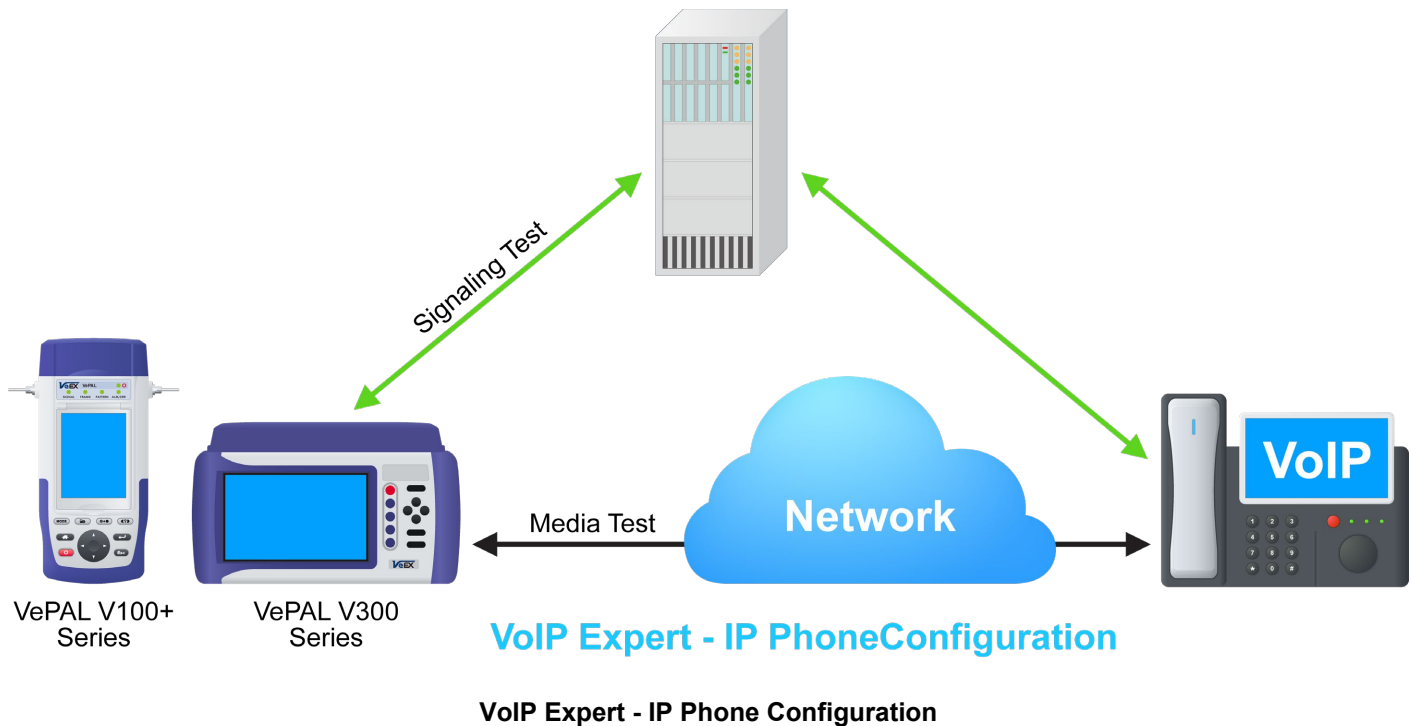


IP Phone Setup

Select the VoIP tab to proceed with the IP Phone setup.

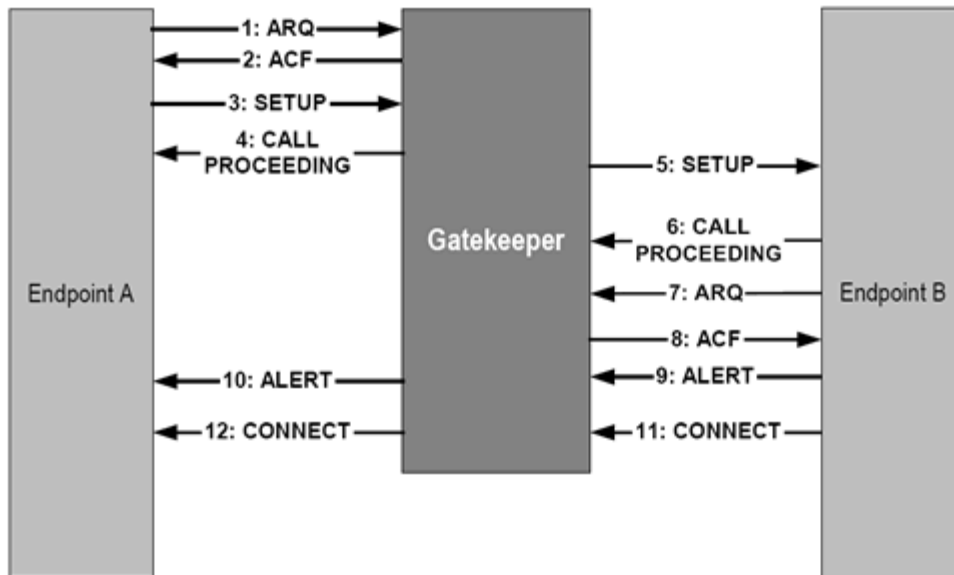

H.323 Configuration

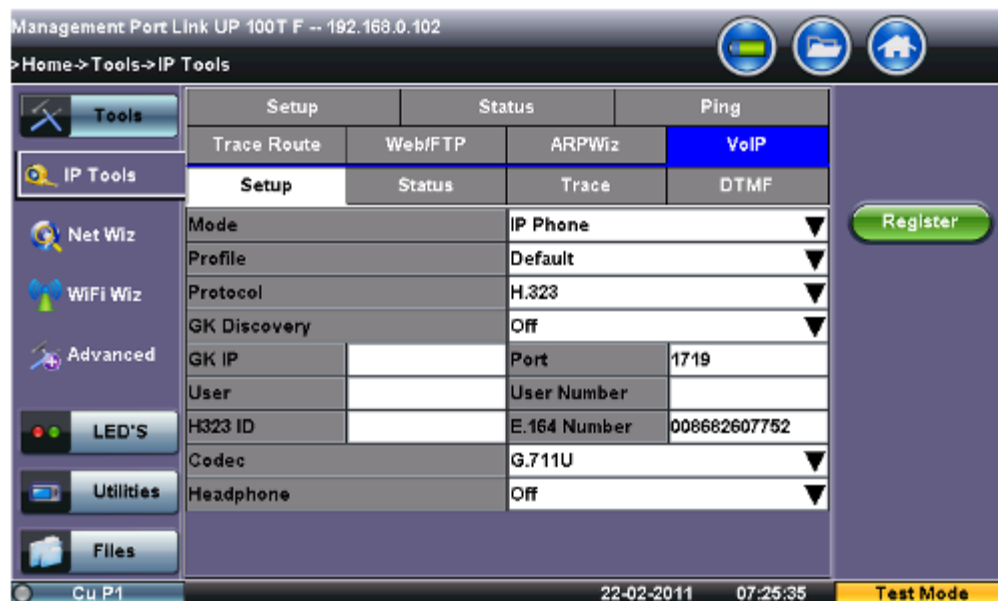

IP Phone - H.323 Setup

H.323 parameters are as follows:


- **Mode:** Select IP Phone from the drop -down menu
- **Profile:** Select from Delete, Save, Save as..., or Default
- **Protocol:** Select H.323 from the drop -down menu
- **GK Discovery:** Off -- the IP address of the Gatekeeper must be known
- **GK IP:** Enter the IP address of the Gatekeeper
- **Port:** Enter the Port number of the Gatekeeper
- **User:** Enter the username.
- **User Number:** Endpoint Alias Dialed Digits
- **H.323 ID:** Endpoint Alias address H323 -ID
- **E.164 Number:** Endpoint Alias address. E164-ID
- **Codec:** G.711 μ -law and G.711 A-law
- **Headphone:**

- On: Requires you to plug in the VeEX provided USB headphone. Talk/Listen through the headphone
- Off: Unit will transmit a pre-recorded audio file during the test

Press **Register** to start registration to the Gatekeeper.



Trace and DTMF are disabled in H.323 mode.

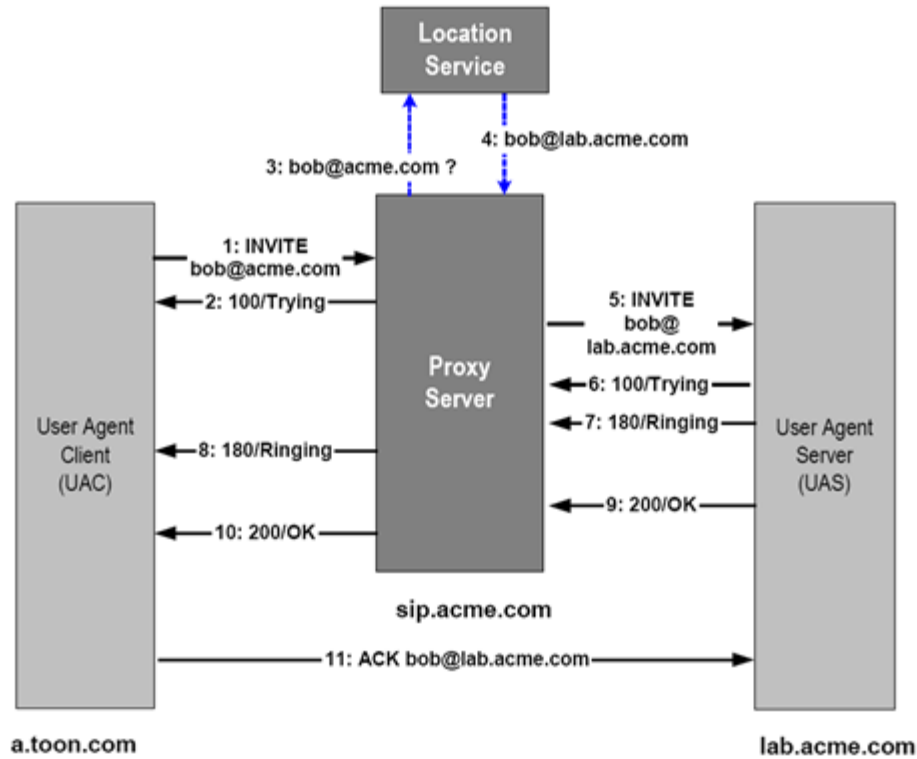

SIP Configuration

The screenshot shows the SIP Configuration interface on a device. The interface includes a sidebar with navigation options (LEDs, Tools, Utilities, Files) and a main configuration area. The configuration area is divided into sections for Setup, Status, Ping, and Trace Route. The Setup section is currently selected, showing fields for Mode, Profile, Protocol, Registrar, Proxy, Outbound, User name, Password, Caller ID, and Codec. The Status section shows fields for Mode, Profile, Protocol, Registrar, Proxy, Outbound, User name, Password, Caller ID, and Codec. The Ping section shows fields for Mode, Profile, Protocol, Registrar, Proxy, Outbound, User name, Password, Caller ID, and Codec. The Trace Route section shows fields for Mode, Profile, Protocol, Registrar, Proxy, Outbound, User name, Password, Caller ID, and Codec. The interface also includes buttons for Unregister, Call, and Test Mode.

Setup	Status	Ping	Trace Route
Web/FTP	ARPWiz	VoIP	TCP
Setup	Status	Trace	DTMF
Mode	IP Phone		
Profile	Default		
Protocol	SIP		
Registrar	Off		
Proxy	Off		
Outbound	Off		
User name	101		
Password			
Caller ID	Off		
Codec	G.711U		

Page 1 of 3

Cu P1 2014-01-16 19:22:19 Test Mode

SIP Configuration (Page 1)

For **SIP** Phone Setup, fill out these additional parameters:

SIP Phone Setup (Page 1)

- **Mode:** Select IP Phone from the drop -down menu.
- **Profile:** Select from Delete, Save, Save as..., or Default.
- **Protocol:** Select SIP from the drop -down menu.
- **Registrar:** On/Off. Selecting On requires the user to enter URI or IP address of the SIP Registrar.
- **Proxy**
 - ON: Enter URI or IP address of SIP Proxy. SIP Invite will be sent to this address.
 - OFF: Invite will be sent to Registrar or Outbound Proxy depending on configuration.
- **Outbound**
 - ON: Enter URI or IP address of SIP Outbound Proxy. All the messages will be sent to this destination IP address.
 - OFF: Messages will be sent to Registrar or Proxy IP address depending on configuration.
- **Username and Password:** For registering with the call authentication server.
- **Login ID:** Username sent to the SIP authorization digest.
- **Codec:** Enter preferred codec - G.711 μ -law, G.711 A-law, G.723.1 or G.729. SDP offer will prioritize the selected codec first.

SIP Phone Setup (Page 2)

- **Headphone:**
 - On: Requires you to plug in the VeEX provided USB headphone. Talk/Listen through the headphone.
 - Off: Unit will transmit a pre-recorded audio file during the test.

Note: Headphone ON is required for G.723.1 or G.729 codecs.
- **Jitter Buffer:** Specifies the type of jitter buffer used by the test set receiver.
 - Fixed: A fixed jitter buffer is used, the depth can be specified from 40 to 500 ms.
 - Auto: A dynamic jitter buffer is used, it dynamically adapts to the current jitter in the network
- **SIP Port:** Port number used for SIP messages (default 5060).
- **RTP Port:** Port number used for RTP media (default 5000).
- **Auto Answer:** If enabled, allows the test set to automatically answer incoming calls.
- **Session Timer:** When enabled, a re-invite will be sent at the expiration of this timer per RFC 4028.
- **DSCP QOS:** When enabled, enter the DiffServ field per RFC 2474.
- **STUN Server:** When enabled, enter the IP address of a STUN Server. STUN enables a device to find out its public IP address and the type of NAT service it is sitting behind. If ON is selected, use the alphanumeric keypad to enter the STUN Server IP address.

Press **Register** to start registration to the Gatekeeper. The Status screen displays the registration progress and will display "Online" once registration is completed. If the test set fails to register, please go back to the setup screen and make sure all the parameters are entered correctly and register again.

SIP Phone Setup (Page 3)

- **NAT Update:** On or Off
- **DTMF Format:** RFC 2833 or DTMF Tone
- **Voice GW:** On or Off
- **DialStyle:**
 - **URL:** Enter destination address URL
 - **POTS:** Enter destination Phone number
- **Bundle Size**
- **Transport:** UDP, TCP, TCP TLS
- **PESQ:** Refer to the [PESQ](#) section.
- **Media Encryption:** None, SRTP

[Go back to top](#) [Go back to TOC](#)

15.2.5.4 Placing a Call



Call Registration

After pressing the **Register** key, the Status screen displays the registration status. If the registration is successful, you can place a call to a remote party.


Peer URL: Remote party phone number or URL

Press the **Call** button to place a call.

When the call is connected, press the MOS On key to start voice quality measurements.

DTMF

During the call, DTMF tones can be transmitted. DTMF tones transmitted as RFC4733 events.

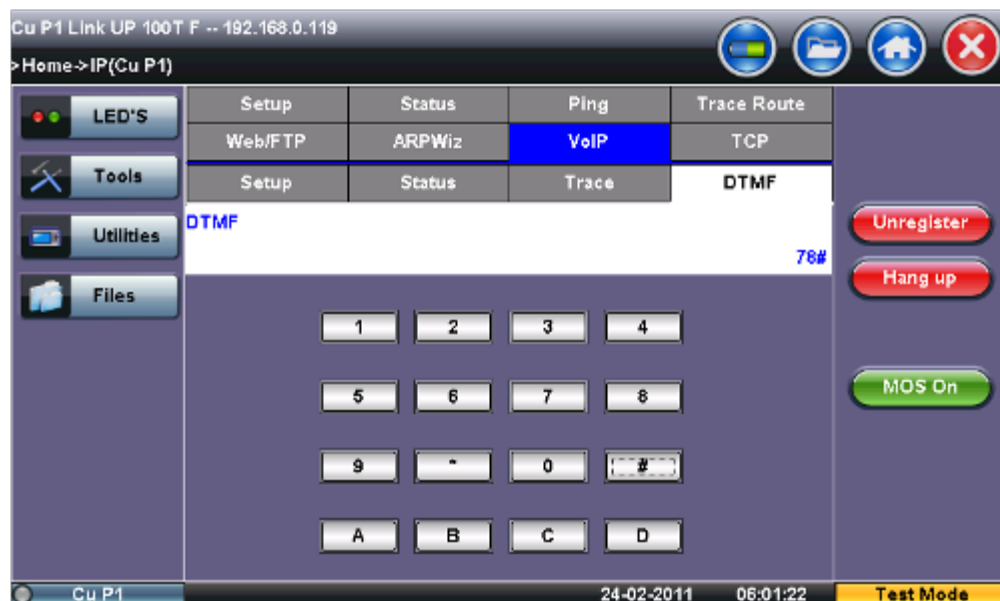

Call Registration

To transmit DTMF tones, access the DTMF tab. An alphanumeric keypad will be displayed.

DTMF tones are transmitted as soon as they are typed.

[Go back to top](#) [Go back to TOC](#)

15.2.5.5 VoIP IP Phone Results

 All the measurements are provided for the downlink direction, on the voice stream from the remote party to the test set.

MOS/R and **Packets** results are discussed in [VoIP Expert - Client/Server Results](#).

Trace

In this tab, all of the signaling packets are captured and displayed.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

1000-TFULL

Setup		Status	Ping
Trace Route		ARPWiz	VoIP
Setup	Status	Trace	DTMF
Num	Rx/Tx	Message	
8	TX	REGISTER sip:192.168.8.20:6060;transport=udp	Unregister
9	TX	REGISTER sip:192.168.8.20:6060;transport=udp	
10	TX	REGISTER sip:192.168.8.20:6060;transport=udp	
11	TX	REGISTER sip:192.168.8.20:6060;transport=udp	
12	TX	REGISTER sip:192.168.8.20:6060;transport=udp	
13			Clear
14			PCAP Start

Page 2 of 2

Trace Results

Tap on a packet link to open a window with additional information.

[Go back to top](#) [Go back to TOC](#)

15.3 BERT


15.3.1 BERT Setup

Tap on **Advanced Tools (Home Menu) > BERT** button to access BER testing features.

Overview:

BER testing at Layer 1, 2, 3, and 4 is supported. The BERT can be configured to use either regular PRBS test patterns, stress patterns (specifically for 10Gigabit Ethernet) or user defined test patterns to simulate various conditions. The test layer, frame header, traffic profile, error injection, and control settings of the far-end device (if applicable) must be configured prior to testing.

- **Layer 1:** Unframed mode (fiber ports only) or Framed mode
 - **Unframed mode:** Test traffic consists of a bit stream of the selected test pattern
 - **Framed mode:** Test pattern is encapsulated into a valid Ethernet frame with SOF, Preamble, and CRC field
- **Layer 2:** Framed BERT (same as Layer 1 Framed)
 - **MAC Address:** A default or user configured Media Access Control (MAC) address is added to the frame
- **Layer 3:** Framed BERT (same as Layer 1 & 2 Framed)
 - **MAC Address:** A default or user configured Media Access Control (MAC) address is added to the frame
 - **IP Address:** A default or user configured IP address is added to the frame
- **Layer 4:** Framed BERT (same as Layer 1, 2, & 3 Framed)
 - **MAC Address:** A default or user configured Media Access Control (MAC) address is added to the frame
 - **IP Address:** A default or user configured IP address is added to the frame
 - **UDP Address:** A user defined source and destination port address is added to the frame

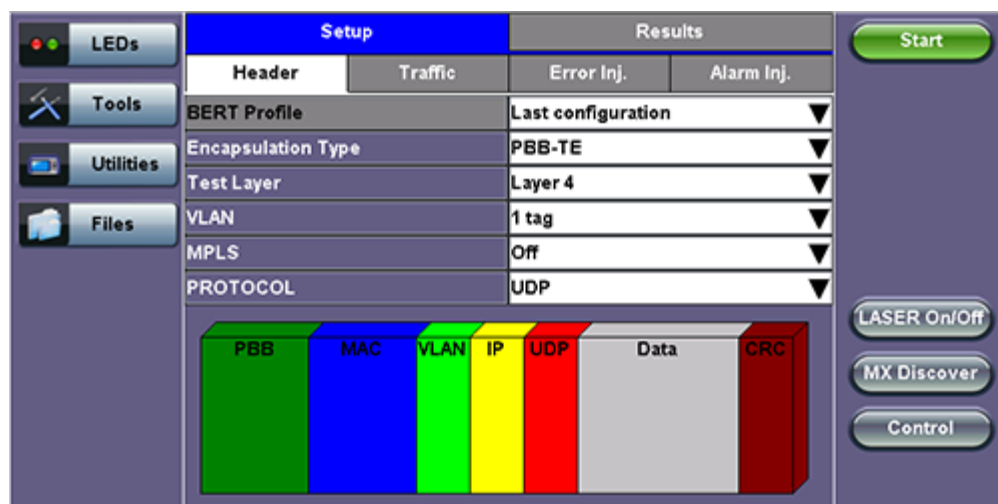

BERT Setup - Header (Layer 4)

[Go back to top](#) [Go back to TOC](#)

15.3.1.1 Header Settings

- **BERT Profile:** Load a previously configured test profile or create a new profile from existing settings. Please see **6.0 Profiles** in the **ReVeal MTX300 manual** for more details on how to create new profiles using ReVeal software.
- **Encapsulation Type:** None, MPLS-TP, or Provider Backbone Bridge (PBB-TE). Provider Backbone Bridge MAC-in-MAC (IEEE 802.1ah) encapsulation are configured trunks that add resiliency and configurable performance levels in the provider backbone network. Available for 1GE Copper/Fiber and 10GE port. PBB encapsulation is available for all Ethernet tests (Layer 2, 3, and 4) - BERT, RFC2544, Throughput, V-SAM.


Tap the PBB block to configure the settings. All PBB fields are configurable.

- Backbone MAC Source
- Backbone MAC Destination

- Ethernet Type
- I-SID
- Backbone VLAN ID, Priority, Type

PBB

- **Test:** Select the test layer to perform the BERT
 - Options are Layer 1 Unframed, Layer 1 Framed, Layer 2, Layer 3, and Layer 4
- **Frame Type:** Select the Ethernet frame type for Layer 2 or Layer 3
 - 802.3 Raw (IEEE 802.3 frame without LLC) - Not available when Layer 3 is selected
 - 802.3 LLC (IEEE 802.3 frame with LLC header)
 - 802.3 SNAP (IEEE 802.3 frame with SNAP header)
 - Ethernet II (DIX) (named after DEC, Intel, and Xerox, this is the most common frame type today)
- **MAC/IP:** Tap the MAC and IP blocks on the Frame image to access the setup menus
 - Set the Source and Destination MAC address for Layer 2
 - Set the Source and Destination MAC and IP addresses for Layer 3 and Layer 4
- **VLAN:** Off, 1 tag, 2 tags, 3 tags
 - The user is able to configure up to 3 VLAN tags (VLAN stacking, for Q-in-Q applications)
Note: VLAN stacking is an option
- **MPLS:** Off, 1 tag, 2 tags, 3 tags
 - The user is able to configure up to 3 MPLS tags
Note: MPLS tag configuration is only available when the MPLS option is purchased

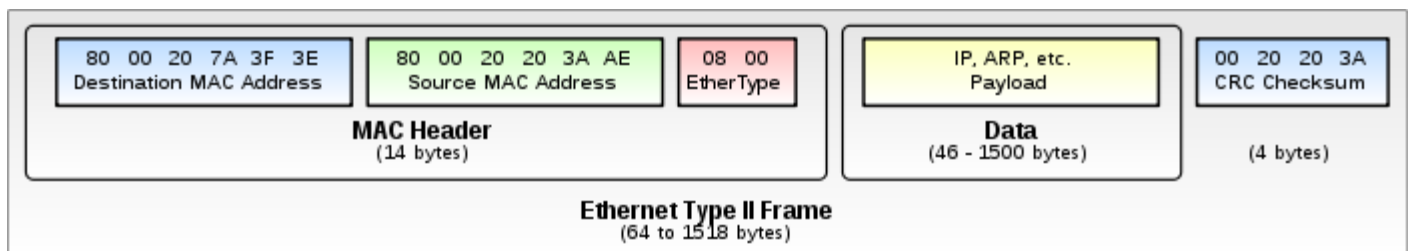

The most common Ethernet Frame format, Type II

[Go back to top](#) [Go back to TOC](#)

MAC, VLAN, MPLS, IP, and Test Pattern Configurations:

To configure the MAC addresses, IP addresses, VLAN tag(s), MPLS tag(s), and test pattern, tap on the frame image displayed on the screen. This displays the configuration screens for all the header fields.

- **MAC Header Tab:**
 - **MAC Source:** Use the default source address of the test set or configure a new or different address.

- **MAC Destination:** Configure the destination MAC address of the far-end partner test set or use the ARP or ARP GW keys to determine the MAC address of the destination IP address (ARP) or the Gateway (ARP GW). **Note:** A valid IP connection needs to be up to use these functions. Refer to [IP Connection](#) for further instructions.
- **Ethernet Type:** For Layer 3 testing, the user can also configure the Ethernet type:
 - 0800-IP (Internet Protocol Version 4, IPv4)
 - 0600-Xerox
 - 0801-X.75 (X.75 Internet)
 - 0805-X.25 (X.25 Level 3)
 - 0806-ARP (Address Resolution Protocol [ARP])
 - 8035-RARP (Reverse Address Resolution Protocol [RARP])
 - 8137-IPX (Novell IPX)
 - 814C-SNMP
 - 8847-MPLS unicast
 - 8848-MPLS multicast
 - 86DD (Internet Protocol, Version 6 [IPv6]) - Future Release


Tap on **Mac Source**, **ARP**, and **ARP Gateway** buttons to populate the fields with default test port settings.

MAC	IP	DATA	RX Filter
MAC Source		00-18-83-00-0C-40	
MAC Destination		00-1E-90-A0-57-3C	
Ethernet Type		0800-IP	


BERT Setup - MAC address settings (Layer 3)

[Go back to top](#) [Go back to TOC](#)

- **VLAN Tab:** In the VLAN tab the following parameters are configured:
 - **VLAN ID:** Configurable in the range 1 to 4094.
 - VLAN ID is the identification of the VLAN, which is basically used by the standard 802.1Q.
 - It has 12 bits which allows the identification of 4096 (2^{12}) VLANs.
 - Of the 4096 possible VLANs, a VLAN of 0 is used to identify priority frames and value 4095 (FFF) is reserved.
 - Maximum possible VLAN configurations are therefore set to 4094.
 - **VLAN Priority:** Configurable in the range 0 to 6
 - Set by the Priority Code Point (PCP), a 3-bit field which refers to the IEEE 802.1p priority.
 - It indicates the frame priority level from 0 (lowest) to 7 (highest), which can be used to prioritize different classes of traffic (voice, video, data, etc.).
 - **Type:** The following selections are possible:
 - 8100 (IEEE 802.1Q tagged frame)
 - 88a8 (IEEE 802.1ad Provider Bridging)
 - **Drop Eligible:** If enabled, drop eligibility flag will be set.
 - **VLAN Flooding:** Enable/Disable.
 - **VLAN Flooding Range:** Specifies the number of VLAN IDs. Enter a number from 0-4096. The VLAN IDs will be incremented by 1 until it reaches the number of times entered in the flood range.

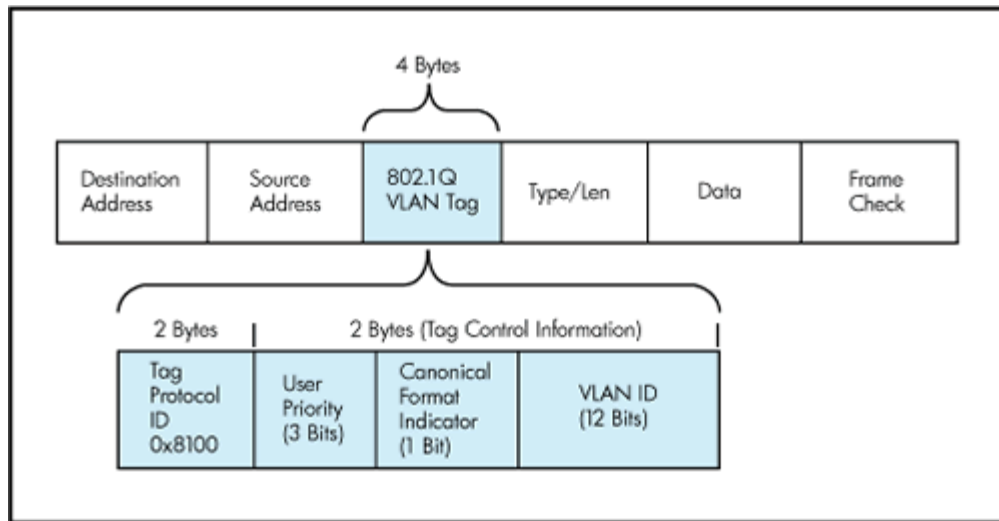

IEEE 802.1Q VLAN Tag in an Ethernet Frame

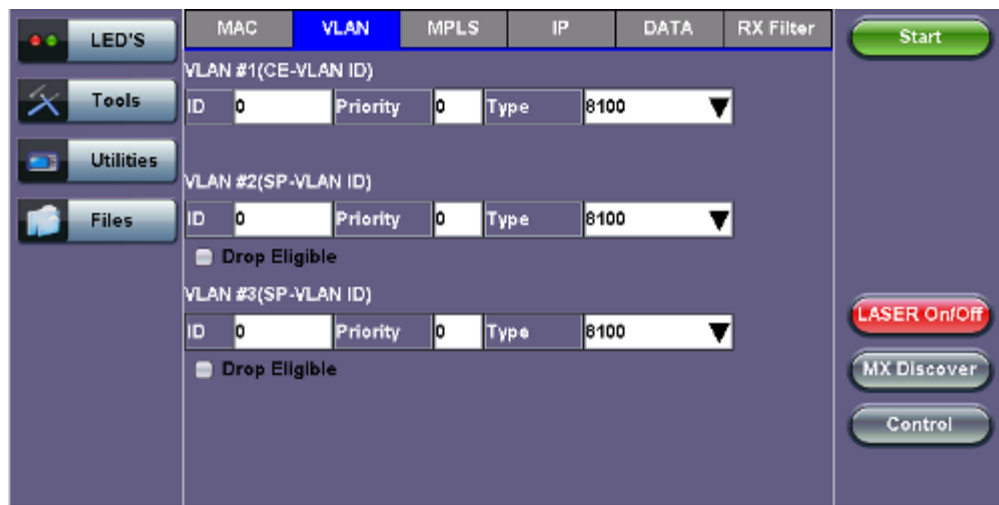

BERT Setup - VLAN Tag configuration (Layer 3)

[Go back to top](#) [Go back to TOC](#)

- **MPLS Tab:** In the MPLS tab the following parameters are configured:
 - **MPLS label:** Configurable in the range 16 through 1,048,575 (labels 0 to 15 are reserved).
 - 💡 Composed of 20 bits which allows for the creation of over one million labels.
 - **CoS:** Configurable in the range 0 to 6.
 - 💡 This field is three bits in length and maps directly to IP Precedence TOS bits to provide Class of Service (COS).
 - **S-bit:** Configurable 0 or 1.
 - 💡 The S field is one bit in length and is used for stacking labels. This is important as it is used to indicate the last label in the label stack.
 - **TTL:** Configurable in the range 0 to 255. The default setting is 128 hops.
 - 💡 Used to decrement the time-to-live counter.

	MAC	VLAN	MPLS	IP	DATA	RX Filter
MPLS #1	Label=	0	S=	0		
	CoS=	0	TTL=	0		
MPLS #2	Label=	0	S=	0		
	CoS=	0	TTL=	0		
MPLS #3	Label=	0	S=	1		
	CoS=	0	TTL=	0		

BERT Setup - MPLS label configuration

[Go back to top](#) [Go back to TOC](#)

- **IP Tab:** In the IP tab the user must configure the destination IP address and source address. The user may also configure the following IP header fields:
 - **IP Type:** IPv4
 - **IP Src and IP Dest:** For IP Src, if the IP connection is up, refer to [IP Connection](#). The source address is fixed to the IP address from the IP setup menu.
 - **IP TOS (for Quality of Service testing):**
 - **Legacy TOS (Precedence):** The first three bits of the IP TOS field can be edited:
 - 000 - Best Effort
 - 001 - Bulk Data
 - 010 - Transactional
 - 011 - Call Signaling
 - 100 - Streaming Video
 - 101 - Voice
 - 110 - Routing
 - 111 - Reserve
 - **DSCP (Differentiated Services Code Point):** The first six bits of the IP TOS can be edited to provide more granular service classification. For more information on the definition of DSCP field in IPv4 and IPv6 headers, refer to [RFC2474](#).
 - **Time To Live (TTL):** Configurable in the range 0 to 255.
 - **Fragment offset byte:** Configurable in the range 0 to 65.528.
 - 💡 *The fragment offset field, measured in units of eight-byte blocks, is 13 bits long and specifies the offset of a particular fragment relative to the beginning of the original unfragmented IP datagram.*
 - **Protocol field:** UDP (0x11), TCP (0x06), User Defined.


	MAC	VLAN	MPLS	IP	DATA	RX Filter
Source IP Address				192.168.0.10		
Destination IP Address				192.168.2.200		
IP TOS				DSCP		
DSCP				011001	ECT 0	CE 0
TTL				128		
Fragment Offset				0		
Protocol				UDP - 0x11		

BERT Setup - IP Address settings (Layer 3)

- **Data Tab:** User selects a test pattern that will be encapsulated in the Ethernet frame payload (for framed mode). Depending on the test layer, different test pattern options are available.
 - **Layer 1 Framed Test Patterns**
 - **CRPAT:** Compliant Random Pattern provides broad spectral content and minimal peaking for the measurement of jitter at component or system level.
 - **CJPAT:** Compliant Jitter Test Pattern is a Jitter Tolerance Pattern that stresses a receiver by exposing it to extreme phase jumps thereby stressing the clock data recovery (CDR) circuitry. The pattern alternates between repeating low transition density patterns and repeating high transition density patterns.
 - **CSPAT:** Compliant Supply Noise Pattern. Represents worst case power supply noise.



BERT Setup - Data selection (Layer 1 Framed)

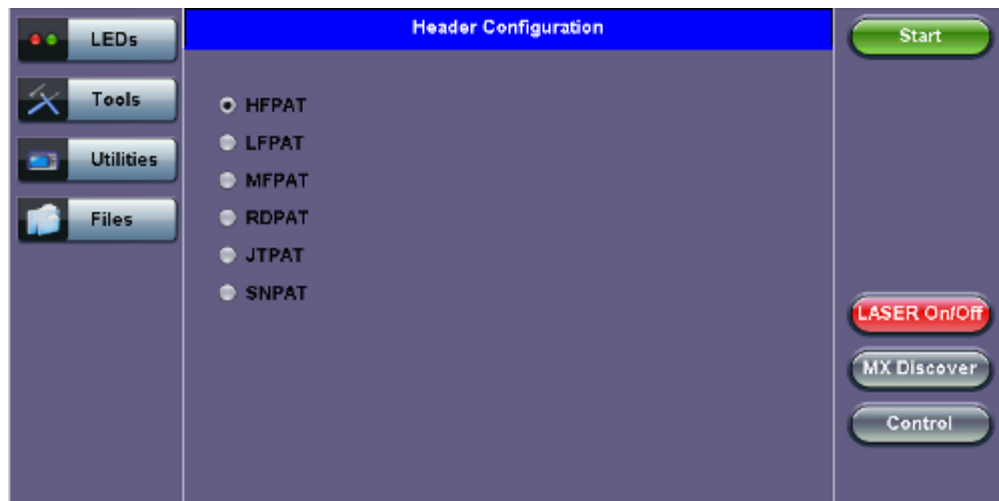

BERT Setup - Data selection - (Layer 1 Unframed)

- **Layer 1 Unframed Test Patterns**
 - **HFPAT (High Frequency Pattern):** This test pattern is to test random jitter (RJ) at a BER of 10⁻¹², and also to test the asymmetry of transition times. This high frequency test pattern generates a one, or light on, for a duration of 1 bit time, followed by a zero, or light off, for a duration of 1 bit time. This pattern can be generated by the repeated transmission of the D21.5 code-group. Disparity rules are followed.
 - **LFPAT (Low Frequency Pattern):** The intent of this test pattern is to test low frequency RJ and also to test PLL tracking error. This low frequency test pattern generates a one, or light on, for a duration of 5 bit times, followed by a zero, or light off, for a duration of 5 bit times. This pattern can be generated by the repeated transmission of the K28.7 code-group. Disparity rules are followed.
 - **MFPAT (Mixed Frequency Pattern):** The intent of this test pattern is to test the combination of RJ and deterministic jitter (DJ). This mixed frequency test pattern generates a one, or light on, for a duration of 5 bit times, followed by a zero, or light off, for a duration of 1 bit times, followed by a one for 1 bit time followed by a zero for 1 bit time followed by a one for 2 bit times followed by a zero for 5 bit times followed by a one for 1 bit


time followed by a zero for 1 bit time followed by a one for 1 bit time followed by a zero for 2 bit times. This pattern can be generated by the repeated transmission of the K28.5 code-group. Disparity rules are followed.

- **RDPAT (Random Data Pattern):** Designed to provide energy across the entire frequency spectrum providing good simple BER testing.
- **JTPAT (Jitter Tolerance Pattern):** Designed to verify jitter tolerance on the receivers by exposing a receiver's CDR to large instantaneous phase jumps. The pattern alternates repeating low transition density patterns with repeating high transition density patterns.
- **SNPAT (Supply Noise Pattern):** Designed to simulate the worst case power supply noise that could be introduced by a transceiver.

[Go back to top](#) [Go back to TOC](#)


o Layer 2, 3, & 4 test patterns

- **PRBS:**
 - $2^{31}-1$ (147 483 647-bit pattern used for special measurement tasks, [e.g., delay measurements at higher bit rates])
 - $2^{23}-1$ (8 388 607 bit pattern primarily intended for error and jitter measurements at bit rates of 34 368 and 139 264 kbps)
 - $2^{15}-1$ (32 767 bit pattern primarily intended for error and jitter measurements at bit rates of 1544, 2048, 6312, 8448, 32 064 and 44 736 kbps)
 - $2^{11}-1$ (2047 bit pattern primarily intended for error and jitter measurements on circuits operating at bit rates of 64 kbps and $N \times 64$ kbps)
- **Fixed:** All 0s or All 1s
- **User Defined pattern:** Length depends on size of frame
- **Inversion:** Normal or inverted

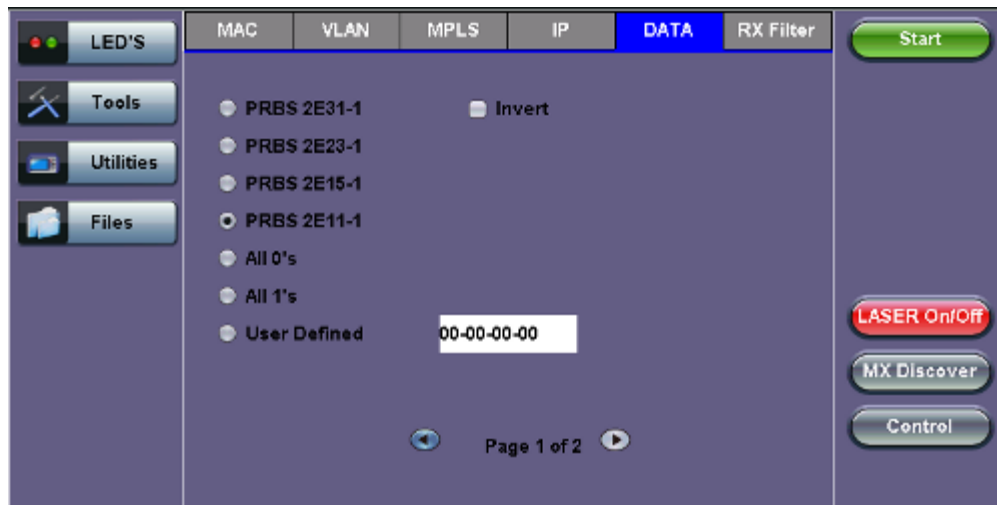

BERT Setup - Data selection - PRBS Patterns (Page 1)


- **Auto (Special Patterns):** For special patterns, the most significant bit of the test pattern is populated first into the payload frame, as opposed to non-special patterns, in which the least significant bit is populated first.

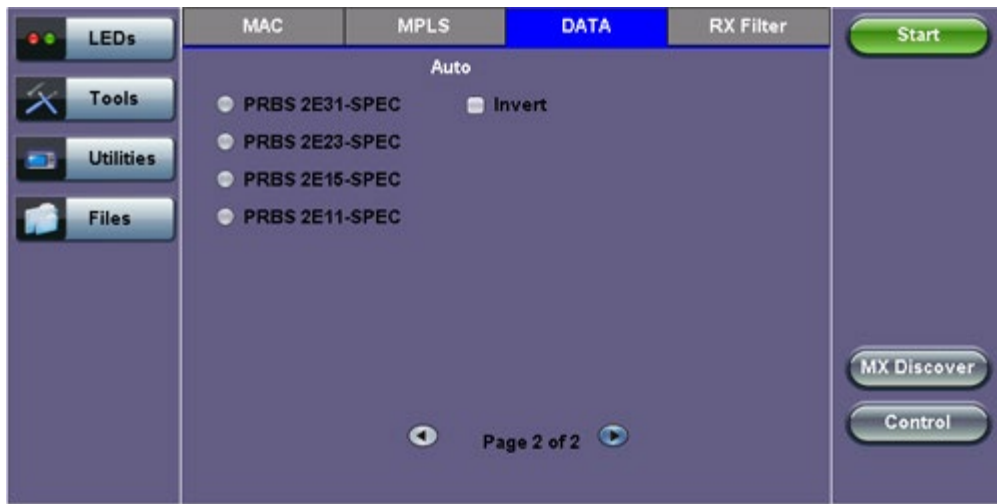

BERT Setup - Data selection - Special Patterns (Page 2)


[Go back to top](#) [Go back to TOC](#)

- **RX Filter Tab:** Allows the user to filter incoming streams. When checked, the incoming traffic flows not matching these criteria will not be considered for these results.
 - MAC Destination address
 - MAC Source address
 - VLAN
 - VLAN Priority
 - VLAN Eligible
 - Frame Type
 - Type of Service
 - Protocol Type
 - IP Destination address
 - IP Source address

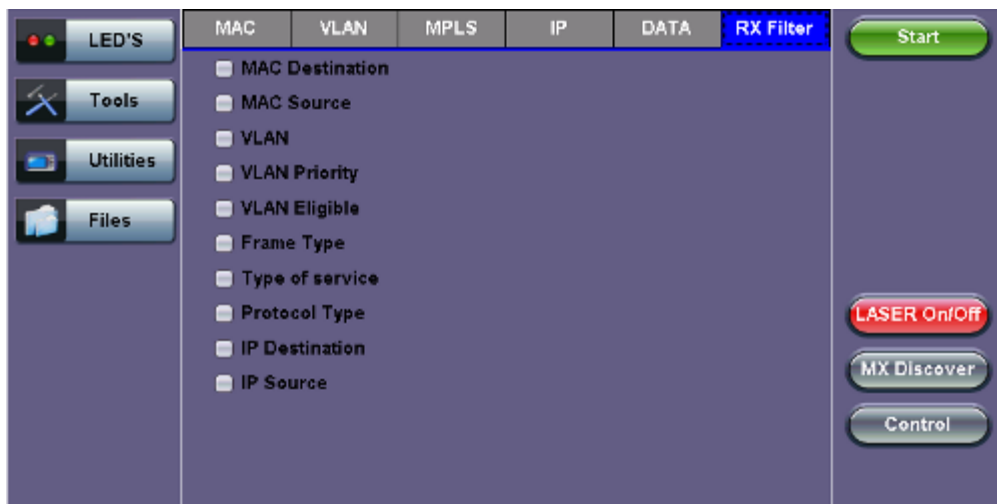

BERT Setup - RX Filter selection

- **UDP/TCP:** Input Source Port and Destination Port.

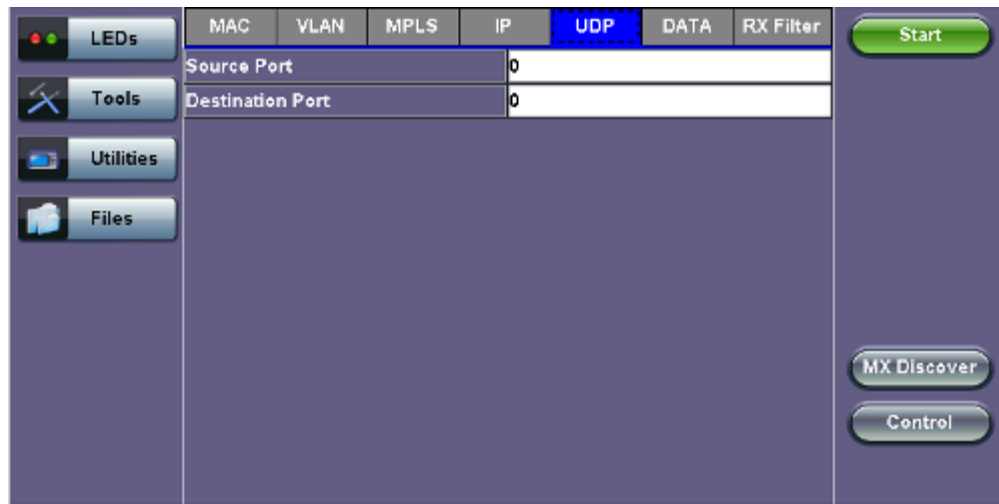

BERT Setup - RX Filter selection


[Go back to top](#) [Go back to TOC](#)

15.3.1.2 Traffic Settings

Traffic tab:

The user configures the traffic profile for the stream, including traffic flow, frame size, frame type, and transmit rate.

- **Traffic Flow:** Select from the following traffic flows:
 - **Constant:** The selected frame is transmitted continuously according to the selected bandwidth %.
 - **Ramp:** The selected frame is transmitted at maximum bandwidth according to the selected duty cycle and burst period.
 - **Burst:** The selected frame is transmitted in a staircase profile according to user selectable step time, number of steps, and maximum bandwidth.
 - **Single Burst:** Configure the number of frames to be transmitted in the burst along with the bandwidth. For example, if 100000 frames are transmitted at 12.5% of bandwidth, on a 1Gbps line, 100000 frames will transmit at a rate of 125Mbps and then the burst will stop.
- **Frame Size Type:** Fixed or Uniform min and max frame length values. Uniform traffic is traffic generated with a uniform distribution of frame lengths.
- **Frame Size (bytes):** Enter the frame size when a Layer 2, 3, or 4 BERT is selected
 - Frame size configuration is not available for Layer 1 BERT
 - Frame sizes can be from 64 bytes to 1518 bytes, in addition to jumbo frames up to 10000 bytes
- **BW (Transmit Bandwidth):** Configure the transmit rate for the test
 - When traffic flow is equal to Burst, two burst bandwidths are configured with burst time
 - When traffic flow is equal to Ramp, starting and an ending bandwidth are configured along with the bandwidth step size and duration

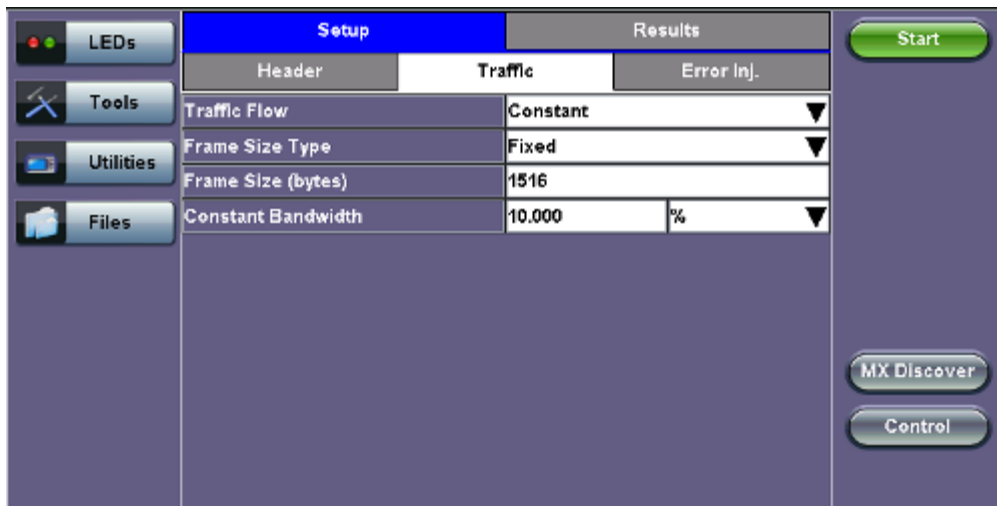

The interface shows the 'Setup' tab with a table for configuring traffic parameters. The 'Results' tab is also visible. On the right, there are 'Start', 'MX Discover', and 'Control' buttons.

Setup		Results
Header	Traffic	Error Inj.
Traffic Flow	Constant	
Frame Size Type	Fixed	
Frame Size (bytes)	1516	
Constant Bandwidth	10,000	%

BERT Setup - Constant Traffic



Note: Frame Size Limitations

Layer 1 framed mode - Frame size configuration is not available.


Layer 1 unframed mode - Traffic profile is constant at 100% bandwidth.

[Go back to top](#) [Go back to TOC](#)

15.3.1.3 Error Injection

Error injection can be performed during testing. The error type and injection rate are configured in the Error Injection tab.

- **Error type:** Select from Bit, CRC, IP Checksum (Layer 3, 4 only), Pause, TCP/UDP Checksum (Layer 4 only). With Pause selected, the unit will transmit a pause frame when **Error Injection** button is pressed. The Pause time duration is configurable in units of 512 bit time. At Gigabit Ethernet speed, this is equivalent to 512 ns. For example, if pause time is set to 1000, the pause duration will be set to 1000x512 ns.
- **Injection Flow:** The error injection flow determines how the selected errors will be injected.
 - Select a single error injection or specific count.
- **Count:** Configures the error count via a numeric keypad.

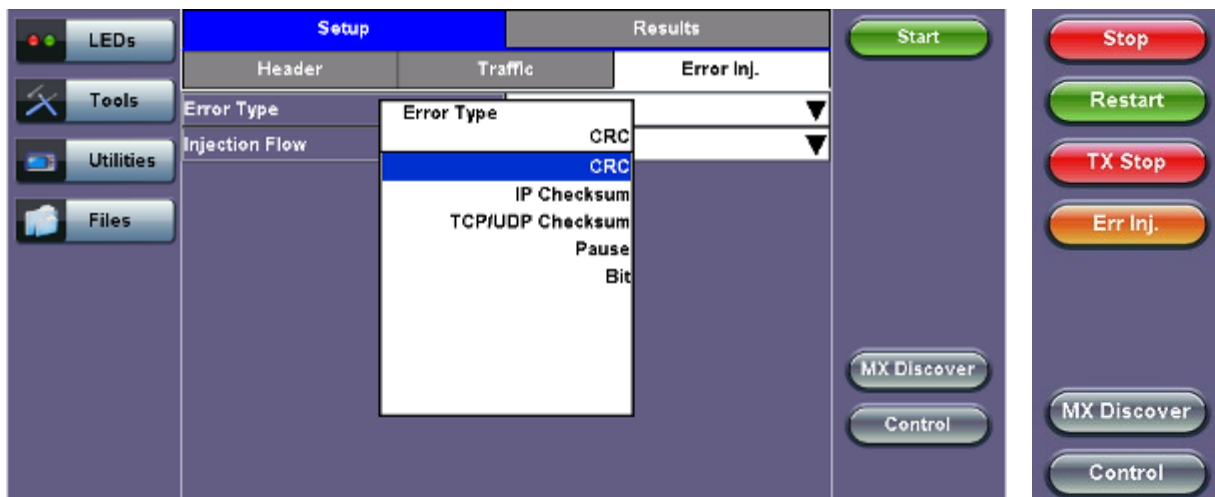

The interface shows the 'Error Inj.' tab with a dropdown menu for 'Error Type'. The 'Results' tab is also visible. On the right, there are 'Start', 'Stop', 'Restart', 'TX Stop', 'Err Inj.', 'MX Discover', and 'Control' buttons.

Setup		Results
Header	Traffic	Error Inj.
Error Type	Error Type	
Injection Flow	CRC	
	CRC	
	IP Checksum	
	TCP/UDP Checksum	
	Pause	
	Bit	

BERT Setup - Error Injection

Error Inj. Function



Error Injection

After pressing **Start**, error injection can be enabled by pressing the **Error Inj.** button on the right side of the screen.

[Go back to top](#) [Go back to TOC](#)

15.3.1.4 Starting/Stopping a BERT

Once all configurations have been made, the user can start the BERT test (press the **Start** button on the top right section of the screen). The following are three scenarios of how to prepare and start the unit for BERT testing.



If testing on the fiber ports, make sure the LASER is turned on before starting the test.

- **End-to-End Testing**

- Connect the test set to another unit that supports BERT testing.
- After configuring test settings on both units, start the tests.

- **Far-End Unit in Manual Loopback Mode**

- If the far-end unit (another MX) is already in a manual loopback mode, do not send a loop up command since it is not necessary.
- Once the correct control settings are configured, the user can start the test.

The selected tests will run automatically. When all the tests are complete the test will stop automatically. If the BERT test suite needs to be stopped before they are done, then simply press the **Stop** button, located in the actions drop-down menu. The status of each selected test can be seen in the Results tab.

- **Far-End Unit Controlled with Loop Up/Down Commands**

- If the far-end unit is not manually looped back, then it must first receive a loop up command from the control unit before the BERT test suite can be started.
- To loop up the far-end unit with the manual mode loop up/down commands, configure the control settings mode to manual.
- Enter the MAC and/or IP address of the far-end unit.
- Send the loop up command by pressing **Loop Up**.

Once the far-end unit has been looped back, start the test by pressing the **Start** button. When the all of the selected test are completed, the BERT test suite will stop automatically. Once all tests have been completed and there is no need to test again, go back to the Control tab, and press the **Loop Down** button. This will send a loop down command to the far-end unit to remove the loopback that is in place.

[Go back to top](#) [Go back to TOC](#)

15.3.2 BERT Results

15.3.2.1 Summary

Summary tab: The following results including the Start (ST) and Elapsed (ET) times are displayed:

- **Line Rate** (Mbps): Negotiated rate of the interface (10M, 100M, or 1000M). This value is always fixed since it depends on the maximum capacity of the link under test, hence the test interface that is configured.
- **Framed Rate:** $(\text{Payload} + \text{MAC/IP Header} + \text{VLAN Tag} + \text{Type/Length} + \text{CRC}) / (\text{Payload} + \text{Total Overhead}) * \text{Line Rate} \%$ (in Mbps).
- **Data Rate:** $\text{Payload} / (\text{Payload} + \text{Total Overhead}) * \text{Line Rate} \%$.
- **Utilization:** % of Line Rate. For example, if we transmit 100Mbps on a 1Gbps interface then the utilization value is 10% (or 100Mbps) of the total link capacity (or Line Rate).

Number of bytes

- **Pause Frames:** Total number of transmitted and received ethernet pause flow-control frames.

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Summary

Errors

Alarms

Events

Traffic

Delay

Rates

ST:2012-2-8 01:40:42

ET:00:00:07

	TX	RX
Line Rate (bps)	1000.000M	1000.000M
Utilization (%)	10.001%	10.001%
Utilization (bps)	100.010M	100.010M
Framed Rate (bps)	98.706M	98.706M
Data Rate (bps)	97.536M	97.536M
# of Bytes	85785216	85786734
Pause Frames	0	0

Stop

Restart

TX Stop

Err Inj.

MX Discover

Control

BERT Results - Summary

[Go back to top](#) [Go back to TOC](#)

15.3.2.2 Errors

Errors tab: The following errors (Current and Total) are displayed:

- **Bits:** Indicates errors related to test pattern (Bit Error or LSS [Pattern Loss])
- **BER:** Bit Error Ratio
- **Symbol:** Declared when an invalid code-group in the transmission code is detected
- **FCS/CRC:** Number of received frames with an invalid FCS
- **IP Checksum** (Layer 3 only)
- **Jabber frames:** Number of received frames larger than 1518 bytes containing an invalid FCS
- **Runt frames:** Number of received frames smaller than 64 bytes containing an invalid FCS

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Summary

Errors

Alarms

Events

Traffic

Delay

Rates

	Current	Total
Bits	0	0
BER	0.000000E+00	0.000000E+00
Symbol	N/A	N/A
FCS/CRC	0	0
Jabber Frames	0	0
Runt Frames	0	0

Stop

Restart

TX Stop

Err Inj.

MX Discover


Control

BERT Results - Errors

[Go back to top](#) [Go back to TOC](#)

15.3.2.3 Events

Events tab: A time stamped record or log of anomalies, alarms, test status (start/stop) and test application are displayed.

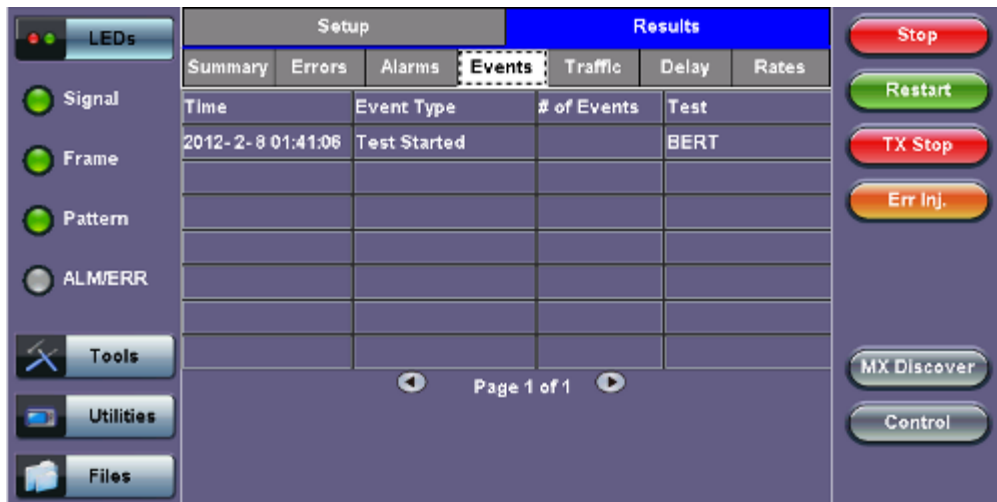

BERT Results - Events


[Go back to top](#) [Go back to TOC](#)

15.3.2.4 Traffic

Traffic tab: The following Traffic statistics are displayed:

- **Frame type:** Test and non-test frames
- **Traffic type:** Layer 2 and Layer 3 Unicast, Broadcast, and Multicast frame percentage
- **Frame size distribution**
- **Pause frames**

Tap on the graph for detailed screens.

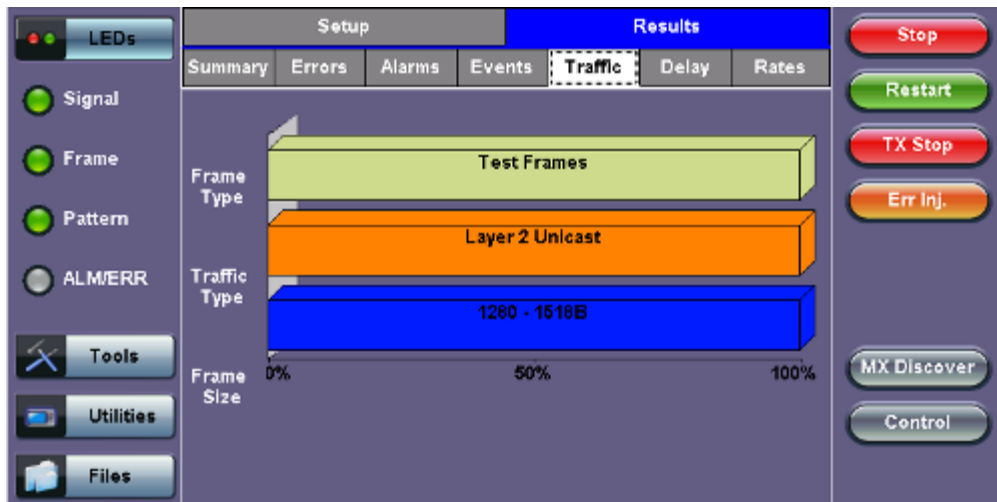

BERT Results - Traffic Distribution


[Go back to top](#) [Go back to TOC](#)

Frames tab: The following Frame distribution statistics are displayed in Count (#) and Percentage (%):

- **Received (RX) frames:**
 - Total frames
 - Test frames
 - VLAN tagged frames
 - Q-in-Q VLAN stacked frames
 - Non-test frames
- **Transmitted (TX) frames:**

Total frame - Total # frames transmitted

- **Pause frames:** Total number of transmitted and received Ethernet pause flow-control frames

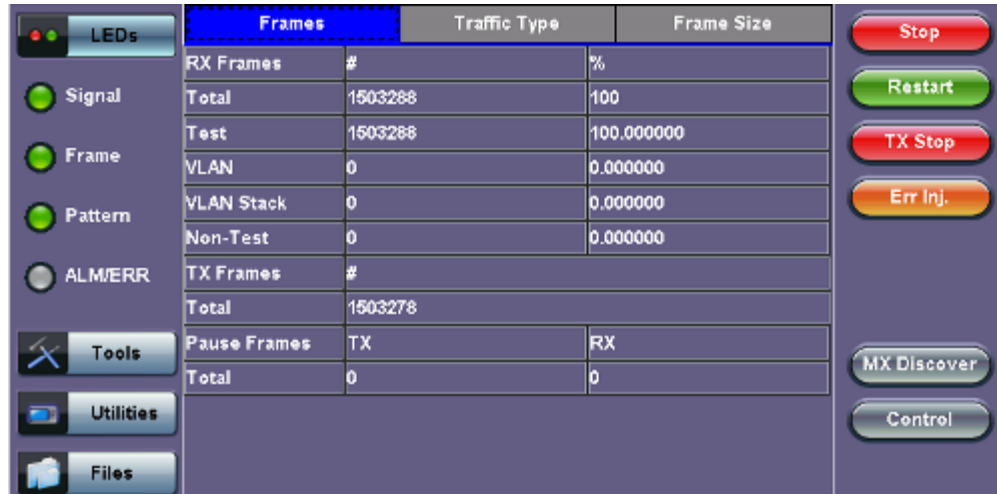

Frames		Traffic Type	Frame Size
RX Frames	#		%
Total	1503288		100
Test	1503288		100.000000
VLAN	0		0.000000
VLAN Stack	0		0.000000
Non-Test	0		0.000000
TX Frames	#		
Total	1503278		
Pause Frames	TX		RX
Total	0		0


BERT Results - Frames

[Go back to top](#) [Go back to TOC](#)

Traffic Type tab: The following Traffic distribution statistics are displayed in Count (#) and Percentage (%):

- **Layer 2 Unicast frames:** Number of Unicast frames received without FCS errors.
- **Layer 2 Broadcast frames:** Number of Broadcast frames received without FCS errors. Broadcast frames have a MAC address equal to FF-FF-FF-FF-FF-FF.
- **Layer 2 Multicast frames:** Number of Multicast frames received without FCS errors.

BERT Results - Traffic Type

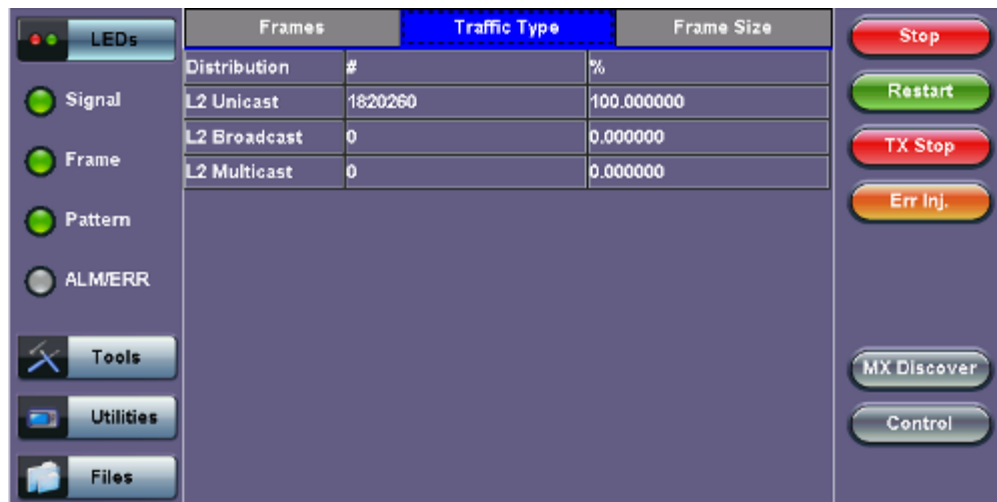


Frames		Traffic Type	Frame Size
Distribution	#		%
L2 Unicast	1820260		100.000000
L2 Broadcast	0		0.000000
L2 Multicast	0		0.000000

[Go back to top](#) [Go back to TOC](#)

Frame Size tab: The following Frame distribution statistics are displayed in Count (#) and Percentage (%):

- < 64 bytes frames
- 64-127 byte frames
- 128-255 byte frames
- 256-511 byte frames
- 512-1023 byte frames
- 1024-1279 byte frames

- 1280-1518 byte frames
- > 1518 byte frames - Jumbo frames

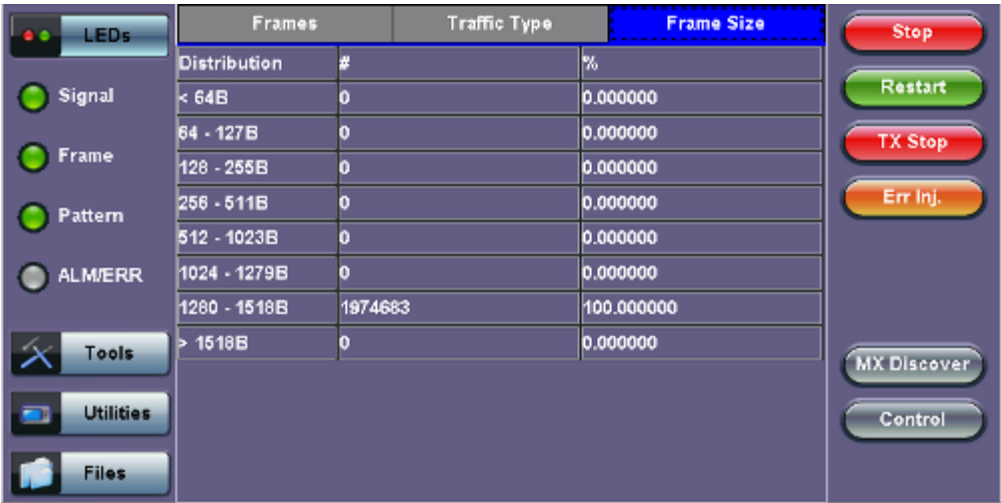


BERT Results - Frame Size

[Go back to top](#) [Go back to TOC](#)

15.3.2.5 Rates

Rates tab: Rate statistics are displayed in a graph format. Tap on either gauge to see rate details in table form. The table shows transmitted (**Tx**) and received (**Rx**) current, minimum, maximum and average frame rates (**FPS**) and Data Rates (**Mbps**).

- **Frame rate in Frames per second (FPS):** Number of received frames (including bad frames, Broadcast frames and Multicast frames)
- **Data rate in Mbps:** Received data rate expressed in Mbps

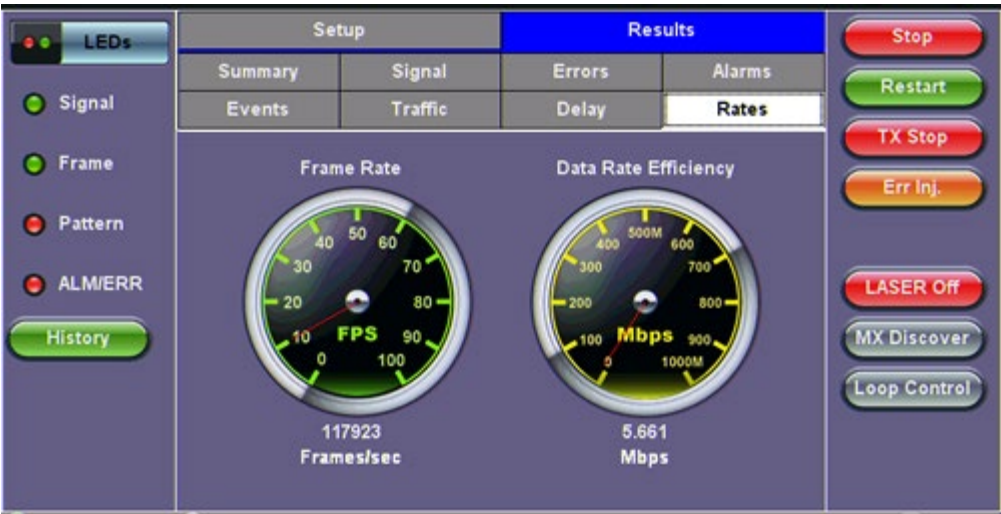

BERT Results - Rates

[Go back to top](#) [Go back to TOC](#)

15.3.2.6 Delay

Delay tab: Delay measures the interpacket gap, start of the frame, and preamble duration. Frame arrival statistics are displayed in tabular format:

- Current

- Minimum
- Maximum
- Variation (Current) - Interframe delay variation




BERT Results - Delay

[Go back to top](#) [Go back to TOC](#)

15.3.2.7 Alarms

Alarms tab: The following Alarms (Current and Total) are displayed:

- **LOS:** Loss of Signal
- **LOS Sync:** Loss synchronization
- **Pattern Loss:** Indicates errors related to test pattern
- Service disruption associated with loss of signal:
 - **Current:** Duration of the current service disruption
 - **Total:** Total accumulated duration of the service disruptions
 - **Min/Max:** Minimum and maximum duration of the service disruption events
 - **No. of Occurrences:** Counter of service disruption events

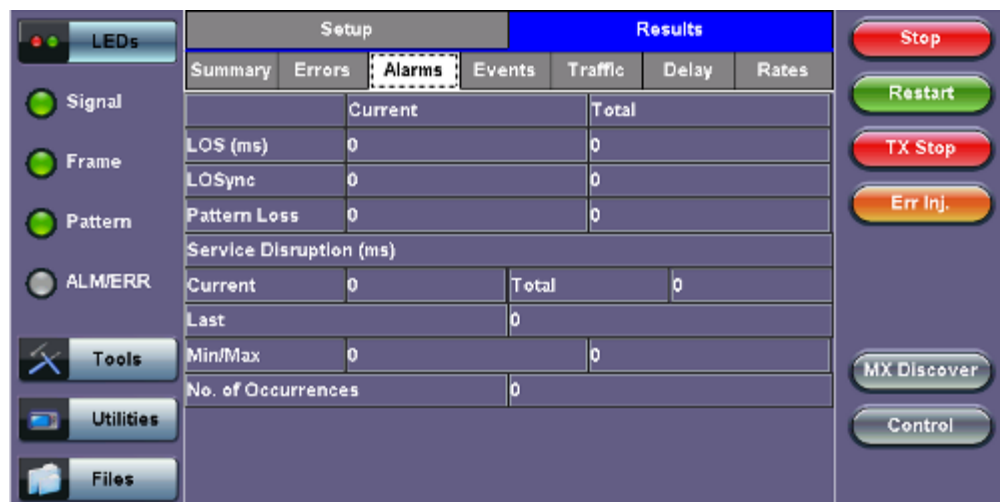


BERT Results - Alarms

[Go back to top](#) [Go back to TOC](#)

15.3.2.8 Signal

The Signal tab (fiber ports only) displays the optical level measured by the SFP or XFP transceiver. Page 1 displays the level measurement in dBm for the optical signal.


Loss of Signal (LOS) and the Saturation level for optical signals are shown graphically including the level measurement in dBm.

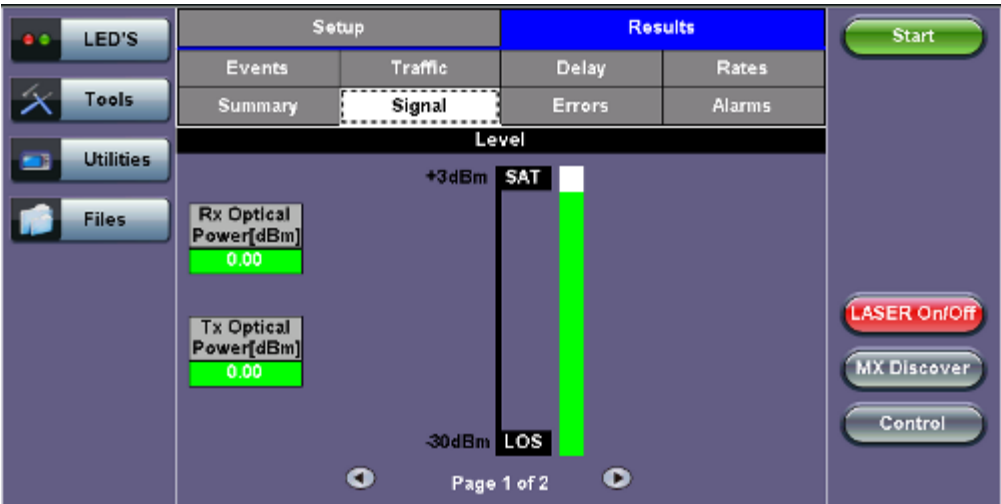

BERT Results - Signal

Signal (Page 2)

Page 2 displays the Optical module (SFP or XFP) information which includes Vendor name, Part Number and Optical Wavelength. Tap on the **Decode** button to view additional information on SFP optics.

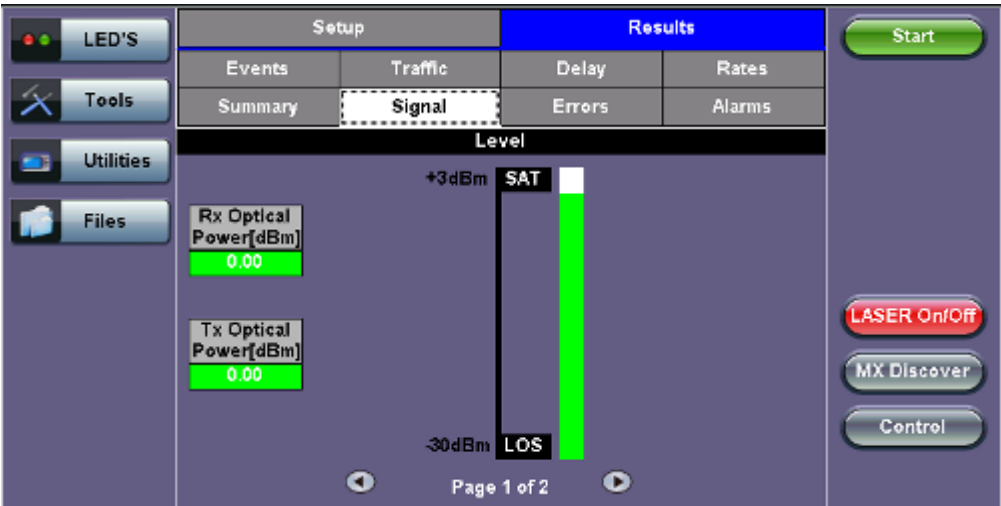

BERT Results - Signal (Page 2)

Signal (Page 3)

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Setup		Results	
Events	Traffic	Delay	Rates
Summary	Signal	Errors	Alarms
Frequency			
Current [bps]		1250000000	
Offset [ppm]		0.0	
Min [ppm]		0.0	
Max [ppm]		0.0	

Start

LASER OFF

MX Discover

Loop Control

Page 3 of 3

BERT Results - Signal (Page 3)

The received signal frequency and offset is measured and performed on the optical interface (SFP or XFP).

- **Current:** Indicates the frequency of the input signal.
- **Offset:** Indicates the difference between the standard rate and the rate of the input signal.
- **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal.
- **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal.

[Go back to top](#) [Go back to TOC](#)

15.4 RFC 2544 Conformance Testing


- [Overview](#)
- [Setup - Standard Mode](#)
 - [Header Settings](#)
 - [Frames Settings](#)
 - [Threshold Settings](#)
 - [Peer-to-Peer Asymmetric Testing](#)
 - [Throughput Settings](#)
 - [Latency Settings](#)
 - [Frame Loss Settings](#)
 - [Burst Settings](#)
- [Starting / Stopping a RFC2544 Measurement](#)
- [Results - Standard Mode](#)
 - [Status](#)
 - [Summary](#)
 - [Signal](#)
 - [Events](#)
 - [Latency / Jitter](#)
 - [Frame Loss](#)
 - [Burst](#)
- [Saving Results](#)
- [Advanced SLA Mode](#)
 - [Background General Setup](#)
 - [Background Traffic Setup](#)
 - [Background Results](#)

Overview:

RFC 2544 recommendations are well accepted in the test and measurement industry for network performance testing. The RFC 2544 test suite consists of and performs a set of four automated tests (throughput, latency, frame loss, and burst or back-to-back) to qualify the performance of a network link under test. The tests are especially popular for the verification of network links with certain service level agreements (SLA).

The following settings must be configured prior to RFC 2544 testing:

- Test layer (Layer 2, 3, & 4)
- Frame header (PBB, MAC, VLAN, IP, UDP, and Data)
- Test frames selection
- Pass/fail thresholds (optional)
- Far-end unit loop control
- Throughput
- Latency
- Frame loss
- Burst (back-to-back)

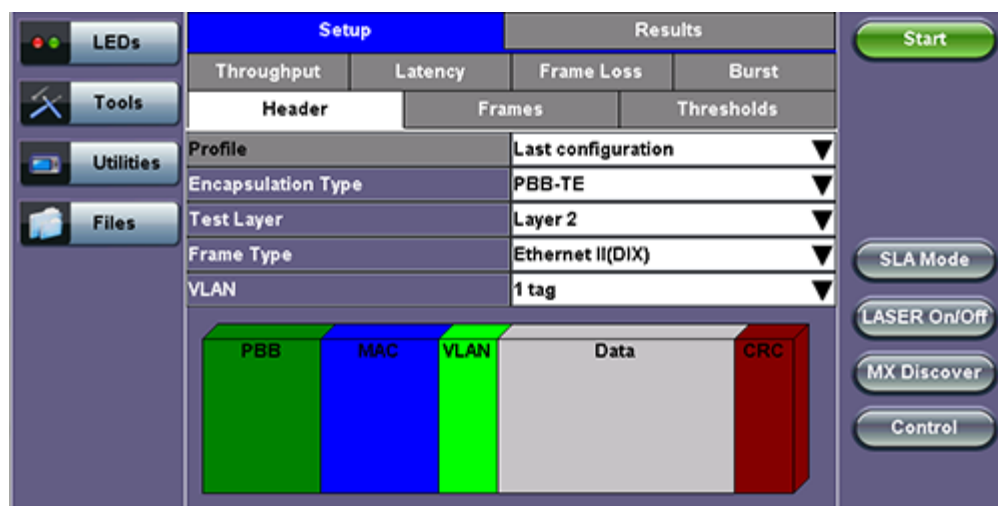

[Go back to top](#) [Go back to TOC](#)

15.4.1 Setup - Standard Mode

Unless otherwise noted, the Frame Header and related setups are identical to the setups described in the [BERT Application](#).

[Go back to top](#) [Go back to TOC](#)

15.4.1.1 Header Settings

With the exception of the Data tab, RFC 2544 Header setup options are identical to the setups described in the BERT application. Refer to the [Header Settings](#) section of the BERT application for more information.

RFC 2544 setup options are listed below:

- Profile
- Encapsulation Type
- Test
- Frame Type
- MAC/IP
- VLAN
- MPLS:
- MAC, VLAN, MPLS, IP, and Test Pattern Configurations:
- MAC Header Tab
- Data Tab: No payload selection is possible.
The payload area is populated with a VeEX signature field and other proprietary data.
- RX Filter Tab
- VLAN Tab
- MPLS Tab
- IP Tab



RFC 2544 Data tab


[Go back to top](#) [Go back to TOC](#)

15.4.1.2 Frames Settings

Frames tab: User configures the following:

- **Preset Frames:** User selects from a list of recommended test frame sizes defined in RFC 2544:
 - Test frames are 64, 128, 256, 512, 1024, 1280, and 1518 bytes.
 - The default selected frames are 64 and 1518 bytes.
 - To select/deselect any of the recommended test frames, check the box to the right of the desired frame.

-  When VLAN tagging or MPLS tagging is enabled, the value in parentheses reflects the actual frame size transmitted. For example one VLAN tag adds 4 bytes to the frame size, therefore a 64B frame becomes a 68 byte frame.
- Add frame:** The user can add two additional user configurable test frames of any size ranging from 64 bytes to 10000 bytes.
 - To add additional test frames, tap the **Add Frame** button.
 - Enter the frame size using the numeric keypad and click apply.
 - Press the back button to return to the frames screen.
 - The new custom frame size is displayed (it can be enabled or disabled as needed).

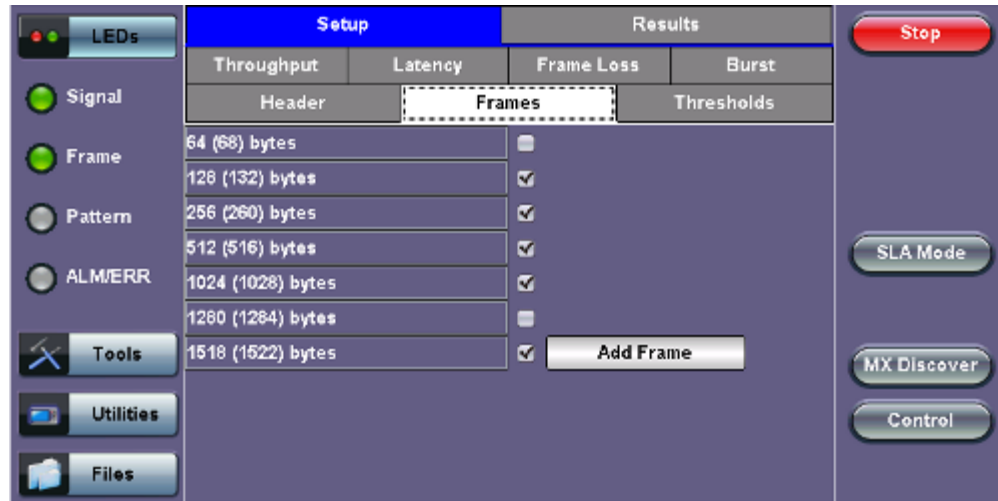

Setup		Results
Throughput	Latency	Frame Loss
Header	Frames	Thresholds
64 (68) bytes	☐	
128 (132) bytes	☒	
256 (260) bytes	☒	
512 (516) bytes	☒	
1024 (1028) bytes	☒	
1280 (1284) bytes	☐	
1518 (1522) bytes	☒	

Add Frame

Stop

SLA Mode

MX Discover

Control


RFC 2544 Setup - Frame Settings

[Go back to top](#) [Go back to TOC](#)

15.4.1.3 Threshold Settings

Threshold tab:

- User enables or disables threshold settings for the throughput and latency tests.
 - When enabled, threshold settings can be configured for all of the test frames selected in the frame settings tab.
- A Pass/Fail criteria will be applied when the threshold settings are enabled. Select a **rate type** from the drop-down menu that will be used to determine pass/fail criteria. Options are % of Max Rate, % of Line Rate, Utilized Line Rate (Mbps).
 - For example, if the throughput threshold value for a 64 byte frame is configured for 80%, then a Pass criteria is assigned if the throughput rate is 80% or better.
 - The threshold values for Throughput and Latency can be customized per user requirements. Tap on the selected value to edit.

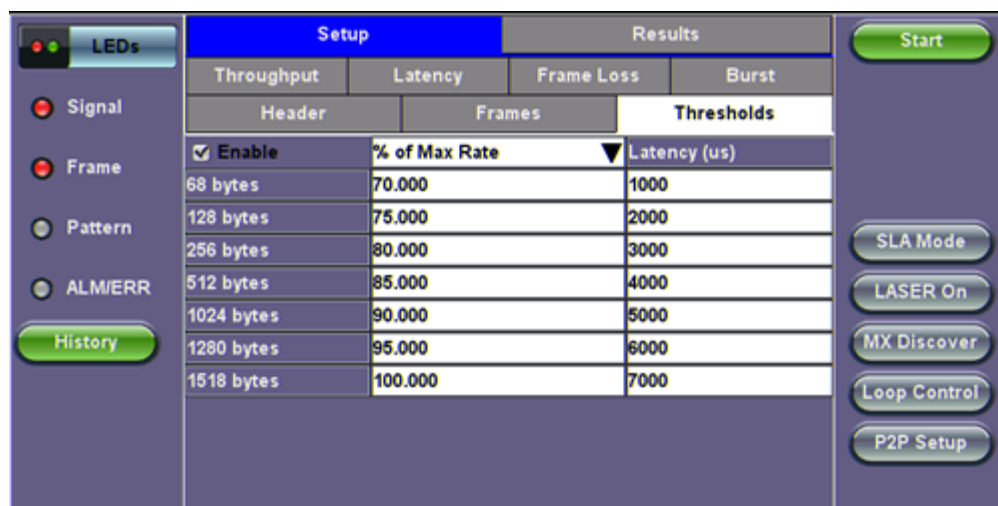

Setup		Results
Throughput	Latency	Frame Loss
Header	Frames	Thresholds
☒ Enable	% of Max Rate	▼ Latency (us)
68 bytes	70.000	1000
128 bytes	75.000	2000
256 bytes	80.000	3000
512 bytes	85.000	4000
1024 bytes	90.000	5000
1280 bytes	95.000	6000
1518 bytes	100.000	7000

Start

SLA Mode


LASER On

MX Discover

Loop Control

P2P Setup

RFC 2544 Setup - Threshold Settings

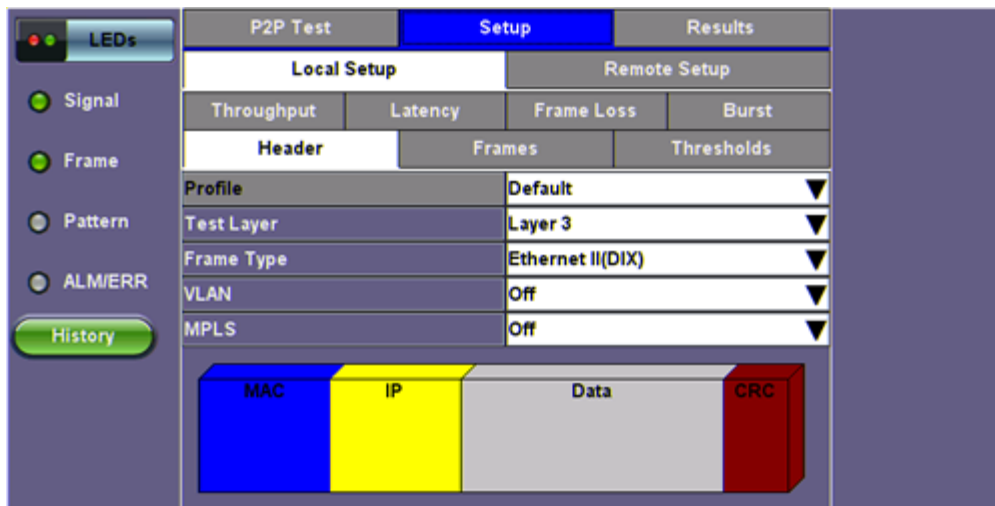

P2P Test		Setup		Results	
Local Setup			Remote Setup		
Throughput		Latency		Frame Loss	
Header		Frames		Thresholds	
Profile	Default				
Test Layer	Layer 3				
Frame Type	Ethernet II(DIX)				
VLAN	Off				
MPLS	Off				

MAC

IP

Data

CRC

Local Setup

[Go back to top](#) [Go back to TOC](#)

15.4.1.4 Throughput, Latency, Frame Loss, and Burst Settings

The RFC 2544 test suite allows the user to run all four tests, one of the four tests, or a combination of any of the four tests. The user simply has to enable/disable which tests to perform by checking/unchecking a selection box in the respective tab for each test. By default all four tests are enabled.

The following parameters must be configured before running the RFC 2544 conformance test suite.

Throughput tab:

- **Max Rate:** Up to 100% of the negotiated line rate. The default value is 100%.
 - This is the maximum transmit rate to perform the throughput test for each test frame size.
 - The user may configure this rate as a % of the total line rate or in Mbps. For example if the user configures the Max Rate to be 90% and the negotiated line rate of the link is 100Mbps, then the maximum transmit rate will be 90Mbps or 90% of the line rate.
- **Resolution:** Input any value between 0.001% and 1%. The default value is 1%. Resolution refers to the resolution in searching for the throughput rate. If 1% is selected, the throughput rate will be searched with $\pm 1\%$ accuracy.
- **Duration:** 5 to 999 seconds. The default value is 20 seconds.
 - The duration is the amount of time the throughput test is run for, for each frame size at a given rate.
- **Frame Loss Limit (%):** Configures the frame loss tolerance used in the throughput rate search algorithm. If the frame loss count stays below the configured Frame Loss limit, the throughput rate search will stop, otherwise the throughput rate search will continue to the next step.

Setup		Results
Header	Frames	Thresholds
Throughput	Latency	Frame Loss
MAX Rate	1000.0	ULR (Mbps) ▼
Resolution	1.0	ULR (Mbps) ▼
Duration (s)	20	
Frame Loss Limit(%)	0.000 %	

☒ Enable Test

Start

SLA Mode

LASER On

MX Discover

Loop Control

P2P Setup

RFC 2544 Setup - Throughput Settings

[Go back to top](#) [Go back to TOC](#)

Latency tab: User configures the following:

- **Test:** Throughput Rate or Custom Rate. The default value is throughput.
 - **Throughput rate:** Latency test will be performed at the throughput rate found for each of the tested frame sizes.
 - **Custom rate:** User configures a custom rate in % or Mbps.
 - **Custom Rate per frame size:** The user can configure a custom rate in % or Mbps for each test frame. Tap on **Rate Table Config.** to configure rates for each frame. After making edits tap **Apply** to confirm edits or **Apply to All** to apply rates to all tests.
- **Rate:** Only available if Custom Rate is selected. Enter up to 100% of the negotiated line rate or enter the rate in Mbps.
- **Duration:** 5 to 999 seconds. The default value is 20 seconds.
This is the amount of time that the latency test will be performed for each test frame size.
- **Repetitions:** 1 to 100. The default value is 1.
This is the amount of times that the latency test will be repeated for each test frame size.

Setup		Results
Header	Frames	Thresholds
Throughput	Latency	Frame Loss
Test Rate	Throughput Rate ▼	
Duration (s)	10	
Repetitions	1	

☒ Enable Test

Start

SLA Mode

LASER On/Off

MX Discover

Control

RFC 2544 Setup - Latency Settings

[Go back to top](#) [Go back to TOC](#)

Frame Loss tab:

- **Max Rate:** Up to 100% of the negotiated line rate. The default value is 100%.
This is the maximum transmit rate to perform the frame loss test for each test frame size. The user may configure this rate as a % of the total line rate or in Mbps. For example if the user configures the Max Rate to be 90% and the negotiated line rate of the link is 100Mbps, then the maximum transmit rate will be 90Mbps or 90% of the line rate.
- **Step Size:** 1 to 10%. The default value is 10%.

The step size is the rate % that the frame loss test will be reduced by in the event of any frame loss. For example if the Max Rate is 100Mbps (or 100%) and frames are lost at this rate, then the transmit rate will be reduced to 90Mbps (or 90%). The frame loss test will now be performed at the new rate until there is zero frame loss at two consecutive rate settings. This means that the test will have to be performed at 80% (assuming that there was zero frame loss at 90%).

- **Duration:** Selectable in the range 5 to 999 seconds. The default value is 20 seconds.
The duration is the amount of time the throughput test is run for, for each frame size at a given rate.

Setup		Results	
Header		Frames	Thresholds
Throughput	Latency	Frame Loss	Burst
MAX Rate	80.000	%	
Step Size (%)	10.00		
Duration (s)	10		
☒ Enable Test			

RFC 2544 Setup - Frame Loss Settings

[Go back to top](#) [Go back to TOC](#)

Burst (Back-to-Back) tab:

- **Max Rate:** Up to 100% of the negotiated line rate. The default value is 1000 ULR (Mbps).
In the burst test, frames are always transmitted at the maximum rate for a given minimum and maximum burst duration. The user may configure this rate as a % of the total line rate or in Mbps. For example if the user configures the Max Rate to be 90% and the negotiated line rate of the link is 100Mbps, then the maximum transmit rate will be 90Mbps or 90% of the line rate.
- **Minimum Duration:** Selectable in the range 2 to 999 seconds. Default value is 2 seconds.
This is the duration of the first burst.
- **Maximum Duration:** Selectable up to 999 seconds. The default value is 20 seconds.
This is the duration of the second burst, which must be greater than the minimum burst.
- **Repetitions:** Selectable in the range 1 to 100. The default value is 1.
This is the amount of times that the burst test will be repeated for each test frame size.

Setup		Results	
Header		Frames	Thresholds
Throughput	Latency	Frame Loss	Burst
MAX Rate	80.000	%	
MIN Duration (s)	2		
MAX Duration (s)	10		
Repetitions	1		
☒ Enable Test			

RFC 2544 Setup - Burst Settings

15.4.1.5 Starting/Stopping a RFC 2544 Measurement

Once all configurations have been made, the user can start the RFC 2544 test (press the **Start** button on the top right section of the screen). The following are two scenarios of how to prepare and start the unit for RFC 2544 testing.

 *If testing on the fiber ports, make sure the LASER is turned On before starting the test.*

- **Far End Unit in Manual Loopback Mode**
 - If the far-end unit (another MX) is already in a manual loopback mode, do not send a loop up command since it is not necessary
 - Once the correct control settings are configured, the user can start the test

The selected tests will run automatically. When all the tests are complete the test will stop automatically. If the RFC 2544 test suite needs to be stopped before they are done, then simply press the **Stop** button, located in the actions drop-down menu. The status of each selected test can be seen in the Results tab.

- **Far End Unit Controlled with Loop Up/Down Commands**
 - If the far-end unit is not manually looped back, then it must first receive a loop up command from the control unit before the RFC 2544 test suite can be started
 - To loop up the far-end unit with the manual mode loop up/down commands, configure the control settings mode to manual
 - Enter the MAC and/or IP address of the far-end unit
 - Send the loop up command by pressing **Loop Up**

Once the far-end unit has been looped back, start the test by pressing the **Start** button. When the all of the selected test are completed, the RFC 2544 test suite will stop automatically. Once all tests have been completed and there is no need to test again, go back to the Control tab, and press the **Loop Down** button. This will send a loop down command to the far-end unit to remove the loopback that is in place.

 *If the unit is in Advanced SLA mode, the RFC 2544 test runs simultaneously with the background.*


15.4.2 Results- Standard Mode

The progress and current result of the RFC 2544 can be viewed as the test is in progress.

Results tab:

Navigate the respective sub-tabs (throughput, latency, frame loss, or burst) to view the results for each test. For the burst test, the results can be viewed in summary table format or test log format.

Status tab: The status of each test is displayed including a stamped log of each test.

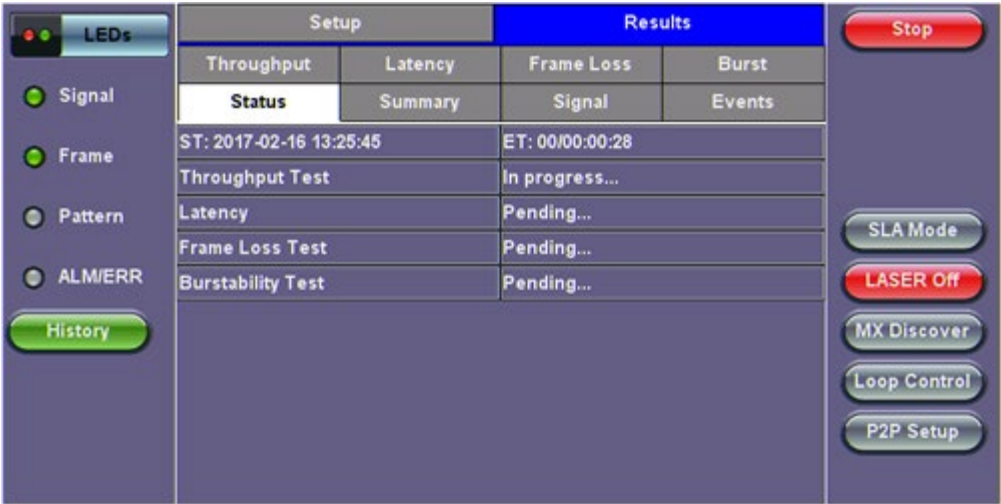


RFC 2544 Results - Status

[Go back to top](#) [Go back to TOC](#)

Summary tab: The following results including the Start (ST) and Elapsed (ET) times are displayed:


- **Line Rate** (Mbps): Negotiated rate of the interface (10M, 100M, or 1000M). This value is always fixed since it depends on the maximum capacity of the link under test, hence the test interface that is configured.
- **Framed Rate:** $(\text{Payload} + \text{MAC/IP Header} + \text{VLAN Tag} + \text{Type/Length} + \text{CRC}) / (\text{Payload} + \text{Total Overhead}) * \text{Line Rate} \%$ (in Mbps).
- **Data Rate:** $\text{Payload} / (\text{Payload} + \text{Total Overhead}) * \text{Line Rate} \%$.
- **Utilization:** % of Line Rate. For example, if we transmit 100Mbps on a 1Gbps interface then the utilization value is 10% (or 100Mbps) of the total link capacity (or Line Rate).
- **Total Frames**
- **Bad Frames**
- **Pause Frames:** Total number of transmitted and received ethernet pause flow-control frames.

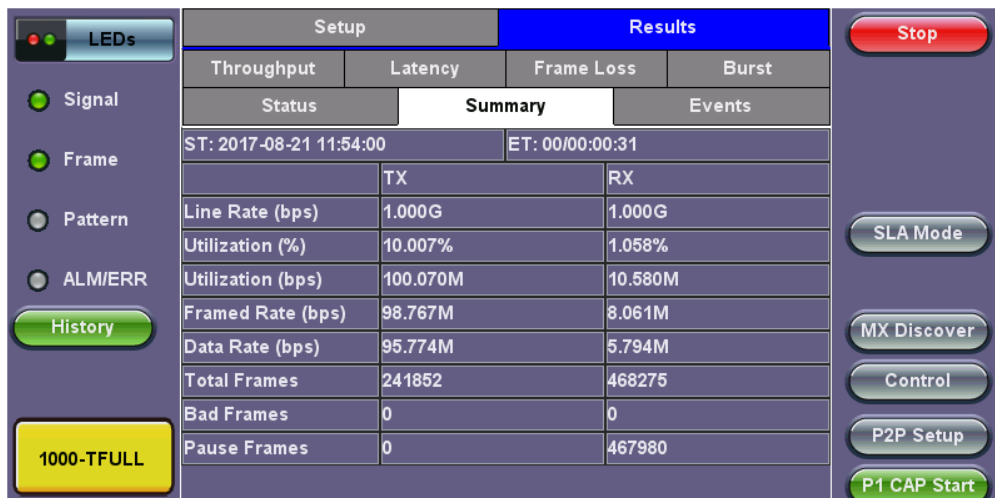

RFC 2544 Results - Summary

[Go back to top](#) [Go back to TOC](#)

Signal tab: The Signal tab (fiber ports only) displays the optical level measured by the SFP or XFP transceiver. The RFC 2544 Signal tab is identical to the Signal tab for the BERT application. Refer to [Signal](#) from the BERT section for more information.

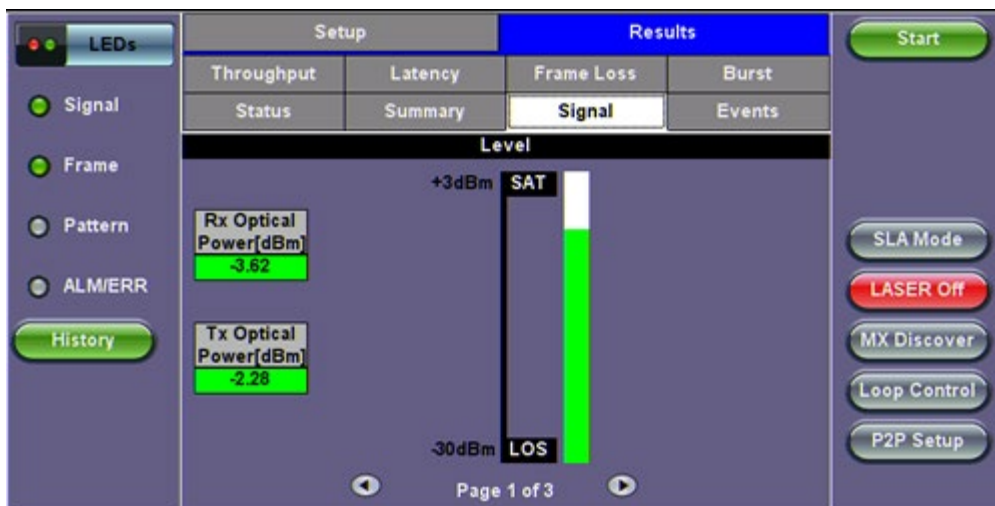

RFC 2544 Results - Signal (Page 1)

[Go back to top](#) [Go back to TOC](#)

Events tab: A time stamped log of each test is displayed.

LEDs

Tools

Utilities

Files

Setup

Results

Throughput	Latency	Frame Loss	Burst
Status	Summary	Signal	Events
Time	Events	Test	
20-2-2012 17:05:31	Test Started	RFC 2544	
20-2-2012 17:05:31	Test Started	Throughput	
20-2-2012 17:06:03	Test Stopped	Throughput	
20-2-2012 17:06:03	Test Started	Latency	
20-2-2012 17:06:05	Test Stopped	Latency	
20-2-2012 17:06:05	Test Started	Frame Loss	
20-2-2012 17:06:26	Test Stopped	Frame Loss	

Page 1 of 2

Start

LASER On/Off

Control

Profiles


RFC 2544 Results - Events

[Go back to top](#) [Go back to TOC](#)

Throughput tab

The Throughput tab displays the maximum throughput rate of the link under test. Results are displayed in graphical and table formats. Use the drop-down menu to change the display format.

- **Graphical:** Throughput results are displayed in a bar graph form
- Summary table and test log table display:
 - byte size
 - **Tx(%)**: Percentage of test frames transmitted by the unit
 - **Rx(%)**: Percentage of test frames received by the unit
 - **Thresholds**: Pass/Fail test status determined by test criteria set in the Threshold tab

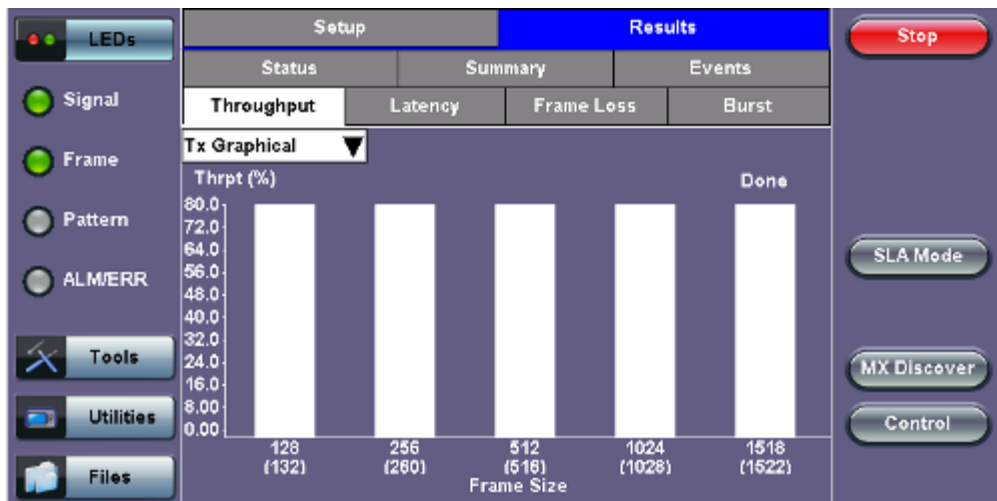

RFC 2544 Results - Throughput (Tx Graphical)

LEDs	Setup		Results	
	Status	Summary		Events
	Throughput	Latency	Frame Loss	Burst
	Summary	Tx(%)	Rx(%)	Thresholds
Signal	128 (132) bytes	80.00	80.00	Pass
Frame	256 (260) bytes	80.00	80.00	Pass
Pattern	512 (516) bytes	80.00	80.00	Pass
ALM/ERR	1024 (1028) bytes	80.00	80.00	Pass
	1518 (1522) bytes	80.00	80.00	Failed
Tools				
Utilities				
Files				

Page 1 of 1

Start

SLA Mode

MX Discover

Control

RFC 2544 Results - Throughput (Summary Table)

LEDs	Setup		Results	
	Status	Summary		Events
	Throughput	Latency	Frame Loss	Burst
	Test Log	Tx(%)	Rx(%)	Status
Signal	128 (132) bytes	80.00	80.00	Pass
Frame	256 (260) bytes	80.00	80.00	Pass
Pattern	512 (516) bytes	80.00	80.00	Pass
ALM/ERR	1024 (1028) bytes	80.00	80.00	Pass
	1518 (1522) bytes	80.00	80.00	Pass
Tools				
Utilities				
Files				

Page 1 of 1

Start

SLA Mode

MX Discover


Control

RFC 2544 Results - Throughput (Test Log Table)


[Go back to top](#) [Go back to TOC](#)

Latency and frame jitter measurements results are displayed in the following formats. Use the drop-down menu to select the Latency format:


- **Graphical:** Latency results displayed in line graph form (Latency [us] vs Frame size [bytes]).
- Summary and Test log tables display:
 - byte size
 - **Latency (us):** Round trip delay latency.
 - **Rate (%):** Percentage of frames transmitted. Data rate used for latency test.
 - **Pass/Fail** test status.

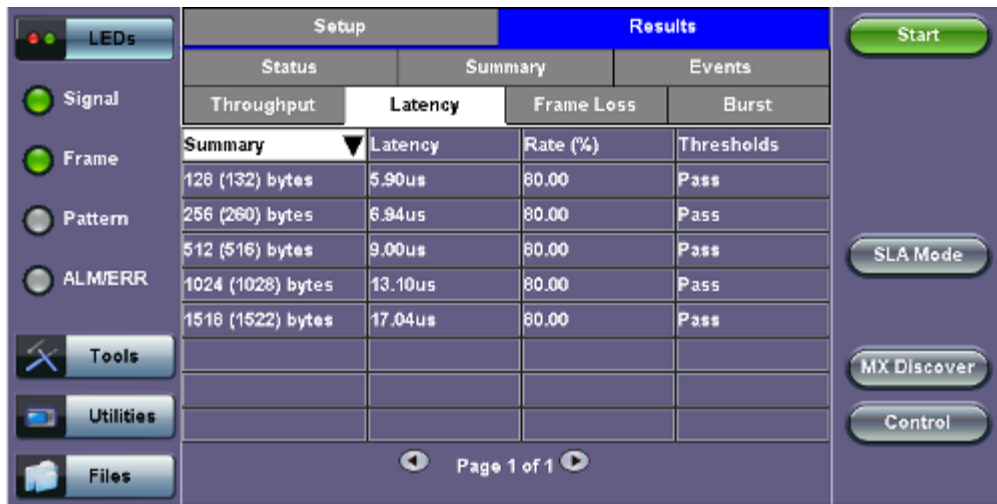


RFC 2544 Results - Latency (Summary)

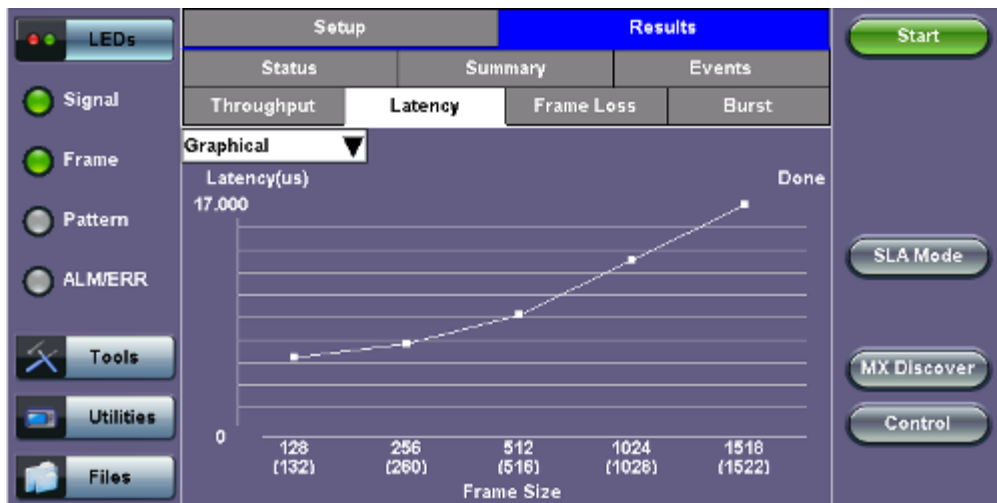

RFC 2544 Results - Latency (Graphical)

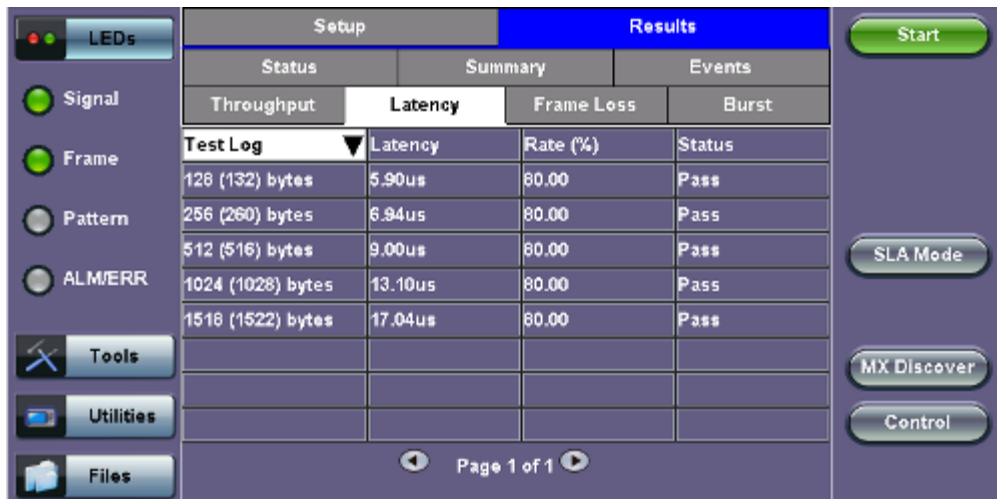

RFC 2544 Results - Latency (Test Log)

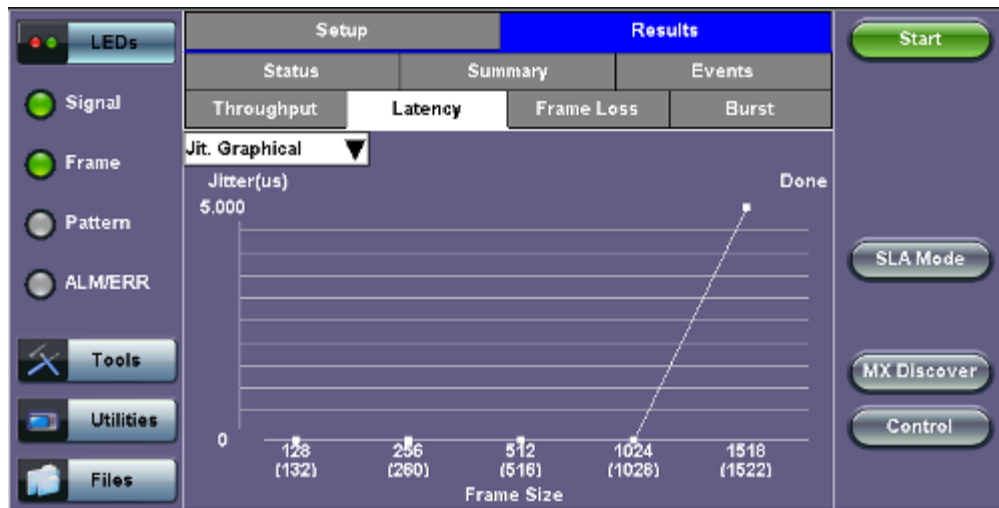

RFC 2544 Results - Latency (Jitter Graphical)

The screenshot shows the 'Results' tab with the 'Latency' sub-tab selected. The 'Jit. Summary' view displays a table of jitter results for different frame sizes.

Frame Size	Jitter	Rate (%)	Thresholds
128 (132) bytes	0.00us	80.00	Pass
256 (260) bytes	0.00us	80.00	Pass
512 (516) bytes	0.00us	80.00	Pass
1024 (1028) bytes	0.00us	80.00	Pass
1518 (1522) bytes	5.00us	80.00	Pass

RFC 2544 Results - Latency (Jitter Summary)

The screenshot shows the 'Results' tab with the 'Latency' sub-tab selected. The 'Jit. Test Log' view displays a table of jitter test results for different frame sizes.

Frame Size	Jitter	Rate (%)	Status
128 (132) bytes	0.00us	80.00	Pass
256 (260) bytes	0.00us	80.00	Pass
512 (516) bytes	0.00us	80.00	Pass
1024 (1028) bytes	0.00us	80.00	Pass
1518 (1522) bytes	5.00us	80.00	Pass


RFC 2544 Results - Latency (Jitter Test log)

[Go back to top](#) [Go back to TOC](#)


Frame Loss tab: Frame loss displays the percentage of frames not received. Use the drop-down menu to select the Frame Loss format:

- Summary and Test log tables display test frame length, byte size, **frame loss (%)** from received traffic, and **rate (%)** transmitted.
- **Graphical:** Frame Loss displayed in line graph form (Frame size [bytes] vs Rate [%]). Tap on the magnifying glass to see the


legend.

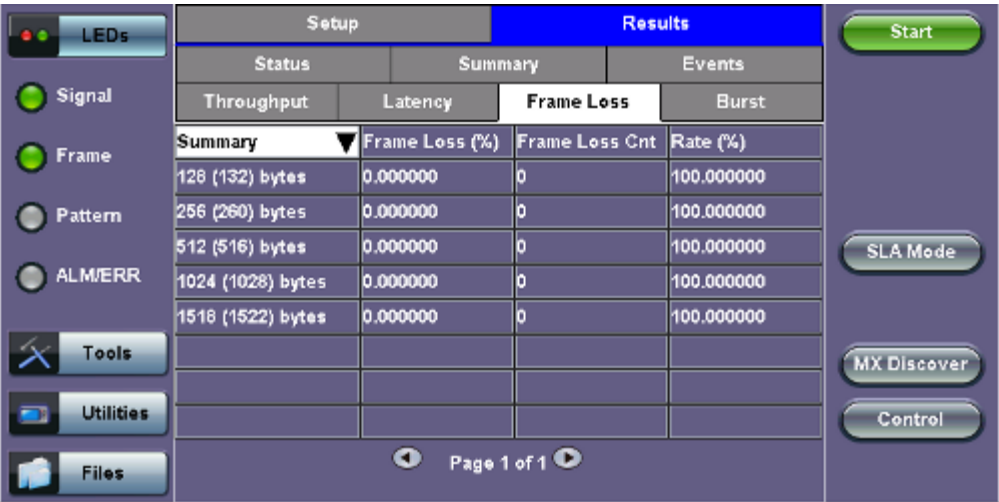

RFC 2544 Results - Frame Loss (Summary)

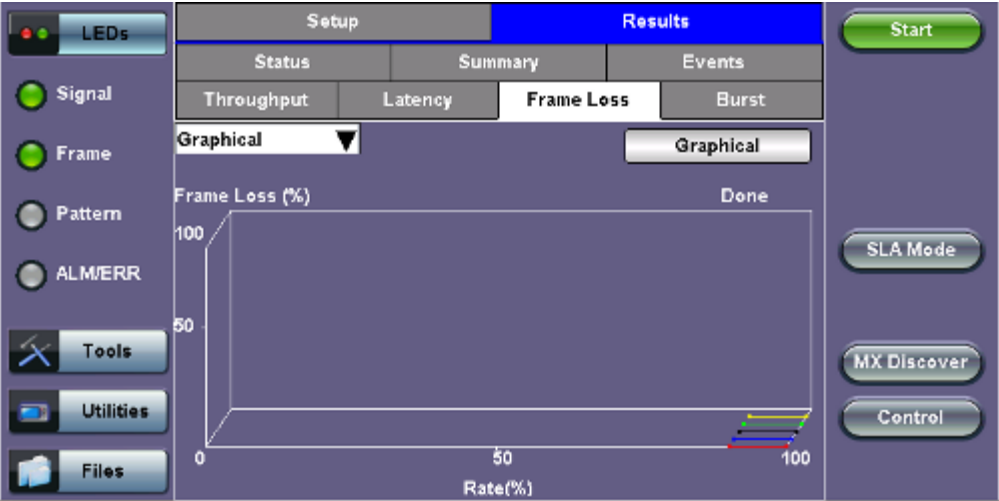

RFC 2544 Results - Frame Loss (Graphical)

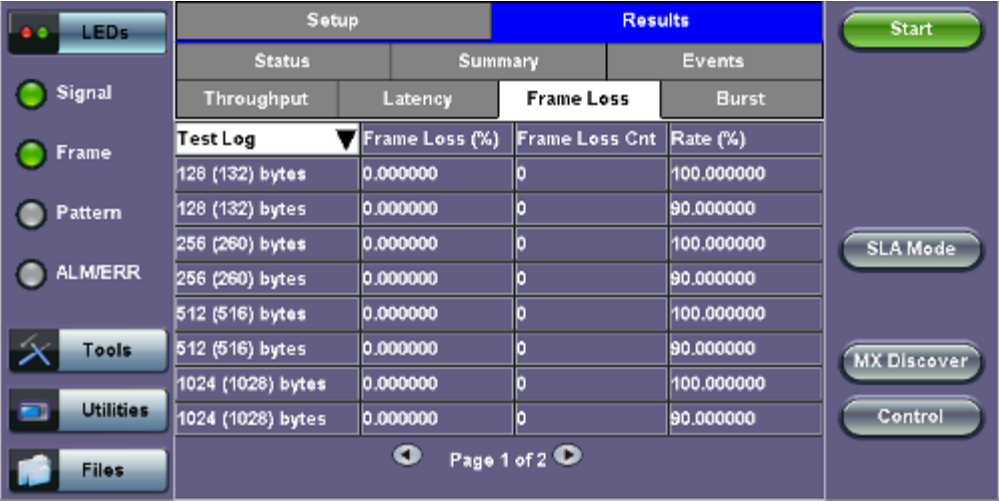

RFC 2544 Results - Frame Loss (Test log)

[Go back to top](#) [Go back to TOC](#)

Burst tab: Burstability (back-back) results are the number of frames successfully transmitted/received at the line rate. It is displayed in the following formats:

- **Summary table:** Displays **Average Frame Count** received for each test frame length

- **Test log table:** Displays **Average Frame Count** and **Duration** (seconds) for each test frame length

Setup		Results	
Status	Summary	Events	
Throughput	Latency	Frame Loss	Burst
Summary ▼		Avg. Frame Count	Status
128 (132) bytes	8223684		Pass
256 (260) bytes	4464285		Pass
512 (516) bytes	2332089		Pass
1024 (1028) bytes	1192748		Pass
1516 (1522) bytes	810635		Pass

RFC 2544 Results - Burstability (Summary)

Setup		Results	
Status	Summary	Events	
Throughput	Latency	Frame Loss	Burst
Test Log ▼		RX Fm. Count	Exp. Fm. Count
128 (132) bytes	822368	822368	2
128 (132) bytes	8223684	8223684	20
256 (260) bytes	446428	446428	2
256 (260) bytes	4464285	4464285	20
512 (516) bytes	233208	233208	2
512 (516) bytes	2332089	2332089	20
1024 (1028) bytes	119274	119274	2
1024 (1028) bytes	1192748	1192748	20

RFC 2544 Results - Burstability (Test Log)

[Go back to top](#) [Go back to TOC](#)

15.4.3 Saving RFC 2544 Results

Once the test has been stopped the results can be saved by pressing the **Save** key on the VePAL's keypad. The results will be saved and named automatically. Once the results are saved, the user may view or rename the results file by going to **Utilities > Files > Saved**. For more information on retrieving saved test results, refer to **File Management** in the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for more information.

[Go back to top](#) [Go back to TOC](#)

15.4.4 Advanced SLA Mode

Using this test function, users are able to verify SLAs while end-to-end QoS is assessed properly. By configuring one primary test stream and up to seven background streams each with independent frame size, bandwidth, and more importantly QoS levels, simulating different service applications is now realized. The Advanced RFC 2544 SLA mode provides detailed visibility of the test parameters for each of the traffic streams being measured, providing an efficient in-depth qualification in a fast and automated way.

To change SLA modes, tap on the **SLA Mode** button on the right side of the screen and tap **OK** after selecting an SLA mode.



RFC 2544 SLA Mode

[Go back to top](#) [Go back to TOC](#)


Setup

For **Header**, **Frames**, **Thresholds**, **Throughput**, **Latency**, **Frame Loss**, and **Burst**, please refer to [Setup - Standard Mode](#).

[Go back to top](#) [Go back to TOC](#)

Background - General

- **# of Back. Streams:** From 1 to 7 streams.
- **RFC 2544 Test Stream (%):** This is the max rate set in frame loss.
- **Background Stream # (%):** Allocated Bandwidth per Stream. The total bandwidth for all streams cannot exceed 100%.
- **Total (%):** Sum of all stream rates in %.

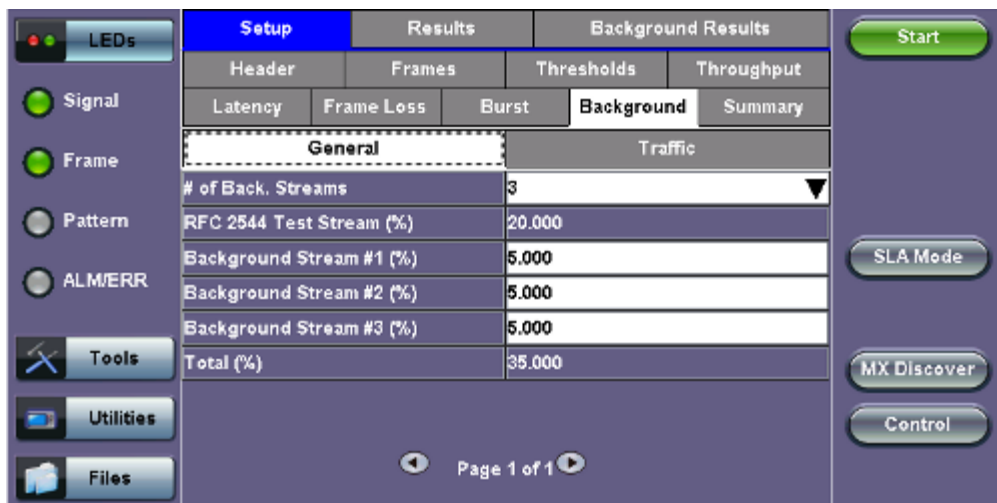

Setup - Background - General

[Go back to top](#) [Go back to TOC](#)

Background - Traffic

- **Background Stream #:** Select a stream number to configure.
- **Traffic Flow:** Select from Constant, Ramp, Burst, or Single Burst traffic flow.
- **Frame Size (Type):** Fixed or Uniform. If uniform is chosen, the user will have to input a minimum and maximum frame size.
- **Frame Size (bytes):** If a fixed frame size is chosen, this option is enabled. Enter the frame size when a Layer 2 or 3 is selected. Frame sizes can be from 64bytes to 1518bytes, in addition to jumbo frames up to 10k bytes.
- **BW (Transmit Bandwidth):** Configure the transmit rate for the stream.



The bandwidth allocation per stream is already configured in the **General Settings** tab, but can be modified in this screen as well.

LEDs Tools Utilities Files	Local Setup		Local Results		Background Results	
	Header		Frames	Thresholds	Throughput	
	Latency	Frame Loss	Burst	Background	Summary	
	General			Traffic		
	Background Stream #		Stream #1 ▼			
	Traffic Flow		Constant ▼			
	Frame Size Type		Fixed ▼			
	Frame Size (bytes)		64			
	Constant Bandwidth		5,000		% ▼	
Start SLA Mode MX Discover Control Local/Remote						

Setup - Background - Traffic

Starting/Stopping an Advanced SLA Mode

Please see [Starting/Stopping a RFC 2544 Test](#) for information on starting/stopping the test.


[Go back to top](#) [Go back to TOC](#)

15.4.5 Background Results - Advanced SLA Mode

For information on Global and Per Stream Results in Advanced SLA Mode, please refer to [Throughput Results](#).

LEDs Signal Frame Pattern ALM/ERR Tools Utilities Files	Setup		Results		Background Results	
	Global		Per Stream			
	Stream Summary	Aggregate	Errors		Traffic	
	ST:2011-12-19 17:05:33		ET:00:03:43			
		TX		RX		
	Line Rate (bps)	1000.000M		1000.000M		
	Utilization (%)	35.099%		35.099%		
	Utilization (bps)	350.990M		350.990M		
	Framed Rate (bps)	301.745M		301.746M		
	Data Rate (bps)	202.923M		202.923M		
	Total Frames	43187440		43187440		
	Bad Frames	0		0		
	Pause Frames	0		0		
Stop SLA Mode MX Discover Control						

Background Results - Global

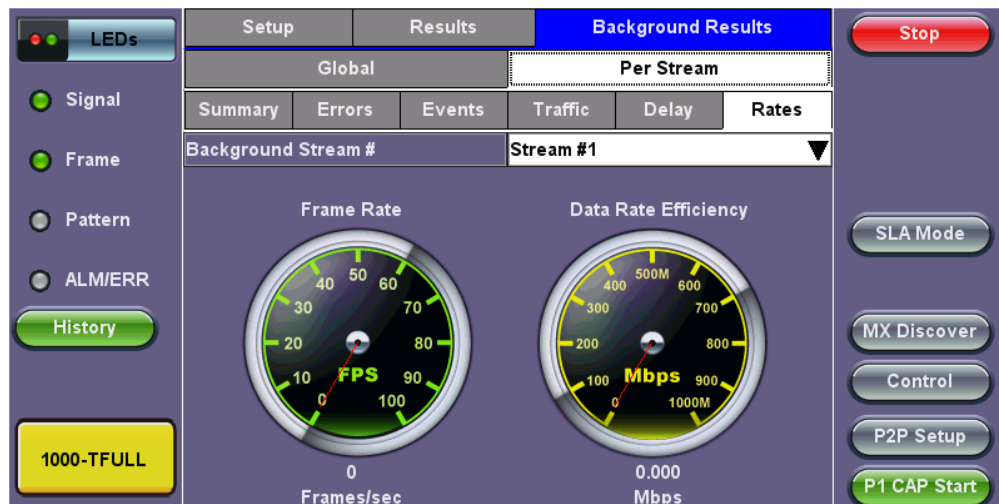

Background Results - Per Stream

[Go back to top](#) [Go back to TOC](#)

15.4.6 Peer-to-Peer and Asymmetric Testing



When the local unit connects to the remote (peer) partner, it loads the same configuration profile (header, traffic, and frame size) to the remote partner, with the MAC and IP addresses inverted. From the peer-to-peer menu, asymmetric testing becomes available.

Asymmetrical links provide different line rates in the two directions. To verify the information for both the low and the high rates of the link, the user needs to send a test signal from one instrument located at one end of the link to an instrument at the other end of the link and vice versa to test traffic capacity. The two test instruments have to be synchronized because the tests defined in RFC 2544 require the receiver to know the contents of the test signal to be transmitted in detail.

The test set offers an automated RFC 2544 test application to perform throughput, frame loss, and burstability tests in a local-remote unit setup. The user first configures the test setup in the local unit. Once initiated, the local unit transfers the setup information to the remote unit via the line under test. Upon completion, the remote unit transfers the test results back to the local unit, enabling the user to read the results for both directions of the link on the local unit.

Asymmetric Testing Setup

1. Tap on the **P2P Setup** button on the right side of the screen to start the step-by-step setup process.
2. Set the Local unit as a **Controller** or **Responder**.

At any time during the process, tap on the right side navigation buttons to move to the **NEXT** screen, return to the **Previous** screen, or **Exit** the setup guide.



Set the Local unit as Controller or Responder


Unit as Controller Setup Process

- **Step 1:** Select Controller.
 - **Mode:** Select an asymmetric test configuration.
 - **Asymmetric Up:** Tests traffic in the upstream direction (local to remote direction).
 - **Asymmetric Down:** Tests traffic the downstream direction (remote to local direction).
 - **Asymmetric Up & Down:** Test traffic in both upstream and downstream direction.
- **Step 2-6:** Make the following selections for the Controller and Remote units: Layer, IP Address, Subnet, Gateway, and VLAN tags. Tap on the white fields to edit options. Use the alphanumeric keyboard to input parameters and press **Apply** to save edits.



Input screen

- **Step 7:** Tap on the check boxes to add local frames. Tap on the **Add Frame** button to add a customized frame size.

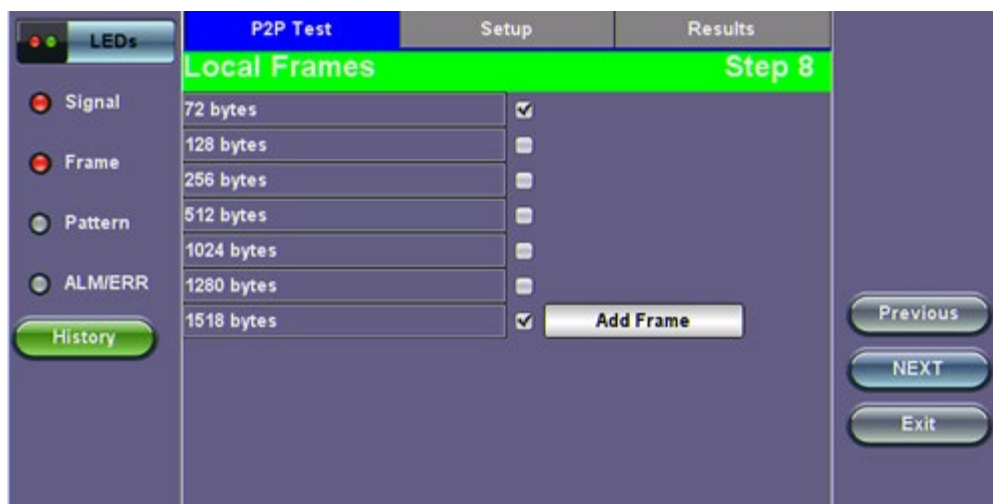

Controller - Step 7


- **Steps 8-11:** Set up and enable/disable tests for the Local unit.
 - **Step 8:** Local Throughput testing setup. See the [Throughput](#) section for a description of menu options
 - **Step 9:** Local Frame Loss testing setup. See the [Frame Loss](#) section for a description of menu options.
 - **Step 10:** Local Burst testing setup. See the [Burst \(Back-to-Back\)](#) section for a description of menu options.
 - **Step 11:** Local RX Thresholds setup. See the [Thresholds](#) section for a description of menu options.
- **Steps 12-15:** Set up and enable/disable tests for the Remote unit. See Steps 8-11 for information on setting up individual tests.
- **Step 16:** Review configuration selections on the summary screen. The option to **Start** testing or **Reconfigure** test settings becomes available.



Controller Summary Screen

Unit as Responder Setup Process

- **Step 0-1:** Tap on the white fields to setup the Local unit's IP Address, Subnet, and Gateway. Tap on **Next** to setup VLAN tags using the drop-down menu.
- **Step 2:** Review configuration selections. The option to **Start** testing or **Reconfigure** test settings becomes available.

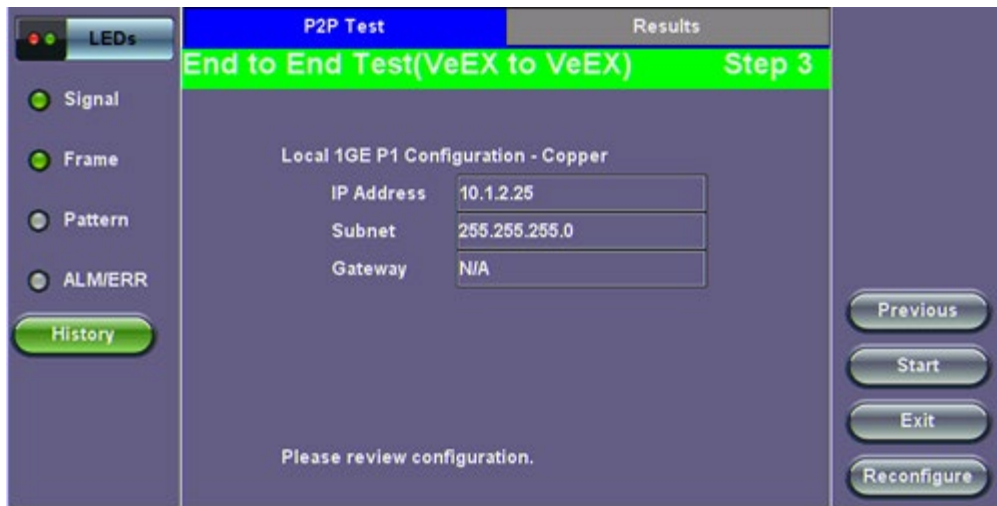


The Responder Summary Screen is a web-based interface for configuring a P2P test. It features a left sidebar with navigation options: LEDs, Signal, Frame, Pattern, ALM/ERR, and History. The main area is titled 'P2P Test' and 'Results'. A green banner at the top reads 'End to End Test(VeEX to VeEX) Step 3'. Below this, the 'Local 1GE P1 Configuration - Copper' is shown with fields for IP Address (10.1.2.25), Subnet (255.255.255.0), and Gateway (N/A). A message at the bottom says 'Please review configuration.' On the right, there are buttons for Previous, Start, Exit, and Reconfigure.

P2P Test		Results
End to End Test(VeEX to VeEX) Step 3		
Local 1GE P1 Configuration - Copper		
IP Address	10.1.2.25	
Subnet	255.255.255.0	
Gateway	N/A	
Please review configuration.		
		Previous
		Start
		Exit
		Reconfigure

Responder Summary Screen

Test Results

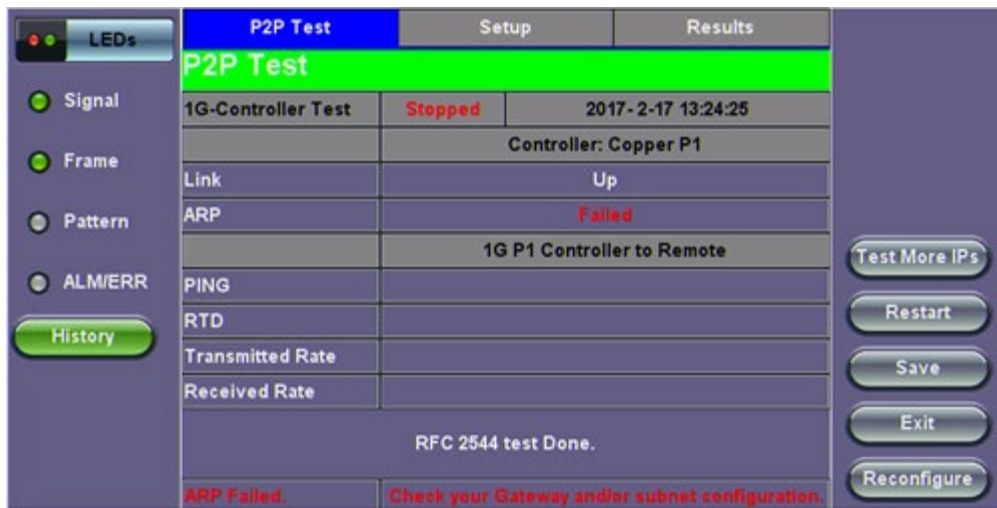

The P2P Test Results screen displays the outcome of a P2P test. It has a left sidebar with navigation options: LEDs, Signal, Frame, Pattern, ALM/ERR, and History. The main area is titled 'P2P Test' and 'Results'. A green banner at the top reads 'P2P Test'. Below this, the test results are shown in a table. The table has columns for the test name, status, and time. The test name is '1G-Controller Test', the status is 'Stopped', and the time is '2017-2-17 13:24:25'. The table also shows the controller type as 'Copper P1', the link status as 'Up', and the ARP status as 'Failed'. Below the table, there are buttons for Test More IPs, Restart, Save, Exit, and Reconfigure. A message at the bottom says 'RFC 2544 test Done.' and 'ARP Failed. Check your Gateway and/or subnet configuration.'

P2P Test		Setup	Results
P2P Test			
1G-Controller Test	Stopped	2017-2-17 13:24:25	
Controller: Copper P1			
Link	Up		
ARP	Failed		
1G P1 Controller to Remote			
PING			
RTD			
Transmitted Rate			
Received Rate			
RFC 2544 test Done.			
ARP Failed.	Check your Gateway and/or subnet configuration.		
		Test More IPs	
		Restart	
		Save	
		Exit	
		Reconfigure	

P2P Test Results

While the test is running the option to **Stop and Save** results appears as a right side button. After testing finishes, the option to **Test More IPs** with the same settings, **Restart**, or **Save** test results become available as right side buttons. For more information on retrieving saved test results, refer to **File Management** in the **TX300S**, **MTTplus**, **RXT-1200**, or **UX400 platform manuals** for more information.

The user is able to configure and view the local/remote unit's Setup and Results.

[Go back to top](#) [Go back to TOC](#)

15.5 V-SAM

- [Overview](#)
- [Setup](#)
 - [General](#)
 - [CIR Test Configuration](#)
 - [Header Settings](#)
 - [Service Attributes - Bandwidth Profile](#)
 - [Service Acceptance Parameters](#)
 - [MX Discover / Control Settings](#)
- [Results](#)
 - [Configuration Test](#)
 - [Performance Test](#)
 - [Event Log](#)

Overview

V-SAM (VeEX Service Activation Methodology) is an automated Ethernet service activation test feature conforming to the ITU-T Y.1564 standard, created to address and solve the deficiencies of RFC 2544:

- RFC 2544 was limited to test at the maximum throughput line rate for a single service. SAM is able to run multiple services on a single 10/100/1000 or 10G Ethernet line at a bandwidth ranging from 0 to the line rate, allowing for more realistic stream testing
- The Frame Delay Variation, also known as (packet) jitter was not included in RFC 2544. Jitter is a critical parameter for real time voice and video services. It is now part of the SAM test suite.
- RFC 2544 validates the service parameters like frame loss, throughput and latency, one after the other, while SAM allows testing all the service critical parameters simultaneously. This results in significant time saving compared to RFC 2544.

	RFC2544	Y.1564
Key Test Objective	Device performance	Network Service verification/activation
Service validation	One service at a time	Multiple services simultaneously
Throughput	Yes	Yes
Latency	Yes	Yes
Frame Loss	Yes	Yes
Burstability	Yes	Yes
Packet Jitter	No	Yes
Multiple Streams	No	Yes
Test Duration	Long (serialized test procedure)	Short (simultaneous test/service)
Test Result	Link performance limit	Related to SLA, fast, simple, Pass/Fail


Comparison of RFC 2544 and Y.1564

Test Methodology

The purpose of the SAM test suite is to verify that the service is compliant to its Bandwidth Profile and Service Acceptance Criteria. The test is broken down into two phases:

- **Phase 1: Service Configuration test:** The services running on the same line are tested one by one to verify the correct service profile provisioning.


- **Phase 2: Service Performance test:** The services running on the same line are tested simultaneously over an extended period of time, to verify network robustness.

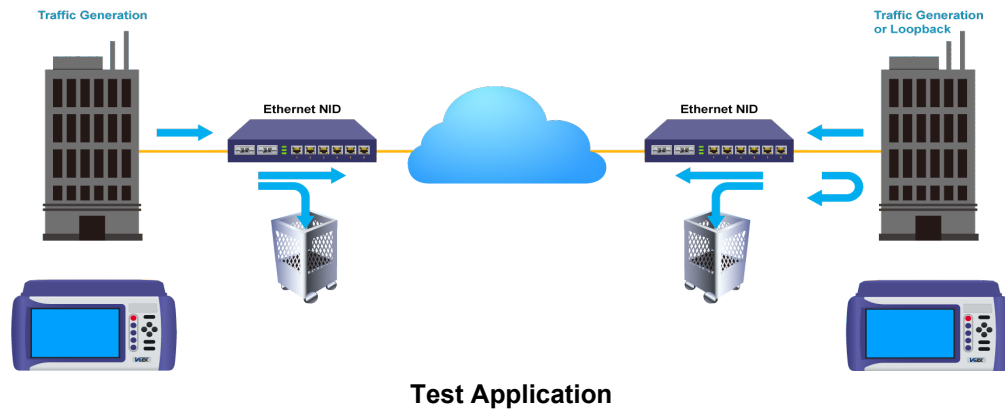

Phase 1: Service Configuration Test

The service configuration test is broken down into three steps. The steps are tested individually for all the services delivered on the same line.

- **Step 1: Committed Information Rate (CIR) Test:** Traffic is transmitted at the CIR for a short period of time and the received traffic is evaluated against the Service Acceptance Criteria (FLR, FTD, FDV) measured simultaneously. The CIR test passes if the measurements on the received traffic stay below the performance objectives.
- **Step 2: Excess Information Rate (EIR) Test:** Traffic is transmitted at the CIR+EIR rate for a short period of time; the EIR test passes if the received traffic rate is between the CIR (minus the margin allowed by the FLR) and CIR+EIR.
- **Step 3: Traffic Policing (Overshoot Test):** The purpose of the Traffic Policing Test is to ensure that when transmitting at a rate higher than the allowed CIR+EIR, the excess traffic will be appropriately blocked to avoid interference with other services. For this test, traffic is transmitted at 25% higher than the CIR+EIR for a short period of time. The test passes if the received traffic rate is at least at the CIR (minus the margin allowed by the FLR) but does not exceed the allowed CIR+EIR.
- At this time the **Committed Burst Size (CBS)** and **Excess Burst Size (EBS)** tests are considered experimental and not an integral part of the standard.

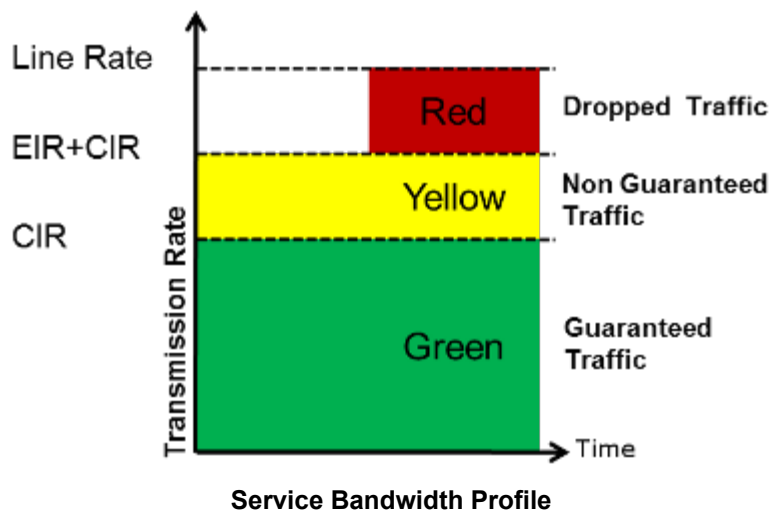

Phase 2: Service Performance Test

Services running on the same line are tested simultaneously over an extended period of time, to verify network robustness. Service Acceptance Criteria (SAC) including Frame Transfer Delay (FTD), Frame Delay Variation (FDV), Frame Loss Ratio (FLR) and Availability (AVAIL) are verified for each service.

[Go back to top](#) [Go back to TOC](#)

15.5.1 V-SAM Setup

General (Page 1 and 2)

- **V-SAM Profile:** Delete, Save, Save as..., Default, or Last Configuration.
- **# of Services:** Select the number of services to run. Up to 8 services can be chosen for a 1 GE interface and up to 10 services can be chosen for a 10 GE interface.
- **Service Configuration Test:** Enable or Disable the configuration test.
- **Service Performance Test:** Enable or Disable the performance test.
- **Service Configuration** and **Performance Tests** can be enabled independently.
- **CIR Test Config:** Tap on the box to configure the Committed Information Rate Test on another screen.
- **Duration:** Select the **Service Performance Test** duration. Options are 15min, 30min, 1hr, 2hr, 24hr or user defined. If user-defined is selected, input a duration between 1-10000 min.



Enabling/Disabling Tests

A check next to the Service number in the Service Summary table indicates that the test for the corresponding service is set to run. Tap on the box to remove the check and cancel the test for that service.

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

General

Services

V-SAM Profile

Last configuration

of Services

3

Service Configuration Test

Service Performance Test

CIR Test Config.

Duration

15min

Service #	Service Name	CIR (Mbps)	EIR (Mbps)	Traffic Policing	CBS (KB)	EBS (KB)
✓ 1	Service 1	101.093	20.000	-	-	-
2	Service 2	100.000	0.000	Yes	-	-
3	Service 3	100.000	0.000	Yes	-	-

Total IR(CIR+EIR):121.093Mbps(121.362Mbps ULR)

Page 1 of 2

Stop

MX Discover

Control

V-SAM - Setup - General (Page 1)

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

General

Services

V-SAM Profile

Last configuration

of Services

3

Service Configuration Test

Service Performance Test

CIR Test Config.

Duration

15min

Service #	Service Name	Frame Size	FLR (%)	FTD (ms)	IFDV (ms)	AVAIL (%)
✓ 1	Service 1	9000	0.1	10.000	1.000	99.9
✓ 2	Service 2	1518	0.1	10.000	-	-
✓ 3	Service 3	1518	0.1	10.000	-	-

Total IR(CIR+EIR):301.093Mbps(303.953Mbps ULR)

Page 2 of 2

Start

MX Discover

Control

V-SAM - Setup - General (Page 2)

CIR Test Configuration

- **CIR Test Config.:** Select Simple Test, Step Load Test, or Simple and Step.
- **Simple Test:** Starts the tests at the CIR.
- **Step Load Test:** Starts the test below the CIR and continues in steps until it reaches the CIR.
- **Simple and Step Load Test:** Step Load Test performs only if the Simple Validation test fails.
- Tap on the **Test Duration** box to input a test duration (test duration must be less than 999 sec).
- Tap on the **table** to modify the CIR value percentage for each step.

CIR Test Configuration

☒ Simple Test
Starts the tests at the CIR.

☐ Step Load Test
Starts the test below the CIR and continues in steps until it reaches the CIR.

☐ Simple and Step Load Test
Step Load Test is only performed if the Simple Validation test fails.

Step Load Test Configuration

Test Duration: 10 seconds/test/service

Step	Value(% of CIR)
1	25
2	50
3	75
4	100

Tap on table to modify

Buttons: Start, Close, MX Discover, Control

CIR Test Config

[Go back to top](#) [Go back to TOC](#)

15.5.1.1 Header Settings

- **Service #:** Select a service to configure
- **Service Name:** Assign a name to the service if desired.
- **Frame Size Type:** Fixed or EMIX (1GE only). A fixed frame size is chosen as default
- **Frame Size:**
 - **For Fixed Traffic Flow:** Input a fixed frame size within the range of 64-10000 bytes by tapping the value box.
 - **For EMIX (1GE only):** The default value is abcecg. Tap the **zoom** (magnifying glass) button to define other values. Select the values from the drop down lists on the next screen.
- **Encapsulation Type:** None, Provider Backbone Bridge (PBB-TE), or Multiprotocol Label Switching (MPLS-TP). MPLS-TP is a simplified version of MPLS. Provider Backbone Bridge MAC-in-MAC (IEEE 802.1ah) encapsulation are configured trunks that add resiliency and configurable performance levels in the provider backbone network. Both options are available for 1GE Copper/Fiber and 10GE port for all Ethernet tests (Layer 2,3 and 4) - BERT, RFC2544, Throughput, V-SAM.

Tap the PBB or MPLS-TP block to configure the settings. All fields are configurable.

PBB:

- Backbone MAC Source
- Backbone MAC Destination
- Ethernet Type
- I-SID
- VLAN ID, Priority, Type


MPLS-TP:

- MPLS-TP MAC Source
- MPLS-TP MAC Destination
- Ethernet Type
- VLAN ID, Priority, Type

LSP, PW, CW

After making changes, tap **Apply to All**, for MPLS-TP configuration.

Please see [RFC 2544 Setup](#) and follow the setup procedure to configure the remaining Header Settings for V-SAM.

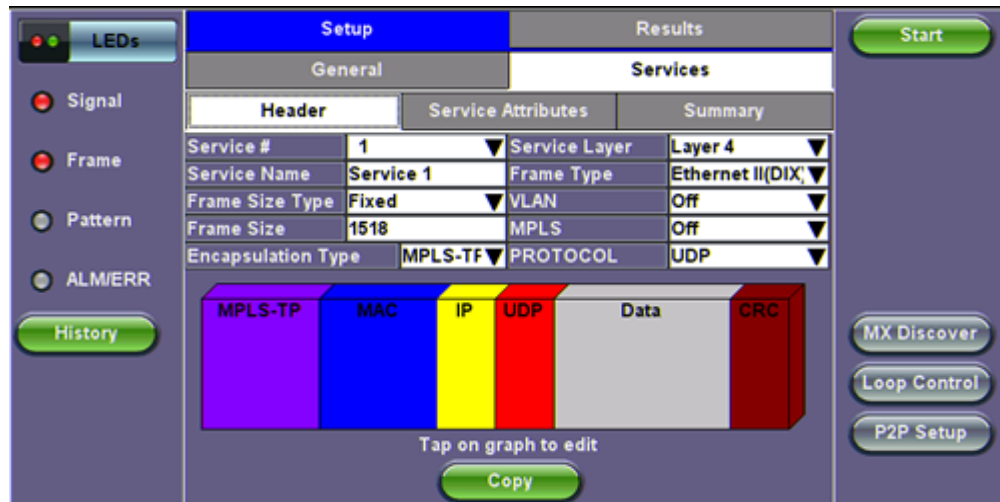


The screenshot shows the 'Setup' tab in the V-SAM interface. The 'Header' section is active, displaying configuration for Service #1. The 'Service Layer' is set to Layer 4, 'Frame Type' is Ethernet II(DIX), 'VLAN' is Off, 'MPLS' is Off, and 'PROTOCOL' is UDP. Below the settings is a diagram of the packet structure: MPLS-TP (purple), MAC (blue), IP (yellow), UDP (red), Data (grey), and CRC (dark red). A 'Copy' button is located below the diagram. On the right side, there are buttons for 'MX Discover', 'Loop Control', and 'P2P Setup'. The 'Start' button is at the top right.

Header	Service Attributes	Summary
Service #	1	Service Layer
Service Name	Service 1	Frame Type
Frame Size Type	Fixed	VLAN
Frame Size	1518	MPLS
Encapsulation Type	MPLS-TP	PROTOCOL

Tap on graph to edit

Copy

V-SAM Setup - Services - Header Settings

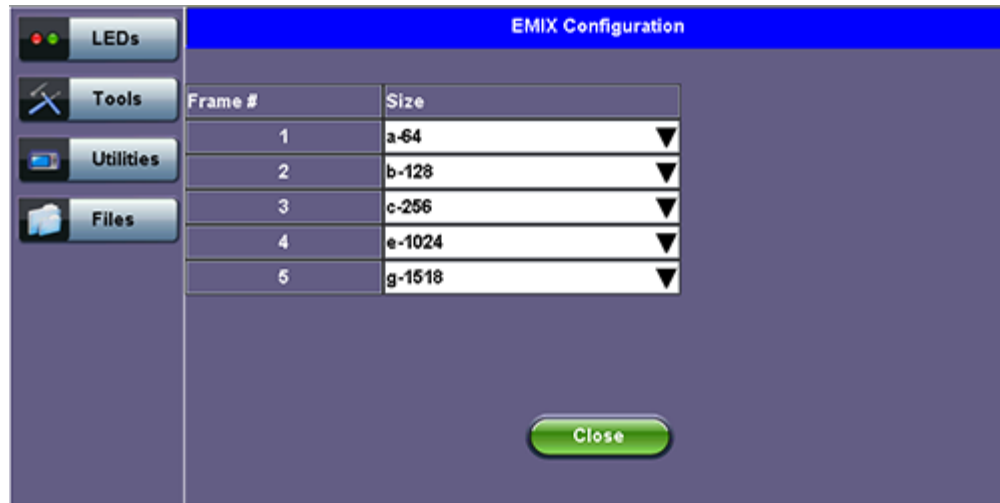


The screenshot shows the 'EMIX Configuration' screen. It displays a table with 5 rows, each representing a frame size configuration. The 'Frame #' column lists 1 through 5, and the 'Size' column lists a-64, b-128, c-256, e-1024, and g-1518. A 'Close' button is at the bottom.

Frame #	Size
1	a-64
2	b-128
3	c-256
4	e-1024
5	g-1518

Close

V-SAM Setup - Services - EMIX Frame Size Settings

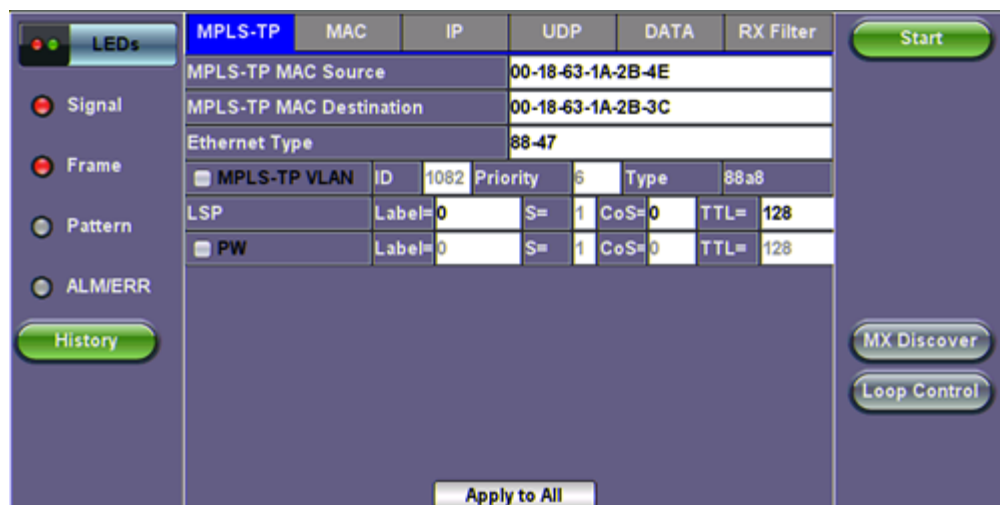

The screenshot shows the 'MPLS-TP' configuration screen. It displays various settings for MPLS-TP, including MAC Source, MAC Destination, Ethernet Type, and MPLS-TP VLAN. The 'MPLS-TP' tab is selected. The 'MPLS-TP MAC Source' is 00-18-63-1A-2B-4E, 'MPLS-TP MAC Destination' is 00-18-63-1A-2B-3C, and 'Ethernet Type' is 88-47. The 'MPLS-TP VLAN' section shows ID 1082, Priority 6, and Type 88a8. The 'LSP' and 'PW' sections show Label 0, S=1, CoS=0, and TTL=128. An 'Apply to All' button is at the bottom. On the right side, there are buttons for 'MX Discover', 'Loop Control', and 'Start'.

MPLS-TP	MAC	IP	UDP	DATA	RX Filter
MPLS-TP MAC Source	00-18-63-1A-2B-4E				
MPLS-TP MAC Destination	00-18-63-1A-2B-3C				
Ethernet Type	88-47				
MPLS-TP VLAN	ID	1082	Priority	6	Type
LSP	Label=0	S=1	CoS=0	TTL=128	
PW	Label=0	S=1	CoS=0	TTL=128	

Apply to All


V-SAM Setup - Services - MPLS-TP Settings

15.5.1.2 Service Attributes

Bandwidth Profile Parameters

The Bandwidth Profile specifies how much traffic the customer is authorized to transmit and how the frames are prioritized within the network. In the Bandwidth table, the user specifies the following bandwidth criteria:

- **CIR:** Committed Information Rate. This is the guaranteed maximum rate at which the customer can send frames that are assured to be forwarded through the network without being dropped. Tap on the box to enter a rate and choose between **IR Mbps** or **ULR Mbps**. Allowed values range from 0.01Mbps to the line bandwidth.
 - **Information Rate (IR):** Measures the average Ethernet frame rate starting at the MAC address field and ending at the CRC.
 - **Utilized Line Rate (ULR):** Measures the average Ethernet frame rate starting with the overhead and ending at the CRC.

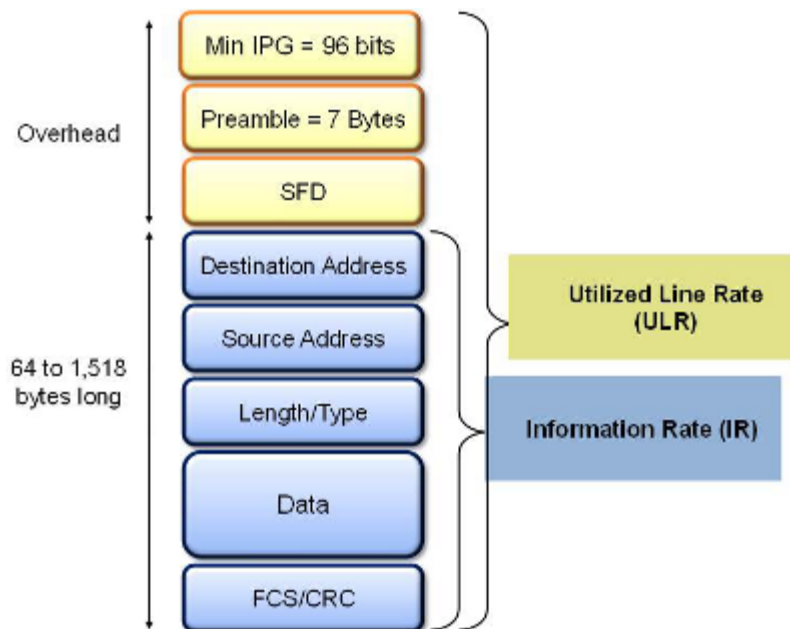

V-SAM Services - Header

- **Excess Information Rate (EIR):** Maximum rate above the CIR at which the customer can send frames that will be forwarded on a best effort basis, but may be dropped in the event of congestion within the network. The combined CIR and EIR must not exceed the line bandwidth. Traffic beyond CIR + EIR will be dropped when it enters the carrier's network. Tap on the box to enter a rate. EIR is expressed in terms **IR Mbps** or **ULR Mbps**. Select a term to express EIR or select **Disable** to disable the test.
- **Traf. Policing:** Enable or Disable the traffic policing test. For this test, traffic is transmitted at 25% higher than the CIR+EIR. The Policing test fails if the higher traffic rate is allowed through the network.
- **Color Aware:** Enable, Disable. When Color Aware is enabled, the Drop Eligible parameter in the VLAN header configuration screen is not available for configuration. If no VLAN is configured for the service traffic, the Color Aware parameter is ignored.
- **CBS and EBS:** Committed Burst Size (CBS) and Excess Burst Size (EBS).
 - CBS can be enabled without enabling EBS
 - If EBS is enabled, then CBS is automatically enabled too
 - Values between 4 KBytes and 100 KBytes can be input for both CBS and EBS

Bandwidth Profile Parameters		Service Acceptance Parameters	
☒ CIR	98.08 IR Mbps	☒ FLR	0.100 %
☒ EIR	0.00 IR Mbps	☒ FTD	10.000 ms
☒ CBS	20.000 KB	☐ IFDV	1.000 ms
☒ EBS	20.000 KB	☐ AVAIL	99.900 %

Color Aware Service: Enable
Traffic Policing Test: Enable
Traffic Policing Rate: 125 %

V-SAM Setup - Services - Service Attributes



Enabling/Disabling Tests


A check next to the parameters in the Service Attributes table indicates that the test for the corresponding service is set to run. Tap on the box to remove the check and cancel the test for that service.

[Go back to top](#) [Go back to TOC](#)

Service Acceptance Parameters

The user establishes Pass/Fail test criteria for the following Service Acceptance Criteria. Values define the minimum requirements to ensure that the service meets the Service Level Agreement (SLA):

- **FLR:** Maximum ratio of lost frames to the total transmitted frames allowed to still be compliant with the SLA. FLR is only guaranteed for traffic conforming to the CIR. Enter a percentage from 0-100.
- **FTD:** Maximum transfer time that the frames can take to travel from source to destination, and still be compliant with the SLA. FTD is only guaranteed for traffic conforming to the CIR. Values are measured in us, ms, or sec. Input a value within the digital range of .001-999 and 1 us-999sec. The user can also choose to **Disable** the FTD threshold evaluation. FTD will be measured anyway but the value will not contribute toward passing or failing the service.
- **IFDV:** Maximum frame jitter allowed to still be compliant with the SLA. FDV is only guaranteed for traffic conforming to the CIR. Values are measured in us, ms, or sec. Input a value within the digital range of .001-999 and 1 us-999sec. The user can also choose to **Disable** the IFDV threshold evaluation. IFDV will be measured anyway but the value will not contribute toward passing or failing the service.
- **AVAIL:** Minimum percentage of service availability allowed to still be compliant with the SLA. The service becomes unavailable if more than 50% of the frames are errored or missing in a one second interval. Availability is only guaranteed for traffic conforming to the CIR. Enter a percentage from 0-100. The user can also choose to **Disable** the AVAIL threshold evaluation. AVAIL will be measured anyway but the value will not contribute toward passing or failing the service.

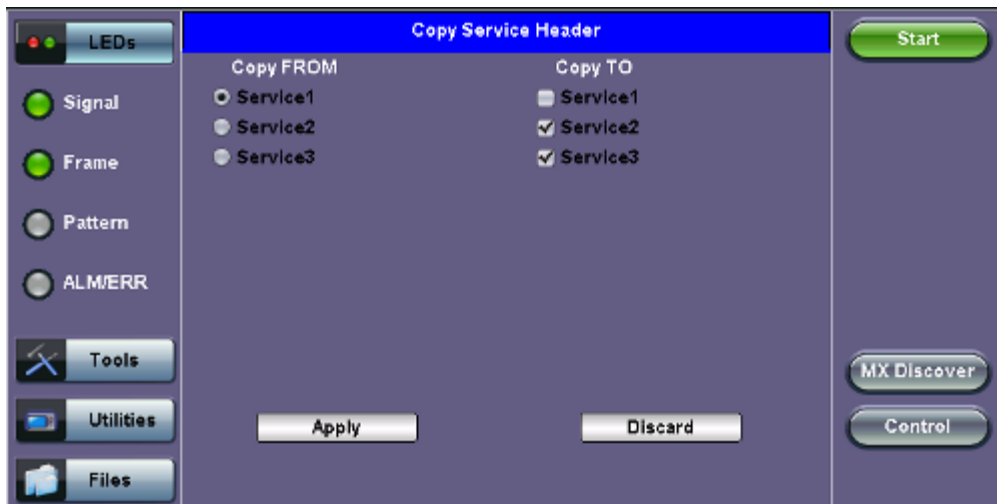

Copying Services



Copying Services

Tap on the **Copy** button on the bottom of the **Header** or **Service Attributes** tabs to copy frame parameters specific to that tab to other services. For example, pressing Copy on the Header tab will only transfer header parameters to other services.

[Go back to top](#) [Go back to TOC](#)

MX Discover and Control Settings

For instructions on how to loop up/down the test set with another test set or device, please refer to [MX Discover and Control](#).

The **Control** button offers additional loopback control settings including User Defined and OAM Discover. These features are described in **MX Discover and Control**.

Peer-to-Peer Setup

Peer-to-Peer and asymmetric testing via the **P2P Setup** button is also available. Refer to Peer-to-Peer and Asymmetric Testing section for more information. X-loop is for looping non-VeEX networking equipment.

Packet Capture

[Packet Capture](#) is available on V-SAM. Refer to the Packet Capture section for information on using packet capture and retrieving saved files.

[Go back to top](#) [Go back to TOC](#)

15.5.2 Results

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Config. Tests

Perf. Tests

Event Log

Service 1

Service 2

Service 3

Summary

Service #1:Failed

	Pass/Fail	IR(Mbps)	FLR(%)	FTD(ms)	FDV(ms)
CIR Test					
Duration 40 Seconds					
Step1	Pass	25.265	0.0	0.077	0.000
Step2	Pass	50.539	0.0	0.077	0.000
Step3	Pass	75.814	0.0	0.077	0.000
Step4	Pass	101.079	0.0	0.077	0.000
CIR/EIR					
Duration 10 Seconds					
Total IR	Pass	121.095	0.0	0.077	0.000
Policing					
Duration 10 Seconds, Transmitted Rate 146.369 Mbps					
Total IR	Failed	146.360	0.0	0.077	0.000

Tap anywhere on the table for detailed results of each test.

Start

MX Discover

Control

Results - Config. Tests - Service 1

To run the test, make sure that traffic is being looped back at the far-end of the network under test.

Configuration Test

The **Config. Tests** tab lists the Pass/Fail status of each service and test. Tapping on the table displays a screen with **CIR**, **CIR/EIR** and **Policing Test** results for the chosen Service. **CIR**, **CIR/EIR Test**, and **Policing** tabs display min, mean, and max values for **IR Mbps**, **FTD**, **FDV**, **Frame Loss Count**, and **Frame Loss Ratio (%)**. If Step Load was selected for the CIR Test, these values will be displayed for each step. If any measured values do not meet the service test parameters set in the Bandwidth and Threshold tabs, the test fails.

- **IR Mbps:** Information Rate. Measures the average Ethernet frame rate starting at the MAC address field and ending at the CRC.
- **FTD:** Measures the time that the frames can take to travel from source to destination.
- **FDV:** Measures the frame jitter.
- **Frame Loss Count:** Counts the number of lost frames.
- **Frame Loss Ratio:** Ratio of lost frames to the total transmitted frames.

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

CIR Test

CIR/EIR Test

Policing Test

Service #1:Pass

	Step1	Step2	Step3	Step4
Pass/Fail	Pass	Pass	Pass	Pass
IR Min(Mbps)	25.211	50.494	75.778	101.061
IR Mean(Mbps)	25.265	50.539	75.814	101.079
IR Max(Mbps)	25.283	50.566	75.850	101.133
Frame Loss Count	0	0	0	0
Frame Loss Ratio(%)	0.0	0.0	0.0	0.0
FTD Min(ms)	0.077	0.077	0.077	0.077
FTD Mean(ms)	0.077	0.077	0.077	0.077
FTD Max(ms)	0.077	0.077	0.077	0.077
FDV Min(ms)	0.000	0.000	0.000	0.000
FDV Mean	0.000	0.000	0.000	0.000
FDV Max(ms)	0.000	0.001	0.001	0.001

Start

MX Discover

Control

CIR Test - Service 1

CIR test: The test passes if all measured values are below the thresholds configured. If a threshold is disabled, it will not be evaluated towards pass/fail criteria.

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

CIR Test

CIR/EIR Test

Policing Test

Service #1:Pass

	Green(CIR)	Yellow(EIR)	Total
Pass/Fail	--	--	Pass
IR Min(Mbps)	--	--	121.086
IR Mean(Mbps)	--	--	121.095
IR Max(Mbps)	--	--	121.158
Frame Loss Count	--	--	0
Frame Loss Ratio(%)	--	--	0.0
FTD Min(ms)	--	--	0.077
FTD Mean(ms)	--	--	0.077
FTD Max(ms)	--	--	0.077
FDV Min(ms)	--	--	0.000
FDV Mean(ms)	--	--	0.000
FDV Max(ms)	--	--	0.001

Start

MX Discover

Control

CIR/EIR Test - Service 1

CIR/EIR test: The test passes if the received IR value is between the CIR (minus the margin allowed by the FLR) and CIR+EIR.

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

CIR Test

CIR/EIR Test

Policing Test

Service #1:Failed

	Green(CIR)	Yellow(EIR)	Total
Pass/Fail	--	--	Failed
IR Min(Mbps)	--	--	146.297
IR Mean(Mbps)	--	--	146.360
IR Max(Mbps)	--	--	146.369
Frame Loss Count	--	--	0
Frame Loss Ratio(%)	--	--	0.0
FTD Min(ms)	--	--	0.077
FTD Mean(ms)	--	--	0.077
FTD Max(ms)	--	--	0.077
FDV Min(ms)	--	--	0.000
FDV Mean(ms)	--	--	0.000
FDV Max(ms)	--	--	0.001

Start

MX Discover

Control

Policing Test - Service 1

Policing test: The test passes if the received traffic rate is at least at the CIR (minus the margin allowed by the FLR) but does not exceed the allowed CIR+EIR.

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Config. Tests

Perf. Tests

Event Log

Service 1

Service 2

Service 3

Summary

Failed

Service	CIR	CIR/EIR	Traffic Policing
1	Pass	Pass	Failed
2	Pending...	Disabled	Pending...
3	Pending...	Disabled	Pending...


Start

MX Discover

Control

Results - Config. Tests - Summary

Summary: The Summary tab displays the status of each service and test as Pass, Failed, Pending, or Disabled.

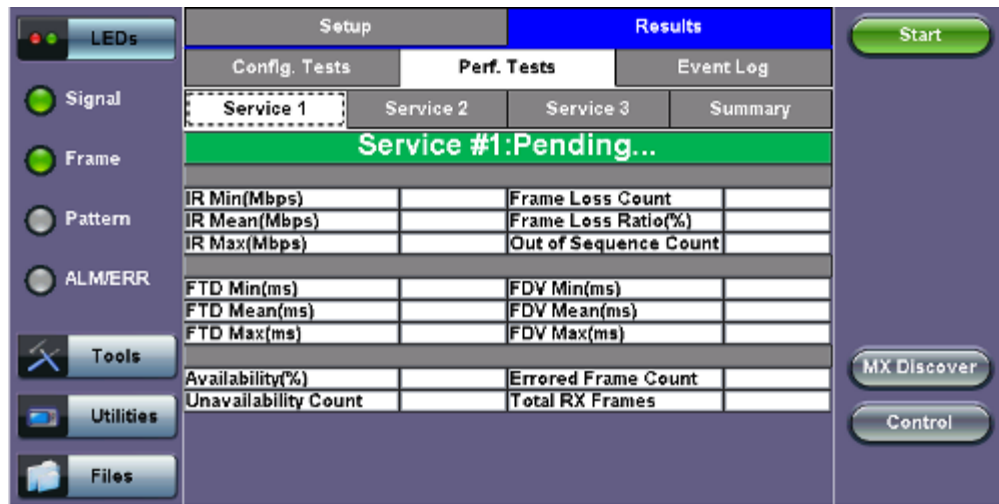

Perf. Test - Service 1

[Go back to top](#) [Go back to TOC](#)


Performance Test

The **Service #** tabs display min, mean, and max values for **IR Mbps**, **FTD**, **FDV**, **Frame Loss Count**, **Frame Loss Ratio (%)**, **Availability**, and **Errored Frame Count**. Pass/Fail/Pending status of each test is displayed on the top of each table.

- **IR Mbps**, **FTD**, **FDV**, **Frame Loss Count**, **Frame Loss Ratio (%)** definitions are listed in the **Configuration Test** section.
- **Availability**: Minimum percentage of service availability allowed to still be compliant with the SLA. The service becomes unavailable if more than 50% of the frames are errored or missing in a one second interval. Availability is only guaranteed for traffic conforming to the CIR.
- **Total RX Frames**: Total number of frames received
- **Errored Frame Count**: Number of frames with CRC or IP Checksum errors

Measured values that do not meet the service test parameters set in the Bandwidth and Threshold tabs cause the test to fail.

The **Summary** tab displays the status of each service and test as **Pass**, **Failed**, **Pending**, or **Disabled**.

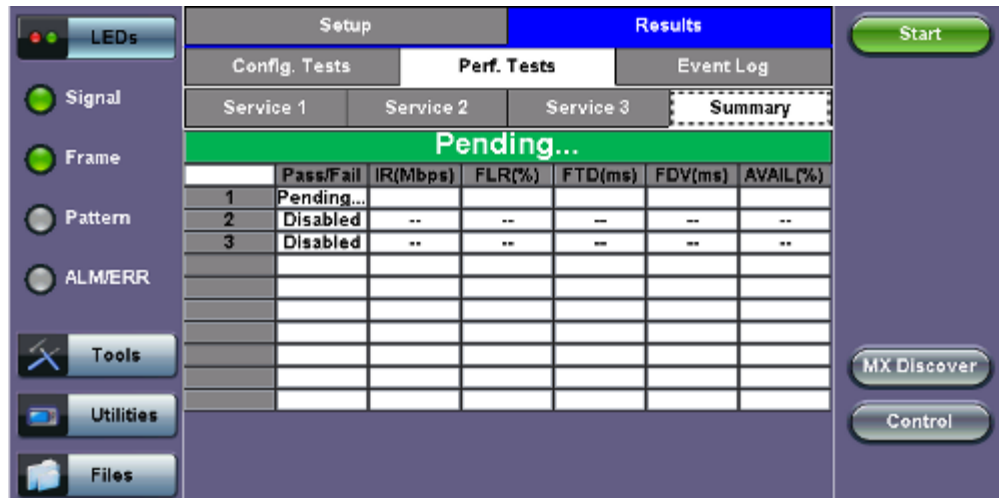

Perf. Tests - Summary

[Go back to top](#) [Go back to TOC](#)

Event Log

A time stamped record or log of test types and test statuses (start/stop).

15.6 Throughput Testing (Multiple Streams)

- [Setup](#)
 - [General Settings](#)
 - [MX Discover and Control Settings](#)
 - [Per Stream Configurations](#)
 - [Traffic Settings](#)
 - [Error Injection Settings](#)
 - [Alarm Injection Settings](#)
 - [Summary](#)
 - [Starting/ Stopping a Throughput Test](#)
- [Results](#)
 - [Viewing Throughput \(Multiple Streams\) Test Results](#)
 - [Global Aggregate Results](#)
 - [Per Stream Results](#)
 - [Saving Throughput \(Multiple Streams\) Results](#)

Overview:

The throughput application (or the multiple streams application) performs the following measurements: throughput performance, frame loss analysis, delay analysis, frame/packet arrival analysis, received traffic type analysis, and received traffic frame size analysis. On the transmit side, the throughput application allows for the configuration of up to 8 traffic streams with their own MAC and IP addresses, VLAN tags (up to 3 per stream), bandwidth/rate, frame size, and L2 and/or L3 quality of service (QoS) parameters. On the receiver end the traffic is analyzed on a per stream (up to 8 streams) basis as well as a global or aggregate measurement.

This application is very useful in verifying the transport of traffic with different prioritization settings across a network link. The test helps verify that the network can handle high priority traffic and low priority traffic accordingly.

[Go back to top](#) [Go back to TOC](#)

15.6.1 Setup

Unless otherwise noted, the Frame Header and related setups are the same as the ones described in the [BERT](#) section. The following parameters must be configured prior to performing a Throughput test:

- Number of streams (See **General Settings** below)
- Bandwidth per stream (See **General Settings** below)
- Test layer
- Frame Type
- VLAN tag(s)
- MPLS tag(s)
- Frame header per stream (if applicable)
- Traffic profile per stream (if applicable)
- Error injection per stream (if applicable)
- Control settings of the far-end device(s) (if applicable)

[Go back to top](#) [Go back to TOC](#)

15.6.1.1 General Throughput Settings (Global Configuration)

Page 1:

- **# of Streams:** From 1 to 10 streams.
- **Stream #:** Allocated Bandwidth per Stream: The total bandwidth for all streams cannot exceed 100%.
- **Total (%):** Sum of all stream rates in %.

Throughput Setup - General Settings

Page 2:

- **#of Streams:** From 1 to 10 streams. # of Streams can be specified either on Page 1 or Page 2. It will be reflected on both pages.
- **Delay Measurement Mode:** Disable, Round Trip Delay. Local One way delay measurement, Atomic one way delay, or GPS one way delay are also available depending on the Glock Synchronization device selected in the Setup (home menu) > Measurement menu. Refer to [Measurement Settings](#) for more information. Round Trip Delay should only be enabled when running the test to a remote loopback.
- **Histogram:** Enable / Disable
- **Sampling Period:** 1sec, 10secs, 30secs, 1min, 10min, 30min, 1hr. Defines how often the RTD (round trip delay) measurement is evaluated against the RTD threshold.
- **Threshold (Max RTD allowed):** Input the value in us, ms or sec. Defines the maximum allowed round trip delay value. If the RTD value exceeds the threshold, an event is logged with corresponding time stamp.
- **SDT Measurement:** Enable/Disable. The Service Disruption Test is triggered based on user established thresholds.
 - **SDT Measurement Trigger (>us):** Any inter-frame gap that is equivalent or greater than the configured threshold will trigger the SDT measurement. This is useful if a known threshold is expected from a given network under test. For example, if the known switchover time is 50ms, the trigger can be set to a value slightly below 50ms to assure that the SDT is measured.
 - **SDT Violation Threshold (us):** Triggers an SDT Violation event in the event log. This is helpful for historical purposes during any given test. If the measured SDT is equivalent or greater than the configured threshold an SDT Violation event is counted.
- **Traffic Loss Trigger:** If the receiver does not detect incoming traffic within the configured threshold time, a traffic loss trigger is recorded in the event log.

Throughput Setup - General Settings (Page 2)



Multiple Streams

All streams are configured for the same test layer - if Layer 2 is selected, all streams will be Layer 2 traffic.

[Go back to top](#) [Go back to TOC](#)

15.6.1.2 MX Discover and Control Settings

For instructions on how to loop up/down the test set with another test set or device, please refer to [MX Discover and Control](#).

The **Control** button offers additional loopback control settings including User Defined and OAM Discover. These features are described in **MX Discover and Control**.

Peer-to-Peer Setup

Peer-to-Peer and asymmetric testing via the **P2P Setup** button is also available. Refer to Peer-to-Peer and Asymmetric Testing section for more information. X-loop is for looping non-VeEX networking equipment.

Packet Capture

[Packet Capture](#) is available for Throughput Testing. Refer to the Packet Capture section for information on using packet capture and retrieving saved files.

[Go back to top](#) [Go back to TOC](#)

15.6.1.3 Per Stream Configurations

MAC Setup

MAC configuration in the Throughput section features MAC flooding for buffering verification and performance testing of Ethernet switches.

- **Source (SRC) and Destination (Dest) flooding:** Enable or Disable.
- **Flood Range:** Specifies the number of MAC source and/or destination addresses. Enter a number from 0-4095. The source and/or destination MAC addresses will be incremented by 1 until it reaches the number of times entered in the flood range.



For information on header configuration please see [BERT Header Settings](#) in the BERT section.

The screenshot displays the BERT configuration window. On the left is a sidebar with buttons for 'LEDs', 'Tools', 'Utilities', and 'Files'. The main area is titled 'Setup' and contains a table of configuration parameters:

Header	Traffic	Error Inj.	Alarm Inj.	General	Summary	OAM
Profile	Last configuration					
Stream #	1					
Encapsulation Type	PBB-TE					
Test Layer	Layer 2					
Frame Type	Ethernet II(DIX)					
VLAN	1 tag					

Below the table is a diagram of a packet structure with five colored blocks: PBB (green), MAC (blue), VLAN (yellow), Data (grey), and CRC (red). On the right side of the window, there is a 'Start' button at the top, and three buttons at the bottom: 'LASER On/Off', 'MX Discover', and 'Control'.

Throughput Setup - Header Settings per Stream



Multiple Streams - MAC/IP Address Setup

If all of the streams are going to the same far-end unit, then the MAC/IP destination addresses must be the same on all of the streams.

If any of the traffic streams are going to more than one far-end unit then ensure the correct MAC/IP destination addresses are configured for the respective streams.

[Go back to top](#) [Go back to TOC](#)

15.6.1.4 Traffic Settings (Per Stream Configuration)

In the Traffic tab the user is able to configure the traffic profile per stream, including frame size selection, traffic type, and transmit rate.

- **Stream #:** Select a stream number to configure.
- **Traffic Flow:** Select from Constant, Ramp, Burst, or Single Burst traffic flow.
- **Frame Size (Type):** Fixed or Uniform. If uniform is chosen, the user will have to input a minimum and maximum frame size.
- **Frame Size (bytes):** If a fixed frame size is chosen, this option is enabled. Enter the frame size when a Layer 2 or 3 is selected. Frame sizes can be from 64bytes to 1518bytes, in addition to jumbo frames up to 10k bytes.
- **BW (Transmit Bandwidth):** Configure the transmit rate for the stream.



*The bandwidth allocation per stream is already configured in the **General Settings** tab, but can be modified in this screen as well.*

For more information on Traffic Settings, please see [BERT Traffic Settings](#).

Throughput Setup - Traffic Setup - Constant Traffic Flow

[Go back to top](#) [Go back to TOC](#)

15.6.1.5 Error Injection Settings (Per Stream Configuration)

Error injection can be performed during test. The type of errors and error injection are configured in the Error Injection tab. Once the test is running, error injection can be performed by pressing the **Error Inject** button on the right side of the screen.

- **Stream #:** Select the stream to configure.
- **Error type:** Select from CRC, IP Checksum (Layer 3, 4 only), TCP/UDP Checksum (Layer 4 only), Sync Header Error, Block Type Error, Pause, or Bit. With Pause selected, the unit will transmit a pause frame when the **Error Injection** button is pressed. The Pause time duration is configurable in units of 512 bit time. At Gigabit Ethernet speed, this is equivalent to 512

ns. For example, if pause time is set to 1000, the pause duration will be set to 1000x512 ns.

- **Injection Flow:** The error injection flow determines how the selected errors will be injected. The user can select a single error, a specific count, or rate.
- **Count and Rate:** The user will be able to configure the error count via numeric keypad.

Throughput Test - Error Injection Settings per Stream

[Go back to top](#) [Go back to TOC](#)

15.6.1.6 Alarm Injection Settings

Alarm injection can be performed during the test. The type of alarms and alarm injection are configured in the Alarm Injection tab. Once the test is running, alarm injection can be performed by pressing the **Alarm Inject** button on the right side of the screen.



Alarm Injection is available only with 10GE Port Tests.

- **Alarm Type:** Local Fault, Remote Fault, PCS-HI-BER, PCS-LOBL
- **Alarm Flow:** The alarm flow determines how the selected alarms will be injected. A specific Count or Continue (continuous) can be selected.
- **Alarm Length:** 1s, 10s, or 100s.

Throughput Alarm Injection Setup

[Go back to top](#) [Go back to TOC](#)

15.6.1.7 Summary

The summary screen lists the source, destination and VLAN information of each stream. Tap on the appropriate box of each tab to reconfigure the source, destination, or VLAN information if desired.

LEDs

Tools

Utilities

Files

Setup

Results

Header

Traffic

Error Inj.

Alarm Inj.

General

Summary

OAM

MAC List

IP List

VLAN List

Port List

Mpls List

# of Streams	MAC Source	MAC Destination
Stream #1	00-18-63-00-0C-40	00-1E-90-A0-57-3C
Stream #2	00-18-63-00-0C-40	00-1E-90-A0-57-3C
Stream #3	00-18-63-00-0C-40	00-1E-90-A0-57-3C

LASER On/Off

MX Discover

Control

Throughput Test - Summary (MAC List)

LEDs

Tools

Utilities

Files

Setup

Results

Header

Traffic

Error Inj.

General

Summary

OAM

MAC List

IP List

VLAN List

Port List

# of Streams	Source IP Address	Destination IP Address
Stream #1	192.168.1.101	192.168.2.200
Stream #2	192.168.1.101	192.168.2.200
Stream #3	192.168.1.101	192.168.2.200

MX Discover

Control

Throughput Test - Summary (IP List)

LEDs

Tools

Utilities

Files

Setup

Results

Header

Traffic

Error Inj.

Alarm Inj.

General

Summary

OAM

MAC List

IP List

VLAN List

Port List

Mpls List


# of Streams	ID	Priority	Type
vlan #1 of stream 1	12	3	8100 ▼
vlan #1 of stream 2	12	3	8100 ▼
vlan #1 of stream 3	12	3	8100 ▼

LASER On/Off


MX Discover

Control

Throughput Test - Summary (VLAN List)

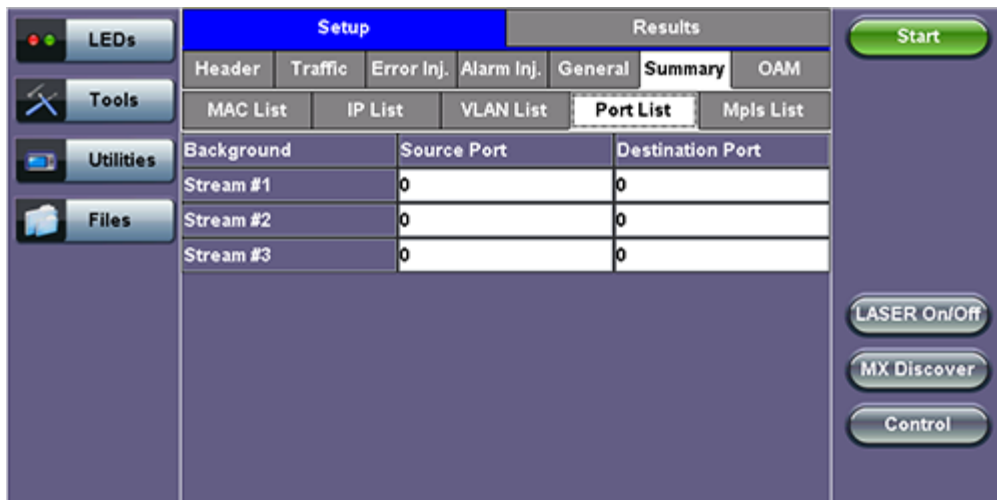

Throughput Test - Summary (Port List)

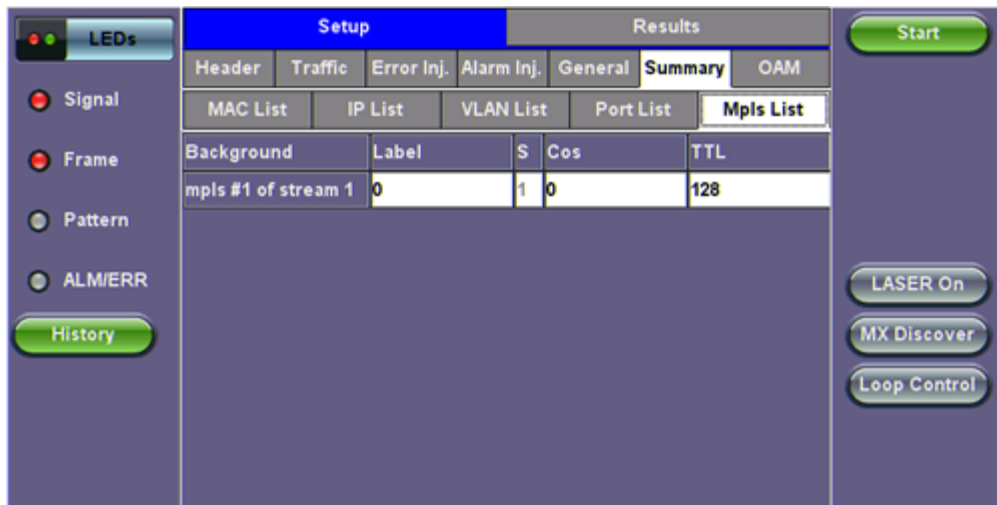

Throughput Test - Summary (MPLS List)

[Go back to top](#) [Go back to TOC](#)

OAM Discover

Like MX Discover, OAM Discover can also be used to discover far-end test units without manually configuring the local or remote unit's destination address. If OAM is enabled on the test set, any link partner that supports the IEEE 802.3ah protocol will be discovered automatically and displayed under the OAM Discover tab.

To Access OAM Discover:

1. Go to **Throughput > OAM > Link OAM** tab. Tap on the 802.3ah check box to activate Link OAM.
2. Select **Active** from the **OAM Mode** drop-down menu (only Active mode can send loop commands).
3. Tap on the **Loop Control** button and select **OAM Discover** from the **Partner Address** drop-down window to see a list of discovered OAM devices.
4. Select an OAM device and press the **Loop Up** button to send a loop up command to the selected remote unit.

For detailed descriptions of Discovery Capabilities and Link Events Notification Settings, see the [Link Level 802.3ah OAM Setup](#) section.

For information on Service Level OAM setup, see the [Service Level OAM](#) section.



Activating 802.3ah Link OAM



OAM Discovered Menu

[Go back to top](#) [Go back to TOC](#)

15.6.1.8 Starting/Stopping a Throughput (Multiple Streams) Test

Once all configurations have been made, the user can start the Throughput test (press the **Start** button on the top right section of the screen). The following are three scenarios of how to prepare and start the unit for Throughput testing.

 If testing on the fiber ports, make sure the LASER is turned On before starting the test.

- **End-to-End Testing**
 - Connect the test set to another unit that supports BERT testing.
 - After configuring test settings on both units, start the tests.
- **Far-End Unit in Manual Loopback Mode**
 - If the far-end unit (another MX) is already in a manual loopback mode, do not send a loop up command since it is not necessary.
 - Once the correct control settings are configured, the user can start the test.

The selected tests will run automatically. When all the tests are complete the test will stop automatically. If the Throughput test suite needs to be stopped before they are done, then simply press the **Stop** button, located in the actions drop-down menu. The status of each selected test can be seen in the Results tab.

- **Far-End Unit Controlled with Loop Up/Down Commands**
 - If the far-end unit is not manually looped back, then it must first receive a loop up command from the control unit before the Throughput test suite can be started.

- To loop up the far-end unit with the manual mode loop up/down commands, configure the control settings mode to manual.
- Enter the MAC and/or IP address of the far-end unit.
- Send the loop up command by tapping on the **Loop Control** button and pressing **Loop Up**.

Once the far-end unit has been looped back, start the test by pressing the **Start** button. When the all of the selected test are completed, the Throughput test suite will stop automatically. Once all tests have been completed and there is no need to test again, go back to the Control tab, and press the **Loop Down** button. This will send a loop down command to the far-end unit to remove the loopback that is in place.

[Go back to top](#) [Go back to TOC](#)

15.6.2 Throughput Results

15.6.2.1 Viewing Throughput (Multiple Streams) Test Results

When the test is first started, the screen automatically changes to the Global/Aggregate results screen.

15.6.2.2 Global/Aggregate Results

The Global results pages displays measurements for all traffic streams as well as non test traffic.

The **Global Stream Summary** screen displays:

- Stream number (#)
- Total received bandwidth per stream
- Errors/alarms associated with the stream
- Quality of Service (QoS) performance verification associated with each stream

LEDs

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Global

Per Stream

OAM

Stream Summary

Aggregate

Errors

Alarms

Events

Traffic

Delay

Stream #	% of BW	Errors	QoS
Stream #1	0.00	None	0
Stream #2	30.00	None	0
Stream #3	49.94	None	0

Stop

Restart

TX Stop

Err Inj.

MX Discover

Control

Throughput Results - Global Stream Summary

QoS

QoS values are based on packet statistic thresholds for roundtrip delay, jitter, frame loss, and IP checksum from the ITU-T Y.1541 standard. Below is a list of IP network QoS class definitions and network performance objectives from Y.1541.

"U" denotes "unspecified" or "unbounded" and signifies that no objective was established for this parameter and default Y.1541 objectives do not apply. Parameters designated with "U" are occasionally inconsistent and poor.

Network Performance Parameter	QoS Classes			
	Class 0	Class 1	Class 2	Class 3
IPTD	$\leq 200 \text{ ms} / 2$ (100 ms one-way)	$\leq 800 \text{ ms} / 2$ (400 ms one-way) AND $> 200 \text{ ms} / 2$	$\leq 200 \text{ ms} / 2$ (100 ms one-way)	$\leq 800 \text{ ms} / 2$ (400 ms one-way) AND $> 200 \text{ ms} / 2$
IPDV	$\leq 50 \text{ ms}$	$\leq 50 \text{ ms}$	U	U
IPLR	$> 1/100,000$ AND $\leq 1/1000$	$> 1/100,000$ AND $\leq 1/1000$	$> 1/100,000$ AND $\leq 1/1000$	$> 1/100,000$ AND $\leq 1/1000$
IPER	$> 1 / 1,000,000$ AND $\leq 1/10,000$	$> 1 / 1,000,000$ AND $\leq 1/10,000$	$> 1 / 1,000,000$ AND $\leq 1/10,000$	$> 1 / 1,000,000$ AND $\leq 1/10,000$


**IP Network QoS Class Definitions and Network Performance Objectives
(Classes 0-3)**

Network Performance Parameter	QoS Classes			
	Class 4	Class 5	Class 6	Class 7
IPTD	$\leq 2 \text{ s} / 2$ (1 s one-way) AND $> 800 \text{ ms} / 2$	U	$\leq 200 \text{ ms} / 2$ (100 ms one-way)	$\leq 800 \text{ ms} / 2$ (400 ms one-way) AND $> 200 \text{ ms} / 2$
IPDV	U	U	$\leq 50 \text{ ms}$	$\leq 50 \text{ ms}$
IPLR	$> 1/100,000$ AND $\leq 1/1000$	U	$\leq 1 / 100,000$	$\leq 1/100,000$
IPER	$> 1 / 1,000,000$ AND $\leq 1/10,000$	U	$\leq 1 / 1,000,000$	$\leq 1/1,000,000$

**IP Network QoS Class Definitions and Network Performance Objectives
(Classes 4-7)**

The Aggregate screen displays these parameters:


- **Line Rate** (Mbps): Negotiated rate of the interface (10M, 100M, or 1000M). This value is always fixed since it depends on the maximum capacity of the link under test, hence the test interface that is configured.
- **Utilization**: % of Line Rate. For example, if we transmit 100Mbps on a 1Gbps interface then the utilization value is 10% (or 100Mbps) of the total link capacity (or Line Rate).
- **Framed Rate**: $(\text{Payload} + \text{MAC/IP Header} + \text{VLAN Tag} + \text{Type/Length} + \text{CRC}) / (\text{Payload} + \text{Total Overhead}) * \text{Line Rate} \%$ (in Mbps).
- **Data Rate**: $\text{Payload} / (\text{Payload} + \text{Total Overhead}) * \text{Line Rate} \%$.
- Total # of frames, bad frames, and pause frames.

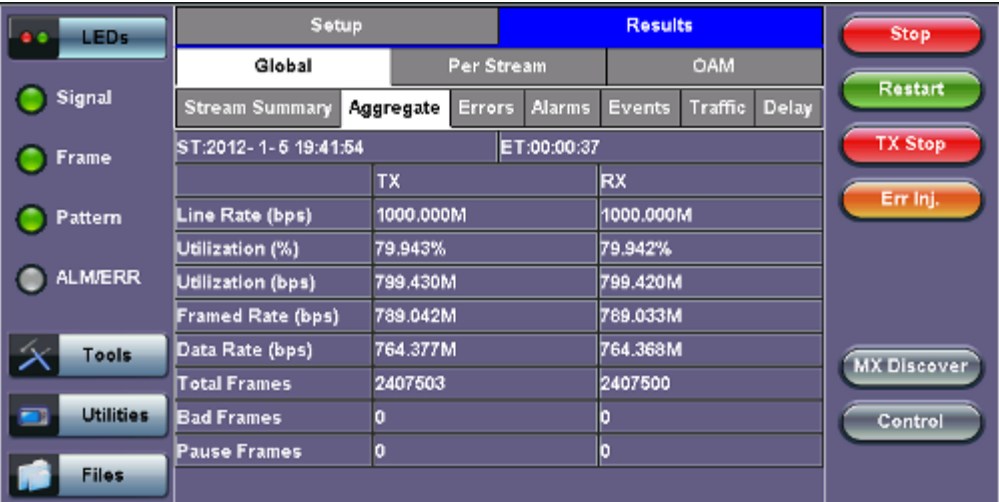

Throughput Results - Global Aggregate

The **Global Signal** screen (fiber ports only) displays the optical level measured by the SFP or XFP transceiver. Page 1 displays the level measurement in dBm for the optical signal.

Loss of Signal (LOS) and the Saturation level for optical signals are shown graphically including the level measurement in dBm.

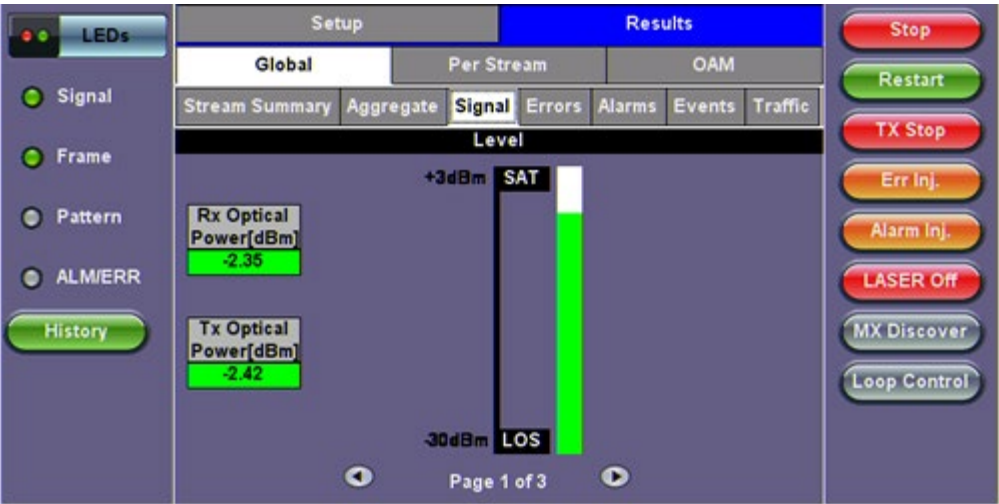

Throughput Results - Global Signal (Page 1)

Signal (Page 2)

Page 2 displays the Optical module (SFP or XFP) information which includes Vendor name, Part Number and Optical Wavelength. Tap on the **Decode** button to view additional information on SFP optics.

Signal (Page 3)

The received signal frequency and offset is measured and performed on the optical interface (SFP or XFP).

- **Current:** Indicates the frequency of the input signal.
- **Offset:** Indicates the difference between the standard rate and the rate of the input signal.
- **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal.
- **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal.

[Go back to top](#) [Go back to TOC](#)

The **Global Errors** screen displays the Current and Total error count of all streams:

- Sync Header Error
- Block Type Error
- **FCS/CRC:** Number of received frames with an invalid Frame Check Sequence (FCS)
- **IP Checksum:** Invalid IP Frame Check sequence
- **TCP/UDP Checksum** (Layer 4 only)
- **Jabber frames:** Number of received frames larger than 1518 bytes containing an invalid FCS
- **Runt frames:** Number of received frames smaller than 64 bytes containing an invalid FCS
- **Giant frames** (*Advanced Monitoring - Pass Through Results only*): Number of received frames larger than 1518 bytes


Setup		Results				
Global		Per Stream		OAM		
Stream Summary	Aggregate	Signal	Errors	Alarms	Events	Traffic
		Current	Total			
Sync Header Error	0		0			
Block Type Error	0		0			
FCS/CRC	0		0			
IP Checksum	0		0			
TCP/UDP Checksum	0		0			
Jabber Frames	0		0			
Runt Frames	0		0			

Throughput Results - Global Errors

[Go back to top](#) [Go back to TOC](#)

The **Global Alarms** screen displays the Current and Total alarm count of all streams:


- **LOS:** Loss of Signal
- **LOSync:** Loss synchronization
- Service disruption associated with loss of signal:
 - **Current:** Duration of the current service disruption
 - **Total:** Total accumulated duration of the service disruptions
 - **Min/Max:** Minimum and maximum duration of the service disruption events
 - **No. of Occurrences:** Counter of service disruption events
- **Local/Remote Fault**
- **PCS-HI-BER:** PCS High BER
- **PCS-LOBL:** PCS Loss of Block Lock

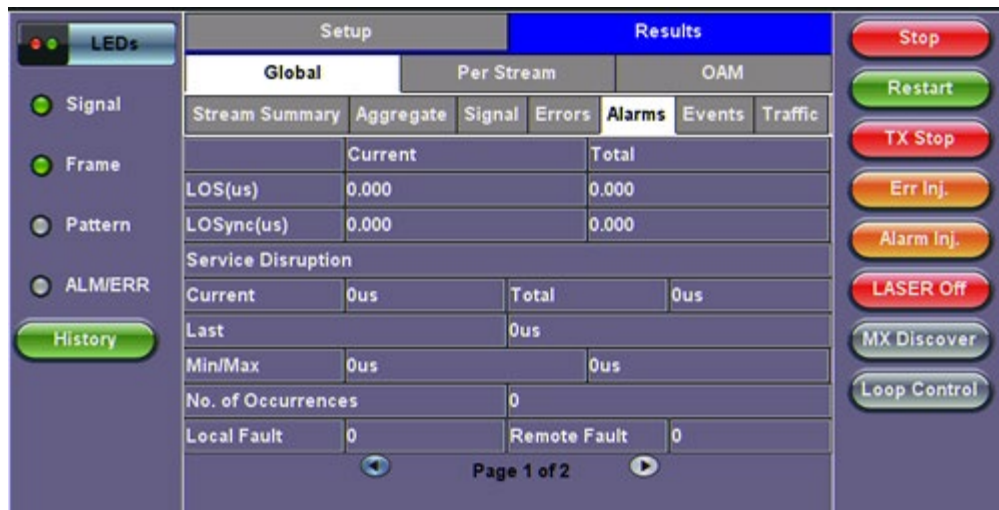

Throughput Results - Global Alarms

[Go back to top](#) [Go back to TOC](#)


The **Global Events** screen displays the **Time**, **Event Type**, **Number of Events**, and **Test Type**.

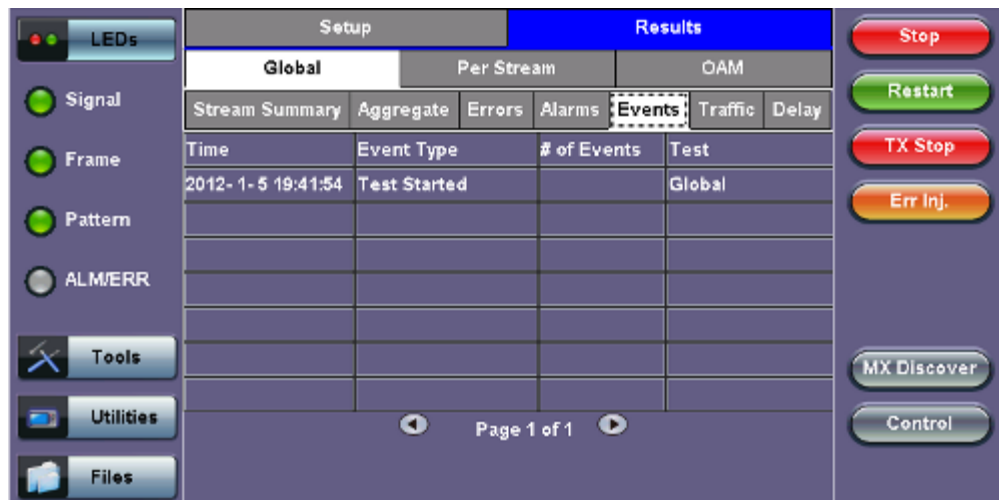

Throughput Results - Global Events

The **Global Traffic** screen displays:

- Frame Type of all streams
- Traffic Type of all streams
- Frame size of all streams

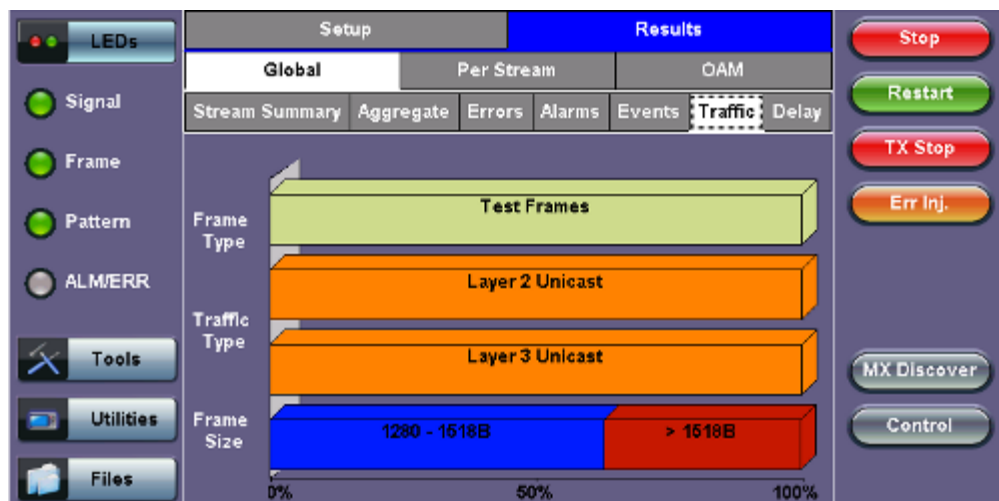

Throughput Results - Global Traffic Summary

Tap on the bar graph for frame and traffic distribution statistics.

Frames tab: The following Frame distribution statistics are displayed in Count (#) and Percentage (%):

- **Received (RX) frames:**
 - Total frames
 - Test frames
 - VLAN tagged frames
 - Q-in-Q VLAN stacked frames
 - Non-test frames
- **Transmitted (TX) frames:**
 - Total frame - Total # frames transmitted
- **Pause frames:** Total number of transmitted and received Ethernet pause flow-control frames

LEDs	Frames		Traffic Type	Frame Size	Stop Restart TX Stop Err Inj. Alarm Inj. LASER OFF MX Discover Loop Control
Signal	RX Frames	#		%	
Frame	Total	0		100	
Pattern	Test	0		0	
ALMIERR	VLAN	0		0	
History	VLAN Stack	0		0	
	MPLS	0		0	
	MPLS Stack	0		0	
	Non-Test	0		0	
	TX Frames	#			
	Total	979874			
	Pause Frames	TX		RX	
	Total	0		0	

Throughput Results - Frames Type

Traffic Type tab: The following Traffic distribution statistics are displayed in Count (#) and Percentage (%):

- **Layer 2/3 Unicast frames:** Number of Unicast frames received without FCS errors.
- **Layer 2/3 Broadcast frames:** Number of Broadcast frames received without FCS errors. Broadcast frames have a MAC address equal to FF-FF-FF-FF-FF-FF.
- **Layer 2/3 Multicast frames:** Number of Multicast frames received without FCS errors.

Frame Size tab: The following Frame distribution statistics are displayed in Count (#) and Percentage (%):

- < 64 bytes frames
- 64-127 byte frames
- 128-255 byte frames
- 256-511 byte frames
- 512-1023 byte frames
- 1024-1279 byte frames
- 1280-1518 byte frames
- > 1518 byte frames - Jumbo frames

[Go back to top](#) [Go back to TOC](#)

15.6.2.3 Per Stream Results

The **Per Stream** tab displays the same type of statistics as seen in Global Results, but for each stream. For descriptions of the parameters in each tab, with the exception of **Rates**, please refer back to [Global/Aggregate Results](#).

- **Summary:** Framed rate, data rate, # of bytes, total # of frames associated with each stream.
- **Errors:** Errors associated with each stream.
- **Service Disruption Test** results for each stream.
- **Events:** Events associated with each stream.

- **Traffic:** Traffic statistics associated with each stream.
- **Delay:** Delay associated with each stream. **Note:** Round trip delay measurements are only available in the per-stream results screen. Round trip delay measurement requires a traffic loop at the far-end.
- **Rates:** Rate information associated with each stream.

LEDs Signal Frame Pattern ALM/ERR Tools Utilities Files	Setup		Results		
	Global		Per Stream		OAM
	Summary	Errors	Events	Traffic	Delay
	Rates				
	VLAN ID: N/A	Stream #		2	
	ST:2012-1-5 19:41:54		ET:00:06:43		
		TX		RX	
	Utilization (%)	30.000%		30.000%	
	Utilization (bps)	300.000M		300.000M	
	Framed Rate (bps)	296.108M		296.108M	
	Data Rate (bps)	286.381M		286.381M	
	# of Bytes	14913065870		14913064348	
	Total Frames	9798335		9798334	
	Bad Frames	0		0	

Stop

Restart

TX Stop

Err Inj.

MX Discover

Control

Throughput Results - Summary per Stream

[Go back to top](#) [Go back to TOC](#)

The **Per Stream Errors** screen displays the Current and Total error count of each stream.

- **Bit:** Indicates errors related to test pattern (Bit Error or LSS [Pattern Loss])
- **BER:** Bit Error Ratio
- **FCS/CRC:** Number of received frames with an invalid Frame Check Sequence (FCS)
- **IP Checksum:** Invalid IP Frame Check sequence
- **TCP/UDP Checksum** (Layer 4 only)
- **Jabber frames:** Number of received frames larger than 1518 bytes containing an invalid FCS
- **Runt frames:** Number of received frames smaller than 64 bytes containing an invalid FCS
- **Frame Loss**
- **Frame Loss %**
- **OOS**

LEDs Signal Frame Pattern ALM/ERR Tools Utilities Files	Setup		Results		
	Global		Per Stream		OAM
	Summary	Errors	Events	Traffic	Delay
	Rates				
	VLAN ID: N/A	Stream #		2	
		Current	Total		
	Bits	N/A	N/A		
	BER	N/A	N/A		
	FCS/CRC	0	0		
	IP Checksum	0	0		
	TCP/UDP Checks	0	0		
	Jabber Frames	0	0		
	Runt Frames	0	0		

Stop

Restart

TX Stop

Err Inj.

MX Discover

Control

Page 1 of 2

Throughput Results - Errors per Stream

Setup		Results			
Global		Per Stream		OAM	
Summary	Errors	Events	Traffic	Delay	Rates
VLAN ID: N/A	Stream #		2		
	Current	Total			
Frame Loss	0	0			
Frame Loss %	0.00%	0.00%			
OOS	0	0			

Page 2 of 2

Throughput Results - Errors per Stream (page 2)

[Go back to top](#) [Go back to TOC](#)

Service Disruption Test (SDT)

- **Total:** Total cumulative service disruption for the duration of the test.
- **Last:** Last SDT measured during the test.
- **Min/Max:** Minimum and maximum SDT measured during the test.
- **No. of Occurrences:** Number of service disruption events (SDTs).
- **No. of SDT Violations:** Number of instances the SDT threshold was met or exceeded.

Setup		Results				
Global		Per Stream		OAM		
Summary	Errors	SDT	Events	Traffic	Delay	Rates
VLAN ID: N/A	Stream #		1			
Service Disruption						
Total			0us			
Last			0us			
Min/Max	0us		0us			
No. of Occurrences			0			
No. of SDT Violations			0			

SDT Reset

SDT Per Stream Results

[Go back to top](#) [Go back to TOC](#)


The **Per Stream Events** screen displays a Date and Time stamped record of bit errors, alarms and other anomalies pertaining to each stream.



Throughput Results - Events per Stream

[Go back to top](#) [Go back to TOC](#)

The **Per Stream Traffic** screen displays the frame type and frame size distribution pertaining to each stream.

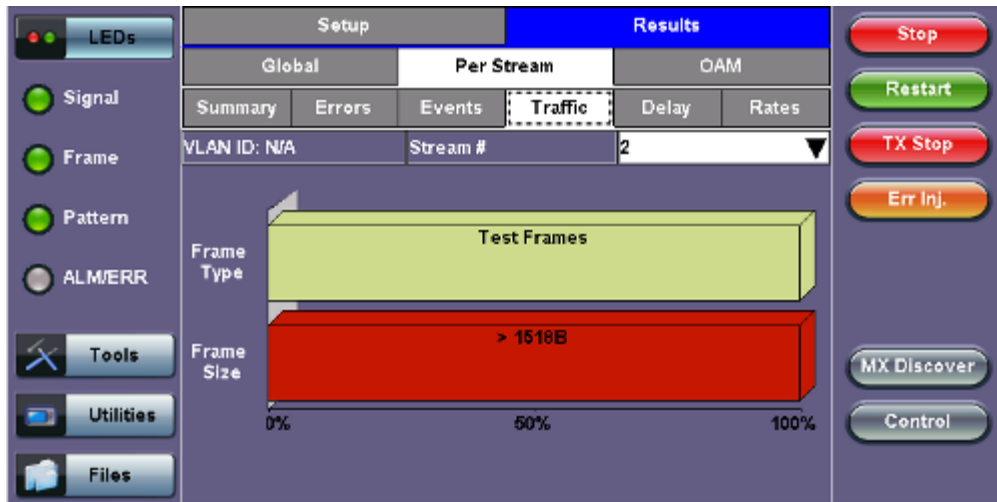

Throughput Results - Traffic per Stream

[Go back to top](#) [Go back to TOC](#)


The **Per Stream Delay** screen displays the frame delay information pertaining to each stream. The Histogram shows the sampling points for the delay.

[Go back to top](#) [Go back to TOC](#)

Round Trip Delay Results and Histogram



Throughput Results - Delay per Stream

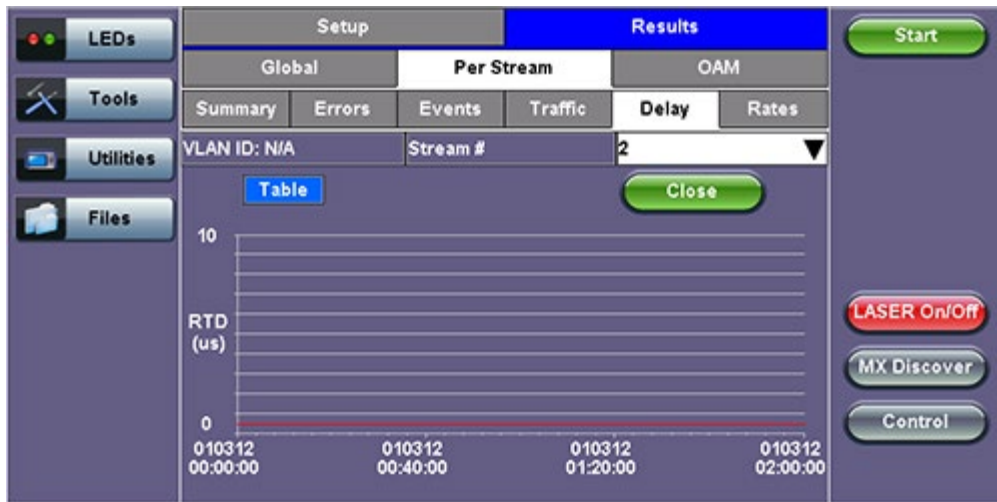


Throughput Results - Round Trip Delay Histogram

One Way Delay Results and Histogram (Table and Graph)



Throughput Results - Delay per Stream (One Way Delay)

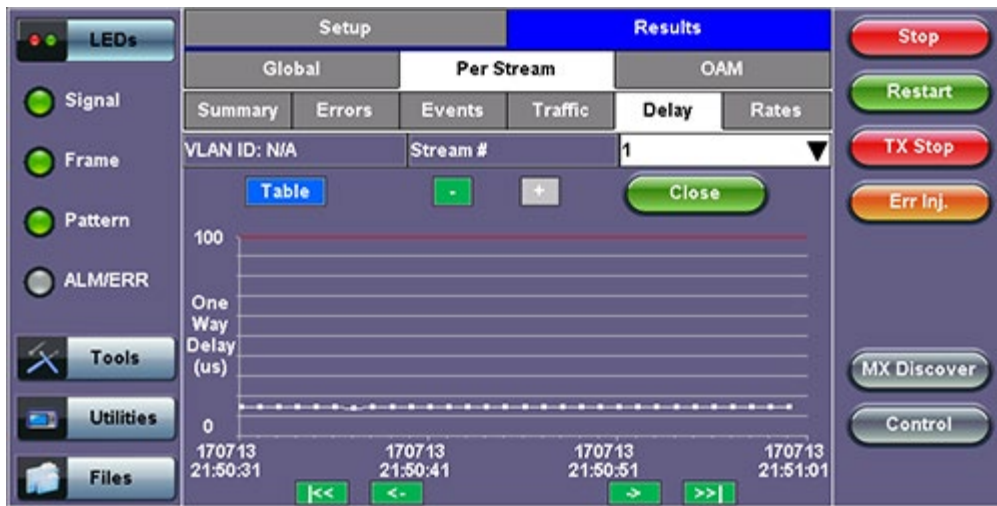

Throughput Results - One Way Delay Histogram Graph

Throughput Results - One Way Delay Histogram Table

[Go back to top](#) [Go back to TOC](#)

The **Per Stream Rate** screen displays the frame rate and data rate pertaining to each stream. Tap on either dial to see rate details.



Throughput Results - Rates per Stream

Rate Details			
Frames/sec	TX	RX	
Current	24319	24319	
Minimum	22071	22069	
Maximum	24320	24320	
Average	24315	24315	
Data Rate (Mb/s)	TX	RX	
Current	286.381M	286.381M	
Minimum	259.908M	259.885M	
Maximum	286.392M	286.392M	
Average	286.337M	286.337M	

Throughput Results - Rates per Stream (Rate Details)


[Go back to top](#) [Go back to TOC](#)

15.6.2.4 Saving Throughput (Multiple Streams) Results

Once the test has been stopped the results can be saved by pressing the **Save** key on the VePAL's keypad. The results will be saved and named automatically. Once the results are saved, the user may view or rename the results file by going to **Utilities > Files > Saved**. For more information on retrieving saved test results, refer to **File Management** in the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for more information.

[Go back to top](#) [Go back to TOC](#)

15.7 Ethernet OAM Testing

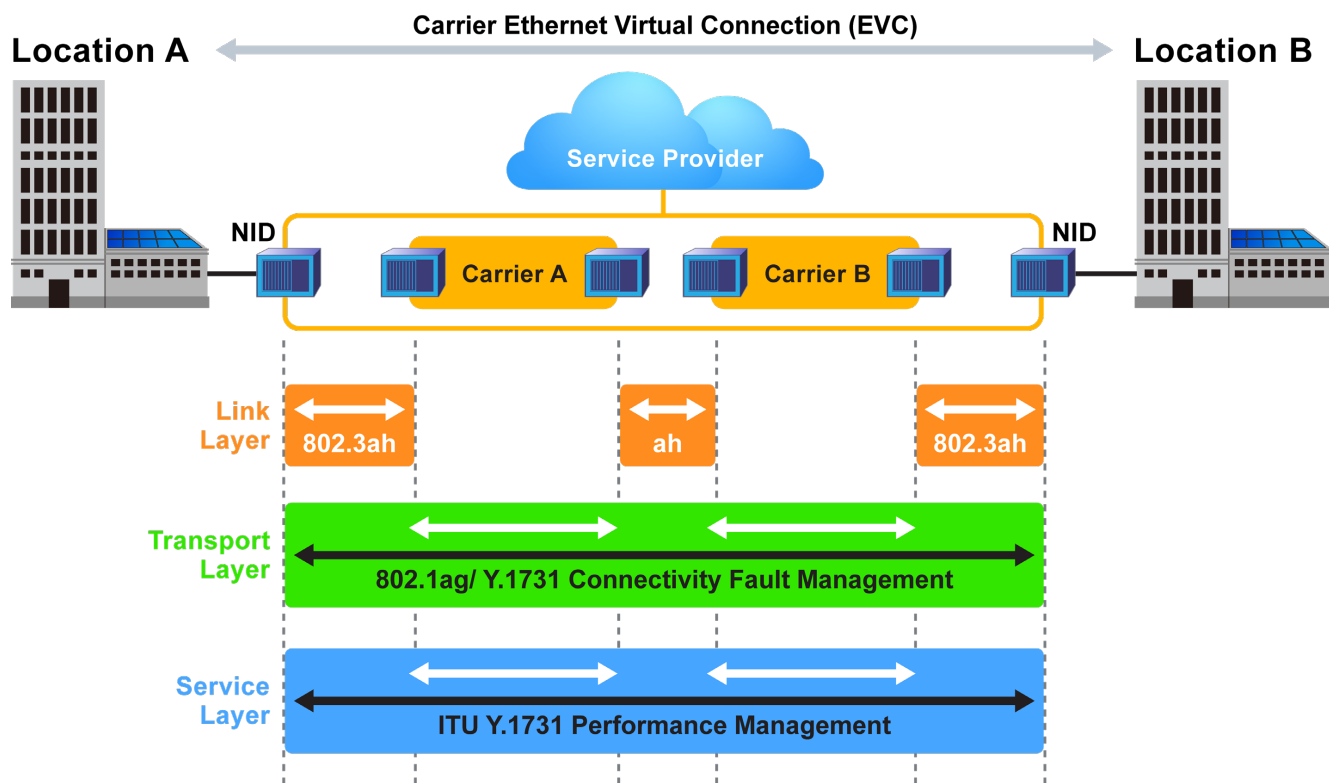

Ethernet OAM provides automatic defect detection, fault management and performance monitoring tools for network links and end-to-end Ethernet Virtual Circuits (EVC). The OAM service supports IEEE 802.3ah, IEEE 802.1ag, ITU-T Y.1731, and G.8113.1.

[Go back to top](#) [Go back to TOC](#)

15.7.1 OAM Setup

15.7.1.1 Link Level 802.3ah OAM Setup

802.3ah functions include:

- Discovery
- Link Performance Monitoring
- Remote loopback
- Fault detection



Link OAM Setup

- **802.3ah OAM**

Tap on the check box to start 802.3ah protocol testing. Transmission of OAM PDUs starts as soon as the box is checked.

- **OAM Mode**

Select Active or Passive mode from the drop-down menu. Active and passive mode determines the type of actions the test set will take. For more on acceptable Active/Passive mode combinations and actions, see section [802.3ah OAM Discovery](#).

- **Vendor OUI and SPI**

Organization Unique identifier and Vendor specific information (similar to MAC address fields).

- **Max PDU Length**

Advertised Max OAM PDU size (64 to 1518). After Discovery, the lowest of the local and remote will be used.

- **PDU Rate**

100 to 10000 ms between consecutive OAM PDUs.

- **Discovery Capability**

Enables OAM enabled devices to exchange their OAM capabilities, configuration, and identity to link partners. Check on the boxes to advertise selected capabilities during Discovery.

- **Link Events Notification Settings**

Enable Event Notifications for Link Fault, Critical Event, and Dying Gasp.

[Go back to top](#) [Go back to TOC](#)

802.3ah OAM Discovery

Discovery is the first phase of the 802.3ah protocol. During Discovery, local and remote units exchange Information OAM PDUs indicating capabilities and configuration information (mode, PDU size, loopback support, etc.). After successful negotiation the OAM protocol is enabled on the link. If no OAM PDU is received after 5 seconds, Discovery is restarted. The device can be configured in Active or Passive mode combinations.

OAM Mode Active/Passive Actions

Action	Mode Passive	Mode Active
Initiates OAM discovery	No	Yes
Responds to OAM discovery	Yes	Yes
Peer must be in active mode	Yes	Yes
Sends Information OAM PDU	Yes	Yes
Sends Event Notification OAM PDU	Yes	Yes
Sends Variable Request OAM PDU	No	Yes
Sends Loopback Control	No	Yes
Reacts to Loopback Control	Yes	Yes

OAM Mode - Acceptable Active/Passive Combinations

	Local Active	Local Passive
Remote Active	Yes	Yes
Remote Passive	Yes	No

Notice that each device can be placed in any mode as long as the remote and local device are not both in passive mode.

Discovery Capabilities: Capabilities advertised during discovery process

- Remote Loopback
- Link Events: Supported, but no stateful
- MIB Retrieval: Can be advertised but is not supported in current release
- Unidirection

Remote Loopback: The user can transmit a loopback command to place the remote unit into loopback mode. Every frame received is transmitted back on the same port to ensure the quality of links during installation or troubleshooting and for fault isolation testing.

Link Events: Event OAMPDU is transmitted when the link error exceeds the threshold. Events may be sent once or multiple times. In the current software release, link events are only transmitted upon user request, not based on threshold crossing.

MIB Retrieval: Retrieves information on network devices and interfaces.

Unidirection: Checks for unidirectional transmission.

[Go back to top](#) [Go back to TOC](#)

15.7.1.2 Service Level OAM: 802.1ag/Y.1731/G.8113.1 Setup

Under the **Service Level OAM** tab, the user has the option of starting the 802.1ag, Y.1731, or G.8113.1 test.

- Fill out the given parameters.

MD Name, **MA Name**, **VLAN**, and **MD Level** input values must match for both connected OAM devices in order for the test to work. The **Destination MEPID** and **Local MEP ID** must also be inverted for the tests to work.

- Tap the box next to 802.1ag, Y.1731, or G.8113.1 to start the selected test. The transmission of OAM PDUs become active as soon as the checkmark is added to the test.

OAM - Service Level OAM (Page 1)

Service Level OAM Configuration Parameters

- **MAC Source:** Enter the source address of the test set or tap the **MAC Source** button to assign a default MAC address.
- **MD Format:** Configure the format of the Maintenance Domain Name:
 - **None:** No Maintenance Domain name
 - **MAC+2octet:** User configurable MAC address + 2 octets
 - **String:** User configurable ASCII character string
- **MD Name:** Name of the Maintenance Domain (only for 802.1ag)
- **MA/MEG Format:** Configure the format of the Maintenance Association name:
 - **VID:** User configurable ASCII character string
 - **String:** User configurable ASCII character string
 - **2 octet:** 2 octet integer
 - **ICC-Based:** User configurable ITU-T Y.1731 ITU Carrier Code (ICC) based
- **MA/MEG Name:** Enter the name of the 802.1ag MA or Y.1731 MG
- **Local MEP ID:** Local end point identifier along the path (1 to 8191)
- **MD Level:** Maintenance domain level (0 to 7)
- **MEP ID:** End point identifier (1 to 8191)
- **Primary VLAN ID:** VLAN ID associated with the MA or MEG
- **VLAN Type:** C-VLAN, S-VLAN, or None
- **Destination MEP ID:** MEP ID of the MEP end point
- **Direction**
 - **Up:** Inward facing MEP used for MA/MEG with a wider reach (i.e., end-to-end, beyond a single link)
 - **Down:** Outward facing MEP used for MA/MEG spanning a single link




Differences between 802.1ag, Y.1731, and G.8113.1

Selecting **802.1ag** enables Continuity Check Messages (CCM), Loopback Message (LBM) and Link Trace Message (LTM). **ITU-T Y.1731** provides all of the 802.1ag functionality with additional performance monitoring capabilities including Frame Loss (LM), and Delay (DM). **ITU-T G.8113.1** provides further monitoring of MPLS-TP traffic.

IEEE 802.1ag Definitions

- **Maintenance Domain (MD)** : Management space on a network that is owned and operated by a single network provider. There is a maintenance level (from 0 to 7) to define the hierarchical relationship between domains. Maintenance domains can be nested but never intersect. MD is defined by Operational or Contractual Boundaries (e.g., Customer/Service Provider/Operator).
- **Maintenance Association (MA)**: Association of Maintenance. Elements that comprise the Maintenance domain.
- Maintenance Elements can either be MEPs (End points) or MIPs (Intermediate Points)
 - MEPs are at the edge of the network. They can generate and respond to OAM messages. A point-to-point EVC has only 2 MEPs, a multi-point EVC has multiple MEPs.
 - MIPs are located between the MEPs and can be used to isolate network problems. MIPs cannot generate OAM messages but can respond.
- **Maintenance Level**: Identifies the network hierarchy. Higher Level = Largest network. Level information present in all OAM PDU frames.
 - Level 0,1,2 = Operator domain
 - Level 3,4 = Service Provider domain
 - Level 5,6,7 = Customer domain

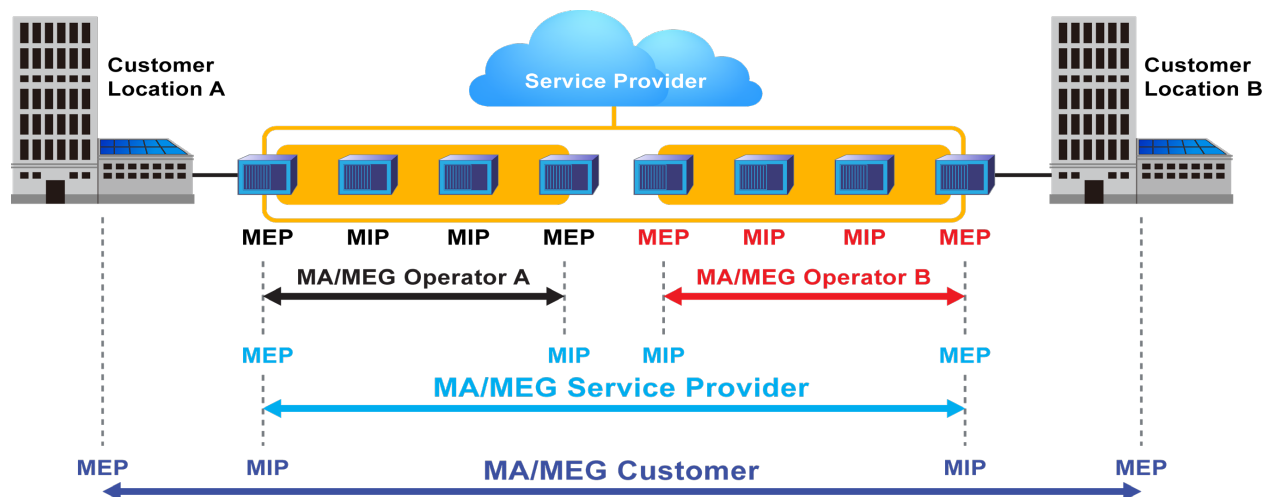

Some terms differ between IEEE 802.1ag and ITU Y.1731 protocols. The chart below describes the differences.

IEEE 802.1ag	ITU Y.1731 / G.8113.1
Maintenance Domain (MD)	No equivalent
Maintenance Association (MA)	Maintenance Entity Group (MEG)
Maintenance End Point (MEP)	Maintenance entity Group End Point (MEP)
Maintenance Intermediate Point (MIP)	Maintenance entity Group Intermediate Point (MIP)

Definition Equivalencies

Function	MEP	MIP
Initiates CCM messages	Yes	No
Initiates Loopback and Linktrace messages	Yes	No
Responds to Loopback and Linktrace messages	Yes	Yes
Y.1731 Performance Management messages (AIS,LCK, TST,LM, etc) initiates and responds	Yes	No
Forwards messages	Yes (upper maintenance layer) No (lower maintenance layer)	Yes (upper maintenance layer) No (lower maintenance layer)

Maintenance Point Roles

[Go back to top](#) [Go back to TOC](#)

OAM Services Setup


Under the same tab, OAM Services pertaining to 802.1ag, Y.1731, and/or G.8113.1 can be enabled. The tests listed include:

- Continuity Check (CCM)
- Loopback (LBM/LBR)
- Link Trace (LTM/LTR)
- Loss Measurement (LMM/LMR) (Y.1731 and G.8113.1)
- Delay Measurement (DMM/DMR) (Y.1731 and G.8113.1)
- Multi Protocol Label Switching Transport Profile (MPLS-TP) (G.8113.1 only)

General Setup

- To run any 802.1ag/Y.1731/G.8113.1 test, tap on the checkbox next to the corresponding test.
- To initiate testing for individual OAM services, press **Start** next to the desired service (NOT the green start button which initiates Throughput testing).
- **CCM** testing is initiated by selecting Enable from a drop-down menu.

Details on individual test parameters will be listed in the specified section.

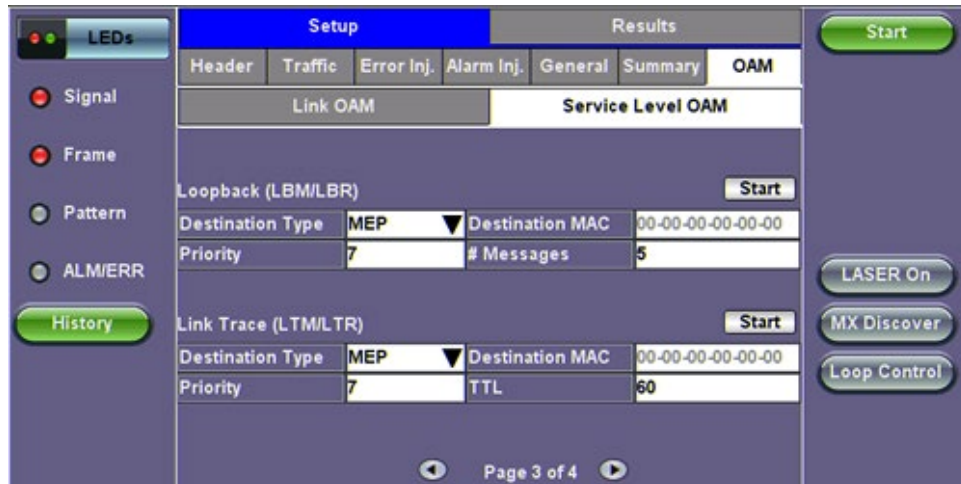

Pressing Start next to Loopback (LBM/LBR) initiates testing for that OAM service

802.1ag/Y.1731/G.8113.1 Connectivity Fault Management Functions


Connectivity Fault Management Functions supported by the test set are as listed:

- Fault Detection – Continuity Check:
 - CCM "heartbeat" messages are transmitted at a configurable periodic interval by MEPs.
- Network/Path Discovery – Link trace message:
 - Equivalent to a traceroute test. MIPs and MEPs along the path send a response.
- Fault verification and isolation – Loopback:
 - Verify connectivity to a specific point in the message. Equivalent to ping test.

Continuity Check Messages (CCM)


CCM Messages are multicast messages sent from MEP to MEP at configurable intervals. Loss of continuity is detected after no CCM is received for 3.5 times the CCM interval.

● There can be 4,094 VLANs per port and up to eight maintenance levels. This yields a worst case CCM transmission rate of 9.8 million CCMs per second if 3.3ms interval is used.

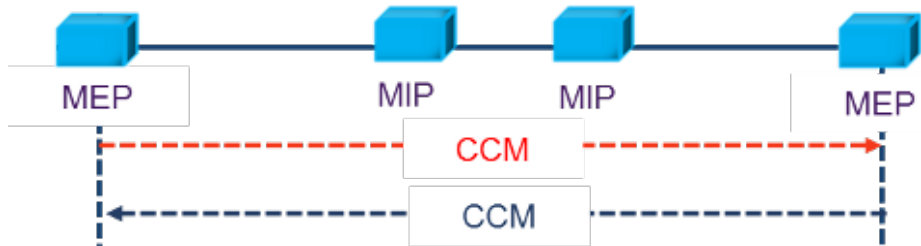

Continuity Check Message (CCM)

RDI Flags added in CCM Messages indicates loss of continuity in the remote direction.

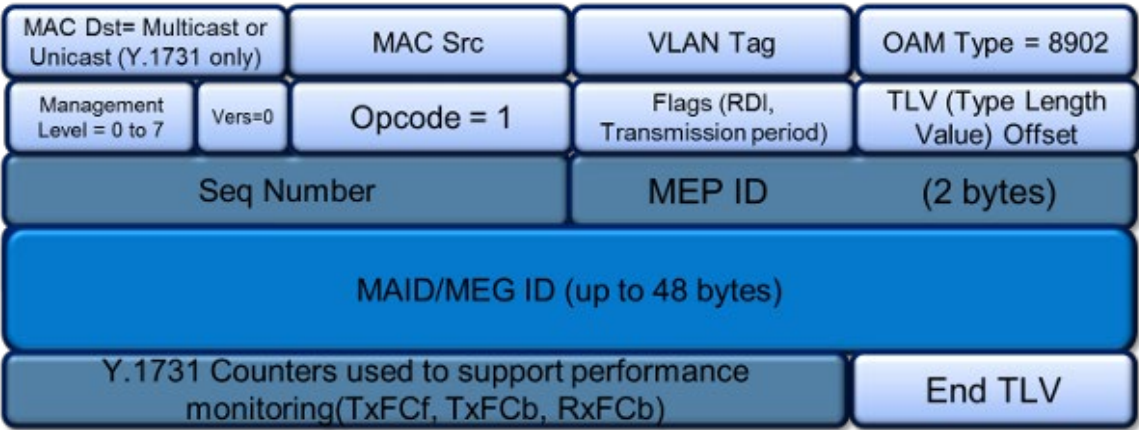

CCM Message Format

CCM Configuration Parameters

- **CCM:** Enable/Disable sending Continuity Check messages.
- **Type:** Unicast/Multicast. If CCM is set to Enable, this field is ignored. In unicast mode you must enter the MAC address of the destination unit.
- **Priority:** 802.1p priority in the CCM VLAN Tag.
- **Tx Interval:** Choose from the supported CCM intervals: 1 s, 10 s, 1 min, 10 min.

The **CCM Result** button is a shortcut that brings the user directly to the CCM Results tab.

Setup		Results	
Header	Traffic	Error Inj.	OAM
Link OAM		Service Level OAM	
MPLS-TP			
LSP:	Label 0	CoS 0	TTL 64
PW:	Label 0	CoS 0	TTL 64
GAL:	Label 13	TC 2	TTL 64
ACH:	Version 0	Channel Type	89-02
CCM Disable			
Type	Multicast		
Priority	7	Tx Interval	1 min

Page 2 of 4 CCM Result


Stop Restart TX Stop Err Inj. MX Discover Loop Control

MPLS-TP, CCM Settings - Service Level OAM (Page 2)

[Go back to top](#) [Go back to TOC](#)

G.8113.1 Performance Management Functions

MPLS-TP

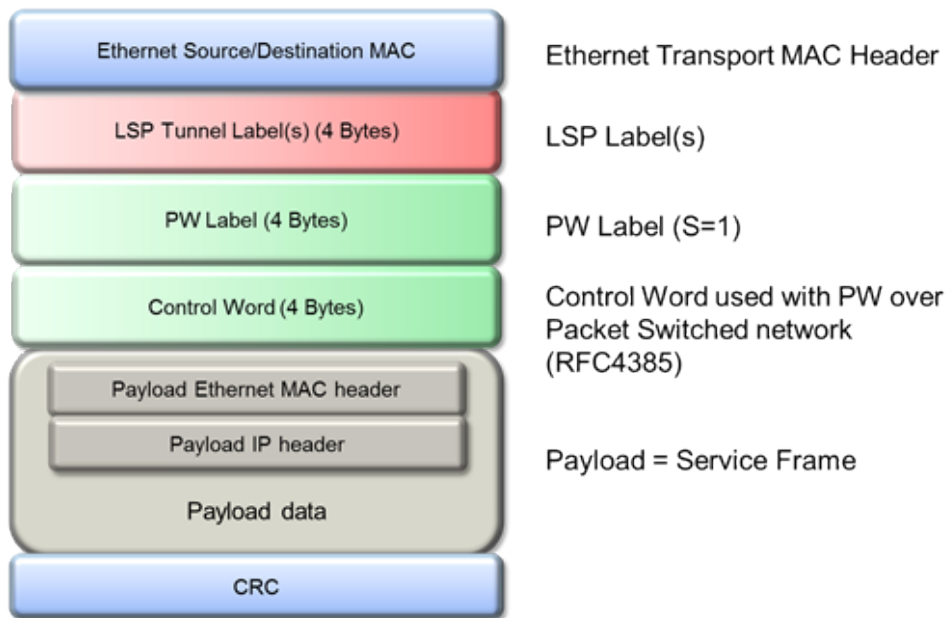

MPLS-TP over Ethernet with PW Label

MPLS-TP is a Layer 2 technology that combines the benefits of MPLS and removes the complexity of IP networking. It uses the MPLS Label switching mechanism, but with static route provisioning (no Label Distribution Protocol LDP or RSVP-TE). MPLS-TP supports an advanced set of OAM functions and path protection mechanisms. In-band OAM traffic is on the same path as data traffic.


Multi Protocol Label Switching Transport Profile (MPLS-TP) Configuration Parameters

- For the path and tunnel, select **LSP** (Label Switched Path) and **PW** (Pseudowire).
 - Label:** Configure in the range of 16-1,048,575 (labels 0-15 are reserved).
Note: Composed of 20 bits which allows for the creation of over one million labels.
 - CoS:** Enter the Classes of Service.
 - TTL:** Enter the Time to Live. It will be decremented by 1 each time it crosses a hop. Frame is not forwarded after TTL reaches 0.
- ACH:** Enter the Generic Associate Label
Note: For Pseudowires, the ACH used the first four bits of the PW control word.
- Version:** Enter the G-Ach version. The default is set to 0.
- Channel Type:** Enter the channel type (16-bit field).

Link Trace and Loopback Messages

Link Trace Messages (LTM/LTR)

LTM (Link Trace Message) Multicast messages are transmitted on demand to a destination MAC address. All MIPs and destination MEPs respond with LTR (Link Trace Reply) and forward the LTM on to its destination.

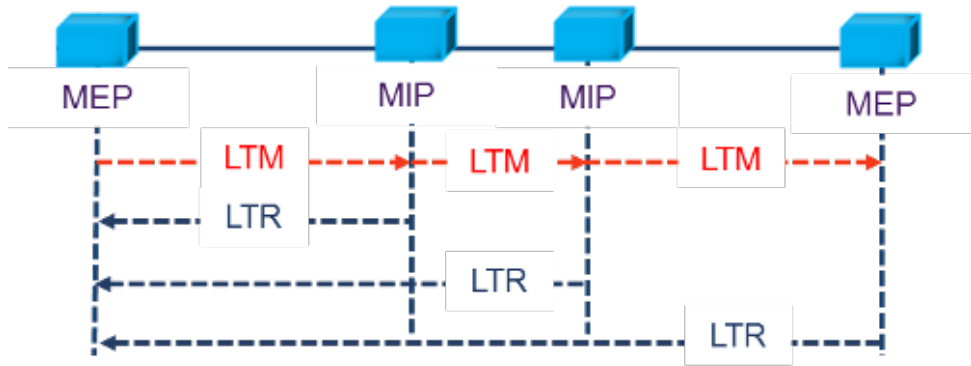

LTM Diagram (LTM/LTR)




Link Trace Message Format




Link Trace Response Format

Loopback Message (LBM/LBR)

LBM (Loopback Message) are unicast messages transmitted on demand to a destination MAC address. A destination address responds with an LBR (Loopback Reply Message).

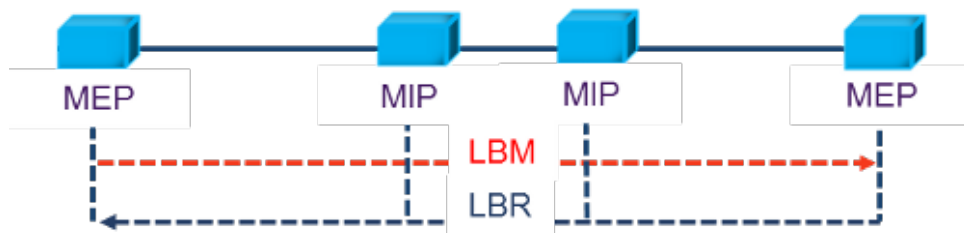

LBM Diagram (LBM/LBR)

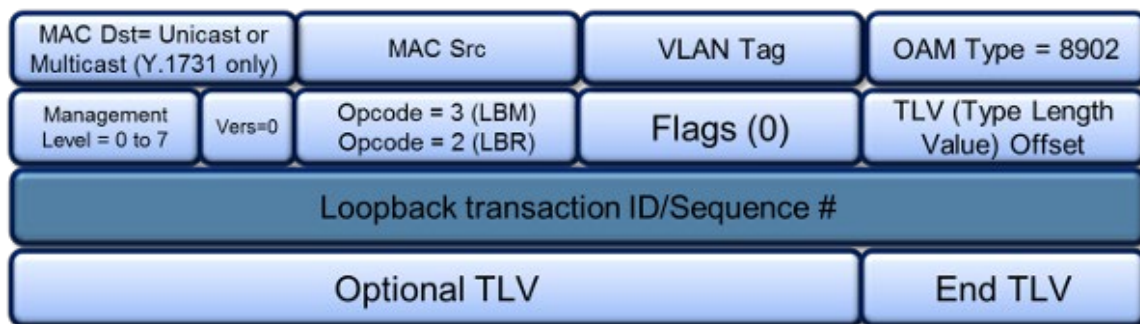

Loopback Message Format

LBM/LBR, LTM/LTR Settings - Service Level OAM (Page 3)

[Go back to top](#) [Go back to TOC](#)

Link Trace (LTM/LTR) and Loopback Message (LBM/LBR) Config. Parameters

- **Destination**
 - **MEP**: Sends LTM/LBM to the destination MEP as configured on Page 1.
 - **MAC**: Sends LTM/LBM to a destination MAC address.
- **Priority**: 802.1p priority in the LTM/LBM VLAN Tag.
- **Destination MAC**: Configure the destination MAC address used for the LTM/LBM. This field is only used if Destination is set to MAC. If destination is set to MEP, this field is ignored.
- **# Messages**: Enter the number of Loopback messages to be sent (LBM test only).
- **TTL**: Enter the Time to Live field in the LTM message. TTL will be decremented each time it crosses a hop (MIP) (LTM test only).

Press **Start** to initiate testing.

[Go back to top](#) [Go back to TOC](#)

Y.1731/G.8113.1 Performance Management Functions

OAM - Service Level OAM (Page 4)

Loss (LMM/LMR) and Delay Measurement (DMM/DMR) Configuration Parameters

- **Destination**
 - **MEP**: Sends LMM/DMM to the destination MEP as configured on Page 1
 - **MAC**: Sends LMM/DMM to a destination MAC address
- **Priority**: 802.1p priority in the LMM/DMM VLAN Tag
- **Destination MAC**: Configure the destination MAC address used for the LMM/DMM. This field is only used if Destination is set to MAC. If destination is set to MEP, this field is ignored.
- **# Send** - Configure the number of LMM/DMM frames to send up to 50
- **Rate** : Configure the LMM/DMM frame interface rate (min: 100 ms; max: 10 seconds)

Press **Start** to initiate testing.

Frame Loss Measurement


Two local counters for each peer MEP:

- TxFCf: Counter for in-profile data frames transmitted towards peer MEP
- RxFCf: Counter for in-profile data frames received from peer MEP

Single-ended ETH-LM:

- On demand OAM
- MEP sends LMM frame (Unicast DA or Multicast Class 1 DA) and receives LMR frame (Unicast DA) with counters

CCM frames contain frame counters.

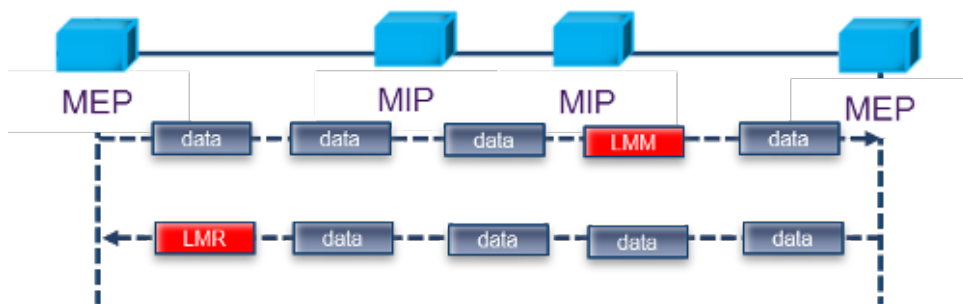

Single Ended Frame Delay Measurement

LMM frames contain frame counters.

Delay Measurement


On demand OAM for measuring Frame Delay (FD) and Frame Delay Variation (FDV):

- TxTimeStampf = Timestamp transmission of DMM frame

- RxTimef = Reception time of the DMM frame
- RxTimeb = Reception of DMR frame

Two-way ETH-DM:

- DMM frame (Unicast DA or Multicast Class 1 DA for multipoint measurement) & DMR frame (Unicast DA)
- FD = RxTimeb – TxTimeStampf

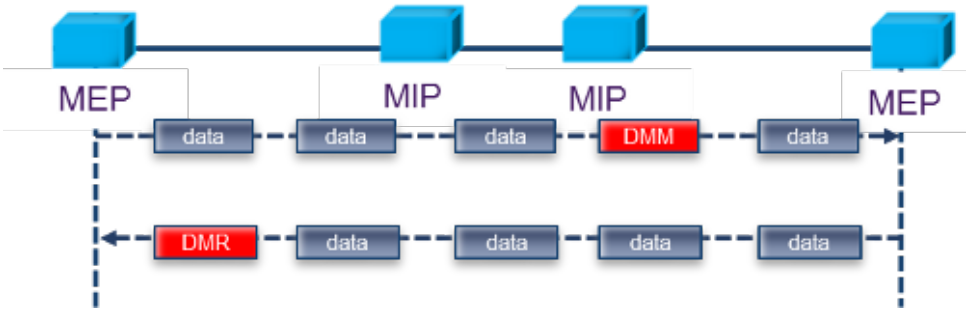

Dual Ended Frame Delay Measurement

DMM and DMR frames contain timestamp info.

[Go back to top](#) [Go back to TOC](#)

15.7.2 OAM Results

15.7.2.1 Link OAM Results

Link OAM Discovery

The discovery page lists **Local** (the current test unit) and **Remote** (far-end device) parameters.

LEDs

Tools

Utilities

Files

Setup		Results
Global	Per Stream	OAM
Link		Service
Discovery		Statistics
	Local	Remote
Mode	active	active
Unidirection	supported	not supported
Link Events	supported	supported
Remote Loopback	supported	supported
MIB Retrieval	supported	supported
MTU Size	1518	1518

Start

MX Discover

Control

Page 1 of 2


OAM - Link - Discovery (Page 1)

- **Mode:** Lists Active or Passive mode configuration.
- Supported and unsupported capabilities advertised during Discovery are listed, including: Unidirection, Link Events, Remote Loopback, MIB Retrieval, and MTU Size.

LEDs Tools Utilities Files	Setup		Results	Start MX Discover Control
	Global	Per Stream	OAM	
	Link		Service	
	Discovery		Statistics	
		Local	Remote	
	Vendor SPI	--	AD00593F	
	Vendor OUI	--	0015AD	
	Discovery State	Send Any		
	Parser State	Forward	Forward	
	Multiplexer State	Forward	Forward	
	Flags	0x0050	0x0050	
	Revision	1	1	
Page 2 of 2				

OAM - Link - Discovery (Page 2)

- **Vendor SPI and OUI:** Organization Unique identifier and Vendor specific information (similar to MAC address fields).
- **Discovery State:** Send Any indicates the device was successfully discovered.
- **Parser/Multiplexer state:** Forward indicates the device is forwarding regular traffic transmission. **Loopback/drop** indicates loopback is enabled.
- **Flags:** Flag decode is listed in the graphic below.
- **Revision:** Number of times the configuration has been modified since discovery.

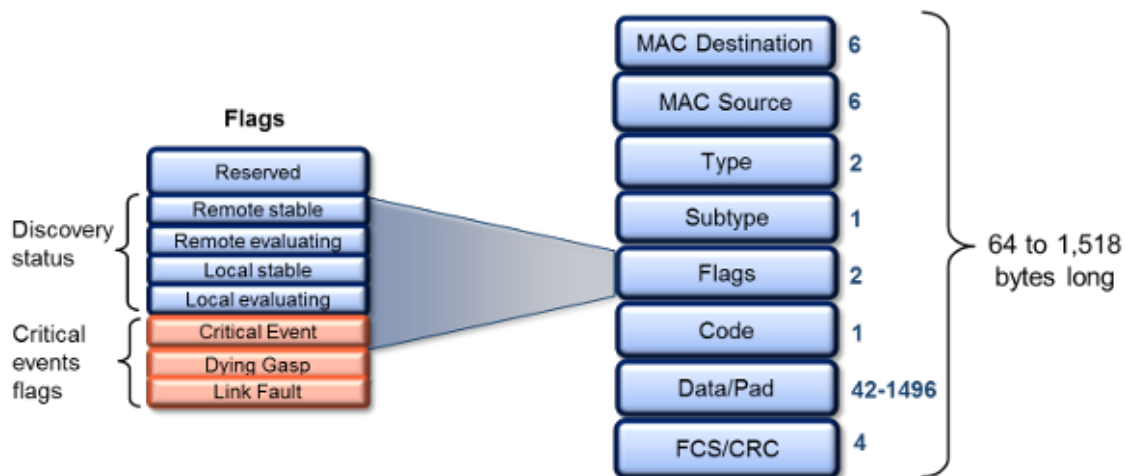

Flag Decode

LEDs Signal Frame Pattern ALMERR Tools Utilities Files	Setup		Results	Start MX Discover Control
	Global	Per Stream	OAM	
	Link		Service	
	Discovery		Statistics	
		TX	RX	
	Information	775	833	
	Unique Event	0	0	
	Duplicate Event	0	0	
	Loopback Control	1	0	
	Variable Request	0	0	
	Variable Response	0	0	
	Organization Specific	0	0	

OAM PDU

[Go back to top](#) [Go back to TOC](#)

OAM PDU

Transmitted and received 802.3ah OAM PDU are displayed with other Link OAM statistics:

- **Information:** Information OAM PDU acts as a "heartbeat" message. Discovery must be restarted if no OAM PDU is received after 5 seconds.
- **Unique** and **Duplicate** Events are Threshold crossing events not supported in the current test set release.
- Number of **Loopback Control** frames.
- **Variable Request** and **Response** are MIB query messages not supported in the current test set release.

[Go back to top](#) [Go back to TOC](#)

15.7.2.2 OAM Service Results

802.1ag/Y.1731/G.8113.1 Connectivity Fault Management Functions Results

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Setup				Results			
Global		Per Stream		OAM			
Link			Service				
CCM	LBM	LTM	DMM	LMM			
MPID	Remote MAC	RDI	LOC	XCON	UNEXP	Alarm	
151	00:00:00:00:00:00	I	A	I	I	A	
TX		2					
RX		0					

Stop

Restart

TX Stop

Err Inj.

MX Discover

Loop Control

OAM - Service - CCM

OAM CCM Results

RDI, LOC, XCON, UNEXP, and Alarm will display an I or A status with I = Inactive, A = Active.

- **MPID:** MEP ID of the remote MEP.
- **Remote MAC:** MAC address of the remote MEP.
- **RDI:** The CCM received contains the RDI flag set.
- **LOC:** The MEP detects loss of connectivity.
- **XCON:** Possible cross-connect, the CCM received could be from another MA.
- **UNEXP:** Unexpected MEP ID or non-matching CCM interval.
- **Alarm:** A fault alarm is triggered if a defect is present for a time period of 10s. The fault alarm is cleared if a defect condition is not present for a time period of 10s.

[Go back to top](#) [Go back to TOC](#)

LEDs Tools Utilities Files	Setup		Results			Start MX Discover Control
	Global		Per Stream		OAM	
	Link		Service			
	CCM	LBM	LTM	DMM	LMM	
	LBM Status					
	To Be Send		0			
	Response Count		5			
In Order		5				
Out Of Order		0				
No Match		0				

OAM - Service - LBM

OAM LBM Results

- **LBM Status**
 - **Pass:** At least 1 Loopback response received
 - **Fail:** No Loopback responses received
- **To be sent:** Outstanding number of LBM to be sent
- **Response Count**
- **In Order:** Number of LBR received in order
- **Out of Order:** Number of LBR received out of order
- **No Match:** The loopback transaction ID between the LBM and LBR do not match

[Go back to top](#) [Go back to TOC](#)

Signal Frame Pattern ALMERR Tools Utilities Files	Setup		Results			Start MX Discover Control
	Global		Per Stream		OAM	
	Link		Service			
	CCM	LBM	LTM	DMM	LMM	
	Action	MAC	TTL	Flags		
	0x0	00:00:00:00:00:00	0	0x0		

OAM - Service - LTM

OAM LTM Results

- **Action:** RlyHit indicates that the LTM has reached the destination MAC/MEP (i.e., final point)
- **MAC:** MAC address of the responder
- **TTL:** TTL field on the response, indicated how many hops have been traversed
- **Flags:** If set, indicates that only MAC addresses learned in a Bridge's Filtering Database, and not information saved in the MIP CCM Database, is to be used to determine the Egress Port

[Go back to top](#) [Go back to TOC](#)

Y.1731 and G.8113.1 Performance Management Functions Results

OAM LMM


OAM - Service - LMM

OAM - LMM Message


Parameter	Near End	Far End
Current	Value of the current number frames lost in the receive direction	Value of the current number of frames lost in the transmit direction
Accumulation	Total number of frames lost in the receive direction	Total number of transmitted frames lost in the transmit direction
Ratio	Percentage of frames lost in the receive direction	Percentage of frames lost in the transmit direction

OAM LMM Parameters

[Go back to top](#) [Go back to TOC](#)

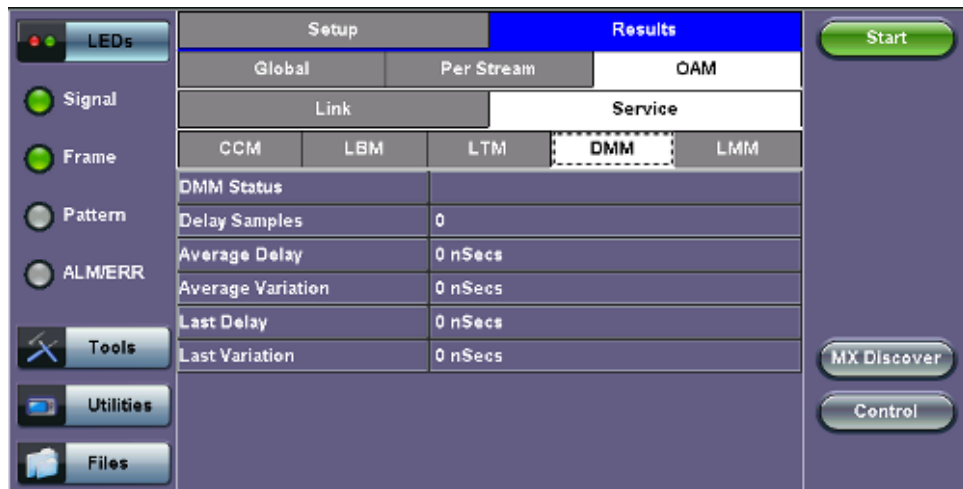

OAM - Service - DMM

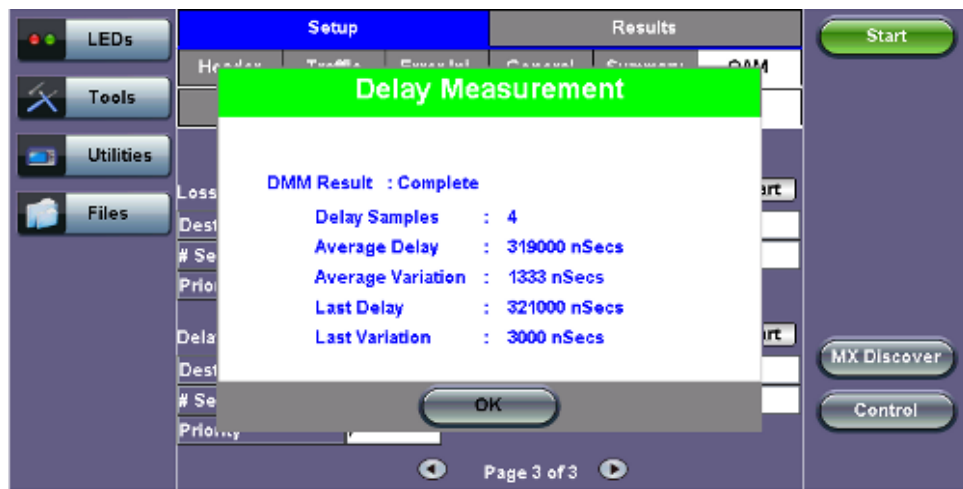

OAM - DMM Message

OAM DMM Parameters

- **DMM Status:** Lists status (In progress, Fail, or Complete)
- **Delay Samples:** Number of frames transmitted
- **Average Delay:** Average round trip delay over the number of delay samples
- **Average Variation:** Average round trip delay variation over the number of delay samples
- **Last Delay:** Last round trip delay value measured
- **Last Variation:** Last round trip delay variation value measured

[Go back to top](#) [Go back to TOC](#)

15.8 Monitor (Pass Through)

Pass through monitor mode enables the test set to be used for long term in-service testing. This allows for bi-directional monitoring of up to full gigabit Ethernet line rate on the two 1000Base-X ports or the two 10/100/1000T ports.


Pass Through functionality allows the following:

- In-line traffic monitoring in both directions
- Long or short term network monitoring for troubleshooting network traffic problems
- Isolate network problems to the customer network or the service provider/operator network
- Monitor traffic between 1000Base-X links, 10/100/1000T, or 10GE links
- **Pass through monitor operation**
 - Pass Through Monitor Copper 1GE
 - Pass Through Monitor Fiber 1GE
 - Pass through monitor mode enables bidirectional monitoring between the two 1000Base-X ports or the two 10/100/1000 Base-T ports

[Go back to top](#) [Go back to TOC](#)

15.8.1 Setup

- Select a Pass Through Monitor mode from the Test Mode menu. Refer to [Test Port Selection](#) for instructions on selecting Ethernet test modes.
- Connect to both 1000Base-X fiber ports (port 1 and port 2) or both 10/100/1000T copper ports (port 1 and port 2), depending on the interfaces to be monitored.
- Once the cable/interface connections are in place, press **Start**.

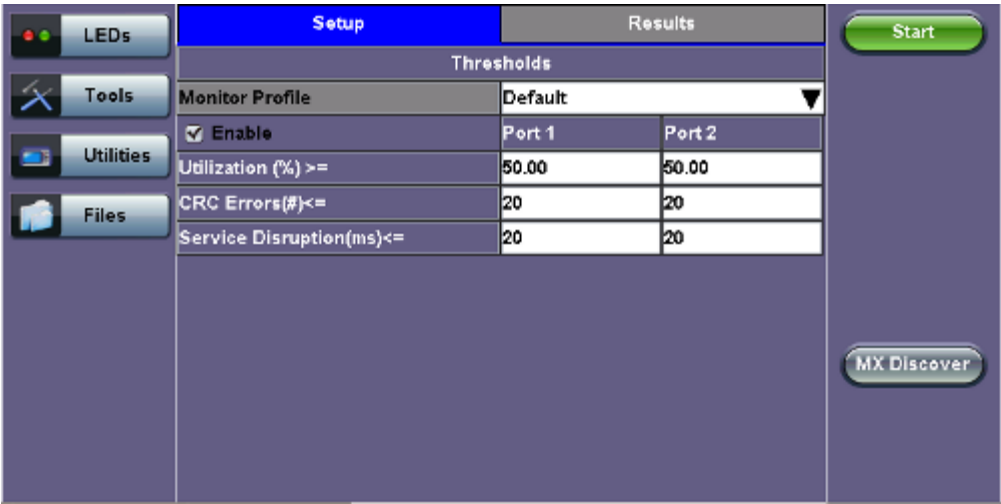


Monitor Mode Setup

- Thresholds: Set values for Port 1 and Port 2. The thresholds can be enabled or disabled depending on test requirements. When enabled, the pass through will show a pass/fail status based on the configured threshold values.
 - Utilization in %
 - CRC error count
 - Service Disruption in ms
 - Optical Power level in dBm (1000Base-X connections only)
- Once the cable/interface connections are in place and the thresholds have been set, press **Start**.

[Go back to top](#) [Go back to TOC](#)

15.8.2 Results

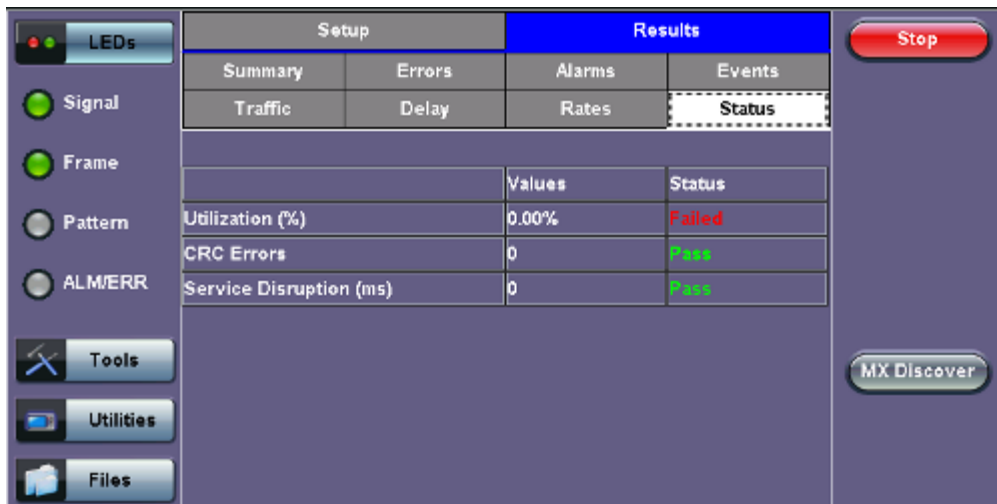

Monitor Mode Results


Monitor Mode Results features the same statistics as BERT Results. Please see [BERT Results](#). The Status screen displays the following statistics:

- Utilization (%)
- CRC Errors
- Service Disruption (ms)

[Go back to top](#) [Go back to TOC](#)

15.9 Advanced Monitoring

The Advanced Monitoring application analyzes incoming traffic and filters for specified header types. Up to 10 filters and 4 subfilters are available for setup.

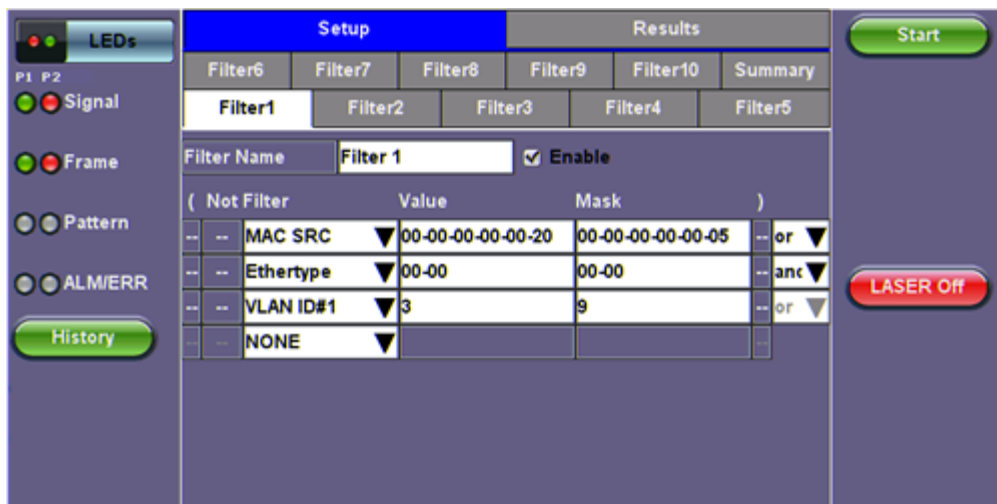

Advanced Monitoring Setup - Filter

Setting Up a Filter

1. Select a filter tab.
2. Tap the **Enable** checkbox to enable the filter.
3. (Optional) Tap on the **Filter Name** box to name the filter. Tap **Apply** to confirm the name.
4. Select a header type to filter for in the **NONE** box. Header types from all test applications are available for selection.
5. Tap on the **Value** and **Mask** fields and type in values to filter for.

6. To enable logical operators (**and**, **or**, **xor**), select another header for comparison from the **NONE** box.

Repeat steps 1-5 until the number of desired subfilters and filters are enabled. When finished, press the green **Start** button to begin monitoring.

The **Summary** lists the Enable/Disable status of all filters.



Advanced Monitoring Setup - Summary

[Go back to top](#) [Go back to TOC](#)


Results



Advanced Monitoring - Results - Global

The **Global** tab displays a summary of all filters and information on incoming frames such as the following:

- RX Total Frames
- RX FPS: Received frames per second
- Error: Frame errors

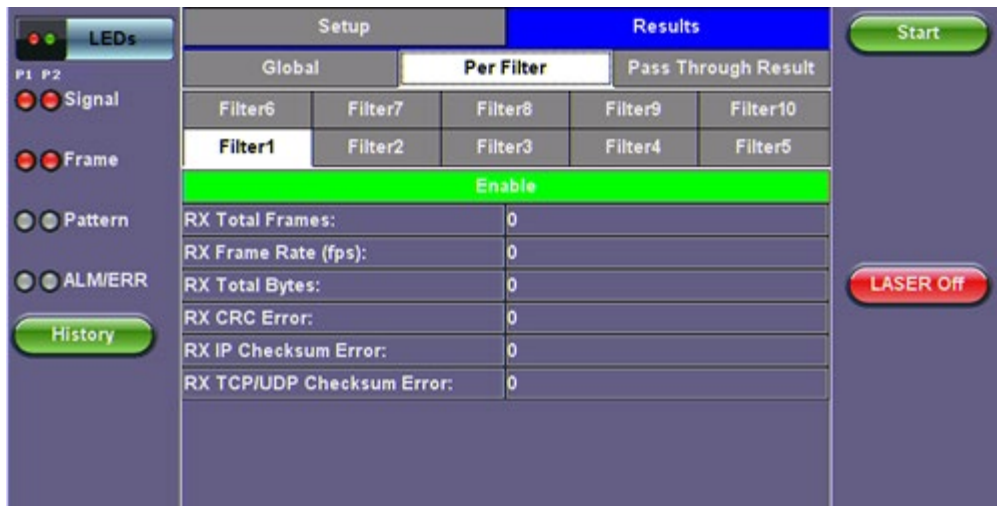

Advanced Monitoring - Results - Per Filter

The **Per Filter** tab displays received traffic information for each individual filter. Measurements include

- RX Total Frames
- RX Frame Rate (fps)
- RX Total Bytes
- RX CRC Error
- RX IP Checksum Error
- RX TCP/UDP Checksum Error



Advanced Monitoring - Results - Pass Through Result

The **Pass Through Result** tab records the same measurements featured in the Throughput application. Refer to [Throughput Results](#) for more information on the following tabs and measurements:

- Summary
- Signal
- Errors
- Alarms
- Events
- Traffic
- Delay
- Rates

15.10 Loopback Mode

The Loopback application in the main menu allows the user to establish a manual loopback on the test set. The loopback function is used when an end-to-end test needs to be performed with one of the test partners in software loopback mode. The loopback function will loopback the incoming traffic to the test set back into the network under test.

The type of traffic that the loopback function loops back will depend on the type of test layer configured (Layer 1, 2, 3, or 4). Additional criteria can be set to allow only messages with specific criteria to be looped back.

- **Layer 1:** All incoming traffic to the Rx loopback interface will be sent out unaltered to the Tx loopback interface.
- **Layer 2, 3, & 4:** In a Layer 2 or 3 loopback, all incoming test traffic will be looped back.
 - The loopback function will swap the MAC destination and MAC Source addresses (for Layer 2) or MAC and IP destination and source addresses (for Layer 3 and Layer 4).
 - All incoming frames with CRC errors will be dropped, similar to what an Ethernet switch does.
 - All broadcast and multicast frames will be dropped including any incoming unicast frames that have the MAC Source address equal to the MAC Destination address.
 - **Loopback Parameters:** The following parameters are available on Layer 2, 3 and 4. For more information on the parameters, please see [BERT Header Settings](#) in the BERT section. It is possible to enable any of these parameters to create a customer loopback filter. For example, enabling a filter with VLAN 64, Priority 7, will only loop back traffic corresponding to these values.
 - VLAN ID
 - VLAN Priority
 - MAC Source
 - MAC Destination
 - IP Source Address (Layer 3 & 4 only)
 - IP Destination (Layer 3 & 4 only)
 - Precedence (Layer 3 & 4 only)
 - TOS Value (Layer 3 & 4 only)
 - UDP SPort (Layer 4 only)
 - UDP DPort (Layer 4 only)

To enable/disable specific filter criteria, tap on **Filter Settings** under the **General** tab. Use the drop-down menus to make desired selections and tap **Filter OK** to enable/disable any filter changes.

Available loopback modes include the following:

- **Simple Loopback:** Displays single stream loopback results. Configure the parameters under general to filter the stream for specific parameters.
- **Multi-stream Loopback:** Displays loopback results for up to 8 streams. S1-S8 tabs represent individual streams. Tap on an S tab to filter the stream for specific parameters.

After setting up loopback criteria, tap **Apply** to apply settings.

Press **Start** to begin loopback.  indicates that loopback is in progress. The **Results** tab displays current test results. Per Stream results are available for Multi-stream setup. Results for each stream can be viewed by selecting the stream from the **Stream #** drop-down. Please see [BERT Results](#) for information on the Results tabs.

LEDs		Setup			Results	
☒ Signal		S4	S5	S6	S7	S8
☒ Frame		General		S1	S2	S3
☐ Pattern		Profile				Default
☐ ALM/ERR		Payload mode				Simple Loopback
☐ History		Test Layer				Layer 4
		MAC Source				00-18-63-00-90-89
		IP Source				192.168.1.150
		Subnet				255.255.255.0
		Gateway				192.168.1.1
		Apply Page 1 of 2 Filter Settings				

1000-TFULL

Start

MX Discover

P1 CAP Start

Loopback Setup

LEDs		Mode	Layer 4
☒ Signal		VLAN ID	Disable
☒ Frame		VLAN Priority	Disable
☐ Pattern		MAC Source	Disable
☐ ALM/ERR		MAC Destination	00-18-63-00-90-90
☐ History		IP Source	192.168.1.100
		IP Destination	192.168.1.101
		Precedence	100-Flash Override
		TOS Values	0100-Maximize Throughput
		UDP Source Port	Disable
		UDP Destination Port	Disable
		Filter OK	

1000-TFULL

Start

MX Discover

Loopback Filter

LEDs		Setup		Results		
☒ Signal		Global		Per Stream		
☒ Frame		Summary	Errors	Events	Traffic	Delay
☐ Pattern						Rates
☐ ALM/ERR		Stream #		3		
☐ History		ST: 2017-09-19 12:51:57		ET: 00/00:00:09		
				RX		
		Line Rate (bps)		1.000G		
		Utilization (%)		0.000%		
		Utilization (bps)		0.000		
		Framed Rate (bps)		0.000		
		Data Rate (bps)		0.000		
		# of Bytes		0		
		Pause Frames		0		

1000-TFULL

Stop


MX Discover

P1 CAP Start

Loopback Per Stream Summary Results

[Go back to top](#) [Go back to TOC](#)

15.11 Scan

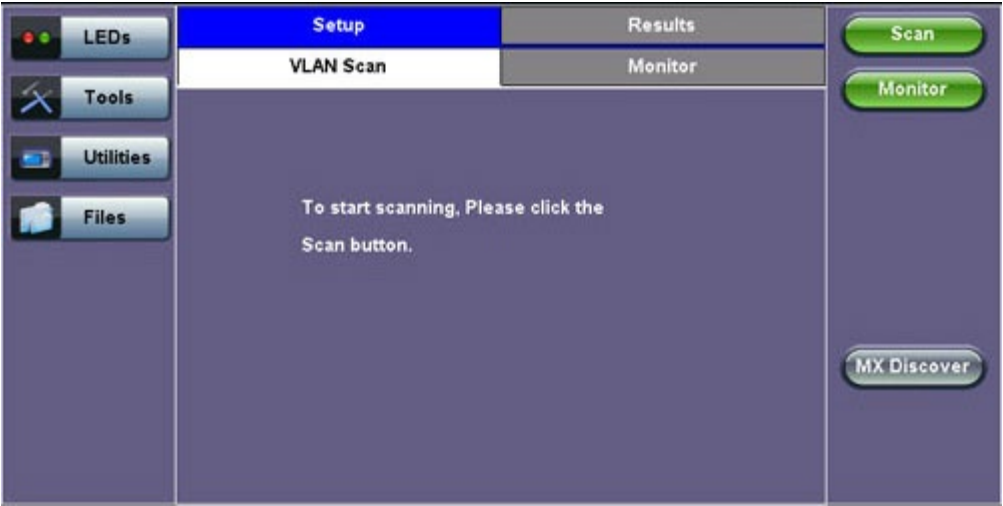


VLAN Scan Setup

VLAN Scan scans up to 4096 VLAN IDs for switch configuration and displays VLAN ID bandwidth rates, useful for identifying top bandwidth users based on VLAN ID. Monitor mode monitors up to eight live traffic streams (in terminate mode) and filters them based on VLAN ID configuration, providing key traffic metrics such as frame type, rates, and errors and alarms.


VLAN Scan

- While traffic is being received, press **Scan**. The Results tab displays a list of detected VLAN IDs and the percentage of traffic marked with those IDs. Check up to 8 streams to monitor.

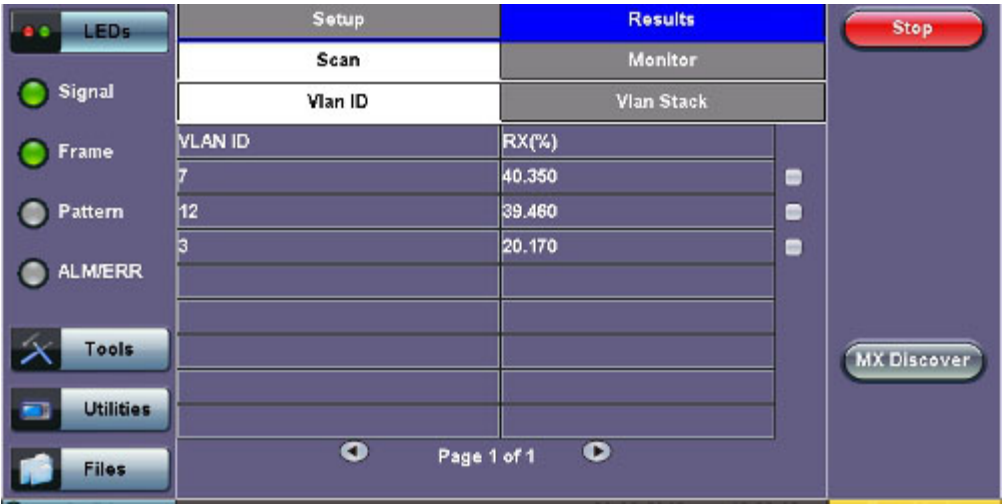

VLAN ID


- The VLAN Stack tab displays detected SP and CE VLAN tags (if stack VLAN tags are used).

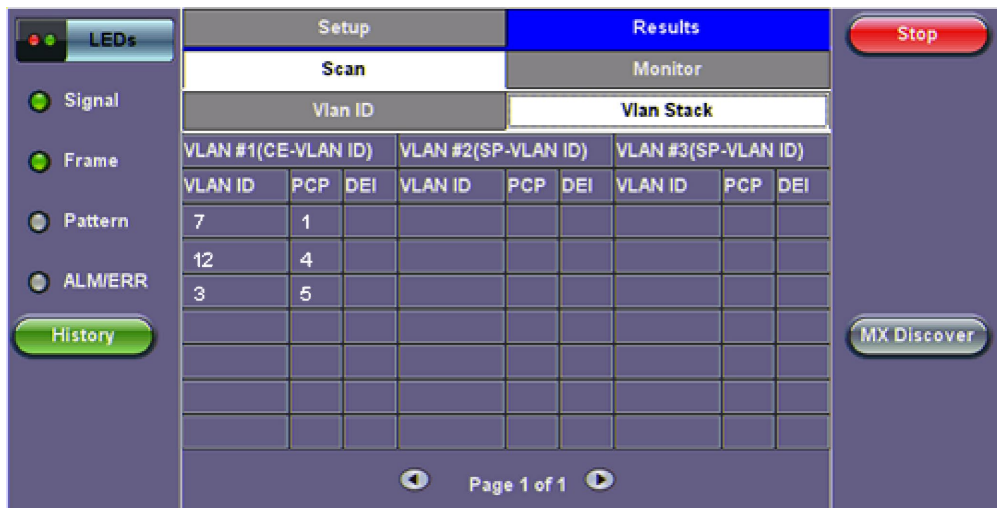

VLAN Stack

Monitoring Traffic

- To only receive traffic streams meeting specific criteria, stop the scan and go to the **Setup > Monitor** tab to configure filter criteria.
- Tap on a parameter box to configure it. Place a check next to a parameter to only receive traffic that matches this criteria. For descriptions of each parameter, please see [Setup](#) for Throughput Testing (Multiple Streams).
- Press **Results > Monitor** to monitor selected traffic. For a description of traffic parameters from Global and Per Stream Results tabs, please see [Throughput Results](#).

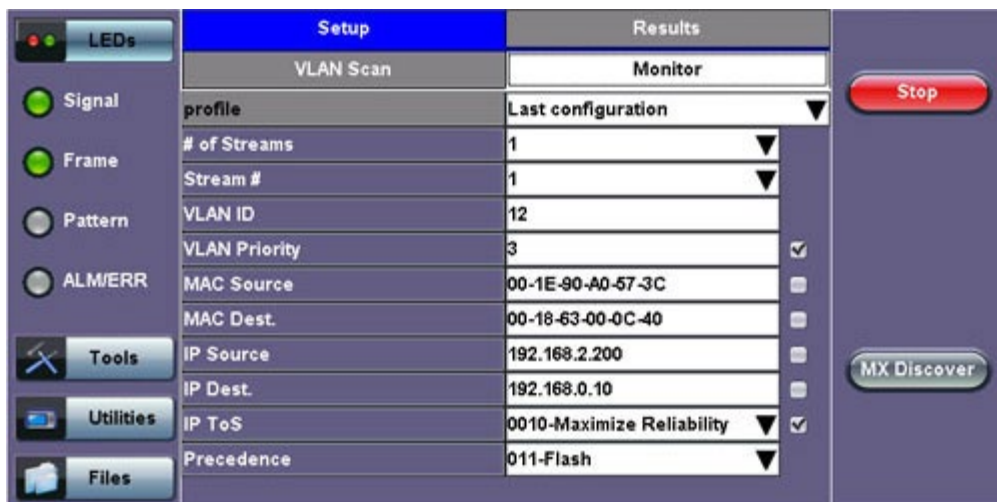

Monitor Setup

LEDs Signal Frame Pattern ALM/ERR Tools Utilities Files	Setup	Results	
	Scan	Monitor	
	Global	Per Stream	
	Aggregate	Events	Stream Summary
	ST:2012-2-28 12:46:45		ET:00:00:57
	RX		
	Line Rate (bps)	1000.000M	
	Utilization (%)	98.00%	
	Utilization (bps)	980.009M	
	Framed Rate (bps)	967.364M	
	Total Frames	4500083	
	Bad Frames	0	
	Pause Frames	0	

Stop

MX Discover

Monitor Global Results

LEDs Signal Frame Pattern ALM/ERR Tools Utilities Files	Setup	Results	
	Scan	Monitor	
	Global	Per Stream	
	Summary	Errors	Alarms
	Stream #	1	
	ST:2012-2-28 12:46:45		ET:00:03:16
	RX		
	Utilization (%)	38.00%	
	Utilization (bps)	379.986M	
	Framed Rate (bps)	375.083M	
	# of Bytes	9187001280	
	Total Frames	6004576	
	Bad Frames	0	

Stop

MX Discover

Monitor Per Stream Results

💡 If no stream information is displayed in the **Per Stream** tab, return to the VLAN ID tab (**Results > Scan > VLAN ID**) and verify that the VLAN ID boxes are checked.

[Go back to top](#) [Go back to TOC](#)

15.12 SyncE

- [Setup](#)
 - [Port Selection](#)
 - [Mode](#)
- [SyncE Wander Measurements](#)
 - [Setup](#)
 - [Results](#)
 - [Built-in TIE, MTIE & TDEV Analysis \(Optional\)](#)
- [ESMC SSM](#)
 - [Setup](#)
 - [Results](#)
 - [Monitor](#)
 - [Capture](#)




[Go back to top](#) [Go back to TOC](#)

15.12.1 SyncE Setup

Port (Test Port selection)

Prior to starting the SyncE operation, the selected test port must be connected to a network that supports SyncE timing synchronization. Port selections include 10/100/1000T and 100/1000BaseX. It is also available on 10GE port. After setting up the port, IP connection is not required for SyncE tests. Please see section [Port Setup](#) for port configuration instructions.

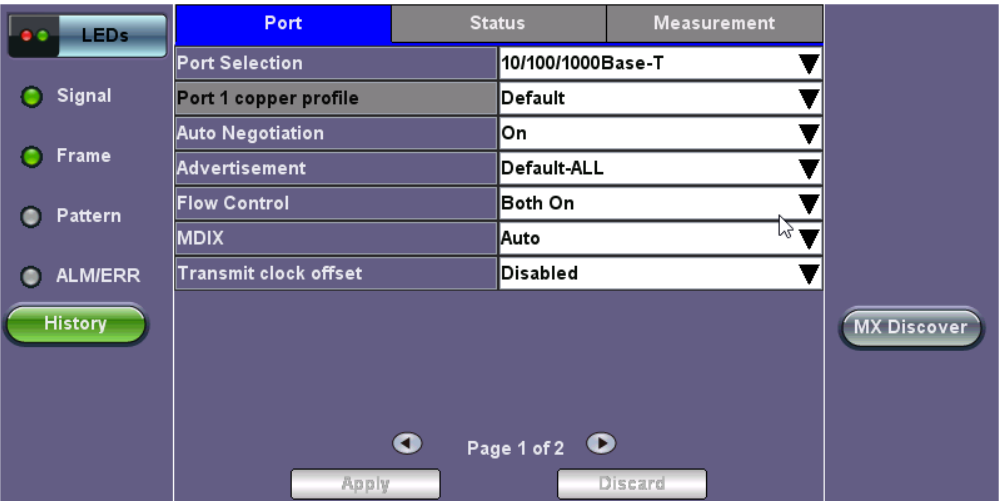

Port Setup

Port Page 2 - Mode Selection

Master and Slave Mode

Master Mode emulates a SyncE Master clock device and slave mode emulates a SyncE Slave clock device. Both modes operate out of the Ethernet test port (10/100/1000BaseT, 100/1000BaseX, or 10GE) and can use an internal or external reference clock.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Port	Status	Measurement
Synchronous Ethernet	Enabled	
Emulation Mode	Master	
TX Clock Source	2Mbps	
Recovered Clock Output	2Mbps	
Framing	Unframed	
Line Code	HDB3	
PRBS Pattern	2^31-1	
Invert	☐	

Page 2 of 2

ApplyDiscard

MX Discover

SyncE Master-Emulation Mode

- **Synchronous Ethernet:** Enabled or Disabled.
- **Emulation Mode:** Select Master or Slave emulation mode. In Master mode, the unit uses the TX Clock Source reference clock to provide SyncE clock on the Ethernet interface (10/100/1000T and 100/1000BaseX or 10GE port). In Slave mode, the unit recovers SyncE clock from the Ethernet interface (10/100/1000T and 100/1000BaseX or 10GE port).
- **TX Clock Source (Master Mode):** Select between an internal or external clock source. This clock is used as a reference clock for SyncE Master operation.
- **Measurement Clock Reference (Slave Mode):** Select between an internal or external clock source. This clock is used as a reference clock for SyncE Master andfor SyncE Slave Wander Measurement.
Possible Internal Clock sources: Internal Clock (+/-3.5ppm accuracy), Internal GPS 1 PPS (Requires GPS option and Antenna), Internal Atomic 1 PPS (Requires High Precision Atomic Clock option).
- Possible external clock sources: 1.5444MHz,1.544Mbps, 2 MHz, 2Mbps (E1 signal), 10MHz, 25MHz, 125MHz or External1 pps. The external clock source is connected to the SMA port on each Test Module. This port is marked CLK on the connector panel.
- **Recovered Clock Output:** The reference clock used by the SyncE master or slave can be regenerated out of the PDH TX port (marked Tx on the connector panel) with a different clock format in order to synchronize other network elements. In Slave mode the Reference Clock Output is the regenerated clock recovered by the SyncE slave.
The clock can be formatted to: 2Mbps (E1 signal), 2MHz, 10MHz, 25MHz, 125MHz, 1PPS and None.
- If 2Mbps clock is selected from Recovered Clock Output, then the following parameters need to be set:
 - **Line Code:** HDB3 or AMI
 - **Framing:** Unframed, PCM31, PCM31C, PCM30, or PCM30C
 - **PRBS Pattern**
 - **Invert**
- **Offset(ns)** (only for 1 PPS Recovered Clock Output)

Press **Apply** once all the parameters are set.

Status

OFF presents the current real time TIE measurements on screen only.
ON sends real time TIE measurements to an attached USB memory. For further post analysis (refer to the [MTIE and TDEV Analysis section](#)). This feature requires the MTIE and TDEV Post Analysis option.

Sampling Rate: When Save TIE to USB is ON, this selection indicates how many samples per second are recorded and stored in the USB memory stick.

Press the **Start** button to run the test. If Save TIE to USB is set to ON, the test set asks for a file name (keep this into account when running time-sensitive tests).

 Do not remove the USB memory stick while the wander test is running.

[Go back to top](#) [Go back to TOC](#)

15.12.2.2 Results

Current TIE: Shows the last Time Interval Error (relative phase error) measured between the reference clock and the test signal.

Max TIE: Records the maximum TIE value measured since the test was started.

Min TIE: Records the minimum TIE value measured since the test was started.

MTIE: Shows the maximum difference between TIE values measured since the test started (Max - Min)


 The wander tests will automatically stop if either of the signals used as reference clock or recovered clock (test signal) have significant levels of impairments, are lost, or disconnected.

Press the **Stop** button to terminate the test. If Save TIE to USB is set to ON, then remove the USB memory stick from the test set, bring it to a computer, and open it with the VeEX Wander Analysis PC software. For further MTIE, TDEV, and masks analysis (refer to the [MTIE and TDEV Analysis section](#)).

Both, Wander Analysis and MTIE / TDEV Post Analysis are optional features.

[Go back to top](#) [Go back to TOC](#)


15.12.2.3 Built-in TIE, MTIE & TDEV Analysis (Optional)

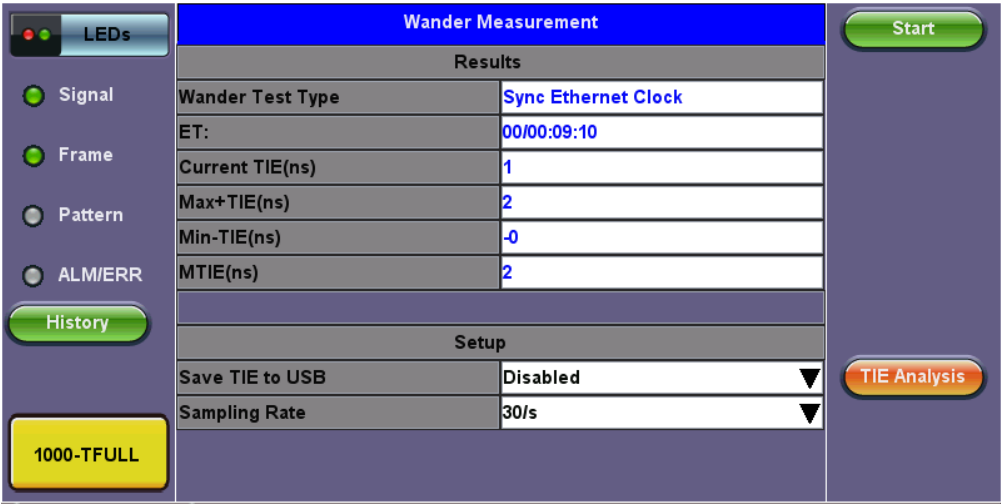

Wander Measurement	
Results	
Wander Test Type	Sync Ethernet Clock
ET:	00/00:09:10
Current TIE(ns)	1
Max+TIE(ns)	2
Min-TIE(ns)	-0
MTIE(ns)	2
Setup	
Save TIE to USB	Disabled
Sampling Rate	30/s

SyncE Wander Measurements with Analysis

Refer to Jitter and Wander > [Built-in MTIE & TDEV Analysis](#) section for more information.

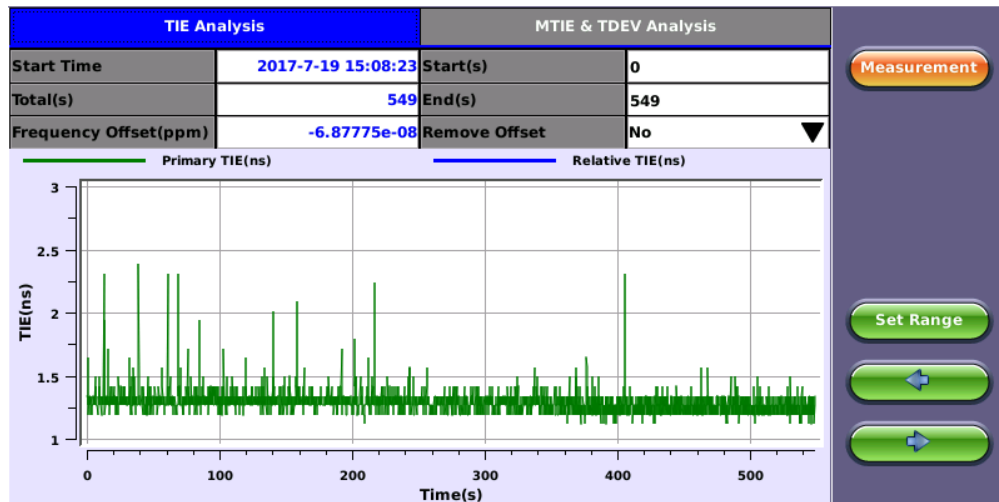

TIE Analysis

[Go back to top](#) [Go back to TOC](#)

15.12.3 ESMC SSM

Overview

Ethernet Synchronization Message Channel (ESMC) Synchronization Status Messages (SSM) are supported by both SDH and Ethernet networks. SDH is supported by the transport overhead channel and is unidirectional; Ethernet is defined as Organization Specific Slow Protocol (OSSP).

SSM represents the quality level of the system clocks located in the network. Background (or heartbeat) is sent once per second as keep alive. ESMC information PDU- event message is sent immediately in case the clock quality level has changed. ESMC event PDU- failure condition is declared if no message is received in 5 seconds.

Octet number	Size	Field
1-6	6 octets	Destination address =01-80-C2-00-00-02
7-12	6 octets	Source address
13-14	2 octets	Slow protocol Ethertype = 88-09
15	1 octet	Slow protocol subtype = 0x0A
16-18	3 octets	ITU-OUI = 00-19-A7
19-20	2 octets	ITU-T subtype
21	4 bits	Version
	1 bit	Event flag
	3 bits	Reserved
22-24	3 octets	Reserved
25-1514	36-1490 octets	Data and padding (see point j)
Last 4	4 octets	Frame check sequence

ESMC PDU Format

Event flag: This bit distinguishes the critical time-sensitive behavior of the ESMC event PDU from the ESMC information PDU. A value of 1 indicates an event PDU and a value of 0 indicates an information PDU.

8 bits	Type: 0x01
16 bits	Length: 00-04
4 bits	0x0 (unused)
4 bits	SSM code

IEEE Assigned OUI and slow protocol subtype

Quality level	Order
QL-PRC	Highest
QL-SSU-A	
QL-SSU-B	
QL-SEC	
QL-DNU	
QL-INVx, QL-FAILED, QL-UNC, QL-NSUPP	Lowest

QL TLV Format

TLV: Type Length Field

QL: Quality Level

Quality level	Order
QL-PRC	Highest
QL-SSU-A	
QL-SSU-B	
QL-SEC	
QL-DNU	
QL-INVx, QL-FAILED, QL-UNC, QL-NSUPP	Lowest

Hierarchy of Quality Levels in Option I of Synchronization Networks

Quality level	Order
QL-PRS	Highest
QL-STU	
QL-ST2	
QL-TNC (Note)	
QL-ST3E (Note)	
QL-ST3	
QL-SMC	
QL-ST4	
QL-PROV (default position)	
QL-DUS	
QL-INVx, QL-FAILED, QL-UNC, QL-NSUPP	Lowest
NOTE – QL-TNC and QL-ST3E are not defined for first generation synchronization networking (refer to clause 5.4.1.2) and QL-PROV was identified as QL-RES.	

Hierarchy of Quality Levels in Option II Synchronization Networks

The SyncE ESMC SSM option has the following features:

- Generates “information” at a programmable interval, IPG, (default 1 sec)
- Generates “event” upon changing the QL-TLV followed by “information”
- Count message types
- Monitor and decode messages on screen
- Capture ESMC/SSM messages and output in pcap file for further off-line protocol analysis

[Go back to top](#) [Go back to TOC](#)

Setup

- **IPG(s)**: Value can be entered by clicking in the box next to it.
- **SSM Code**: Quality Levels

Once the parameters are set, press **Start** to start the test.

ESMC SSM

Setup	Results
IPG (s)	1.0
SSM Code	QL-STU/UNK ▼

[Go back to top](#) [Go back to TOC](#)

Results

The Results screen shows Messages, Protocol Monitor, and Capture.

Message: A list of all the SSM quality levels with the results of the QL selected in Setup next to it.

Message		Protocol Monitor		Capture	
Message	Count	Message	Count		
Total	9	QL-ST2	0		
Event Messages	0	QL-SSU-B	0		
QL-STUI/UNK	9	QL-INV9	0		
QL-PRS	0	QL-EEC2/ST3	0		
QL-PRC	0	QL-EEC1/SEC	0		
QL-INV3	0	QL-SMC	0		
QL-SSU A/TNC	0	QL-ST3E	0		
QL-INV5	0	QL-PROV	0		
QL-INV6	0	QL-DNU/DUS	0		

SyncE ESMC SSM Results- Message

Capture	
Capture Packets	
0	

SyncE ESMC SSM Results- Capture

[Go back to top](#) [Go back to TOC](#)

Monitor

The Tracer shows the messages as they are sent or received. The test set stores up to 2000 messages. Tap on the desired message to view decoded message details.

LEDs	Setup		Results	Stop
	Message		Protocol Monitor	
			Capture	
	Num	Rx/Tx	Message	
Signal	55	TX	QL-STU/UNK	MX Discover
Frame	56	TX	QL-STU/UNK	
Pattern	57	TX	QL-STU/UNK	
ALM/ERR	58	TX	QL-STU/UNK	
History	59	TX	QL-STU/UNK	
	60	TX	QL-STU/UNK	
	61	TX	QL-STU/UNK	
	62	TX	QL-STU/UNK	
	63	TX	QL-STU/UNK	
Page 7 of 8				

SyncE ESMC SSM Results- Protocol Monitor

LEDs	Dest MAC: 01-80-C2-00-00-02 Src MAC: 00-18-63-00-f0-7b Protocol Type: 88-09 Protocol subtype: 0x0A ITU-OUI: 00-19-A7 ITU-I subtype: 0x0000 Version: 1 Event flag: 0 SSM Codes: QL-STU/UNK
Signal	
Frame	
Pattern	
ALM/ERR	
History	
Page 1 of 1	


Message Details

[Go back to top](#) [Go back to TOC](#)

Capture

Press **Start** to Capture Packets. The number of captured packet results is displayed.

To store these results packets, press **Stop**, then press **Save as**. Enter a name for the results file. Press **Apply** to save the file. The file is saved under the Files folder on the unit in pcap format. The file can be later exported to a PC and analyzed using Wireshark. Refer to **File Management** in the **TX300S**, **MTTplus**, **RXT-1200**, or **UX400 platform manuals** for more details on exporting saved results.

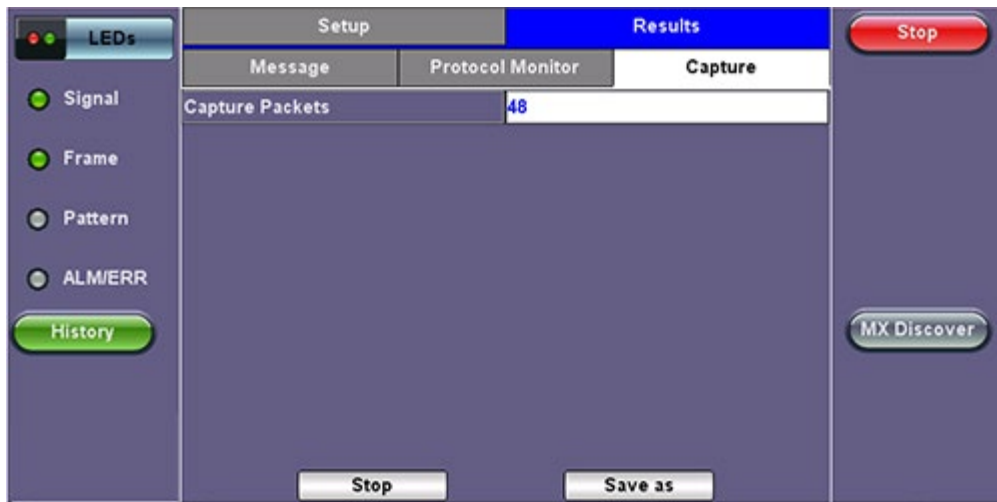

SyncE ESMC SSM Capture



SyncE ESMC SSM Capture Save

[Go back to top](#) [Go back to TOC](#)

15.13 1588v2/PTP



1588v2/PTP Under Advanced Tools

[Go back to top](#) [Go back to TOC](#)

15.13.1 Products Supporting IEEE 1588v2 PTP Testing

- **TX340s**: 1GE, 10GE (References: GNSS, Atomic Clock, External)
- **RXT-3400**: 1GE, 10GE (References: GNSS, Atomic Clock, External)
- **RXT-6200**: 1GE, 10GE (References: GNSS, Atomic Clock, External)
- **MTTplus-340**: 1GE, 10GE (Limited References: GNSS, External)



Information may change from product to product and/or over time due to constant features' evolution.

[Go back to top](#) [Go back to TOC](#)


15.13.1.1 Available Reference Clocks

- External Clock Sources: 1PPS, 1.544 MHz, 2.048 MHz, 10 MHz, 1.544 Mbps, 2.048 Mbps
- Built-in GNSS Receiver (optional): 1PPS (unfiltered)
 - Quad-constellation GNSS Receiver hardware option, supporting GPS L1C/A, GLONASS L1OF, Galileo E1B/C, and BeiDou B1.
 - Quad-constellation Multi-band GNSS Receiver hardware option, supporting GPS L1C/A & L2C, GLONASS L1OF & L2OF, Galileo E1B/C & E5b, BeiDou B1I & B2I.
 - Optional antennas required (depending on the choice of receiver)
- Built-in Atomic Clock (optional): GNSS-disciplined 1PPS, 10 MHz

Optional built-in atomic clock not available for the MTTplus platform.

15.13.1.2 Brief PTP Basics

Precision Time Protocol (PTP) uses a simple process that allows the Slave Clock to calculate the difference in time between the Grandmaster (reference) and the Slave. It is based on the assumption that the link is symmetrical, and the packet delay is the same in both directions of communications, and that it remains fairly constant. The left side shows the simplified process (concept) used to calculate the Offset (error) and correct it.

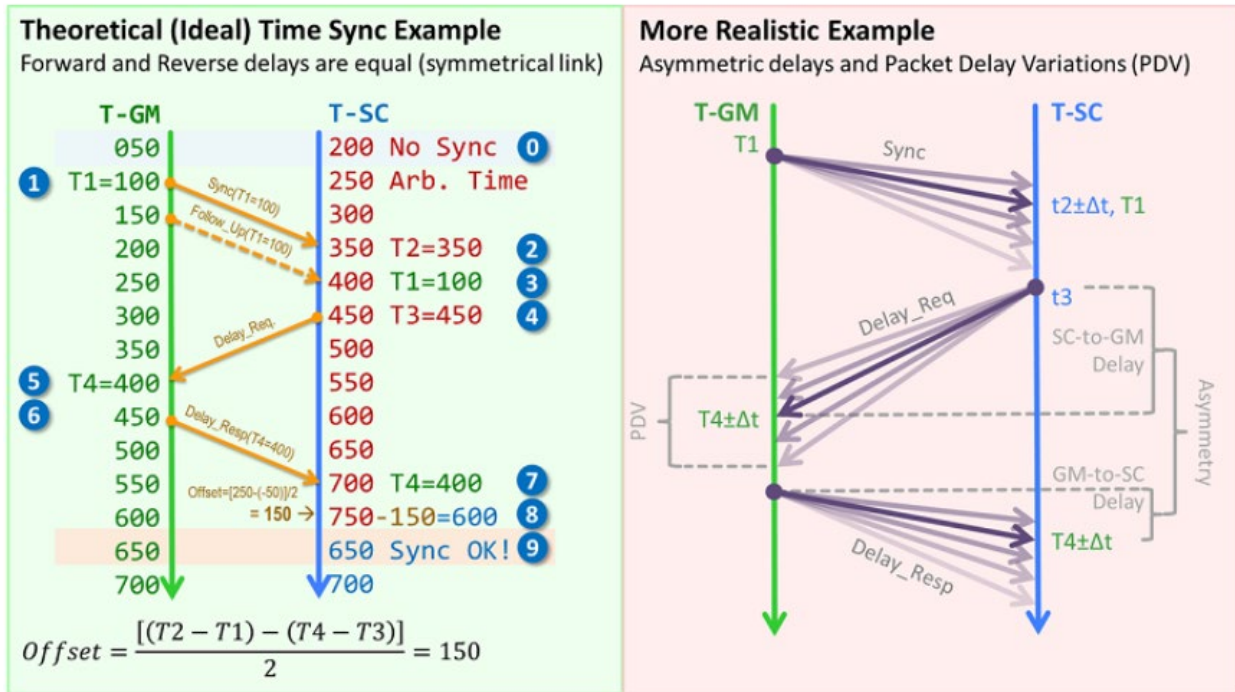

In reality, there are some constant delays and asymmetry caused by the medium, as well as noise generated by active elements (switches, buffers), traffic and temperature changes, among others, that cause packet jitter and PDV, which are a bit more difficult to work with.

T1 is the Sync message departure timestamp, from the GM port. In one-step clocks the timestamp is carried by the Sync Message itself. In two-step clocks the time stamp is carried by a FollowUp message.

T2 is the Sync message arrival timestamp at the test equipment or SC port.

T3 is the DelayRequest departure timestamp, from the test equipment or SC port.

T4 is the DelayRequest arrival timestamp at the GM port. Its value is sent back to the test equipment or SC in the DelayResponse messages.

Offset calculations are used to correct any Time Error at the SC, so it stays in sync with the GM, with the assumption that forward and reverse delays are symmetrical.

$$\text{Offset} = [(T2 - T1) - (T4 - T3)] / 2$$

[Go back to top](#) [Go back to TOC](#)

15.13.1.3 Simultaneous SyncE+PTP Operation

The test set may allow for SyncE and IEEE 1588v2/PTP tests to run concurrently. To configure SyncE operation refer to the SyncE section.


The test set may allow the following tests combinations:

- SyncE Master + IEEE 1588v2/PTP Master mode simultaneous operation.
- SyncE Slave + IEEE 1588v2/PTP Slave mode simultaneous operation.

15.13.2 Configuring the Test Application

15.13.2.1 Launching the IEEE1588v2/PTP Test Feature

- Select an available **Test Port Group**
- Select **SFP+/SFP** or **RJ45** Test Port
- Select the **Ethernet** test mode tab
- Select **1G Ethernet Testing** or **10G Ethernet Testing** feature
- Tap on the **OK** button to launch the test main application and wait for it to load

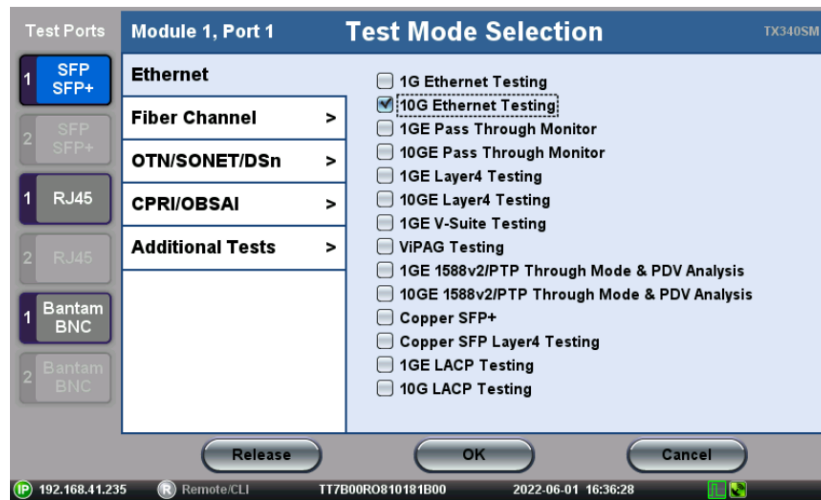


Test Mode Selection

[Go back to top](#) [Go back to TOC](#)

15.13.2.2 Configuring Synchronous Ethernet (SyncE)

If SyncE physical layer synchronization is required, it must be configured first.

- Tap on the **Setup** menu item
- Use the arrow icons to go to **Page 2** and set **Synchronous Ethernet** to **Enabled**

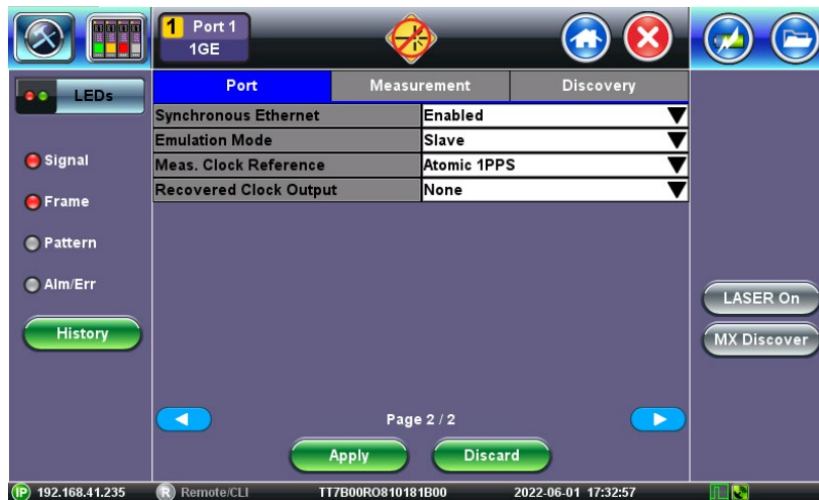

Synchronous Ethernet

- Set the **Emulation Mode** to **Slave** or **Master** (must match the desired PTP emulation)
- Select the desired **Measurement Reference Clock** source, based on the traceable Primary Reference Clocks (PRC) or Primary Reference Time Clocks PRTCs available.
 - If an external precision clock source is available, a one-pulse-per-second **1PPS** is required for Time Error (TE) measurements. Connect the cable from the external clock (PRTC) to the **SMA A** or **1** (Port Group 1) or **SMA B** or **1** (Port Group 2)
 - If no external reference clock sources are available, the use of the **Atomic 1PPS** from the (optional) built-in GNSS-disciplined Atomic Clock 1PPS signal is recommended. For more details on how to configure and [Disciplining the Internal Atomic Clock](#) to provide a precise, accurate and stable timing signal, follow the video link.
 - If the (optional) built-in GNSS receiver is the only traceable clock source available, select **GPS 1PPS**. Note that this includes some short-term noise inherent to GNSS signals and that will affect the Time Error (TE) measurements and calculations. For more details on how to [configure the GNSS Receiver](#) and the required survey process, follow the video link.
 - For information about [Precision timing GNSS Receivers](#), follow the video link.
 - If any other clock format (besides 1PPS) is selected, the test set will work on the Frequency Synchronization only mode (wander and TIE), since no traceable time reference would be available. This applies to 1.544 MHz, 2.048 MHz, 10 MHz, 1.544 Mbps, 2.048 Mbps or any other supported frequency source.
- Set the **Recovered Clock Output** to **None**.
 - Optionally the Recovered Clock Output can be configured to make a copy of the clock available at the Tx1 BNC port. It is mostly used for demonstration and training purposes, but not recommended for testing, due to some added delays. To enable, select the desired clock format and set the related parameters for it.
- Press **Apply** to save the configuration.



Save Configuration

- Connect the test port to the Device Under Test (DUT), Link Under Test or Port Under Test. If it is an optical port, press the **Laser ON** button and confirm the yellow icon on top of the screen.
- Also check for the rectangular yellow status indicator at the bottom-left of the screen to confirm a Layer 2 connection has been successfully established.
- At the Top of the screen, a semi-circular green arrow indicates that the SyncE frequency synchronization has been established.
- Tap on the red round (X) button to exit back to the Main Menu
- Tap on the **Advanced Tools** menu item, then on the **ESMC SSM**, set the **SSM Code** to match the required Clock Quality indication for the test set. If the test set is being driven by a trusted accurate and traceable reference clock signal, it is suggested to set it to **QL-EEC1/SEC**.

Setup	Results
IPG (s)	1.0
SSM Code	QL-EEC1/SEC

- Press **Start** so the test set begins announcing its clock quality status. A table with couther of transmitted and received clock quality messages is displayed. The test set should have successfully established a SyncE link connection.
- Tap on the red round (X) button to exit back to the **Advanced Tools** menu.

15.13.2.3 Configuring PTP Slave Emulation

- In the **Advanced Tools** menu, select **1588v2/PTP**.
- Set **1588v2 Profile** to the required standard profile, from the available list. This will populate the rest of the configuration fields with the appropriate default values. To measure Time Error (TE) in modern telecom time profile, select **G.8275.1**.
 - ITU-T G.8275.1 [Precision Time Protocol \(PTP\) Telecom profile for Phase/Time synchronization with Full Timing Support \(FTS\) from the network](#)
 - ITU-T G.8275.2 [Precision Time Protocol \(PTP\) Telecom profile for Time/Phase synchronization with Partial Timing Support \(PTS\) from the network](#)
 - ITU-T G.8265.1 [Precision Time Protocol \(PTP\) Telecom profile for Frequency synchronization](#)
 - IEEE/IEC 61850-9-3 [Precision Time Protocol \(PTP\) profile for power utility automation](#)
 - IEEE C37.238 [Precision Time Protocol in Power System Applications](#)
 - IEEE 802.1as [PTP profile for LAN/MAN Timing Sensitive Networks](#) (also known as gPTP or IEC 60802)
 - IEEE SMPTE ST 2059-2 [Profile for Use of IEEE-1588 Precision Time Protocol in Professional Broadcast Applications](#)
 - AES67 [AES standard for audio applications of networks - High-performance streaming audio-over-IP interoperability](#)
- Select the **Clock Mode** to emulate the **Slave** (time client) side. If SyncE was previously configured, this field would already be set to match the SyncE settings. Time Error (TE) measurements are only available in Slave emulation mode.
- Enter the **Domain Number** to match the target grandmaster (GM).

The following setting fields are automatically set for most common applications (based on the Profile selected). Nonetheless users can modify them to fit the application, keeping in mind that the test set allows complete flexibility, so knowledge of PTP standards is required.

- Delay Mechanism:** End-to-End (E2E) or Peer-to-Peer (P2P) path delay calculation method.
 - Layer 3 E2E:** End-to-end measurement (Delay_Req, Delay_Resp) over Layer 3 IP (Internet Protocol).
 - Layer 2 P2P:** Peer-to-peer measurement (Pdelay_Req, Pdelay_Resp) over Layer 2 IEEE 802.3 Ethernet links.
- Protocol Mode:** Layer 2, Layer3 IPv4 UDP, or Layer 3 IPv6 UDP protocol encapsulation. For Layer 3 applications, users must configure and establish a valid IP connection through the selected Test Port, using the IP configuration menu.
- Transfer Mode:** If configures as Layer 3, select Unicast or Multicast to match the IPv4 or IPv6 network environment.
- Master IP:** If configured as Layer 3 Unicast, enter the IP address of the Grandmaster.
- VLAN:** OFF (no VLAN) or 1 VLAN tag (ID and Priority).
- Master Clock ID:** Received from the Grandmaster (GM). This field gets automatically populated once the emulation is started.
- Slave Clock ID:** Automatically assigned to the Slave Clock (SC). This field gets populated once the emulation is started.
- GM Clock Class:** Received from the Grandmaster (GM). This field gets automatically populated once the emulation is started. Some examples of clock classes are:
 - 6 T-GM Locked to a PRTC synchronized to PTP/TAI timescale from a PRTC** (for example, traceable to GNSS)

- 7 T-GM in Holdover (previously synchronized to PRTC), within holdover specification
- 13 T-GM locked to an application specific (arbitrary) timescale
- 14 T-GM in Holdover (previously synchronized to an arbitrary timescale reference), within holdover specification
- 135 T-BC in Holdover, within holdover specification
- 140 T-GM in Holdover, out of holdover specification
- 150 T-GM in Holdover, out of holdover specification
- 160 T-GM in Holdover, out of holdover specification
- 165 T-BC in Holdover, out of holdover specification
- 248 T-GM or T-BC Without time reference since start-up
- 255 T-TSC Slave only Ordinary Clock (OC)
 - **Sync Rate:** If configured as Layer 3 Unicast, select the Sync messages rate to match the settings in the Grandmaster.
 - **Announce Interval:** Periodicity of the Announce messages sent by the Slave clock.
 - **DelayReq Rate:** If set to Layer 3 Unicast, set the required DelayRequest messages rate sent by the Slave clock.
 - **Adaptive Negotiations:** If set to Layer 3 Unicast, users can turn it ON or OFF.
 - **OFF** (default) - Uses the configuration set by the user and/or the profile selected.
 - **ON** The test set uses the content from Grandmaster's signaling messages to overwrite local settings. That is, the actual message rates for Sync, Announce, DelayRequest are adjusted to match the Grandmaster's and may be different to what users manually configured. Use this for configuration troubleshooting purposes only, in case connection is not being established.

Example of a Layer 2 configuration screen

Layer 2 configuration

Example of a Layer 3 (IP) Slave configuration screen

Layer 3 configuration

Use the arrow icons to turn to Page 2, to configure the Time Error (TE) measurement parameters. The Measurement Reference Clock must be a traceable 1PPS aligned to the standard second and in sync with the 1PPS being used by the Grandmaster clock.

- **BC-TE Delay Measurement:** Enables or disables the packet-based Time Error measurements and calculations. When turned ON, the following

parameters can be configured by users.

Setup	Clock Settings	Results	Graphs
1588v2 Profile	ITU-T G_8275_1		
BC-TE Delay Measurement	On		
Forward TE1 Threshold	Enable	100	ns
Reverse TE4 Threshold	Enable	100	ns
2Way TE Threshold	Enable	50	ns
Forward Cable delay Compensation	ON	10	ns
Reverse Cable delay Compensation	ON	10	ns
cTE Averaging Window(s)	1000		
TE Filtering(0.1Hz LPF)	Disable		
dTE Filtering(0.1Hz LPF)	Enable		

Page 2 / 2

BC-TE Delay Measurement

- **Forward TE1 Threshold:** If enabled, users can specify the maximum amount allowed for the Forward Time Error. It is the Sync messages timestamp difference from GM (T1) to SC (T2). If the value is greater than the threshold, it gets recorded in the events table. Keep in mind that this threshold is relative to the average total link delay between the GM and SC, so it should be set accordingly. $TE1 = T1 - T2$
- **Reverse TE4 Threshold:** If enabled, users can specify the maximum amount allowed for the Reverse Time Error. It is the DelayReq messages timestamp difference from SC (T3) to GM (T4). If the value is greater than the threshold, it gets recorded in the events table. Keep in mind that this threshold is relative to the average total link delay between the SC and GM, so it should be set accordingly. $TE4 = T4 - T3$
- **2Way TE Threshold:** If enabled, users can specify the maximum amount allowed for the 2Way Time Error calculation. If the value is greater than the threshold, it gets recorded in the events table. $2WayTE = (TE1 + TE4)/2$
- **Forward Cable Delay Compensation:** When testing next to a Grandmaster (GM), Boundary Clock (BC) or Transparent Clock (TC), to verify packet timing accuracy, it may not be possible or practical to make the measurements right at their output ports. Short patch cords (cables) need to be used to connect the test set with the device under test, but those cables introduce a constant delay (4~5 ns/m). Enter the amount of delay introduced by the cable, from GM to the test set, to remove its effect from the calculations and analysis.
- **Reverse Cable Delay Compensation:** When testing next to a Grandmaster (GM), Boundary Clock (BC) or Transparent Clock (TC), to verify packet timing accuracy, it may not be possible or practical to make the measurements right at their output ports. Short patch cords (cables) need to be used to connect the test set with the device under test, but those cables introduce a constant delay (4~5ns/m). Enter the amount of delay introduced by the cable, from test set to the GM, to remove its effect from the calculations and analysis.
- **cTE Averaging Window:** The Mean Time Error, commonly known as Contant Time Error (cTE), is calculated from multiple packet measurements over a period of time (sliding window). The recommended calculation window for controlled environments with constant temperature is 1000 seconds (e.g., labs). For variable temperature environments the standards mention 10000 seconds (e.g., field). The first cTE result will be made available after the first window is completed.
- **TE Filtering (0.1Hz LPF):** When testing Class D equipment (e.g., GM) the standard recommends filtering the Time Error date with a 0.1Hz low-pass filter, before evaluating their performance against the applicable standard masks.
- **dTE Filtering (0.1Hz LPF):** The Dynamic Time Error is the variable component of TE. The data must be filtered by a 0.1Hz low-pass filter, so it is recommended to turn this ON.

TE or Time Error measures the time difference between two clocks, one device under test (DUT) and a reference.

$TE = T_{dut} - T_{ref}$.

Also, TE is considered to have a constant (cTE) and a variable (dTE) components.

$TE = cTE + dTE$

Once the configuration has been finished press the **Start** button to initiate the Slave emulation and packet-based Time Error measurements.

Setup	Clock Settings	Results	Graphs
1588v2 Profile	Default		
Clock Mode	Slave		
Delay Mechanism	E2E		
Protocol Mode	Layer 2		
VLAN	Off		
Master Clock ID	0080eafffe94d7c0		
Slave Clock ID	001863fffe022d58		
GM Clock Class	6		
Announce Int.	1.0 sec		
Domain Number	24		

Page 1 / 2

192.168.41.235 Remote/CLI T17B00R0810181B00 2022-06-02 15:24:56

Time Error Measurement

Go to the **Graphs** tab to see the timing results or select the **Results** tab to see numeric and protocol information.

[Go back to top](#) [Go back to TOC](#)


15.13.3 Configuring PTP Quasi-Slave Emulation



This legacy test mode is no longer recommended. It is not available in SyncE+PTP mode.

Due to network PDV, Packet-based timing signals are not always stationary or Gaussian in nature. Methods of quantifying them, in order to get an estimation of their ability to carry timing information requires selecting a subset of their entire population. This is done by performing packets pre-filtering before MTIE/TDEV clock stability measurement. The Quasi-slave mode uses G.8260 defined filters to pre-select incoming PTP packets in order to measure Slave Wander on filtered packets.

Quasi-slave mode provides an estimation of the achievable performance of a PTP network Slave.

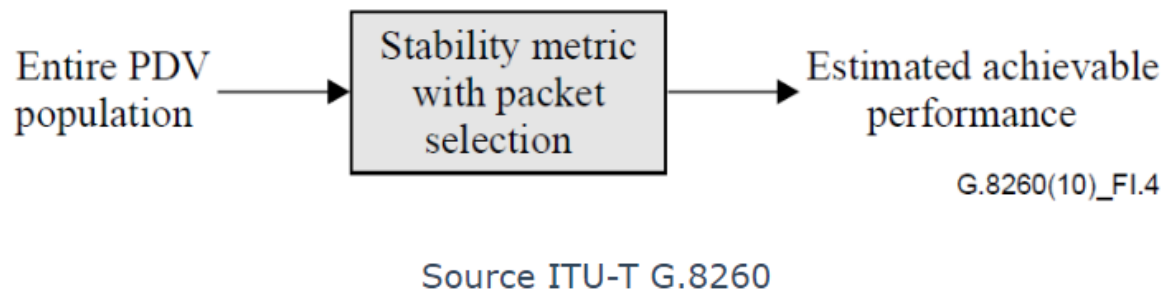

15.13.3.1 Setup

The setup is similar to the **Slave** emulation mode, except that there is a third configuration page to manually set up the filtering method.

15.13.3.2 Quasi-slave mode ITU-T G.8260 filter options

Packet selection filtering is done before performing MTIE/TDEV clock stability measurement. ITU-T G.8260 standard provides filters that are applied on 1588v2/PTP packets.


- **Filter Method:** Minimum, Maximum, and Percentile as defined in ITU-T G.8260
 - **Percentile:** Filtering between configurable Min % and Max % values
 - **Filter Window Selection:** Overlap or Non-Overlap
 - **Filter Window Length:** Configurable from 10 seconds to 7200 seconds. High filter length is recommended for networks with high PDV.

[Go back to top](#) [Go back to TOC](#)

15.13.4 Configuring PTP Master Emulation

Refer to the Slave Emulation section for detailed information. The test set is by no means a true Grandmaster. This functionality is offered for quick SC health check verifications, troubleshooting, experimenting and training purposes.


- In the **Advanced Tools** menu, select **1588v2/PTP**.
- Set **1588v2 Profile** to the required standard profile, from the available list. This will populate the rest of the configuration fields with the appropriate default values. To measure Time Error (TE) in modern telecom time profile, select **G.8275.1**.
 - **ITU-T G.8275.1** [Precision Time Protocol \(PTP\) Telecom profile for Phase/Time synchronization with Full Timing Support \(FTS\) from the network](#)
 - **ITU-T G.8275.2** [Precision Time Protocol \(PTP\) Telecom profile for Time/Phase synchronization with Partial Timing Support \(PTS\) from the network](#)
 - **ITU-T G.8265.1** [Precision Time Protocol \(PTP\) Telecom profile for Frequency synchronization](#)
 - **IEEE/IEC 61850-9-3** [Precision Time Protocol \(PTP\) profile for power utility automation](#)
 - **IEEE C37.238** [Precision Time Protocol in Power System Applications](#)
 - **IEEE 802.1as** [PTP profile for LAN/MAN Timing Sensitive Networks](#) (also known as gPTP or IEC 60802)
 - **IEEE SMPTE ST 2059-2** [Profile for Use of IEEE-1588 Precision Time Protocol in Professional Broadcast Applications](#)
 - **AES67** [AES standard for audio applications of networks - High-performance streaming audio-over-IP interoperability](#)
- Select the **Clock Mode** to emulate the **Master** (time server) side. If SyncE was previously configured, this field would already be set to match the SyncE settings. Time Error (TE) measurements are not available in this emulation mode.

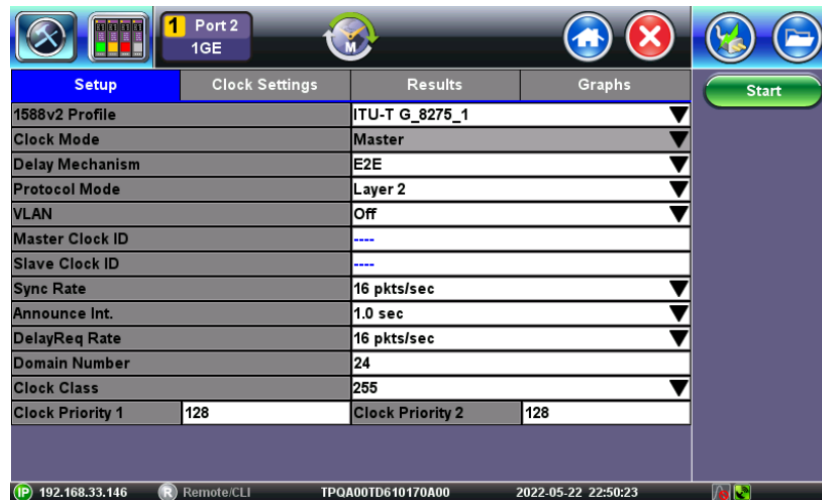

Clock Mode

- **Delay Mechanism:** End-to-End (E2E) or Peer-to-Peer (P2P) path delay calculation method.
 - **Layer 3 E2E:** End-to-end measurement (Delay_Req, Delay_Resp) over Layer 3 IP (Internet Protocol).
 - **Layer 2 P2P:** Peer-to-peer measurement (Pdelay_Req, Pdelay_Resp) over Layer 2 IEEE 802.3 Ethernet links.
- **Protocol Mode:** Layer 2, Layer3 IPv4 UDP, or Layer 3 IPv6 UDP protocol encapsulation. For Layer 3 applications, users must configure and establish a valid IP connection through the selected Test Port, using the IP configuration menu.
- **Transfer Mode:** If configured as Layer 3, select Unicast or Multicast to match the IPv4 or IPv6 network environment.
- **Master IP:** If configured as Layer 3 Unicast, enter the IP address of the Grandmaster.
- **VLAN:** OFF (no VLAN) or 1 VLAN tag (ID and Priority).
- **Master Clock ID:** Automatically assigned to the Grandmaster (GM) emulation function. This field gets automatically populated once the emulation is started.
- **Slave Clock ID:** Received from the Slave Clock (SC). This field gets populated once the emulation is started and the SC is detected.
- **Sync Rate:** If configured as Layer 3 Unicast, select the Sync messages rate to match the settings in the Grandmaster.
- **Announce Inter**
- **DelayReq Rate:** If set to Layer 3 Unicast, set the required DelayRequest messages rate sent by the Slave clock.
- **val:** Periodicity of the Announce messages sent by the Slave clock.
- **Domain Number:** Enter the applicable value to match the target network environment.
- **GM Clock Class:** Enter the applicable clock class for the GM emulation function, based on the timing reference source being used to drive this test set. Some examples of clock classes are:
 - **6 T-GM** Locked to a PRTC synchronized to PTP/TAI timescale from a PRTC (for example, traceable to GNSS)
 - **7 T-GM** in Holdover (previously synchronized to PRTC), within holdover specification
 - **13 T-GM** locked to an application specific (arbitrary) timescale
 - **14 T-GM** in Holdover (previously synchronized to an arbitrary timescale reference), within holdover specification
 - **140 T-GM** in Holdover, out of holdover specification
 - **150 T-GM** in Holdover, out of holdover specification
 - **160 T-GM** in Holdover, out of holdover specification
 - **248 T-GM** without time reference since start-up
- **Clock Priority 1:** Enter the desired clock priority value.
- **Clock Priority 2:** Enter the desired clock priority value.

Once the configuration has been finished press the **Start** button to initiate the Master emulation.

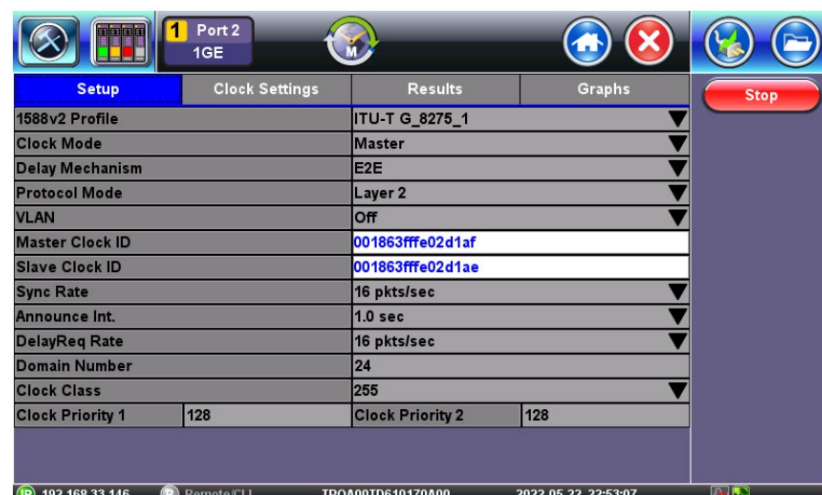

Master emulation

Go to the **Results** tab to see numeric and protocol information.

[Go back to top](#) [Go back to TOC](#)

15.13.5 Measurement Results

15.13.5.1 The Results Tab

15.13.5.1.1 Summary

These two pages show the total count for Events and General messages on Page 1, as well as detailed, lost, errored, out-of-sequence, undefined messages, per individual message on Page 2.

Events (time-critical)	General
<i>Accurate departure and arrival timestamping required, as they affect time distribution accuracy.</i>	<i>No timestamping required</i>
	Announce
	Follow_Up
Sync	Delay_Resp
Delay_Req	pDelay_Resp_Follow_Up
pDelay_Req	Management
pDelay_Resp	Signaling

1588v2 PTP Message Types

15.13.5.1.2 Messages

Displays the current Rate and Count for all the PTP messages that have been sent and received, since the test started.

15.13.5.1.3 Events (Slave only)

Logs events that occurred during the test. The **Clock Events** table shows protocol handshake and the **TE Events** table shows Time Error threshold violation.

Setup	Clock Settings	Results	Graphs	Stop Restart TE LPF ☐ dTE LPF ☐ Rec->USB
Summary	Messages	Protocol Monitor		
Clock	Events			
Clock Events	TE Events			
Time	Event Type	Details		
2022-05-22 22:49:54	Test Started			
2022-05-22 22:50:01	Listening			
2022-05-22 22:52:51	Locked	GM ID:0x0000000000000000, Clock Class:-1		
2022-05-22 22:52:51	GM Probed	GM ID:0x001863fffe02d1af, Clock Class:255		
2022-05-22 23:04:03	Listening			
2022-05-22 23:04:39	Locked	GM ID:0x001863fffe02d1af, Clock Class:255		
2022-05-22 23:04:49	GM Probed	GM ID:0x001863fffe02d1af, Clock Class:6		
2022-05-22 23:07:25	Listening			
2022-05-22 23:07:27	Locked	GM ID:0x001863fffe02d1af, Clock Class:6		

Clock Events

Clock Events		TE Events
Time	TE Event Value (ns)	TE Event Type
2022-06-02 15:19:54	-376.000	Forward
2022-06-02 15:19:54	-376.000	Forward
2022-06-02 15:19:55	-376.000	Forward
2022-06-02 15:19:55	-375.000	Forward
2022-06-02 15:19:55	-357.000	Reverse
2022-06-02 15:19:55	-375.000	Forward
2022-06-02 15:19:55	-366.000	2Way
2022-06-02 15:19:55	-376.000	Forward
2022-06-02 15:19:55	-366.500	2Way



Page 1 / 556




TE Events

[Go back to top](#) [Go back to TOC](#)

15.13.5.1.4 Protocol Monitor (Decoder)


This basic run-time PTP message monitor shows a sampling of the messages being transmitted and received. Users can **Pause** it, use the <- and -> to navigate through the messages currently in the buffer, and tap on the desired line item to see its decoding of its basic PTP information. Then use the red (X) button to return.

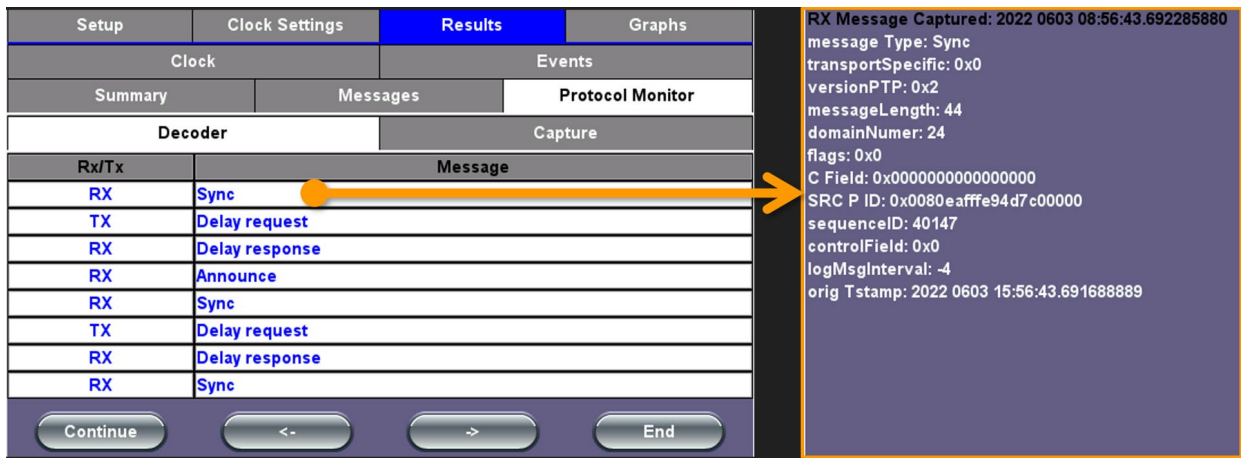

Protocol Monitor (Decoder)

15.13.5.1.5 Protocol Monitor (Capture)

Use this sub-tab to capture PTP messages and save them in standard PCAP format, for further detailed decoding and troubleshooting. Press **Start** to initiate the recording, **Stop** when enough messages have been captured, and **Save** to store the PCAP file in memory.

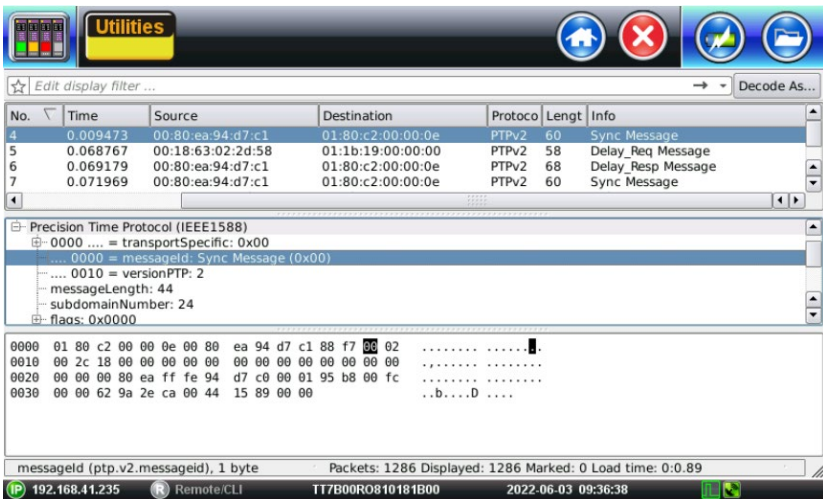

Protocol Monitor (Capture)

The PCAP files will be available in File Manager (>System Utilities >Files >Saved), to view using the built-in Protocol Analyzer (select the desired PCAP file and press **View**) or to export them to USB memory stick for further analysis with PC-based protocol analyzers (e.g., Wireshark).


15.13.5.1.6 Clock (Slave only)

Basic frequency deviation measurement from the recovered clock (compared to the available reference), provided in parts-per-million (ppm), with maximum and minimum values observed.

[Go back to top](#) [Go back to TOC](#)

15.13.6 Graphs (Packet Timing)

Displays different types of packet timing measurements in graphical format for quick visual check and basic trend analysis. For example, to check packet-oriented Time Error (TE), link delays or identify potential asymmetry, among others.

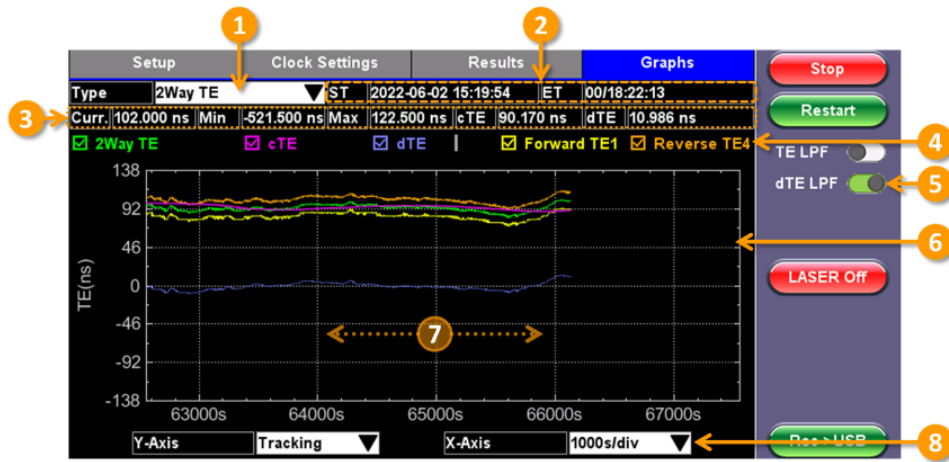

Graphs (Packet Timing)

1. Select the Type of packet timing parameter to display results for: 2Way TE, Forward TE1, Reverse TE4, Sync PDV, Delay Request PDV, Asymmetry PDV, Round Trip PDV, Delay Response RTD, Sync IPG, Delay Response IPG.
2. Displays the Start Time (ST) timestamp with YYYY-MM-DD hh:mm:ss format and the total test time or Elapsed Time (ET) with dd/hh:mm:ss format.
3. Measured values for the selected type, indicating Current (Curr), Minimum (Min) and Maximum (Max) measured values. For time-oriented parameters, the mean time error (cTE) and dynamic Time Error (dTE) calculations are also shown, if a 1PPS clock reference is being used for the measurements and the BC-TE Delay Measurement mode has been enabled.
4. Use the check boxes to select the related graphs to display on the screen, for comparison or correlation purposes. Note that the graph's Y-axis will auto-scale, based on the value ranges of all selected parameters.
5. Indicators of whether the TE and/or dTE data is being filtered with a 0.1Hz low-pass filter.
6. Graph display area. The test set stores and displays the last 10000s (02:46:40) worth of data. Users requiring longer term analysis can use the Record-to-USB function.
7. Users can tap and swipe (drag) the screen to the right, to move the viewing window in time (previous events, within the 10000s recording). Note that there may be a delay in response, since the test set gives the highest priority to all the complex real-time measurements and analysis it is performing simultaneously.
8. X-axis (time) scale selection. The Y-axis is always in tracking mode (auto-scale and auto-centering) to provide the best view possible for the current data.

[Go back to top](#) [Go back to TOC](#)

15.13.7 The Rec->USB Button (Record TE Data to USB Memory Stick)

Pressing this button allow users to select one packet-based Time Error or timing parameter to record in an open CSV format for further analysis (e.g., 2Way TE).

- Insert a FAT32 USB Memory Stick on any USB port available in the test set.
- Press the **Rec->USB** button, select the parameter Type to record, tap on the **FileName**, edit or enter the desired file name, and press **OK** to start the recording.



Rec -> USB

- The recording will take place in the background. Users can continue to navigate through the results.
 - Press the now red **Recording** button to stop the data recording. The CSV file is saved into the USB memory.
- Different products and/or software versions may handle the data recording storage differently. Some versions may not require the additional external USB Memory Stick, instead write directly to the test set's internal storage. For those products, the



resulting CSV file would be located in the File Manager. From there, it can be selected and exported to a USB memory stick by tapping on the **To USB** button.

The resulting CSV file can be analyzed using [VeEX's Wander Analysis PC Software](#) or it can be exported or modified to be analyzed by more advanced third-party analysis tools. The data format is shown below.

```
VeEX Inc.                VePAL TX340S
S/N                      TT7B00R0810181B
SW Version                tx300s-Release-4.0.8
Test Type                 PTP Timing
Reference Clock            ATOMIC 1PPS
Test Signal                2Way TE
Start Time                2022/06/03 10:53:58

Time(s)                  TIE(ns)
0                          95
0.062641                  95
0.125118                  95
0.188591                  95
|                          |
496.061403                 98.5
496.123891                 98.5
End TIE Data
End Time                  2022/06/03 11:02:14
Primary-ET                496 s
Primary-Total Sampling    7939
Primary-Sampling Interval 16/s
```

Resulting CSV File

[Go back to top](#) [Go back to TOC](#)

15.13.8 Stopping and Saving Results (Test Report)

Once finished with the test, press the red **Stop** button to terminate the measurements and protocol emulation. Once stopped, the results (counter, events and graphs) can be saved by pressing the physical **Folder** (Save) button on the test set and enter the desired name. The resulting test report will be available in the File Manager. They can be exported to USB memory in HTML5 (To USB icon) and/or PDF (PDF icon) formats.

The screenshot shows the VeEX interface with the 'Ethernet 1588v2 Test Result' window open. The window has a 'Utilities' header and buttons for 'Show Name', 'Column', 'Show All', and 'Advanced'. The main content area is divided into 'General Information' and 'Table of Contents'. The 'General Information' section includes fields for Date and Time Results Were Saved, Test Platform, Serial Number (platform), Software Version (platform), Test Module, Serial Number (module), and Software Version (module). The 'Table of Contents' section lists '1588v2 Results' and '1588v2 Graphs'. At the bottom of the interface, there is a toolbar with buttons for 'View', 'Del', 'Rename', 'U/L', 'PDF', 'From USB', 'To USB', 'BT', 'Load', and 'Load&Run'. An orange arrow points to the 'To USB' button.


Name	Mode	Test	Port	Date	Type	Lock
☐ SMPTE ST 2059-2+AES67	Ethernet	PTPv2	Fiber	2022-06-02 14:57:25	Profile	
☐ ITU-T G_8275_2	Ethernet	PTPv2	Fiber	2022-06-02 14:57:25	Profile	
☐ ITU-T G_8275_1	Ethernet	PTPv2	Fiber	2022-06-02 14:57:25	Profile	
☐ ITU-T G_8265_1	Ethernet	PTPv2	Fiber	2022-06-02 14:57:25	Profile	
☐ IEEE C37_238	Ethernet	PTPv2	Fiber	2022-06-02 14:57:25	Profile	
☐ IEC 61850-9-3	Ethernet	PTPv2	Fiber	2022-06-02 14:57:25	Profile	
☐ 802_1AS	Ethernet	PTPv2	Fiber	2022-06-02 14:57:25	Profile	
☒ My_PTP_test-20220603_112810	Ethernet	PTPv2	Fiber	2022-06-03 11:28:01	Result	

Page 1 / 3

192.168.41.235 Remote:CLI TT7B00R0810181B00 2022-06-03 11:40:01

192.168.41.235 Remote:CLI TT7B00R0810181B00 2022-06-03 11:38:36

Stopping and Saving Results

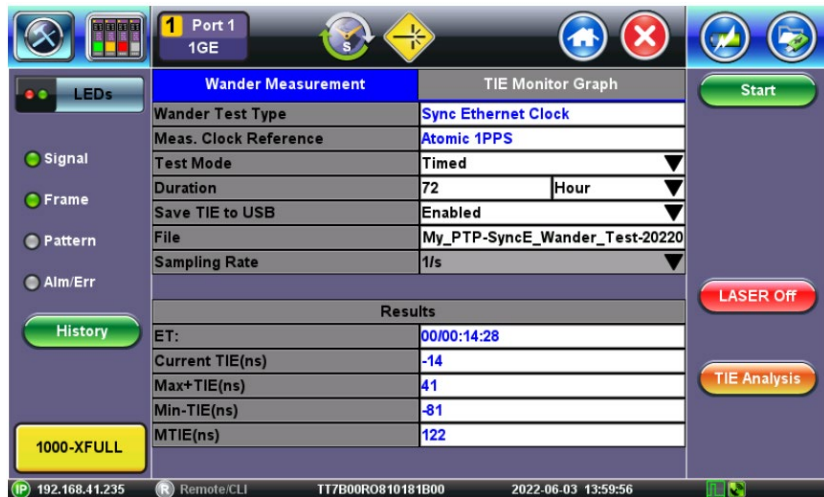

Setup

15.13.11 Results

- **ET**: Elapsed Time or total test time, in DD/hh:mm:ss format.
- **Current TIE (ns)**: Shows the last Time Interval Error (relative phase error) measured between the reference clock and the test signal.
- **Max TIE (ns)**: Records the maximum TIE value observed since the test was started.
- **Min TIE (ns)**: Records the minimum TIE value observed since the test was started.
- **MTIE (ns)**: Shows the maximum difference between TIE values measured since the test started (Max - Min).


The wander tests will automatically stop if either of the signals used as reference clock or recovered clock (test signal) have significant levels of impairments, are lost, or disconnected.

Press the **Stop** button to terminate the test. If Save TIE to USB is set to ON, then remove the USB memory stick from the test set, bring it to a computer, and open it with the VeEX Wander Analysis PC software. For further MTIE, TDEV, and masks analysis (refer to the optional Built-in MTIE & TDEV Analysis feature).

Both Wander Analysis and MTIE/TDEV Post Analysis are optional features.

15.13.12 TIE Monitor Graph

This graph give user a quick view of the last seven minutes of TIE data, to verify that everything is going as expected (configured and connected correctly), before letting the long-term test go for multiple hours or days.

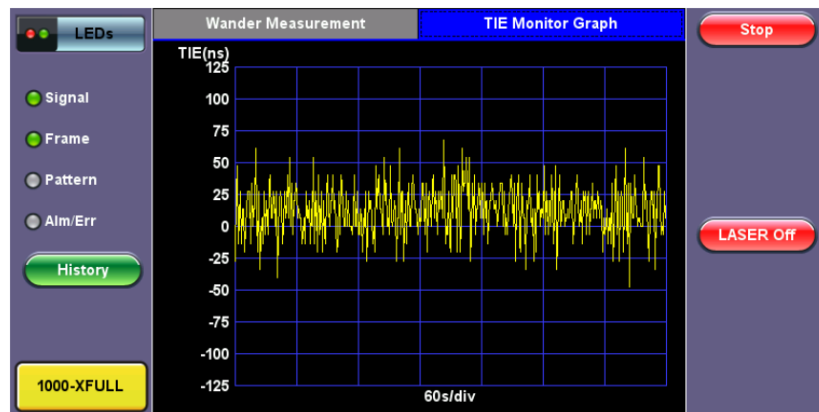

TIE Monitor Graph

[Go back to top](#) [Go back to TOC](#)

15.13.13 MTIE & TDEV Post Analysis


This feature requires the Built-in MTIE/TDEV Wander Analysis license or Wander Analysis Package.

Whether the TE or TIE data were stored in the test set internal memory or external USB memory stick, after stopping the wander measurement, users can press the **TIE Analysis** button to perform post-analysis of the wander data.

15.13.14 TIE Analysis

By default, this screen shows a complete view of all the TIE or TE data captured, so users can visually identify short-term, long-term

stability issues, frequency offset (ramp) and other characteristics.

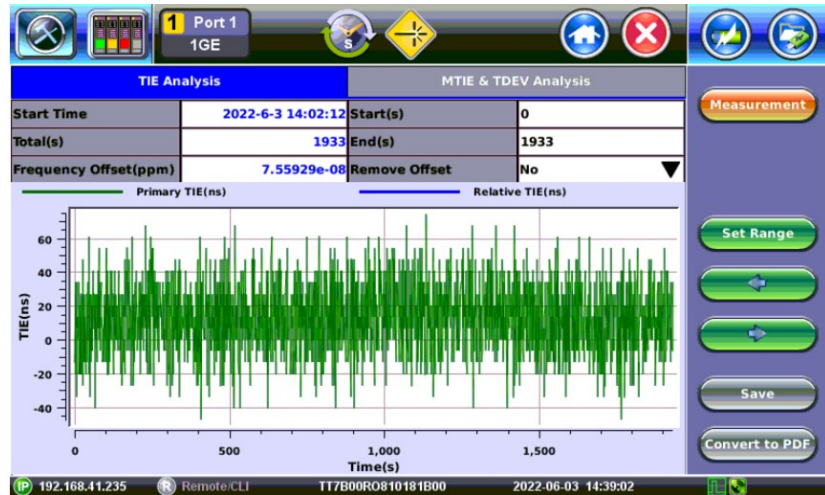


TIE Analysis

- **Start Time:** in YYYY-MM-DD hh:mm:ss format
- **Total (s):** Total measurement time, in seconds
- **Frequency Offset (ppm):** Frequency error calculated from all the samples and presented in parts-per-million. When the frequency of the recovered clock is accurate (compared to the reference clock), the graph has a flat horizontal trend.
- **Start (s):** Marks the beginning of the data presented on the graph. Users can change this value, to focus (zoom in) on specific areas of the sampled data, by entering the desired number (in seconds) on this field and pressing the **Set Range** button.
- **End (s):** Marks the end of the data presented on the graph. Users can change this value, to focus (zoom in) on specific areas of the sampled data, by entering the desired number (in seconds) on this field and pressing the **Set Range** button.
- **Remove Offset:** No, Yes. Users may select to mathematically remove the effects of constant frequency offset from the data, to obtain Relative TIE.
- **Marker:** Tapping on the graph brings up the red crosshair markers. Users can tap on different areas of the graph to bring up specific datapoints. Use the < and > buttons to fine-tuning the marker position, sample by sample.

[Go back to top](#) [Go back to TOC](#)

15.13.15 MTIE & TDEV Analysis

Performs MTIE and/or TDEV analysis on the selected TIE or TE data range, and compares it against standard masks, providing PASS or FAIL verdicts.

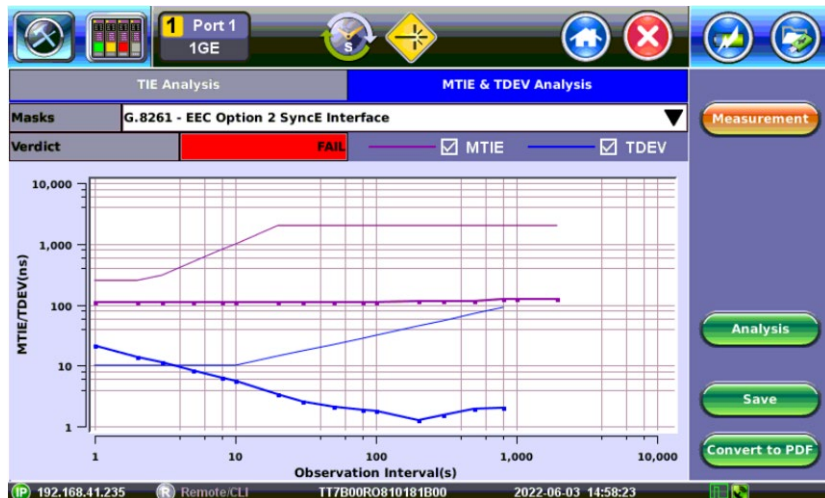

MTIE & TDEV Analysis

The **Save** button generates a CSV file with MTIE and/or TDEV datapoints (including the masks) and saves it in the USB memory stick (same folder as the raw TIE data), so users can recreate the graph with a spreadsheet program.

The **Convert to PDF** button generates a simple report (text and graphs) and saves it in the USB memory stick (same folder as the raw TIE data), so users can immediately share it, without requiring any external PC software. Nonetheless, for better presentation, the VeEX [Wander Analysis PC Software](#) is recommended. For more details about the post-processing software, follow the [link](#).

The VeEX Wander Analysis PC Software offers more detailed analysis, reports, exports, and access to more standard masks.

Use the **Measurement** button to return to the **Wander Measurement** screen.

[Go back to top](#) [Go back to TOC](#)

15.14 PDV Analysis

Refer to [PDV Analysis](#) in **1588v2/PTP Through Mode & PDV Analysis** chapter for more information.

[Go back to top](#) [Go back to TOC](#)


15.15 Packet Capture

15.15.1 Packet Capture Setup


The packet capture function can be used to capture packets to Ethernet test ports. The packet capture format is compatible with Wireshark and can be viewed on a PC.

Configure the following **Capture Mode** parameters:


- **Profile:** Drop-down selections are Default, Delete, Save, Save As...
- **Mode:** Automatic. Packet capture is automatically started when pressing the **CAP ON** function key.
- **Buffer Size:** Defines the size of the storage allocated to packet capture.
- **Truncate:** Captures the whole frame or first number of bytes of that frame.

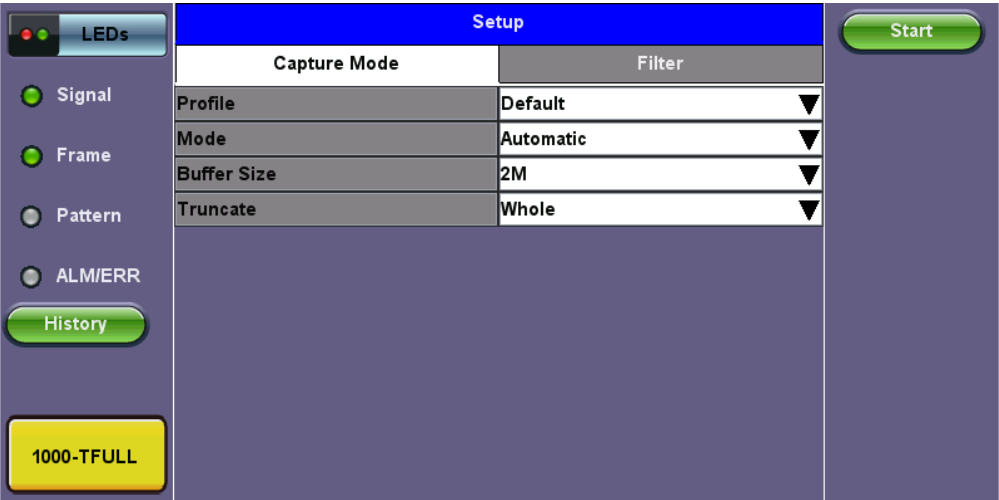

Capture Mode Setup

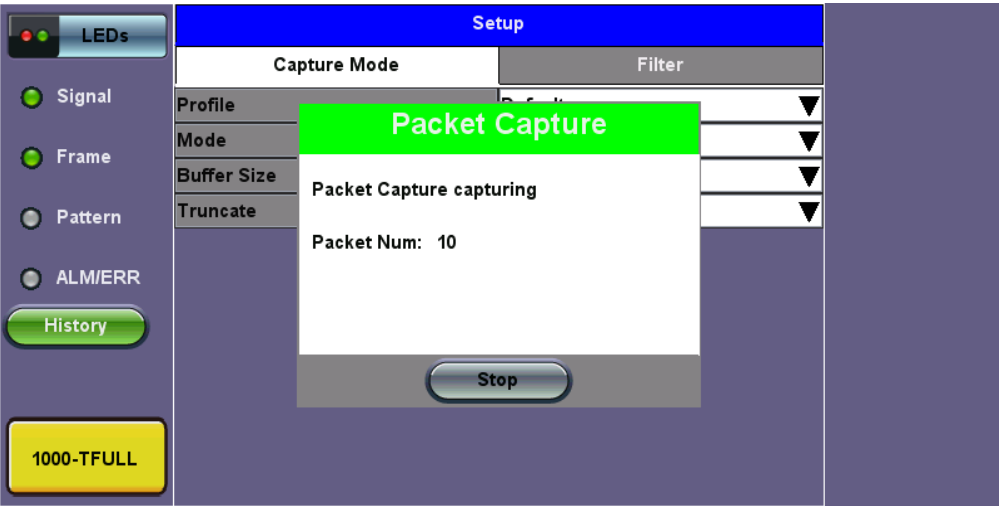

Packet Capture In Progress

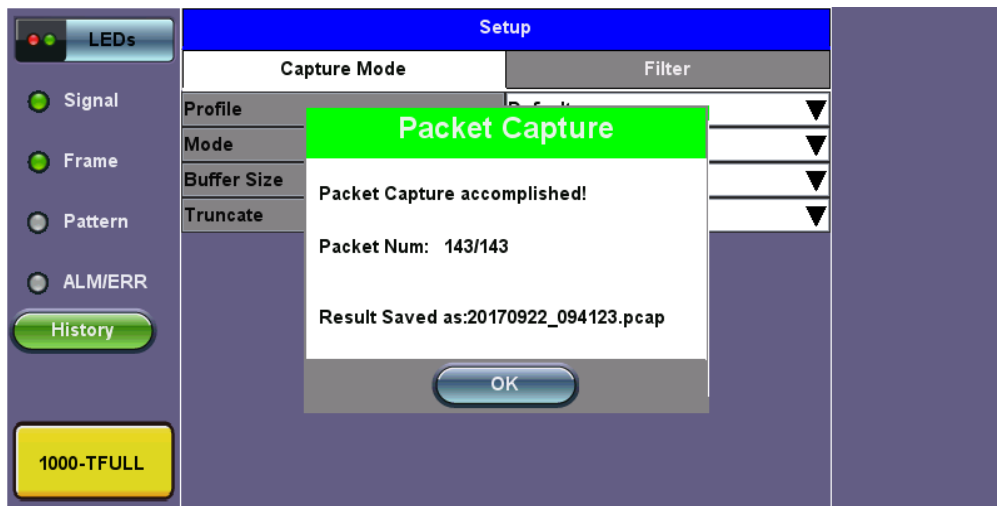

Packet Capture Save

Select from the following Filter options:

MAC and IP Mode

- **Disable:** All IP packets to and from the unit are captured
- **MAC and IP:** Only traffic frames matching the MAC and IP source and destination addresses are captured
- **UDP and TCP:** Only TCP, Only UDP or both TCP/UDP are captured

Press the green **Start** button to begin packet capture. A display message shows the number of packets being captured.

[Go back to top](#) [Go back to TOC](#)


15.15.2 Packet Capture Results

To finish packet capture and manage packet capture results, press **Stop**.

To save result packets and view results, tap **YES** when asked to view results. Results are saved in PCAP format and are automatically named. Wire shark will launch afterwards and display the results.

The file is stored in the Files folder. It can be viewed on the test set or exported and analyzed on PC Wireshark. Refer to **File Management** in the **TX300S**, **MTTplus**, **RXT-1200**, or **UX400 platform manuals** for instructions on viewing and exporting files.

The Packet Capture results screen is divided into three parts with all details of the capture. The size of each part can be manually adjusted.

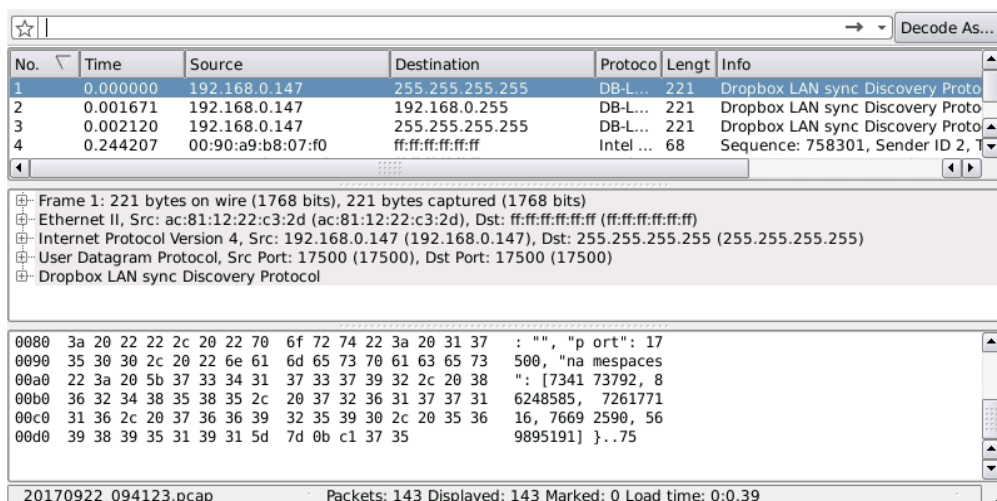

Packet Capture Results on Wireshark

Top section:

- Time
- Source
- Destination
- Protocol
- Length
- Info

Middle and Lower Sections:


- Frame details
- Ethernet frame details

[Go back to top](#) [Go back to TOC](#)

15.16 IPTV

The IPTV application performs IPTV testing in a Triple Play network. The feature supports:

- Codecs: MPEG2, MPEG4 (Part 2), and MPEG4 Part 10 (H.264)
- Probe function with streams auto-detection
- Real time TV channel viewer to confirm proper channel configuration
 - MOS_Video
 - MOS_Audio
 - TR 101 290 Metrics

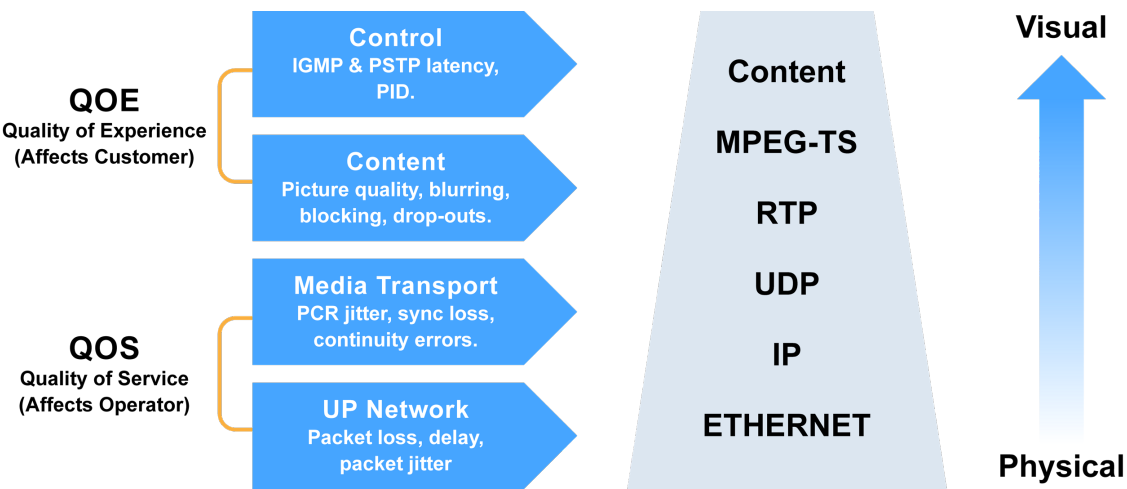

Physical Layer and Protocol Stack Troubleshooting Concept

15.16.1 IPTV Setup

The IPTV channel table can be configured manually on the test set using the Editor function. Alternatively, the IPTV channel table can be created using the ReVeal LX software, which can subsequently be downloaded onto the test set.

Press the **Load Table** button in the right side toolbar to load existing channel tables and addresses:

- **Table:** Select the IPTV channel table to test. The IPTV channel table can be configured manually on the test set using the **Editor** function. Alternatively, the IPTV channel table can be created using the ReVeal LX software which can subsequently be downloaded onto the test set.
- **Channel #:** Select and configure the channel to be analyzed. The channel can be in IP address or URL format.

Setup	Analysis	Scan	Viewer
Editor		Probe	
Type	IPv4 Unicast		
URL1		Port1	
Control	NONE		

Start

Load Table

IPTV Setup - Editor Tab

To manually configure the test set using the **Editor** function, fill out the following parameters:

- **Profile:** Selections are Default, Delete, Save, Save As...

- **Type:** IPv4 Unicast or IPv4 Multicast
- **URL:** Enter the IP address using the pop-up keypad
- **Port:** Enter the port number
- **Dir:** NONE
- **Control:** NONE
- **Transport:** Auto
- **Codec:** Auto
- **MPEG:** TS ISO

Once configurations are completed, press the **Start** key to begin.

Channel Name	Channel Address
chan 1	192.168.0.103:1234

IPTV Setup - Probe

Probe

The Probe function is a packet sniffer. It detects all incoming unicast or multicast traffic to the test port and displays the channel name and address.

- Use the probe function to detect streams received by the test set. The streams can be saved as a channel table.
- The probe function is available for use prior to any configuration. Note that the probe function does not send IGMP join requests, the streams need to be already established by the STB prior to using this function.

[Go back to top](#) [Go back to TOC](#)

15.16.2 IPTV Analysis

IPTV-TS Summary		Streams Summary		Details	
Total BW	0.763 Mbps	Stream #	1		
Actual Programs	1	Other Programs	0	Transport Errors	6451
Type	PID Count	BW	BW(%)	Pkt Count	
Total	3	781.562 kbps	100	82073	
Video	1	770.212 kbps	98.548	80881	
Audio	0	0 bps	0.000	0	
Tables	2	11.350 kbps	1.452	1192	
Others	0	0	0	0	

IPTV Analysis - IPTV TS Summary

IPTV-TS Summary

The following information pertaining to content on the MPEG-2 Transport Stream (TS) is included in the summary.

Select a stream from **Stream #** to view stream measurements:

- Total Bandwidth, # of **Actual Programs**, **Other Programs**, **Transport Errors**.
- Total **PID Count** (Packet Identifier), **BW** (Bandwidth), **BW(%)**, and **Pkt Count** (Packet Count), for Video, Audio, Tables and Others



IPTV Stream Analysis

Up to three streams can be analyzed, and the bandwidth associated with the whole TS is displayed. Video streams typically consume more bandwidth than audio streams, which in turn use more bandwidth than data streams. In this manual, MPEG-2 refers to the video transport stream defined in IEC13818 standard and not any compression technology used in the payload or transport packet. The MPEG-2 Transport stream contains seven packets of 188 bytes each of which transports either the MPEG-2, MPEG-4, or VC-1 encoded video.

Setup

Analysis

Scan

Viewer

IPTV-TS Summary

Streams Summary

Details

Total BW

0.606 Mbps

Stream #

1

St	PID	Type	Program	BW	BW(%)	Status	Pkt Count
PAT	0	PSI	1	4.557 kbps	0.735	OK	620
PMT	66	PSI	1	4.557 kbps	0.735	OK	620
VIDEO	68	ES	1	611.000 kbps	98.530	OK	83123
AUDIO	0	ES	1	0 bps	0.000	OK	0

Stop

IPTV Analysis - Stream Summary

Streams Summary

The following information is included in the summary:

- **Str:** Indicates stream number.
- **PID:** Packet Identifier is a unique channel address identifier. PID enables identification and reconstruction of the program and is used in conjunction with the Program Service Identifier (PSI) packets. The decoder uses the PID and PSI to identify the Program Association Tables (PAT).
- **PAT:** PAT contains Program Map Tables (PMT) that point the decoder to the packets associated with the channel or program, such as video, audio and data content in the transport stream. PAT always appears in PID 0x0000.
- **PMT:** Identifies elementary streams in program, and gives their PIDs.
- **Type:** Payload description.
- **Program**
- **BW:** Bandwidth (kb/s).
- **BW(%)**: Bandwidth percentage.
- **Status**
- **Pkt Count:** Packet count.

Setup	Analysis	Scan	Viewer
IPTV-TS Summary		Streams Summary	Details
Total BW	0.911 Mbps	Stream #	1 ▼
PID Map	Video	Audio	ETR 290
Program #	1 ▼	SD	
	PID	Description	
PAT	0	Program Association Table	
PMT	66	Program Map Table	
Video	68	ISO 13818-2 Video	
Audio	0		
CAT	1	Conditional Access Table	
NIT	16	Network Information Table	

IPTV Analysis - Details - PID Map

[Go back to top](#) [Go back to TOC](#)

Details: PID Map

- **Stream #:** Select a stream to view.
- **Program #:** Select the program number to view.
- Statistics for each program are provided including video compression (SD or HD).
 - **PAT:** Program Association Table. Always appears in PID 0x0000. Identifies MPEG-2 programs and gives PIDs for the PMT, Video, and Audio.
 - **PMT:** Program Map Table. Identifies elementary streams in the program and gives their PIDs.
 - **CAT:** Conditional Access Table.
 - **NIT:** Network Information Table.

Reconstructing a program from all its video, audio, & table components requires that the PID assignment is done correctly. Check consistency between PSI table contents and the associated video and audio streams. This is one of the main testing issues in MPEG.

Verify that PAT always appears in PID 0x00. It identifies MPEG-2 programs and gives PIDs for the PMT, Video, and Audio.

MPEG-2 Transport Stream (TS)

A Packetized Elementary Stream (PES) is a continuous traffic stream of 188-byte packets carrying the digital signal. Since single/multiple programs can be carried per stream, a reference point from which the STB can synchronize and start the actual decoding must be provided. Each 188-byte packet consists of a 4-byte header containing this reference point, which is a PAT table and a PID value equal to 0. The Packet Identifier (PID) contained within the 4-byte header, is a unique channel address identifier allowing identification and reconstruction of the program. The PID is used in conjunction with the Program Service Identifier (PSI) to identify Program Association Tables (PAT), which in turn hold Program Map Tables (PMT). The PAT table is also the table containing all program information ensuring the consumer receives updated program changes. The PAT table lists all the programs in the transport stream and associates each program with another PID that holds a Program Map Table (PMT) as its payload. PMT lists the video, audio and eventual encryption information. The Payload Structure Identifier (PSI) table needs to be consistent with the PID table. PAT and PMT are inserted into the stream so that the decoder performs correctly. These two items should always be present.

[Go back to top](#) [Go back to TOC](#)

Setup	Analysis			Viewer
IPTV-TS Summary		Streams Summary		Details
PID Map	Video		Audio	ETR 290
	Min	Max	Avg	Below Threshold(%)
Absolute MOS_V	1.00	1.00	1.00	0.000
Relative MOS_V	1.32	1.63	1.57	0.000
MOS_AV	1.75	1.75	1.75	0.000
VSTQ	50.00			
EPSNR	21.73dB			
EPSNR ATIS	42.56dB			

Stop

◀

Page 1 of 4

▶

IPTV Analysis - Details - Video (Page 1)

Details: Video (Page 1)

The following detailed statistics are reported:

- **Absolute MOS-V:** Considers image resolution, frame rate, codec and compression level, transmission impairments, frame loss concealment.
- **Relative MOS-V:** A MOS score relative to the ideal for the particular codec and image resolution in use.
- **MOS-AV:** 1 to 5 score that considers picture & audio quality and the audio-video synchronization on the overall user experience.
- **VSTQ:** Video Service Transmission Quality, a 0-50 codec-independent score (50 being best) measuring the ability of the IP network to carry video reliably.
- **EPSNR:** Estimated Peak Signal to Noise Ratio expressed in dB. This is an estimate of the distortion that has occurred between the source video stream and the output video stream.
- **EPSNR ATIS:** Estimated Peak Signal to Noise Ratio (PSNR) calculated according to ATIS specifications (ATIS-0800021).

Relative and Absolute MOS

- MOS scores range from 1 to 5, with 1 considered "Unacceptable" and 5 "Excellent."
- **Relative MOS-V** is an estimated perceptual quality score that considers the effects of codec/quantization level, the impact of IP impairments (e.g., packet loss) on the GoP structure and video content, and the effectiveness of loss concealment.
- **Absolute MOS-V** is an estimated perceptual quality score that considers all the above mentioned factors as well as image resolution, frame rate, and the use of progressive vs. interlaced scanning
- Because it is independent of image resolution/frame rate, the Relative MOS-V score helps provide an indication of video quality relative to the ideal for a given video format.
- Example: An IPTV service provider offers 480i SD, 720p HD, and 1080p HD broadcasts. Assuming unimpaired conditions, the services might receive the following scores (values provided for example only):
- Absolute MOS-V: 480i = 4.0, 720p = 4.3, 1080p = 4.7
- Relative MOS-V: 480i = 4.5, 720p = 4.5, 1080p = 4.5

VSTQ and EPSNR

- **VSTQ (Video Service Transmission Quality):** A 0-50 codec-independent score that measures the ability of the IP network to carry reliable video; packet transport metrics (packets received/discarded/duplicate/out-of sequence, along with burst and gap statistics); packet jitter metrics, FEC (Forward Error Correction) and Reliable UDP metrics; and MPEG-2 Transport Stream (ETSI TR 101 290) metrics.
- **EPSNR (Estimated Peak Signal-to-Noise Ratio):** This is an objective measurement of video service quality comparing the maximum power of the video signal to the power of corrupting noise affecting the signal. Generally, a PSNR of under 20dB is regarded as unwatchable, and this level is reached for MPEG video with a loss rate under 1 percent.



IPTV Network Performance

Due to the real-time nature of IPTV, MPEG-2 is transported over UDP (IPv4/UDP), hence retransmission or reordering of packets is not intended. Video quality is largely determined by network performance parameters, including Packet loss, Packet jitter and IGMP latency.

Details: Video (Page 2)

Using H.264 video compression, the picture can be segmented into sequences of macroblocks called slices. The encoder can choose the prediction style distinctly on each individual slice (SI & SP frames).

- Identifies **I, P, and B frames** in unscrambled and encrypted video streams
- Bandwidth used by I, P, B, SI & SP video frames is analyzed to estimate the quantization level applied by the video encoder
- **Average Bandwidth** Mean video bandwidth excluding IP overhead, FEC, & retransmissions
- **Max. Bandwidth**: Peak video bandwidth excluding IP overhead, FEC, & retransmissions
- **SI-frames/slices**: Facilitates switching between coded streams; contains SI macroblocks (a special type of intra coded macroblock). (H.264 codec only)
- **SP-frames/slices**: Facilitates switching between coded streams; contains P and/or I macroblocks (H.264 codec only)

Details: Video (Page 3)

Detailed statistics for **I, P, B, SI, SP frame types**:

- Number of received frames (**Rcvd**) and proportion of each frame type impaired by packet loss and discard are reported
- Helps determine which GoP type and length should be used to obtain the best performance from the video service
- I/P/B/SI/SP Frames **Impaired**: proportion of applicable frames impaired by packet loss/discard

Details: Video (Page 4)

- To form an accurate assessment of quality of experience, it is necessary to know not only the overall rates of packet lost or discarded, but also which frame types were affected
- MPEG Explorer reports detailed statistics for each frame type, including the number of received, lost, and discarded I, B, and P and SI, SP frames (SI and SP available used for H.264 codec only) and the proportion of each frame type impaired by packet loss and discard
- These metrics can be useful for troubleshooting and can help determine which GoP type and length should be used to obtain the best performance from the video service
- **Packets Discarded**: Number of packets discarded by the jitter buffer due to late arrival

Setup		Analysis		Viewer	
IPTV-TS Summary		Streams Summary		Details	
PID Map		Video		Audio	
		Min	Max	Avg	ETR 290
MOS_A		4.75	4.77	4.77	Below Threshold(%)
					0.000
Avg Audio Bandwidth			156.181 kbps		
Peak Audio Bandwidth			156.181 kbps		

IPTV Analysis - Audio

[Go back to top](#) [Go back to TOC](#)

IPTV Analysis: Audio

- **MOS-A**: Audio MOS, a 1-5 score that considers the effects of the audio codec, bit rate, sample rate, and packet loss on listening quality

<i>User Opinion</i>	<i>R Factor</i>	<i>MOS (ITU Scaled)</i>
<i>Maximum Obtainable For G.711</i>	<i>93</i>	<i>4.4</i>
<i>Very Satisfied</i>	<i>90-100</i>	<i>4.3-5.0</i>
<i>Satisfied</i>	<i>80-90</i>	<i>4.0-4.3</i>
<i>Some Users Satisfied</i>	<i>70-80</i>	<i>3.6-4.0</i>
<i>Many Users Satisfied</i>	<i>60-70</i>	<i>3.1-3.6</i>
<i>Nearly All Users Dissatisfied</i>	<i>50-60</i>	<i>2.6-3.1</i>
<i>Not Recommended</i>	<i>0-50</i>	<i>1.0-2.6</i>

VoIP MOS and R-Factor Ratings

[Go back to top](#) [Go back to TOC](#)

Setup	Analysis		Viewer
IPTV-TS Summary	Streams Summary		Details
PID Map	Video	Audio	ETR 290
Sync Loss	0	Transport	0
Sync Byte	0	CRC	0
PAT	0	PCR Discontinuity	0
PAT2	0	PCR Accuracy	0
Continuity	0	PTS	0
PMT	0	PID	0
PMT2	0		

IPTV Analysis - ETR 290

IPTV Analysis - ETR 290


- The table summarizes the TR 101-290 MPEG Stream evaluation parameters.
- First priority parameters are necessary for decodability:
 - **Sync loss, sync byte error, PAT/PAT2 error, Continuity error, PMT/PMT2 error, PID error.**
- Second priority parameters are recommended for continuous or periodic monitoring:
 - **Transport error, CRC error, PCR discontinuity, PCR accuracy error.**
- **Sync Loss:** Loss of synchronization at the MPEG transport layer.
- **Sync byte:** Invalid MPEG transport sync byte (sync byte not equal to 0x47).
- **PAT:** Program association table error count (PID 0x0000 does not occur at least every 0.5 s or a PID 0x0000 does not contain a table_id 0x00 (i.e. a PAT) or Scrambling_control_field is not 00 for PID 0x0000.
- **PAT 2:** PAT2 Error count. Same as PAT error but refers to the possibility that the Program Association Table may consist of several (consecutive) sections with the same table_id 0x00.
- **Continuity:** Incorrect packet order, duplicate packet or lost packet.
- **PMT:** Program map table error count. Sections with table_id 0x02, (i. e. a PMT), do not occur at least every 0,5 s on the PID which is referred to in the PAT or Scrambling_control_field is not 00 for all PIDs containing sections with table_id 0x02 (i.e. a PMT).
- **PMT 2:** Same as PMT error but refers to the possibility that the Program Map Table may consist of several (consecutive) sections with the same table_id.
- **Transport:** Transport error count. The transport error indicator in the MPEG TS header is set to 1.
- **CRC:** CRC error count. A CRC error occurred in one of the program tables.
- **PCR discontinuity:** Difference between 2 consecutive PCR values is over 100ms without discontinuity bit set.
- **PCR accuracy:** PCR accuracy error count PCR accuracy of selected programm is not within 500 ns
- **PTS:** Interval between presentation timestamps is more than 700ms.
- **PID:** Process identifier error count. It is checked whether there exists a data stream for each PID that occurs. This error might occur where TS are multiplexed, or demultiplexed and again remultiplexed.



Program Clock Reference (PCR)

MPEG TS normally contain a built-in timing packet known as the Program Clock Reference (PCR). Recovering the 27MHz clock at the decoder end of the transmission system is necessary to re-create the video signal. The PCR values need to be correct at the signal origin and should not be distorted along the transmission path to a point where decoding the compressed signal becomes problematic. Measuring the interval between the arrival of PCR values, the accuracy of the expected values and also the jitter accumulated on those PCR values transmitted is necessary to assure that streams can be decoded. PCR Jitter is a good indication of timing distortions due to poor encoding. Excessive PCR Jitter results in visual impairments, such as frame freezes, color loss and pixelization. The amount of PCR Jitter that is considered excessive varies, and depends on various factors, including STB buffer sizes and software architecture. However, in today's packetized video networks, PCR Jitter should not exceed 10ms. If PCR Jitter is not constant, then a momentary problem from inserting local programming may be the cause.

IPTV Program Information

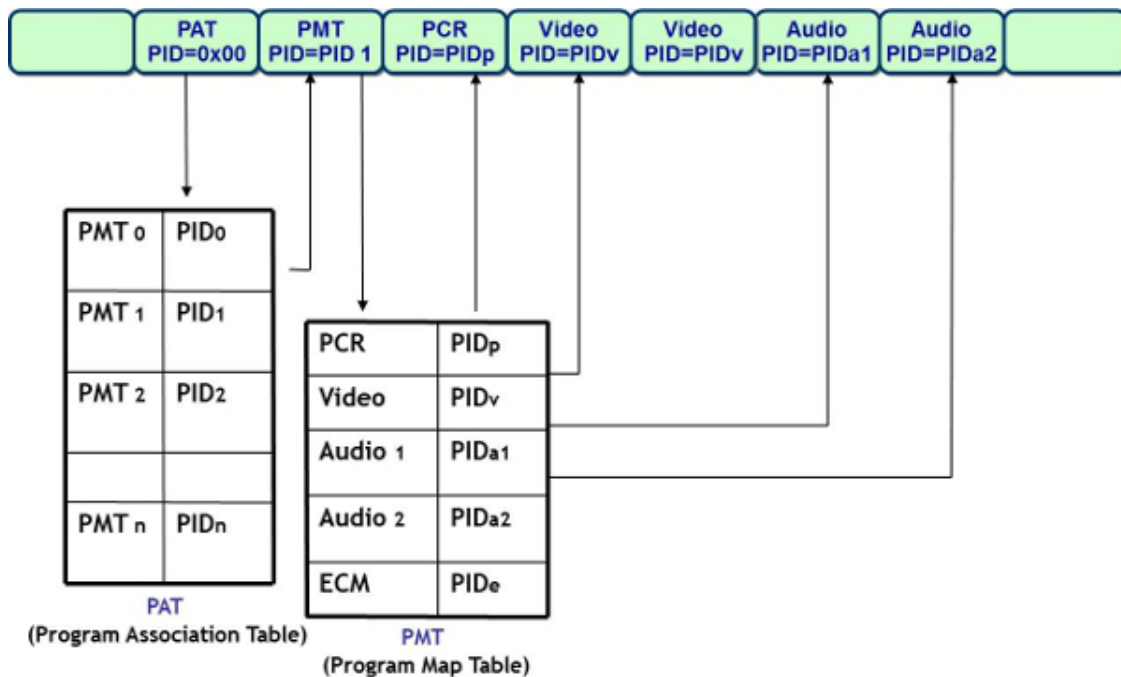

[Go back to top](#) [Go back to TOC](#)

Scan

The Scan function scans all the channels in the table to determine the ZAP time. The scan table lists Zap time (ms) and Pass/Fail status for each channel. Zap time, also known as inter-channel change delay, is the time between sending a channel leave request and receiving video data of the new video stream from the new channel. It is the IGMP Join Latency + Channel Switch Delay (STBdependent). Channel zapping should be < 700ms.



IGMP and Channel Zapping

IGMP is a signaling protocol that enables each STB to obtain only the programming that the viewer is interested in watching, thus conserving bandwidth in the access network. STBs use the IGMP to change channels, by leaving and joining multicast groups representing channels. Key to IPTV QoE, is how fast and reliably end users can change TV channels, also known as "channel zapping". Essentially it is calculated as the time taken between sending a channel leave request and receiving the first video data of the new video stream. Refer to DSL Forum TR-126 Triple Play Quality of Experience (QoE) requirements for more info.

[Go back to top](#) [Go back to TOC](#)

15.16.3 IPTV Viewer

The IPTV viewer displays the streaming video for the selected channel (Stream #), which is useful as a channel identifier to verify PID allocation. It is not designed to evaluate image quality. The video stream will appear within 20-30 seconds depending on buffering and decoding time. The screen will continue to refresh until Stop is pressed. The video stream will appear within 20-30 seconds depending on buffering and decoding time. The screen will continue to refresh until **Stop** is pressed.

Note: Only unencrypted streams can be viewed.

The viewer supports the following codecs:

- ISO 13818-2 Video = MPEG 2
- ISO 14996-10 Video = H.264
- ISO 14996-2 Video = MPEG 4



IPTV Viewer

[Go back to top](#) [Go back to TOC](#)


15.17 Layer 4+ Applications

Stateful TCP testing refers to the validation of TCP connections used for the TCP/IP Protocol Stack. A V-Perf test will validate that the TCP parameters in the network were set up correctly. The optional V-PROBE is used as remote server to establish TCP connections and validate that the network is configured correctly for seamless passing of TCP traffic. It will also verify the maximum throughput for TCP traffic. Typically in the field, after running layer 2 & layer 3 tests successfully, a customer may still complain that their connection is slow to deliver their applications. Running a stateful TCP test will help verify maximum throughput rates in the download and upload direction. If throughput performance is poor, the test can help identify what the issue could be.

TCP Protocol and Overview


Fundamental TCP parameters are the ideal TCP Window Size and Throughput. The complete list of relevant measurements include

- TCP Window Size
- TCP Throughput
- Number of Connections Established
- Download Time
- File Transfer Size
- Retransmits

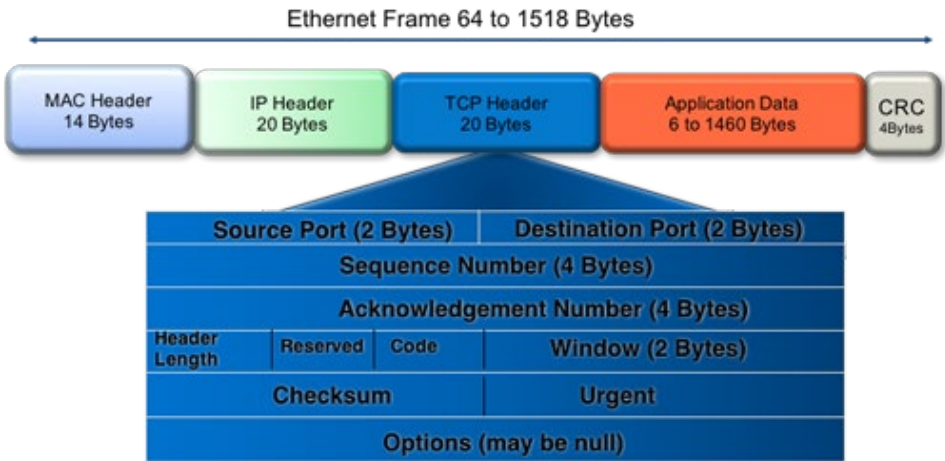

Transmission Control protocol is the most widely used transport layer protocol. TCP is used by most application protocols: HTTP, FTP, Telnet. It provides the following services:


- End-to-end connection
- Multiplexing/Demultiplexing of separate sessions
- Flow control

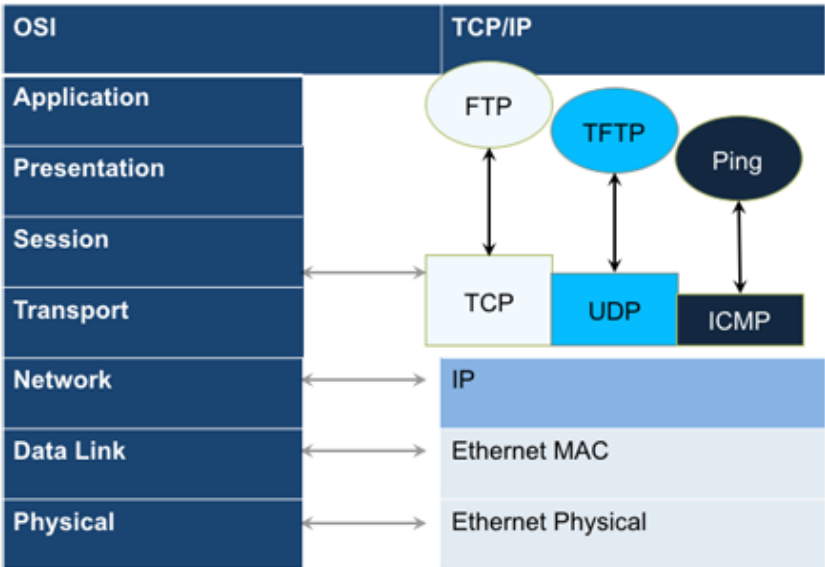

TCP is a connection oriented protocol. A Connection is established prior to data transmission between the two end devices (client and server). A 3-way handshake procedure is used to establish connection. When a connection is established, the data transfer can start. TCP uses sequence numbers to reassemble data and verify that no data has been lost.

TCP uses Window mechanism for Flow Control:

1. The Sender indicates in the Window size the data it is prepared to receive
2. The **Window size** is the amount of outstanding data that can be sent before acknowledgement is received
3. If data is lost, the window size is decreased and less data is sent prior to acknowledgement

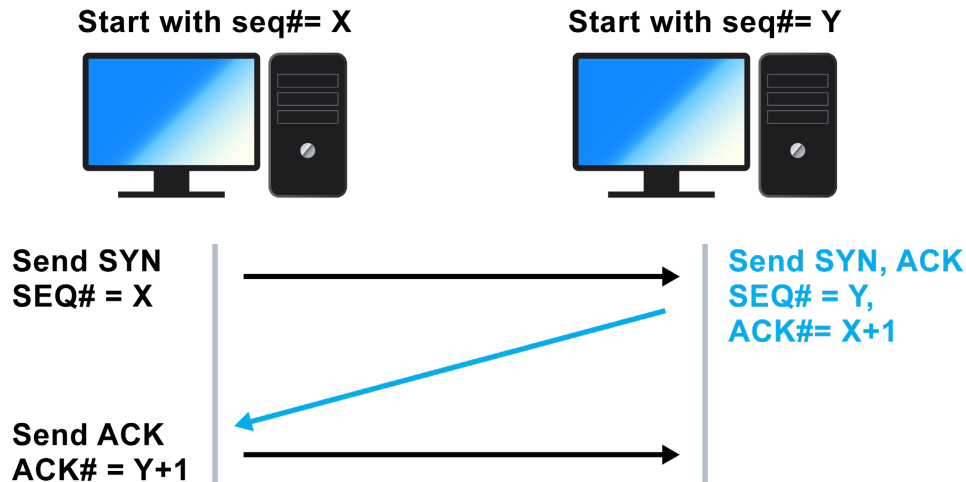

- **Step 1:** Client sends a SYN message with SYN flag set in the TCP header. The Sequence number specifies the number assigned to the first segment.
- **Step 2:** Server receives SYN packet and sends SYN + ACK packet. SYN flag set, ACK flag set. Sequence number specifies the server's starting sequence number. Acknowledgment number means that the server has received X and expects X+1.
- **Step 3:** Client receives SYN + ACK and sends ACK back. ACK number means that server has received Y and expects Y+1.

[Go back to top](#) [Go back to TOC](#)

RFC 6349 Testing Methodology

RFC 6349 is a practical testing methodology consisting of 4 different steps for measuring end to end TCP Throughput and Performance in a managed IP network.

- **Step 1 Max MTU Search:**
Search for the maximum packet length that can be sent through the network without segmentation. The Path MTU search follows RFC4821 (Packetization Layer Path MTU Discovery).
- **Step 2 Round Trip Time (RTT) Search:**
Measure of the roundtrip time between the TCP segment sent and the acknowledgement received, the test has to be done in a network that is not congested to obtain the real round trip delay (not accounting for network buffer delay).
- **Step 3 Bottleneck Bandwidth (BB) Search:**
For this step, a Layer2/3 test can be done (RFC2544 or Y.1564) to determine the maximum throughput rate supported by the network.
- **Step 4 Bandwidth Delay Product Calculation:**
Based on RTT and BB results, the BDP is computed to estimate the optimal window size that should be used for testing (Auto mode). User can also specify fixed window size.

Key Metrics:

- TCP Bandwidth Delay Product
- Transfer Time Ratio
- TCP Efficiency
- Buffer Delay

TCP Bandwidth Delay Product is the theoretical maximum of data that can be transmitted based on network delay and throughput rate.

$$\text{BDP (Bytes)} = \frac{\text{Link Bandwidth (bps)} \times \text{RTT (s)}}{8}$$



To completely occupy the available bandwidth the Window size must be set to the BDP value.

The ideal TCP transfer time is based on the Maximum achievable TCP transfer rate, calculated based on the Bottleneck Bandwidth (BB) and the layer 1-2-3-4 overheads associated with the network path. The actual TCP transfer time measures the time it takes to transfer data.

$$\text{Transfer Time Ratio} = \frac{\text{Actual TCP Transfer Time}}{\text{Ideal TCP Transfer Time}}$$

Link Speed	MAX Achievable TCP Throughput	Ideal TCP Transfer Time (rounded)
100Mbps Ethernet	94.9 Mbps	9 s
1G Ethernet	949.2 Mbps	1 s
10G Ethernet	9492.2 Mbps	0.1 s

Example of an ideal TCP transfer time based on a 1500 Bytes size MTU and 100MB file download:

TCP retransmission is done when TCP segments are lost during transmission or an acknowledgement is missing. Segments can be retransmitted more than once.



There is no direct correlation between the number of Ethernet frames lost at the physical layer and the number of TCP retransmission, since a single lost acknowledgement could trigger many retransmission.

$$\text{TCP Efficiency} = \frac{\text{Transmitted Bytes} + \text{Retransmitted Bytes}}{\text{Transmitted Bytes} \times 100}$$

The Buffer Delay represents the increase (or decrease) in Round Trip Time (RTT) during a TCP throughput test compared to the baseline RTT.



A large RTT Buffer delay indicates that the network is experiencing congestion and that segments are being delayed.


$$\text{Buffer Delay} = \frac{\text{Average RTT} - \text{Baseline RTT}}{\text{Average RTT} \times 100}$$

[Go back to top](#) [Go back to TOC](#)


Layer 4+ Applications Configuration

Before launching V-Perf, V-Test, or V-FTP tests, it's necessary establish an IP connection. For V-Perf testing, repeat these steps for both the far end and near end test sets.

1. Launch the desired Ethernet Test Application from the Main Menu.

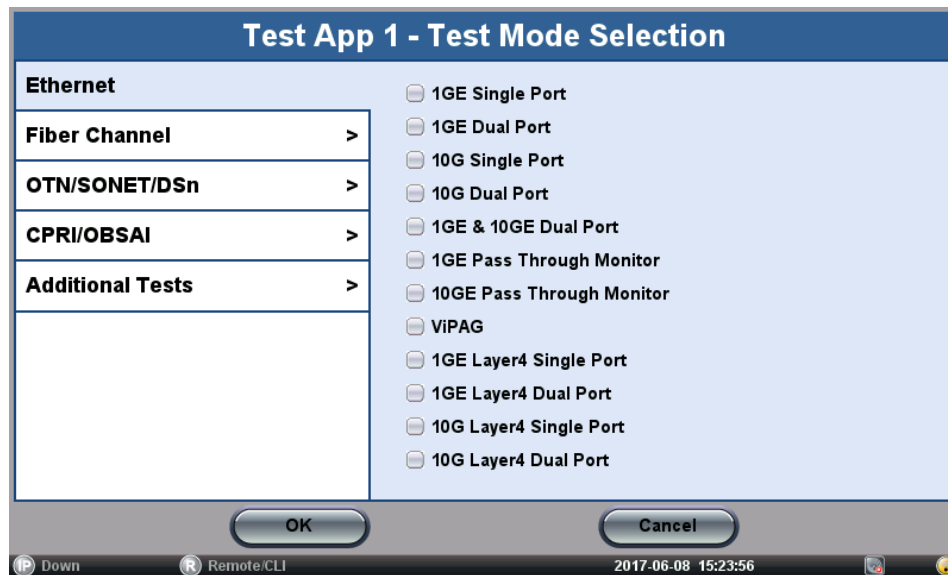

- For testing on SFP/XFP ports, turn the **Laser On**. Tap the **IP** button. Configure a static IP address for testing. If you are in an environment that supports DHCP, select DHCP from the IP Address menu, then tap **Connect**.

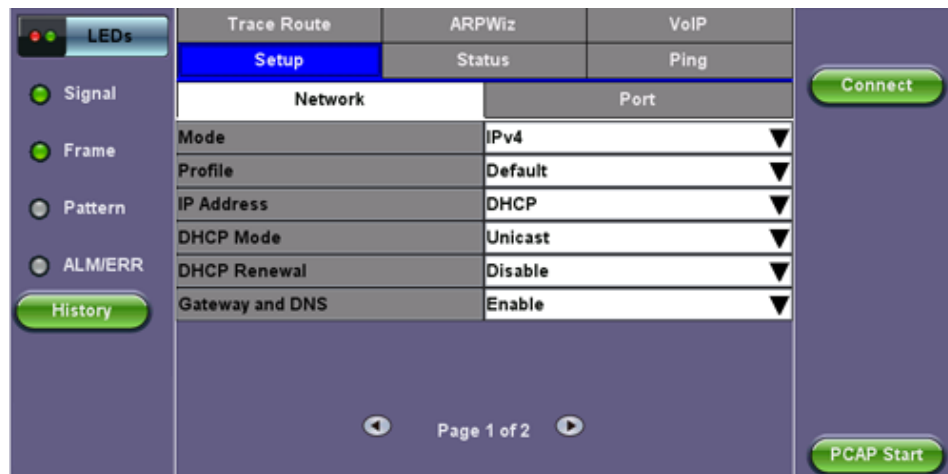

- Once the proper IP information is entered, press **Connect**. An **IP: PASS** status indicates proper connection.
- Go to **Advanced Tools > Layer 4+ Applications**. The test application will load.

Saving Test Results


Test results can be saved to the File Server using the Folder hardkey  . Results can be retrieved via USB drive or remotely using the Web UI. Refer to **File Management** in the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for more information on saving files.

[Go back to top](#) [Go back to TOC](#)

15.17.1 V-Perf

The V-Perf test suite consists of the full TCP Throughput test Compliant with RFC6349 (Test Set to Test Set only) and also the original stateful TCP testing to iPerf/iPerf3 server or to our V-Probe.


- Stateful TCP Test up to 1GE/10GE line rate
- TCP Client/Server and Bi-Directional modes
- Compatible with iPerf Client/Server
- MTU search per RFC4821
- Round Trip Time Measurement
- Configurable TCP Window
- Multi-Window size tests
- Measurements: TCP Throughput rate (min, max, average), Transfer file size and duration, Transfer time ratio, TCP Efficiency %, Buffer Delay %.

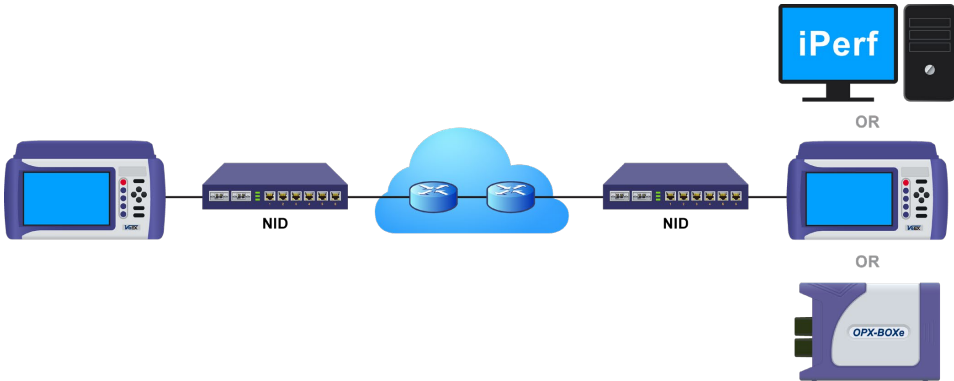

TCP Throughput Test Diagram

Server/Client - Unidirectional Configuration and Results

1. After loading the Layer 4+ Application, set one test set as a Server from **TCP Mode**. Press **Start**.

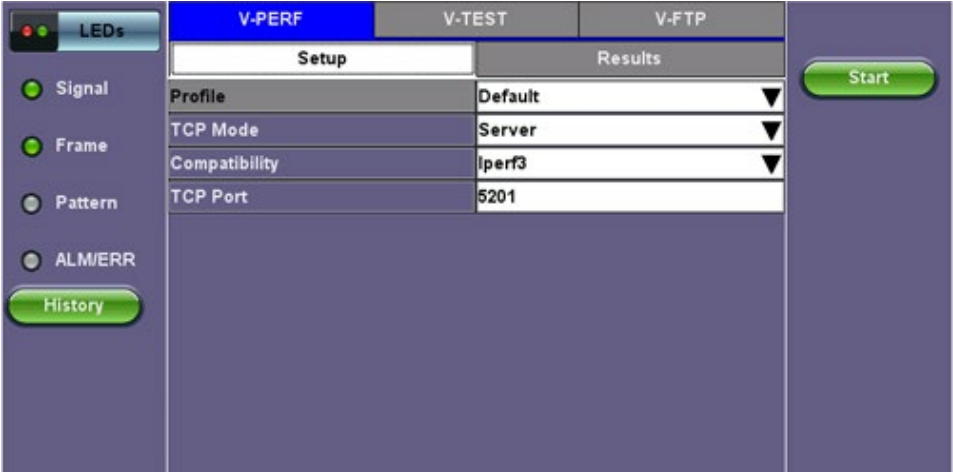

Test Set #1 - V-Perf Setup - Server

LEDs	V-PERF		V-TEST	V-FTP	Stop
	Setup		Results		
	Status	Summary	Per Stream	Event	
	Signal	ST:2017- 4-21 11:23:47		ET:00:00:04	
Frame	Current Event:				
Pattern	IP: 192.168.2.102				
ALM/ERR	Waiting for Client to connect...				
History					

Test Set #1 After Pressing Start

- Set the other test set as a Client. Tap on Page 2 to configure the Throughput Test Mode type. [MTU Search](#), [Round Trip Time Search](#), [Bottleneck Bandwidth](#), and [Window Size](#) options are also on Page 2.

LEDs	V-PERF		V-TEST	V-FTP	Start	
	Setup		Results			
	Signal	Profile		Default		
	Frame	V-PERF Mode		Client		
Pattern	Compatibility		lperf3		Page 1 of 2	
ALM/ERR	Protocol		TCP			
Parallel Streams		Manual 1				
Server IP		192.168.0.102				
Server Port		5201				
MTU Search		Enabled				
Round Trip Time Search		Enabled				
History						

Test Set #2 - V-Perf Setup - Client

- Connect the two test sets to the Near End (NE). Press **Start** on the Client unit.

LEDs	V-PERF		V-TEST	V-FTP	Stop
	Setup		Results		
	Global		Per Stream		
	Status	Summary	Graphs	MTU	
Signal	ST:2017- 4-20 14:52:36		ET:00:00:01		
Frame	MTU Search		Test Done		
Pattern	Round Trip Time Search		Inprogress		
ALM/ERR	TCP Test		Pending...		
History					

Test Set #2 - Client - Results - Status


The **Summary** tab displays the following RFC 6349 metrics: TCP Efficiency, Buffer Delay & Retransmits.




Test Set #2 - Client - Results - Summary



Test Set #2 - Client - Results - MTU

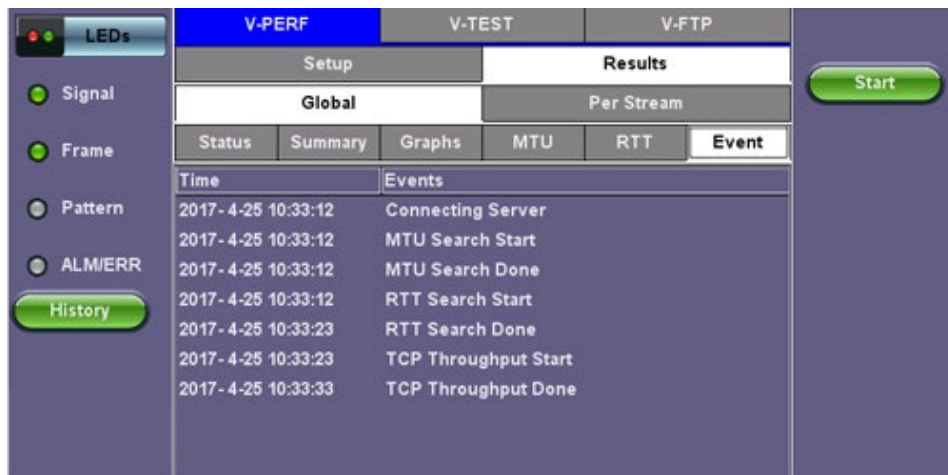

Test Set #2 - Client - Results - Event

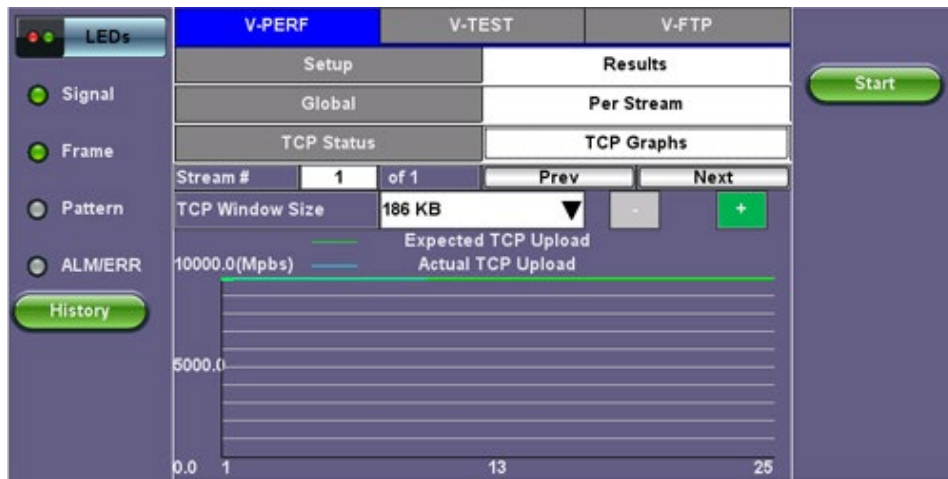

Test Set #2 - Client - Results - Per Stream TCP Graphs

[Go back to top](#) [Go back to TOC](#)

Bi-Directional Configuration and Results (VeEX Enhanced Testing Methodology Implementation)

The Bi-Directional TCP testing methodology is unique as it allows two separate tests to run simultaneously on the same link in different directions. Both Test Sets are actually configured as Client & Server at the same time, saving the time of having to run each direction separately.



To simplify the configuration for this example, one test set is configured as a Client and the other as a Server. In reality however, as mentioned previously, both tests will be running simultaneously.

1. Select Bi-Directional from the V-Perf Mode drop-down menu on both test sets. Select the Bi-Directional Mode as Client on the Local End and Server on the Remote end.

Local End Tester - Client - Bi-Directional Setup

Remote End Tester - Server - Bi-Directional Setup

Press **Start** test at the Near End. The entire test flow is automated. Results will show up as the tests run – a total of 4 sessions.

- Current test progress is shown in **Event**.
- **Summary (Page 1)** provides information on the current session running and the RFC-6349 key performance indicators. Tap on **Client Results** to verify the metrics.
- Final results of the completed test will show under **Status**.


Bi-Directional - Server Results - Summary

[Go back to top](#) [Go back to TOC](#)

15.17.2 V-Test

V-Test is a VeEX speed test. There are three different server types that can be used to run the speed test. The following server types are available from **Server Selection Mode**:

- **VeEX Managed** (Server List): A list of servers maintained by VeEX initially provided by the user. Specific server names for each location are listed. This list can be automatically updated when connected to our server by tapping **Update List**.
- **User Managed** (Server List): Lists servers and server lists created via Manual mode. Options to modify or delete server lists are available under **Server List Manage**.
- **Manual** (Server Configuration): Create a new server profile or server list.

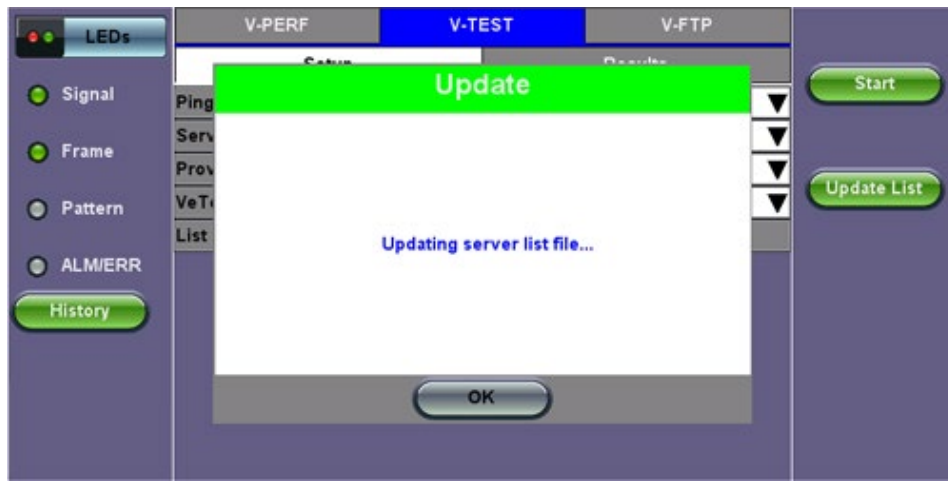

[Go back to top](#) [Go back to TOC](#)

Creating New Server Profiles and Server Lists

1. From the Setup tab, select **Manual** from **Server Selection Mode**.
2. Tap on **Update List** and select a file to transfer. The **File Name** and **Path** will populate into the field. After setting up the new server profile, tap the **Add To Server List** drop-down menu. **Save as new** creates a new server list and adds the current server profile to that list. The option to add the profile to an existing server list is also available.

LEDs	V-PERF	V-TEST	V-FTP
Signal	Setup		Results
Frame	Ping Mode		Enable
Pattern	Server Selection Mode		Manual
ALM/ERR	Server Name		FREMONT
History	IP Address/URL		192.168.8.17
	TCP Port No.		80
	Path		speedtest
	File Name		random4000x4000.jpg
	Add To Server List		server1

Server named **FREMONT** will be added to **server1** list


3. Server profiles and server lists created from here are available in Server Selection Mode > **User Managed**.

LEDs	V-PERF	V-TEST	V-FTP
Signal	Setup		Results
Frame	Ping Mode		Enable
Pattern	Server Selection Mode		User Managed
ALM/ERR	Available Server List		server1
History	VeTest Server		FREMONT
	Server List Manage		None

[Go back to top](#) [Go back to TOC](#)

Starting a V-Test

Select a server from User Managed or VeEX Managed. Enabling Ping mode will simultaneously runs a Ping test. Ping Response results will appear under the Results tab. Tap **Start** to initiate testing. The download test starts first, followed by the upload test.

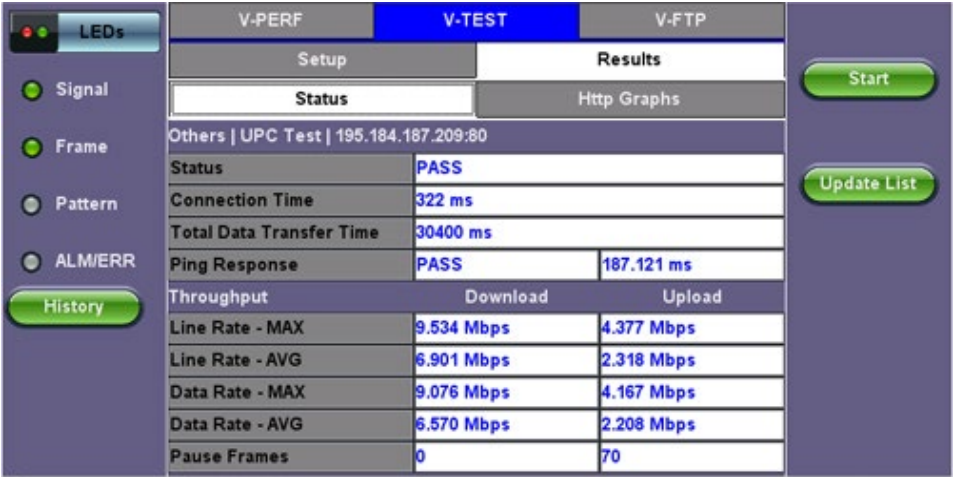

V-Test - Results - Status



V-Test - Results - Http Graphs

[Go back to top](#) [Go back to TOC](#)


15.17.3 V-FTP

V-FTP is an FTP Connectivity/Download/Upload test all in one (wirespeed).

Running Download/Upload Tests

1. From Setup, select Download or Upload from **FTP Mode**. Enter the FTP server IP **Address**, **File/Path**, **User Name**, and **Password** information if setting up Download FTP Mode.
2. To open up the FTP file selection window and view all the files on the server, tap on the **List Files** button. Select a file to transfer and tap **Start** to run the test.

When finished with setup, press **Start**.

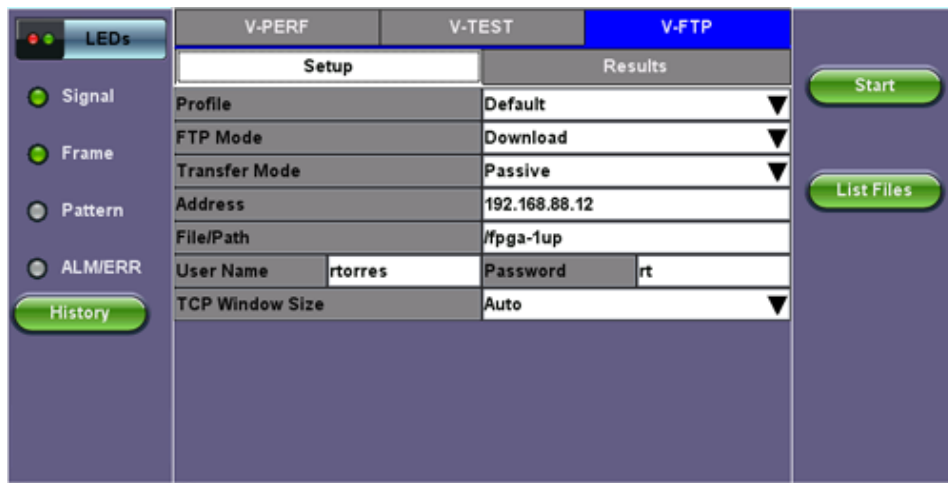

The screenshot shows the V-FTP Setup window. On the left, there are radio buttons for Signal, Frame, Pattern, and ALM/ERR, with a History button below them. The main area is divided into two tabs: V-PERF and V-TEST. The V-TEST tab is active, showing a Setup section with fields for Profile (Default), FTP Mode (Download), Transfer Mode (Passive), Address (192.168.88.12), File/Path (/fpga-1up), User Name (rtorres), Password (rt), and TCP Window Size (Auto). On the right, there are Start and List Files buttons.

V-TEST	
Setup	Results
Profile	Default
FTP Mode	Download
Transfer Mode	Passive
Address	192.168.88.12
File/Path	/fpga-1up
User Name	rtorres
Password	rt
TCP Window Size	Auto


V-FTP - Setup - Download



The screenshot shows the FTP file selection window. It has a green header bar with the text 'FTP file selection'. Below the header, there are fields for Path (/), Name (ibdata1.zip), and Ext. Filter. A table lists files with columns for File Name, File Size(Byte), File Extension, and Date. At the bottom, there are buttons for Update, <, Select, and Cancel.

File Name	File Size(Byte)	File Extension	Date
07091	10485760		2012-07-08
20150228_105628	30240		2015-02-24
20151130_112554	29471		2015-11-29
20151130_112554.html	16138	.html	2015-11-29
20151130_112554_files	0	/	2015-11-29
20151130_112603	29475		2015-11-29
20151130_112603.html	16140	.html	2015-11-29
20151130_112603_files	0	/	2015-11-29
20160429_062812	29559		2016-04-28

FTP File Selection Window

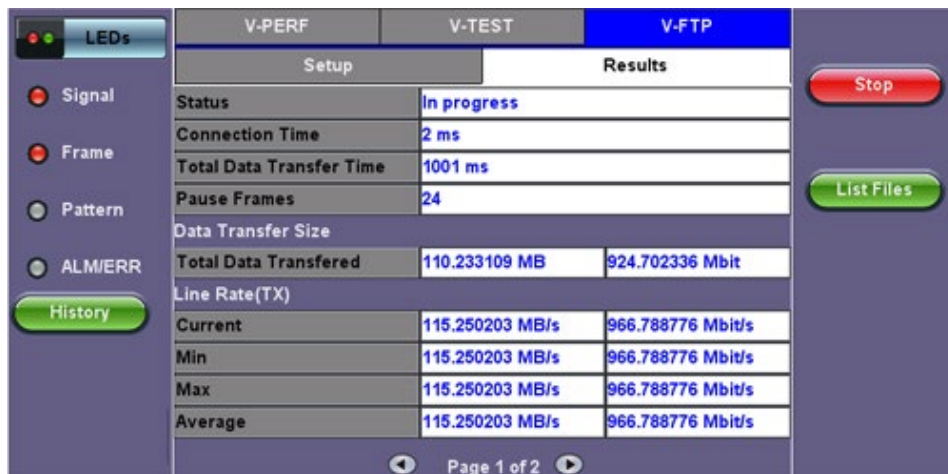

The screenshot shows the V-FTP Download Results window. On the left, there are radio buttons for Signal, Frame, Pattern, and ALM/ERR, with a History button below them. The main area is divided into two tabs: V-PERF and V-TEST. The V-TEST tab is active, showing a Results section with fields for Status (In progress), Connection Time (2 ms), Total Data Transfer Time (1001 ms), Pause Frames (24), Data Transfer Size (Total Data Transferred: 110.233109 MB, 924.702336 Mbit), Line Rate(TX) (Current: 115.250203 MB/s, 966.788776 Mbit/s; Min: 115.250203 MB/s, 966.788776 Mbit/s; Max: 115.250203 MB/s, 966.788776 Mbit/s; Average: 115.250203 MB/s, 966.788776 Mbit/s). On the right, there are Stop and List Files buttons. At the bottom, there is a page indicator 'Page 1 of 2'.

V-TEST	
Setup	Results
Status	In progress
Connection Time	2 ms
Total Data Transfer Time	1001 ms
Pause Frames	24
Data Transfer Size	
Total Data Transferred	110.233109 MB 924.702336 Mbit
Line Rate(TX)	
Current	115.250203 MB/s 966.788776 Mbit/s
Min	115.250203 MB/s 966.788776 Mbit/s
Max	115.250203 MB/s 966.788776 Mbit/s
Average	115.250203 MB/s 966.788776 Mbit/s

V-FTP - Download - Results

[Go back to top](#) [Go back to TOC](#)

15.18 PESQ Testing


Introduction

Located in a central location, the VeEX PESQ server allows technicians using the VePal 100+ or 300 series field test set to establish a VoIP or ISDN connection and measure end to end voice quality.

VeEX's PESQ Server brings the power of ITU-T P.862 PESQ algorithm to live network field testing. VeEX's PESQ Server accepts up to 50 simultaneous connections from compatible VeEX VePAL 300 or 100+ series products.

Server software allows the user to assess voice quality measurements under live network conditions measuring impact from distortions from all sources: voice codecs, packet loss, latency, jitter, bandwidth congestion.

Bi-directional PESQ MOS (Mean Opinion Score) and other critical network related parameters are measured in under a minute. Test results are displayed on both field test units and the PESQ Server software, and can be saved and retrieved for future reference and benchmarking.

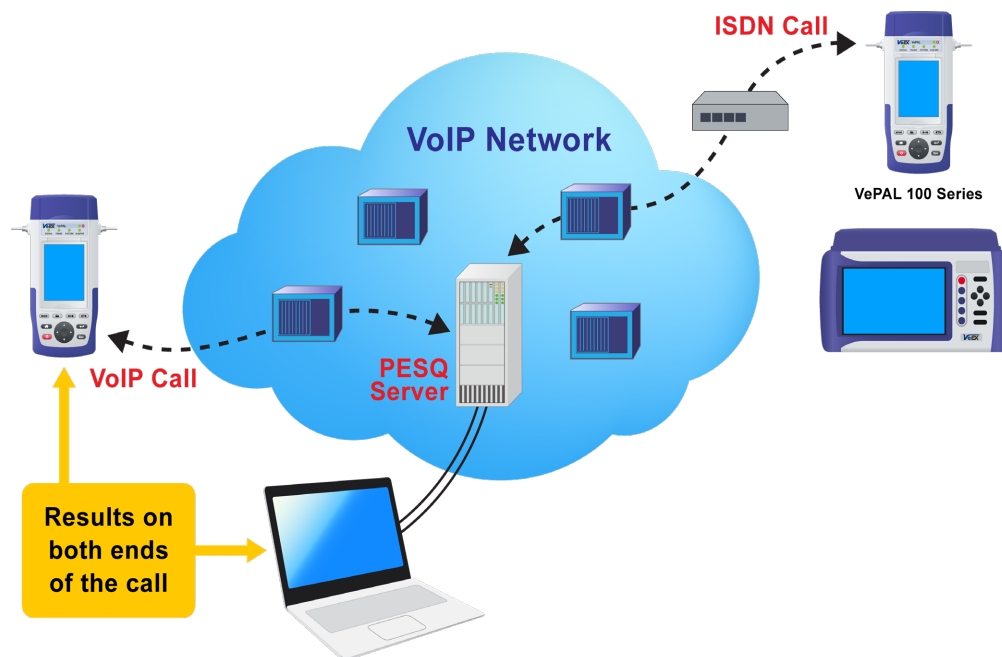

VeEX PESQ Server Specifications:

- The VeEX PESQ sever can be installed on any PC server hardware
- SIP configuration Assessment of the speech quality according to PESQ (ITU-T Rec P.862) of up to 50 concurrent or serial connections
- Peer-to-peer mode and proxy mode SIP protocol to establish connections
- Support of the most common audio codecs (G.711A, G.711u, G.723.1 and G.729)
- GSM, G.722, G.721, iLBC, G.726 * (check with factory for availability)
- Prioritization: VLAN tagging, DiffServ, TOS
- Extensive connection list and advanced connections details
- SNMP trap or email generation can be configured to automatically alert network managers of low call quality based on user configurable thresholds
- Powerful reporting tool can be used to track voice quality trends over time for network benchmarking or SLA tracking

Quality measured during PESQ is indicated by a “flag”:

- Red: 0-2.33
- Yellow:2.33-3.66
- Green:3.66-4.50

PESQ | Server

File ?

Standard

▶

◻

Nr.		Source	Destination	Mode	Remote	Start time	Duration	End time
23		192.168.0.105	192.168.0.48		VePAL MX 300 (TM4B00HD610204)	2012-01-27 16:51:38	00:00:17	16:51:55
24		192.168.0.105	192.168.0.48		-	2012-01-27 17:07:09	00:00:08	17:07:18
25		192.168.0.105	192.168.0.48		VePAL MX 300 (TM4B00HD610204)	2012-01-27 17:07:25	00:00:17	17:07:43
26		192.168.0.105	192.168.0.48		-	2012-01-27 17:12:19	00:00:08	17:12:28
27		192.168.0.105	192.168.0.48		VePAL MX 300 (TM4B00HD610204)	2012-01-27 17:12:35	00:00:17	17:12:53
28		192.168.0.105	192.168.0.48		-	2012-01-27 17:13:40	00:00:08	17:13:49
29		192.168.0.105	192.168.0.48		VePAL MX 300 (TM4B00HD610204)	2012-01-27 17:13:56	00:00:17	17:14:14
30		110	108		-	2012-01-30 14:28:05	00:00:12	14:28:17
31		110	108		VePAL MX 300	2012-01-30 14:28:46	00:01:26	14:30:12
32		110	108		VePAL MX 300	2012-01-30 17:03:39	00:01:27	

A detailed connection report is also generated:

Details of connection 32

RTP-session outgoing

Packets/Bytes sent

5276 / 1504992 bytes

Codec(s)

0x08 G.711 a-Law (9696 / 93.75%)
0x60 RFC2833 (580 / 6.25%)

SSRC

0x00294823

Remote Port

5000

deltaT min/avg/max

19 ms / 20 ms / 21 ms

Packet Loss

0 (0.00%)

E-Model (R-Factor) / MOS

N/A

RTPC

Local Port

8001

Remote Port

5001

RTCP sent

62

RTCP received

39

Connection Evaluation

Total Delay

in 0.694 ms, out 0.694 ms

PESQ With Simple Jitterbuffer

[1] 4.513

PESQ With Advanced Jitterbuffer

[1] 4.513

RTP-session incoming

Packets/Bytes received

5279 / 1508628 bytes

Codec(s)

0x08 G.711 a-Law (9719 / 93.96%)
0x60 RFC2833 (560 / 6.04%)

SSRC

0x2E29F853

Local Port

8000

deltaT min/avg/max

5 ms / 20 ms / 40 ms

Jitter min/avg/max

0 ms / 1 ms / 15 ms

RTCP Loss/Duplicate/Reorder

0 (0.00%) / 0 / 0

Pure Packet Loss on wire

0 (0.00%)

With Simple Jitterbuffer

Packet Loss

0 (0.00%, 0 from wire, 0 due to jitter)

E-Model (R-Factor) / MOS

R-Factor: 93.20 MOS: 4.41

With Advanced Jitterbuffer

Delay min/avg/max

10 ms / 40 ms / 40 ms

Empty / Discarded / Lost

561 / 3 / 3

Packet Loss

3 (0.03%)

E-Model (R-Factor) / MOS

R-Factor: 92.90 MOS: 4.40


Close

Voice Quality Trend Analysis:

Post processing tools allow trending analysis over time.


Multi_Service_Test_Module_Manual_RevD01

Page 410 of 546

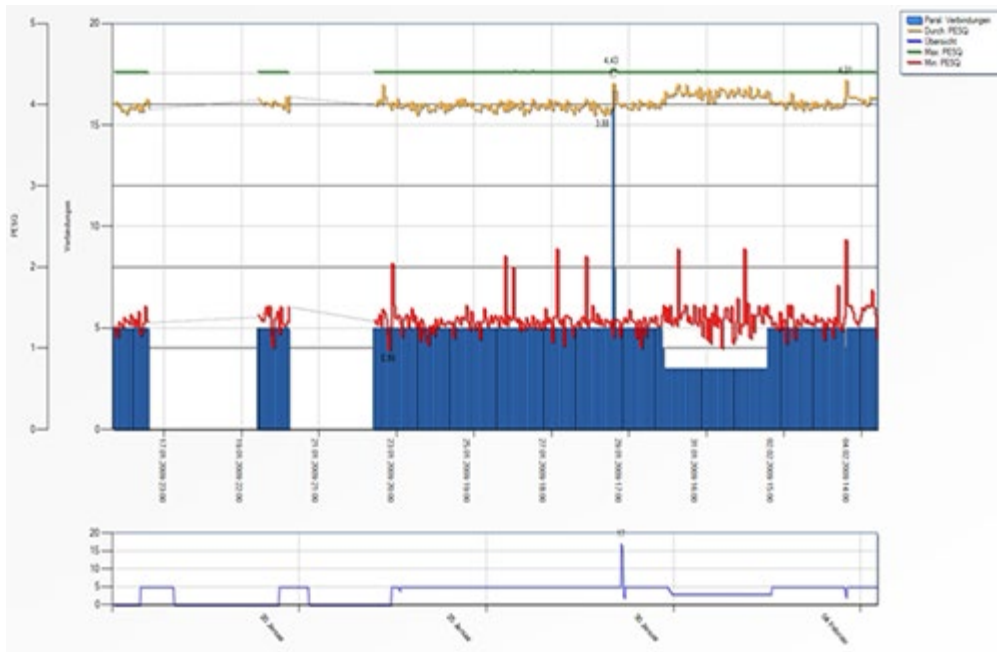

Procedure:

Place VoIP to PESQ Server.

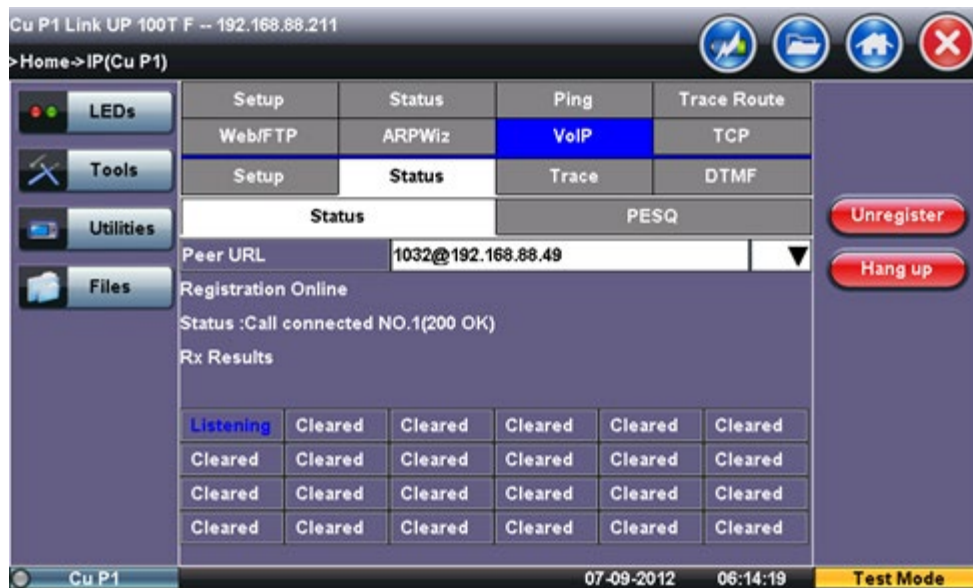

Upstream, Roundtrip and Average voice quality measurement is displayed.

Cu P1 Link UP 100T F -- 192.168.88.211

> Home->IP(Cu P1)

LEDs

Tools

Utilities

Files

Setup	Status	Ping	Trace Route
Web/FTP	ARPWiz	VoIP	TCP
Setup	Status	Trace	DTMF
Status		PESQ	
SCORE-Roundtrip		4.519	
SCORE-Upstream		4.521	
SCORE-Average		4.520	

Unregister

Call

Cu P1


07-09-2012 06:20:37

Test Mode

[Go back to top](#)
[Go back to TOC](#)

15.19 Phy Mode

Puts the Phy chip in a special mode to transmit a specified wave form. Exiting the menu automatically returns the PHY chip to normal operation.

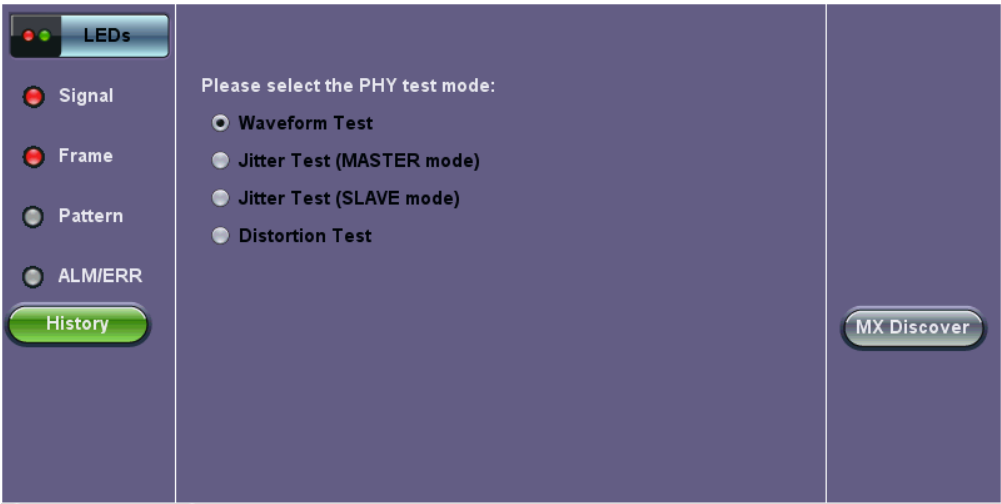


Phy Mode Menu

[Go back to top](#) [Go back to TOC](#)

15.20 Net Wiz

The Net Wiz function tests the Ethernet cable and associated network environment. A typical application is shown below.

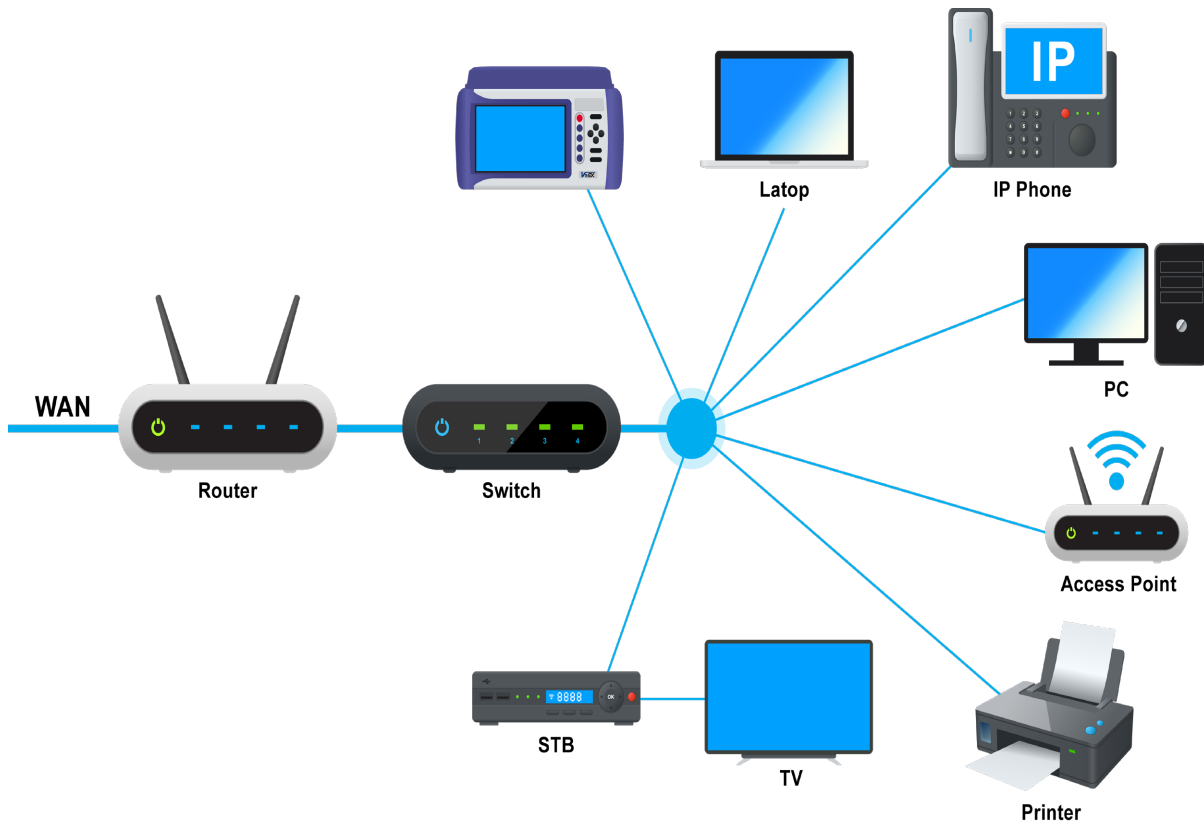

Typical Net Wiz Application

Net Wiz Test functionalities include:


- Cable Analysis with distance (Ethernet RJ45 Test port only, not available on Ethernet RJ45 Management port)
 - to switch with MDI mode (Straight or Crossover)
 - to fault, type of fault (Open, Short, Impedance Mismatch)
- Analyze the network and automatically report
 - Stations
 - Routers/Gateway
 - Printers
- Provide MAC and IP addresses of each device
- PING each device and verify the device is active
- Provide detected networks (NetBIOS, IPX, etc.)



Before proceeding with any Net Wiz tests, make sure that an IP connection has been established (see [IP Connection](#)).

[Go back to top](#) [Go back to TOC](#)

Cable Test

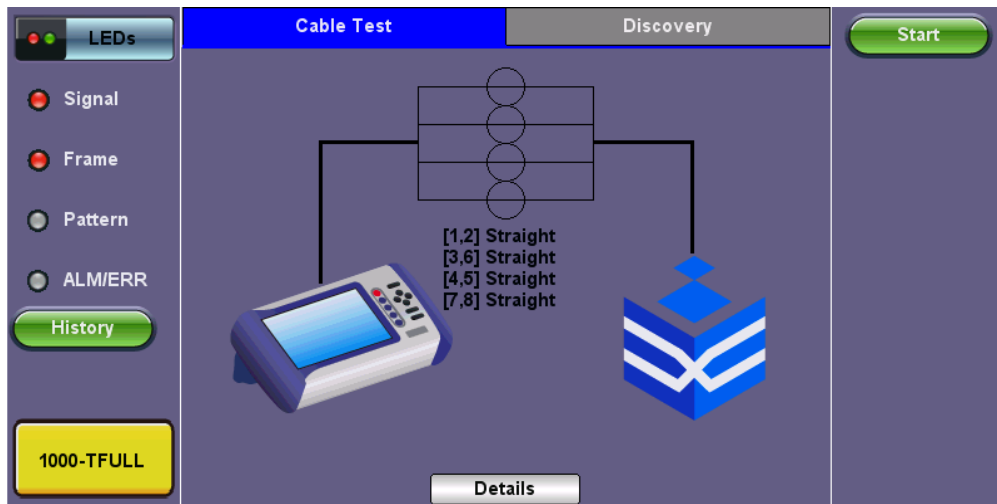


Cable Test Results

Press **Start** to begin the test. The test set will return the connection type (Straight or Cross Over) if connected to an end device. If fault is detected (Open or Short) the fault will be indicated as well as the distance to the fault.

[Go back to top](#) [Go back to TOC](#)

Discovery Setup

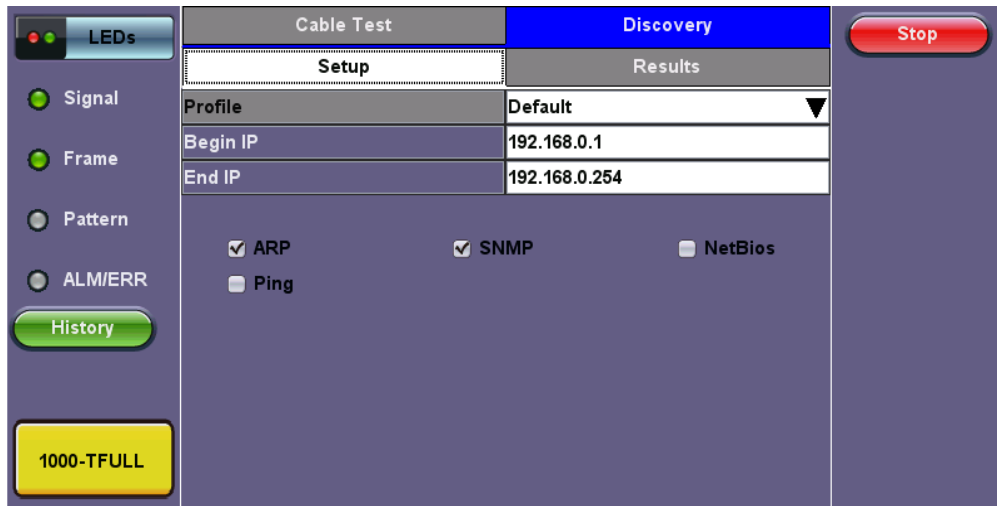

Discovery Setup

Profile: Drop-down selections are Default, Delete, Save, Save As...

- **Begin IP:** Set the start address for the desired IP range using the numeric keypad
- **End IP:** Set the end address for the desired IP range using the numeric keypad
- Select by placing a check mark in the corresponding box of any of the following: ARP, SNMP, NetBios, Ping, Net

[Go back to top](#) [Go back to TOC](#)

Discovery Results

LEDs

Signal

Frame

Pattern

ALM/ERR

History

1000-TFULL

Cable Test	Discovery	
Setup	Results	
Summary	Devices	Networks
Discovery: ARP test started		
TX Frames	50	
RX Frames	487	
RX Errors	0	
Speed Advert		
Duplex Advert		
Device Found	23	
Network Found	1	

Stop

Discovery Results - Summary

Summary indicates the test status and reports:

- **TX/RX Frames:** Total number of TX (transmitted) and RX (received) frames
- **RX Errors:** Received frames in error
- **Speed Advert:** Speed advertised
- **Duplex Advert:** Duplex mode advertised
- Total number of Devices and Networks found

[Go back to top](#) [Go back to TOC](#)

The **Devices** tab reports global and detailed device information.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

1000-TFULL

Cable Test	Discovery	
Setup	Results	
Summary	Devices	Networks
Global	Detail	
Total Devices	34	
Routers	0	
Server	0	
Host	0	

Stop

Discovery Results - Devices - Global

[Go back to top](#) [Go back to TOC](#)


Global reports:

- Total number of devices found
- Number of devices (Routers, Servers, Hosts)

[Go back to top](#) [Go back to TOC](#)

15.21 Autoscripting

Autoscripting runs BERT and Throughput test profiles in succession. Profiles are configured from the test application or ReVeal software.

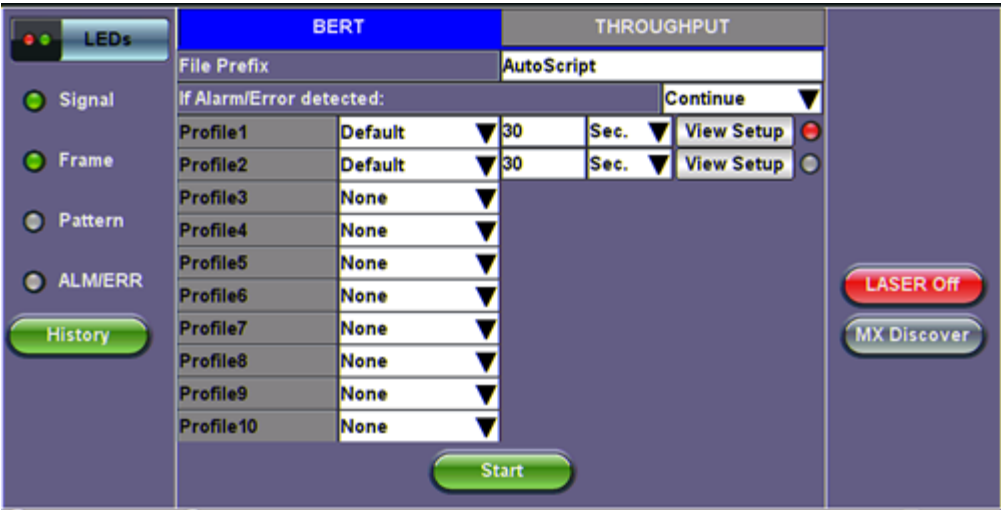

Autoscripting - BERT Setup

Autoscripting Setup

- **File Prefix:** Prefix added to name of test results. The default prefix is "Autoscript."
- **If Alarm/Error detected:** Choose to **Continue** or **Exit** testing if an alarm/error is detected.
- **Profile:** Select Default, Last Configuration, or None.
- Testing duration can be set for seconds, minutes, hours, or days.
- Tap on **View Setup** to view test setup parameters. Setup cannot be configured from this menu.

Tap on the green **Start** button to begin Autoscripting.


The soft LED light indicates the status of finished tests:

- **Green:** No error or alarm was detected.
- **Red:** An error or alarm was detected.

Starting the test displays the BERT/Throughput Results tab. Test status is displayed in green on the bottom of the screen. When testing finishes, results are automatically saved. Refer to **File Management** in the **TX300S**, **MTTplus**, **RXT-1200**, or **UX400 platform manuals** for information on accessing saved results.



Autoscripting - BERT Results

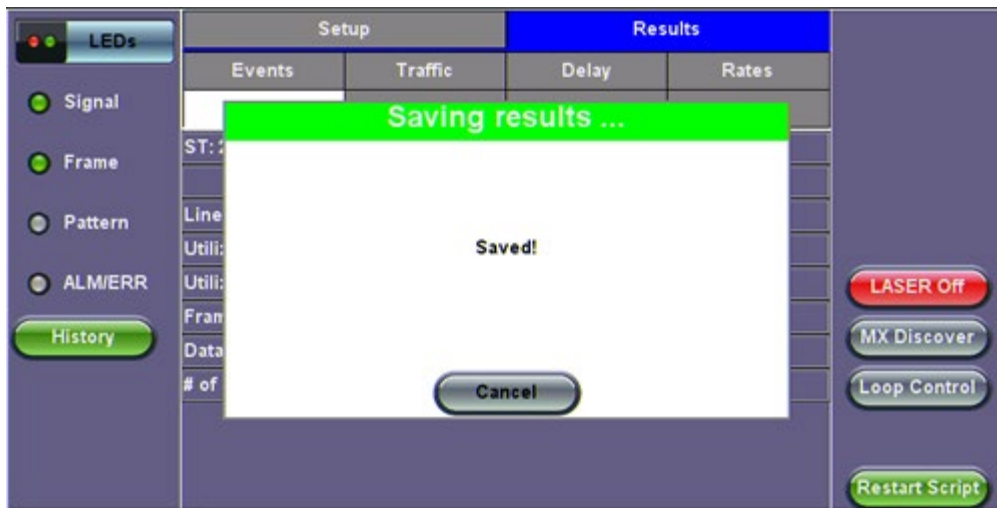

Autoscripting - Saving Results

Column Show All Advanced							
☐	Name	Mode	Test	Module	Date	Type	Lock
☐	autosave	CPRI	CPRI L2	CPRI	2017-03-03 13:07:37	Profile	
☐	autosave	CPRI	CPRI L2	CPRI	2017-03-03 13:05:36	Profile	
☐	autosave	CPRI	CPRI L1	CPRI	2017-03-02 11:43:09	Profile	
☐	Profile1	OTN/SDH	SONET	OTN/SDH	2017-02-03 16:17:29	Profile	
☐	p2	Ethernet	THRPT	Fiber	2017-03-03 12:56:39	Profile	
☐	p1	Ethernet	THRPT	Fiber	2017-03-03 12:56:33	Profile	
☐	AutoScript_p2_20170303_13043	Ethernet	THRPT	Fiber	2017-03-03 13:04:37	Result	
☐	AutoScript_p2_20170303_12582	Ethernet	THRPT	Fiber	2017-03-03 12:58:28	Result	

Page 1 of 3


View
 Del
 Rename
 U/L
 PDF
 From USB
 To USB
 BT

File Manager - Saved Results

[Go back to top](#) [Go back to TOC](#)

15.22 L2 Control Protocol Transparency Test (L2CP)

L2CP tests network transparency to Layer 2 Control Protocols by transmitting a number of preselected L2 control protocol frames from Test set A and making sure that they are received on Test set B through the network under test.

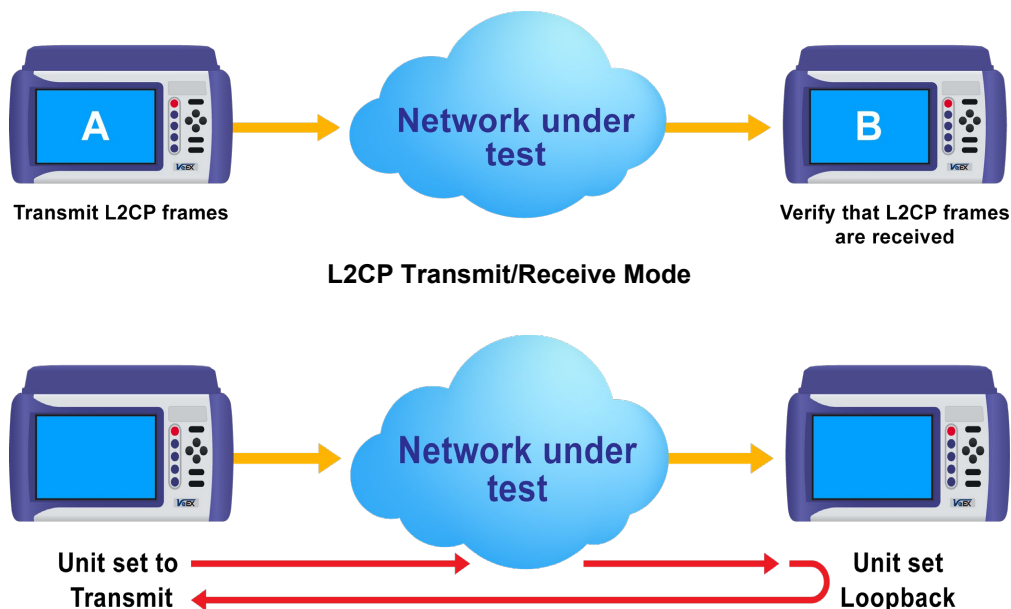

L2CP Loopback Mode

[Go back to top](#) [Go back to TOC](#)

Setup

Press the green **Start** button to start the test with previous settings or **NEXT** to continue with the step-by-step setup process.

Procedure

Step 1


- **Transmit:** Unit is setup to transmit and Receive L2CP frames. If the unit is selected as a transmitter, the option to **Automatically Loop Up/Down** becomes available.
- **Receive:** Unit is setup to only Receive L2CP frames.
- **Loopback:** Unit loops incoming L2CP frames at Layer 1.



L2CP Transparency Test - Step 1

Step 2

Step 2 confirms the test mode selection. If the unit is set to Receiver mode, setup is complete.

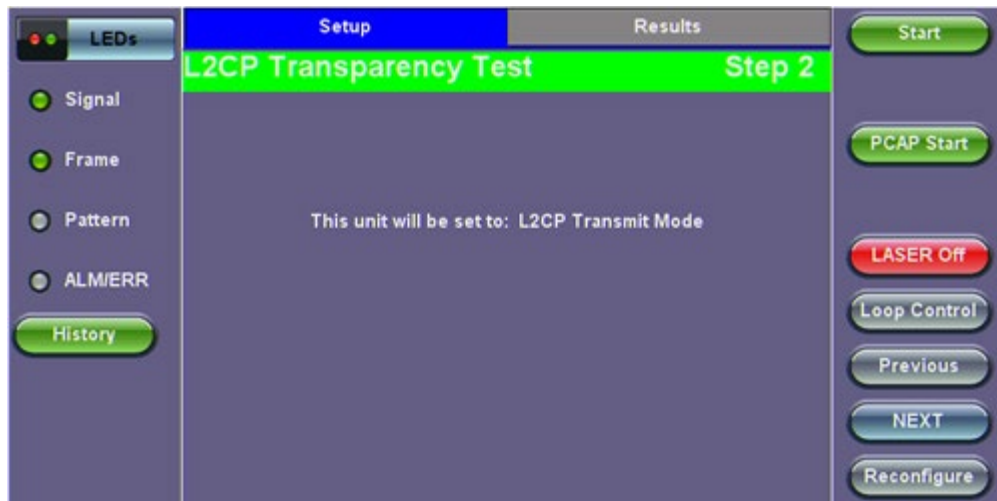

L2CP Transparency Test - Transmitter - Step 2

Step 3

- If the unit is set to Receiver mode, setup for the receiver is complete.
- For Transmit mode, configure the MAC address that will be used as MAC Source for all the test frames or press the "MAC Source" function key to overwrite with the MAC address of the test set.

L2CP Transparency Test - Transmitter - Step 3

L2CP Transparency Test - Transmitter - Step 3

Step 4

Configure the VLAN Tag(s) that will be used for the test frames. VLAN can be disabled or enabled with up to 3 tags.

L2CP Transparency Test - Transmitter - Step 4

L2CP Transparency Test - Transmitter - Step 4

Step 5

Select the number of test frames that will be transmitted for each L2CP. Configurable from 1 to 100. Configure Test Frame Rate: From 1 to 10 frames per second.

L2CP Transparency Test - Transmitter - Step 5

L2CP Transparency Test - Transmitter - Step 5

Step 6

Select the type of frames that will be transmitted during the test. Please see the [List of Protocols](#) section for more information. Add a check mark to each L2CP to test or select all.

L2CP Transparency Test - Transmitter - Step 6

LEDs: Signal, Frame, Pattern, ALM/ERR, History

Setup: Select All ☒ Clear All ☐

Protocol	Selected
STP	☒
LACP	☒
E-LMI	☒
Link OAM	☒
Ethernet ESMC	☒
PTP	☒
LLDP	☒
VDP	☒
PE-CSP	☒

Page 1 of 4

Buttons: Start, PCAP Start, LASER Off, Loop Control, Previous, Reconfigure

When the test starts, the screen displays L2CP frames transmitted and received for each protocol. The field displays N/A if a protocol type has not been selected for the test. Packet capture (green **PCAP Start** button) can run simultaneously with the test. Refer to [Packet Capture](#) for information on using packet capture and retrieving saved files.

LEDs: Signal, Frame, Pattern, ALM/ERR, History

Setup		Results	
Message	TX/RX	Message	TX/RX
Total	150/0		
STP	50/0	LACP	50/0
E-LMI	50/0	Link OAM	50/0
Ethernet ESMC	50/0	PTP	50/0
LLDP	50/0	VDP	50/0
PE-CSP	50/0	PNAC 802.1X	50/0
SPB	50/0	MMRP	50/0
MVRP	50/0	MSRP	50/0
MIRP	50/0	PAgP	50/0
CDP	50/0	UDLD	50/0
VTP	50/0	DTP	50/0


Page 1 of 2

Buttons: Start, PCAP Start, LASER Off, Loop Control

L2CP Transparency Test Running

Remote Partner Control Tool

The **Loop Control** button displays the Remote Partner Control Tool. Input the MAC destination, VLAN tags, VLAN ID, and Priority. Press the **Loop Up** button to send a loop up command to the selected remote unit.

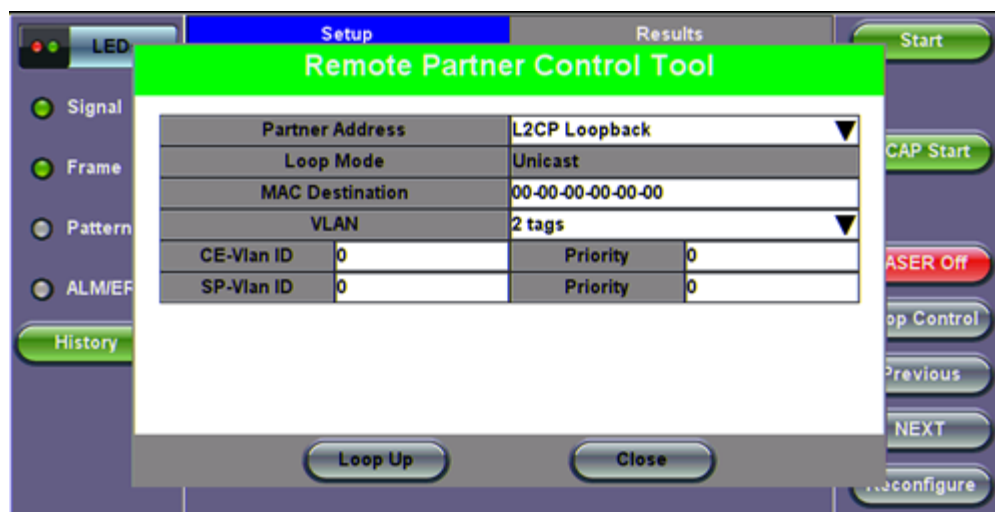

Loop Control - L2CP Loopback

[Go back to top](#) [Go back to TOC](#)

List of Protocols

Layer 2 Control Protocol	Protocol Identifier	L2CP destination address
Spanning Tree (STP, MSTP, RSTP)	LLC= 0x82	01-80-C2-00-00-00
Link Aggregation (LACP)	Ethertype: 0x8809 Subtypes: 0x01	01-80-C2-00-00-02
E-LMI	Ethertype: 0x88EE	01-80-C2-00-00-07
Link OAM	Ethertype: 0x8809 Subtype: 0x03	01-80-C2-00-00-02
Ethernet ESMC	Ethertype: 0x8809 Subtype: 0x0A	01-80-C2-00-00-02
PTP	Ethertype: 0x88F7	01-80-C2-00-00-0E
Link Layer Discovery Protocol (LLDP)	Ethertype: 0x88CC	01-80-C2-00-00-0E
Virtual Station Interface Discovery and configuration protocol (VDP)	Ethertype: 0x8940 Subtype: 0x0001	01-80-C2-00-00-00
Port Extender Control and Status Protocol (PE-CSP)	Ethertype: 0x8940 Subtype: 0x0002	01-80-C2-00-00-03
Port based network access protocol (PNAC 802.1X)	Ethertype: 0x888E	01-80-C2-00-00-00
Shortest Path Bridging (SPB)	LLC address = 0xFE	01-80-C2-00-00-2E
Multiple MAC registration protocol (MMRP)	Ethertype: 0x88F6	01-80-C2-00-00-20
Multiple VLAN registration protocol (MVRP)	Ethertype: 0x88F5	01-80-C2-00-00-21
Multiple Stream registration Protocol (MSRP)	Ethertype: 0x22EA	01-80-C2-00-00-0E
Multiple ISID registration protocol (MIRP)	Ethertype: 0x8929	01-80-C2-00-00-00
Port Aggregation Control Protocol (PAgP)	protocol type code 0X0104	01-00-0C-CC-CC-CC
Cisco Discovery Protocol (CDP)	OUI of 0x00000C and a protocol ID of 0x2000.	01-00-0C-CC-CC-CC
Cisco Unidirectional Link Detection (UDLD)	SNAP format: LLC value 0xAAAA03 Org Id 0x00000C protocol type 0x0111	01-00-0C-CC-CC-CC
Cisco VLAN Trunking Protocol (VTP)	SNAP format: LLC value 0xAAAA03 Org Id 0x00000C protocol type 0x2003	01-00-0C-CC-CC-CC
Cisco Dynamic Trunking Protocol (DTP)	SNAP format: LLC value 0xAAAA03 Org Id 0x00000C protocol type 0x2004	01:00:0C:CD:CD:CD
Cisco Inter Switch Link (ISL)	SNAP format: LLC value 0xAAAA03 Org Id 0x00000C	01:00:0C:00:00:00
Per VLAN Spanning Tree (PVST/PVST+/RPVST)	SNAP format: LLC value 0xAAAA03 Org Id 0x00000C protocol type 0x010	01:00:0C:CD:CD:CD
Custom Frame #1	Configurable	Configurable
Custom Frame #2	Configurable	Configurable

[Go back to top](#) [Go back to TOC](#)

15.23 IP Monitoring

The IP Monitoring tab displays incoming bandwidth statistics. Top talkers displayed in Net Wiz are listed from highest to lowest bandwidth consumption. Measurements featured in IP Monitoring are the same as BERT Results. Please see [BERT Results](#). IP and Traffic buttons located in the **Application** tab display IP and Traffic measurements, respectively.

To perform Trace Route testing (located in **Net Wiz > Trace Route**), select an IP address and tap **Trace Route**. Refer to **Tools > IP Tools > Trace Route** in **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for more information.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

IP Monitoring

Net Wiz

SummaryErrorsAlarms

EventsApplicationDelayRates

ST:2017-5-3 15:40:03ET:00:00:16

Rx(%)Rx(f/s)

DHCPV6-SERVER31.89.3E-01

NETBIOS-NS28.38.3E-01

Unknown(UDP5355)13.94.1E-01

Unknown(UDP1534)7.52.2E-01

Unknown(UDP5353)6.72.0E-01

Unknown(UDP513)3.61.1E-01

Unknown(UDP5678)3.61.0E-01

Unknown(UDP17500)2.26.5E-02

Page 1 of 2

Stop

Traffic

IP

IP Monitoring > Application

LEDs

Signal

Frame

Pattern

ALM/ERR

History

IP Monitoring

Net Wiz

Summary

Errors

Alarms

Events

IP

Delay

Rates

ST:2017-5-3 15:40:03

ET:00:01:00

	Rx(%)	Rx(f/s)
192.168.0.59	24.5	6.6E-01
192.168.0.88	10.3	2.8E-01
192.168.0.45	6.6	1.8E-01
169.254.166.72	5.9	1.6E-01
192.168.0.197	5.4	1.5E-01
192.168.0.153	5.4	1.5E-01
192.168.0.30	5.1	1.4E-01
192.168.0.7	4.7	1.3E-01

Page 1 of 3

Stop

Application

Traffic

IP Monitoring > IP

LEDs Signal Frame Pattern ALM/ERR History	IP Monitoring		Net Wiz	
	Detail		Trace Route	
	IP Address	MAC Address	Group Name	Machine Name
	192.168.0.59	N/A	N/A	N/A
	192.168.0.199	N/A	N/A	N/A
	192.168.0.88	N/A	N/A	N/A
	192.168.0.45	N/A	N/A	N/A
Page 1 of 5				

Net Wiz > Detail

LEDs

Signal

Frame

Pattern

ALM/ERR

History

IP Monitoring

Detail

Setup

TRACEROUTE: Finished

Hop	TTL (ms)	Address
1	4	192.168.0.164

Page 1 of 1

Net Wiz

Stop

Trace Route

Net Wiz >Trace Route > Result

LEDs

Signal

Frame

Pattern

ALM/ERR

History

IP Monitoring

Detail

Setup

Destination

Time Out (s)

Max Hop

Net Wiz

Trace Route

Result

192.168.0.164

5

10

Stop

Trace Route

Net Wiz >Trace Route >Setup

[Go back to top](#) [Go back to TOC](#)

16.0 Fiber Channel


Fiber Channel Applications

Introduction

Enterprises worldwide rely on complex IT infrastructures to store and maintain critical data and applications. Storage Area Networks (SANs) have evolved to improve availability, resiliency, performance, modularity and geographical distribution of data storage systems and Fiber Channel is an important technology for linking SANs together.

Fiber Channel over IP

Often, IP-centric networks are used to connect SAN islands over Local Area Networks (LAN), Metropolitan Area Networks (MAN), or Wide Area Networks (WAN). An operational IP backbone (Layer 2 or Layer 3 topology) capable of delivering the required bandwidth for Fiber Channel applications is an absolute prerequisite. The test set equipped with Ethernet and Fiber Channel features is able to verify FCIP connections in a variety of network configurations.

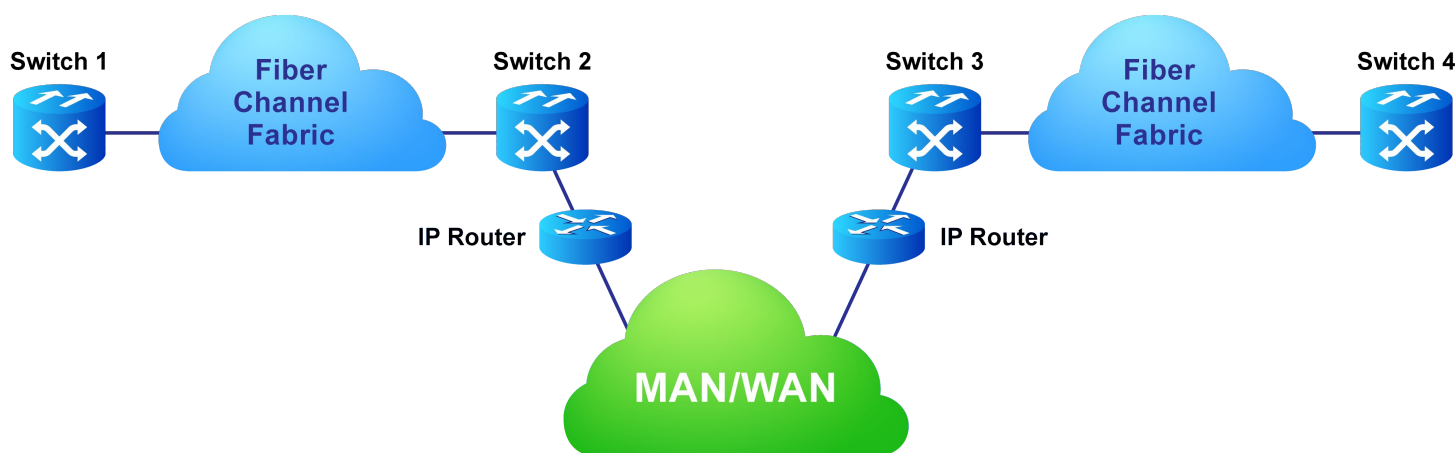

Fiber Channel over SDH/SONET

Service providers have made huge investments in SDH/SONET infrastructure over many decades, hence storage over SONET/SDH networks are considered an essential part of any operator's SAN extension solution. DWDM networks are perfect for transporting high-density, high-bandwidth SAN applications over short distances while SDH/SONET/OTN networks are often used for longer distance applications. The test set is equipped with a strong set of features needed to verify the strategic components and network interconnects.

Key Test Applications

Transport layer - Most customers or providers transporting Fibre Channel are not necessarily trained or concerned with testing the higher protocol layers -- instead the transport groups tasked with transporting this data across a point-to-point or ring type DWDM network are more likely to ask: Did data arrive error free or were any bit errors encountered? Was the CRC corrupted or were any code violations experienced? Testing the transport layer is crucial and normally includes the FC-0 Layer, FC-1 Layer, and parts of the FC-2 Layer where:

- FC-0 addresses the physical layer: the optical fiber, connectors, and associated optical signal parameters.
- FC-1 addresses the transmission protocol encoding/decoding, and special characters used for protocol management.
- FC-2 addresses the signaling protocol layer, which comprises the framing protocol and the flow control process.

The Fibre Channel option addresses all the transport layers by measuring the optical power level and supporting the generation/analysis of bit errors, order sets, frame delimiters, frame transmission, and the generation of primitive sequences. User defined bytes, fixed test patterns or industry-standard PRBS patterns can be selected and inserted into the payload field depending on the test layer. Bit error, CRC error and Code violation insertion are useful features to verify Mux/Demux equipment for error monitoring and detection.



Buffer-to-Buffer Credit Estimation - To avoid loss of frames during transmission, the Fibre Channel protocol uses a buffer-to-buffer flow control mechanism between link partners. During the login process, the remote node informs the local nodes as to the number of receive buffers it has available. For each frame received, the remote port returns a R_RDY frame to indicate that one of the receive buffers is now free - the local port in turn increments its available credit counter by one for each R_RDY acknowledgement frame it receives. However, as the distance between nodes or link partners increases, so does the time it takes for the transmitting node to receive the R_RDY frame because of signal propagation delay. The standard practice for a 1Gbps Fibre Channel link is to allow 1 buffer credit for each 2km of distance.

[Go back to top](#) [Go back to TOC](#)

16.1 Setup

	“Fibre Channel ” versus “Fiber Channel”
	Confusing naming and spelling conventions have stuck with Fibre Channel during its development. The word “channel” in no way indicates a preference for channel protocols or environments. Even though “fibre” and “fiber” are semantically equivalent (“fibre” is the international English spelling), “Fibre Channel” is the official spelling for the technology. “Fiber” has come to mean more specifically the optical (glass) media used for long-distance (up to 10 km) connections.

[Go back to top](#) [Go back to TOC](#)

16.1.1 Test Applications

After selecting the Fiber Channel test mode, the **Fiber Channel** main menu appears.

 *If using the UX400-Combo module, refer to the UX400 Platform manual for more details on how to assign a test module. Depending on the test platform and installed module, availability of test applications and features may vary.*



Fiber Channel Main Menu


The Fiber Channel Main Menu provides shortcut application buttons for FC BERT, FC RFC 2544, FC Throughput, FC Loopback, and IP testing.

Some test capabilities or test rates may be specific to the product configuration or may require the purchase of a software option in order to be displayed or be enabled.

To configure ports and measurements, press **Setup** on the main menu.

[Go back to top](#) [Go back to TOC](#)

16.1.2 Port Configuration

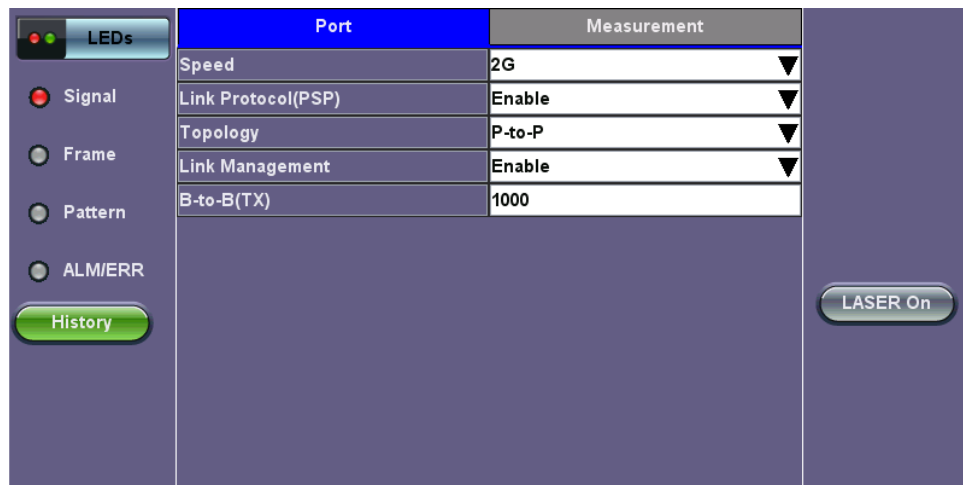

Fiber Channel - Port Setup

On the **Port** tab, select from the following options to configure your FC port:

- **Speed:** Selectable test rates via drop-down menu:
 - 1G (1.0625 Gbps)
 - 2G (2.125 Gbps)
 - 4G (4.25 Gbps)
 - 8G (8.50 Gbps)
 - 10G (10.52 Gbps)
 - 16G (14.025 Gbps)
- **Link Protocol:** Enables or Disables the PSP
 - Enabling the Primitive Sequence Protocol (PSP) allows link management
 - Disabling the Primitive Sequence Protocol (PSP) forces the port into an Active state with no link management
 - PSP is an Ordered Set transmitted repeatedly which is used to establish and maintain a link.
 - PSP also when this setting is enabled
 - When a Primitive Sequence is received and recognized, a corresponding Primitive Sequence or Idle is transmitted in response. Recognition of a Primitive Sequence requires consecutive detection of 3 instances of the same Ordered

Set.

- The Primitive Sequences supported by the standard are:
 - Offline (OLS)
 - Not Operational (NOS)
 - Link Reset (LR)
 - Link Reset Response (LRR)
- **Topology:** Point-to-Point (P-to-P) mode is supported.
 - In Point-to-Point mode, only two ports are used, connected by a fiber optic link. The transmitter of each port is connected directly to the receiver of the opposite port. There is no ambiguity in addressing, and there is no question of availability.
 - **Note:** *Fibre Channel defines three topologies: 1) Point-to-Point, 2) Arbitrated Loop, and 3) Fabric; however, Point-to-Point topology is the least complex.*
- **Link Management:** Enable or Disable
 - Only available when PSP is enabled
 - Initializes the Fibre Channel link and manages various states, including link failure, loss of synchronization, loss of signal, or protocol violations
- **B-to-B (Tx): Buffer to Buffer:** Valid settings are in the range from 1 to 65535.
 - Number of local port frame buffers are available to receive frames from another port
 - Determines how many frames can be sent before receiving R_RDY acknowledgements.
 - “Credits”, or the number of frames, are negotiated between the n_ports and f_ports at the time of login
 - Both ports on the link exchange values of how many frames they are willing to receive at a time from the other port. This value becomes the other port's BB_Credit value and remains constant as long as the ports are logged in.
 - Each port also keeps track of BB_Credit_CNT.
 - **Transmitter:** For each frame transmitted, BB_Credit_CNT is incremented by 1.
 - **Receiver:** The value is decremented by 1 for each R_RDY Primitive Signal received from the other port.

[Go back to top](#) [Go back to TOC](#)

Port	Measurement
Mode	Manual
Event Log	Circular
TX Start	Coupled
Results Auto Save	OFF

Fiber Channel - Measurement Setup

On the **Measurement** tab, select from the following options to setup your FC measurements:

- **Mode:** Manual or Timed
 - **Manual:** Measurement is started (by the User) by pressing the **Start** button and ended when pressing the **Stop** button.
 - **Timed:** Measurement duration can be programmed in seconds, minutes, hours or days.
- **Event Log:** Circular or Blocked. When set to Circular, log events may be overwritten with the latest events if the circular buffer fills up. The oldest event will be deleted so that the new event can be added. When set to Blocked, the log will not be overwritten when buffer is full and the latest events will not be logged.
- **TX Start:** Separated or Coupled. Configures how the measurements are started when in BERT and Multiple Streams test modes.
 - **Separate:** Independent control (Start/Stop) of the transmitter is enabled. At the start of the test only the receiver is turned on -- the user must start the transmitter manually.
 - **Coupled:** Transmitter and receiver are turned on at the same time, and the Tx and Rx measurements start at the same time at the start of the test.

[Go back to top](#) [Go back to TOC](#)

16.2 BERT/Throughput

16.2.1 Overview

The test set complies with ANSI NCITS FC-FS recommendations and has the ability to test 1, 2, 4, 8 and 10 Gigabit Fibre Channel.

- 1/2/4/8/16G Fiber Channel: The unit verifies the 8B/10B PCS Layer with a basic primitive set at FC-1 or FC-2 lower layers.
- 10/16G Fiber Channel: The unit verifies the 64B/66B PCS Layer with a basic primitive set at FC-1 or FC-2 lower layers.
 - FC-1 Layer addresses the transmission protocol encoding, decoding, and special characters used for protocol management
 - FC-2 is the signaling protocol layer, which is made up of a framing protocol and a flow control process


The unit supports the generation and monitoring of: bit errors, order sets, frame delimiters, frame transmission, and generation of primitive sequences. BERT diagnostics perform a bit-by-bit comparison to find bit errors in the received data pattern. Error Count and Error Rate for the latest sample are displayed and maintained, as well as totals for all samples from the test start.

The user can use a default frame header or define a custom frame header - the unit takes care of the frame/header setup, creates the user defined SOF and EOF delimiters and calculates the CRC error checking bytes, which are placed within the frame. User defined bytes, fixed patterns or industry standard PRBS patterns can be selected from drop-down menus and radio buttons and inserted into the payload field.

Testing is supplemented with the capability to perform Bit and CRC error insertion. These tests allow users to test their own Mux demux equipment for error monitoring and detection. The test set displays the BERT test results continuously and any anomaly is recorded in an event log which is date and time stamped. All results can be saved and exported into ReVeal MX for analysis or customer test report generation.

Fiber Channel Layers

The Open Systems Interconnect (OSI) model breaks communications into seven layers namely, Physical, Data Link, Network, Transport, Session, Presentation, and Application. Fibre Channel does not follow the ISO model - instead, the protocol has been broken into five layers: FC-0, FC-1, FC-2, FC-3, and FC-4.

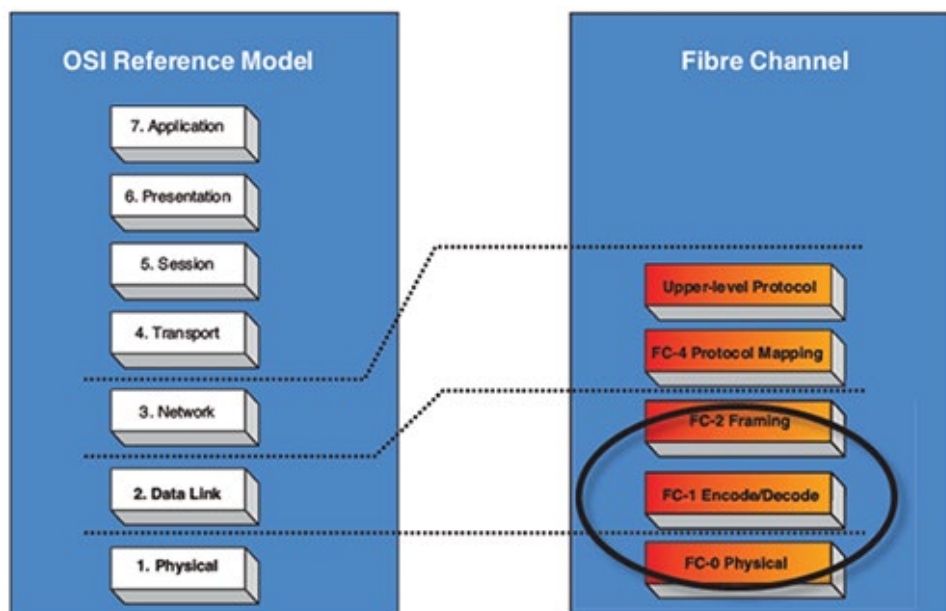

OSI layers versus FC layers

- **FC-0** defines the physical portions of Fibre Channel, including the media types, connectors, and the electrical and optical characteristics needed to connect ports. This level is in the FC-PH standard.
 - Signaling
 - Media specifications
 - Receiver/Transmitter specifications
- **FC-1** defines the transmission protocol, encoding, order of word transmission, and error detection. This level is in the FC-PH standard.
 - 8B/10B character encoding (1/2/4/8G FC) or 64/66B character encoding (10G FC)
 - Link maintenance
- **FC-2** defines the signaling and framing protocol, including frame layout, frame header content, and rules for use. It also contains independent protocols such as login. This is the bulk of the FC-PH standard.

Frame format

- o Sequence management
- o Exchange management
- o Flow Control
- o Classes of Service
- o Login/Logout
- o Topologies
- o Segmentation and Reassembly


OSI Model	Fiber Channel	Description
Layer 2: Data link	FC-2	Similar to the MAC functionality – Fiber Channel frames are defined, addressed and CRC are added
Layer 1: Physical	FC-1	Similar to the physical layer of the OSI model – Fiber Channel adds basic flow control functionality and ordered sets
	FC-0	

Fiber Channel layers and functionality

- **FC-3** defines common services that may be available across multiple ports in a node. This level has no standard now.
 - o Services for multiple ports on one node
- **FC-4** defines the mapping between the lower levels of Fibre Channel, and the command sets that use Fibre Channel.
 - o Upper Layer Protocol (ULP) mapping
 - Small Computer System Interface (SCSI)
 - Internet Protocol (IP)
 - High Performance Parallel Interface (HIPPI)
 - Asynchronous Transfer Mode - Adaption Layer 5 (ATM-AAL5)
 - Intelligent Peripheral Interface - 3 (IPI-3) (disk and tape)
 - Single Byte Command Code Sets (SBCCS)

[Go back to top](#) [Go back to TOC](#)

16.2.2 Setup

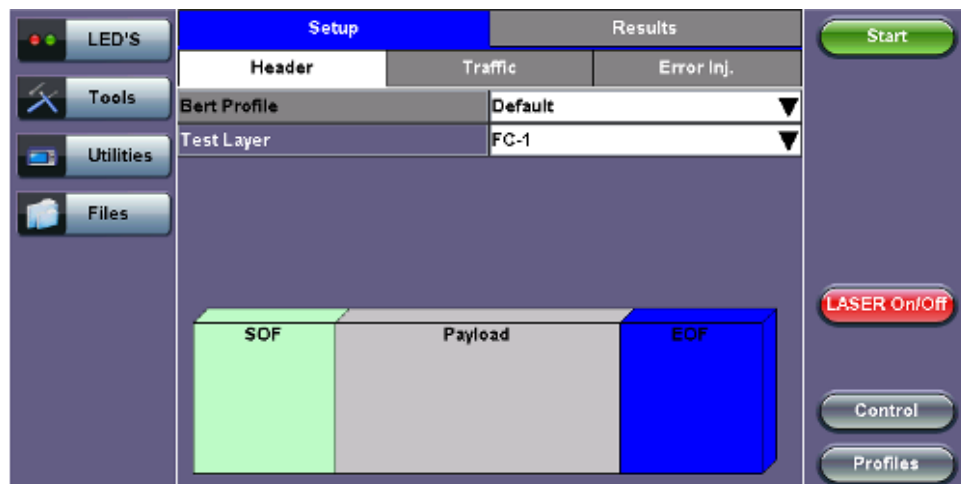


FC-1 BERT - Test Frame Setup


Profile: User Defined Profile or Default setting can be used for testing.

Test layer: FC-1 or FC-2 only. Testing at other layers is not supported.

- **FC-1:** Information is transmitted using an adaptive code (8B/10B or 64/66B) depending on test rate and the encoding process results in the generation of transmission characters.
 - o The two types of Transmission Characters defined are data and special. Certain combinations of Transmission Characters, referred to as Ordered Sets, are designated by this standard to have special meaning.
 - o Ordered Sets are used to identify frame boundaries, transmit primitive function requests, and maintain proper link transmission characteristics during periods of inactivity.

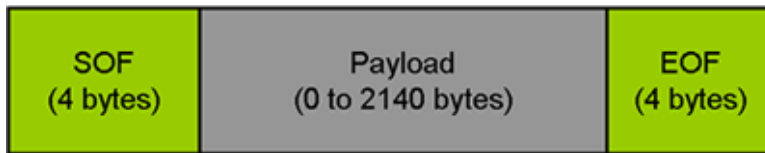


FC-1 Frame Structure

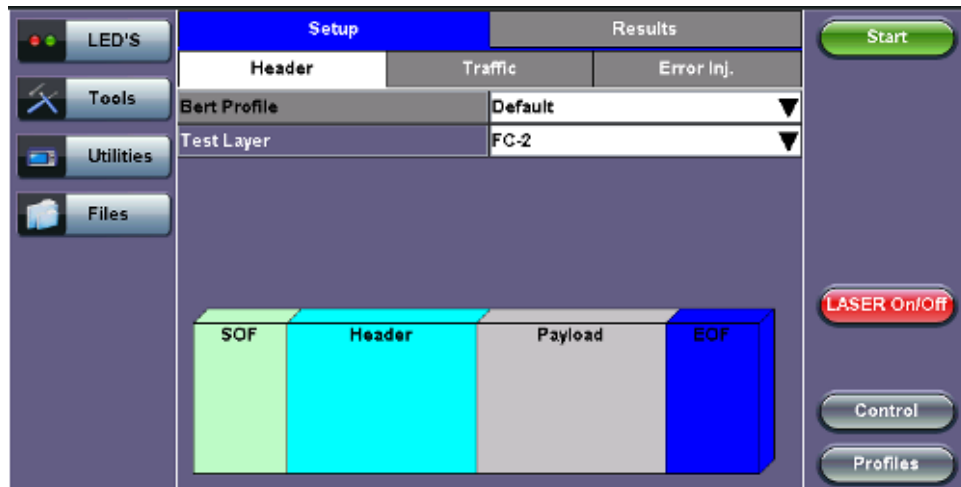

FC-2 BERT - Header Setup

- **FC-2:** Only FC-2 frames have a header, so these fields are not available for FC-1 frames.
 - Defines the framing rules and mechanisms for controlling the different service classes. The following building blocks are defined by the standard:
 - Ordered Set
 - Frame
 - Sequence
 - Exchange
 - Protocol

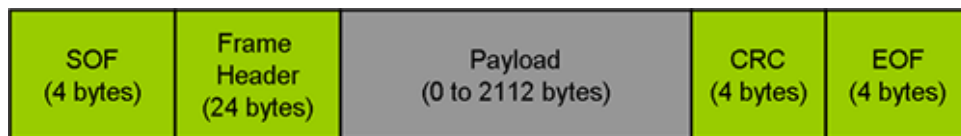

FC-2 Frame Structure

FC-2 Header

The FC-2 header is only 24 bytes long. Header settings do not affect the transmission or reception of the FC-2 frame.

[Go back to top](#) [Go back to TOC](#)

Understanding the Basic Test Channel Frame Structure

The Fibre Channel standard defines a variable frame length consisting of 36 bytes of overhead and up to 2112 bytes of payload for a total maximum size of 2148 bytes.

- **SOF and EOF**
 - A Start of Frame (SOF) delimiter and End of Frame (EOF) delimiter mark the beginning and end of each Fibre Channel frame
 - Available for both FC-1 and FC-2 frame formats
- **Frame Header**
 - Is the first field of the frame content and immediately follows the SOF delimiter and is transmitted on a word boundary

- Is used to control link operations and device protocol transfers as well as detect missing or out of order frames
- Available in FC-2 frame format only
- **CRC** - The Cyclic Redundancy Check (CRC)
 - Is a four byte field that follows the Data Field and is used to verify the data integrity of the Frame Header and Data Field.
 - SOF and EOF delimiters are not included in the CRC verification
 - The CRC field is calculated on the Frame Header and Data Field prior to encoding for transmission and after decoding upon reception

Frame Delimiters

A frame delimiter is an **Ordered Set** that immediately precedes or follows the contents of a frame. Separate and distinct delimiters shall identify the start of a frame and the end of a frame and shall be recognized when a single Ordered Set is detected. An Ordered set is described below.

Ordered Set

An Ordered Set is a four-character combination of data and special Transmission Characters. Ordered Sets provide the ability to obtain bit and word synchronization that also establishes word boundary alignment. The three types of Ordered Sets are:

- **Frame Delimiters**
 - **(SOF)** Start-of-Frame
 - **(EOF)** End-of-Frame
- **Primitive Signals**

A Primitive Signal is an Ordered Set designated to have special meaning. All FC_Ports shall at a minimum recognize R_RDY and IDLE Primitive Signals. All Primitive Signals not recognized by the FC_Port shall be treated as an IDLE.

 - **Idle:** Idle is a Primitive Signal transmitted on the link to indicate that link initialization is complete and to maintain link synchronization
 - **(R_RDY)** Receiver Ready
- **Primitive Sequence**
 - **(OLS)** Off-line
 - **(NOS)** Not Operational
 - **(LR)** Link Reset
 - **(LRR)** Link Reset Response

Start of Frame (SOF) and End of Frame (EOF) Delimiter setup

The Start-of-Frame (SOF) delimiter is an Ordered Set that immediately precedes the frame content. There are multiple SOF delimiters defined for Sequence control. SOF indicates that a Frame will immediately follow and indicates which class of service the Frame will use.

The value of the SOF field determines the class of service associated with the FC frame. Several Classes of service are specified in Fiber Channel but only Classes 1,2,3 & 4 are described below. Classes 1, 2, and 3 are topology independent, however, Classes 4 and 6 require a Fabric. If the Fabric is not present, the service is provided as a special case of point-to-point. FC_Ports are not required to support all classes of service.

- **Class 1:** Dedicated physical connection with delivery confirmation. This class of service has three phases:
 - Setting up the connection
 - Transferring the information
 - Closing down the connection
- **Class 2:** Frame multiplexed service with delivery confirmation. No dedicated connection between the two communication parties is established. This class of service allows a stream of frames to be sent to different destinations quickly. Class 2 also requires frame confirmations by the recipient.
- **Class 3:** Is sometimes called "datagram". It is "connectionless" service with the Fabric multiplexing frames at frame boundaries, if a Fabric is present. If a Fabric is not present, this service becomes a special case of point-to-point.
- **Class 4:** Is a service that uses a virtual circuit established within a Fabric and between two communicating Nx_Ports to transmit frames to each other using a fabric-managed fractional bandwidth allocation protocol. This service requires a Fabric.

The following SOF Service Class selections are available:

- **SOF Initiate (SOFix)**

A Sequence shall be initiated and identified by using SOFi1, SOFi2, SOFi3, or SOFi4 in the first frame. SOFix is used to represent these four SOF delimiters.

 - **SOFi3:** Contains a code value of 0x2E indicating SOF Initiate Class 3. A SOFi3 should be used on the first frame of a Sequence for Class 3 Service.

- **SOF Normal (SOFnx)**

The following delimiters identify the start of all frames other than the first frame of a Sequence based on class of service. SOFnx is used to indicate SOFn1, SOFn2, SOFn3 and SOFn4.

- **SOF_n3:** Contains a code value of 0x36 indicating SOF Normal Class 3. The SOFn3 shall be used for all frames except the first frame of a Sequence for Class 3 Service.

- **SOF Fabric (SOFf)**

- **SOF_f:** Contains a code value of 0x28 indicating SOF Fabric. If an Nx_Port or Fx_Port receives a Class F frame, indicated by an SOFf delimiter, it shall be discarded by the Nx_Port or Fx_Port. The receiving Nx_Port or Fx_Port may send an R_RDY



FC-2 BERT - SOF Setup

End of Frame (EOF)

The End-of-Frame (EOF) delimiter is an Ordered Set that immediately follows the CRC and is transmitted on a word boundary. The EOF delimiter designates the end of the frame content and is followed by Idles. There are three categories of EOF delimiters found in the Fiber Channel standard, however the test set only supports the first category that indicates that the frame is valid from the sender's perspective and potentially valid from the receiver's perspective.

The following selections are available:

- **EOF_t:** Contains a code value of 0x42 indicating EOF Terminate. The EOFt indicates that the Sequence associated with this SEQ_ID is complete. EOFt is used to properly close a Sequence without error.
- **EOF_n:** Contains a code value of 0x41 indicating EOF Normal. The EOFn identifies the end of frame when one of the other EOF delimiters indicating valid frame content is not required.



FC-2 BERT - EOF Setup

[Go back to top](#) [Go back to TOC](#)

Payload

The test set implements and observes "Methodologies for Jitter and Signal Quality Specification (MJSQ)". A major goal of MJSQ is to

improve the relationship between measurements on signals and receiver performance in terms of bit errors. The unit transmits a "compliant pattern" which consists of a valid Fiber Channel protocol frame (SOF, payload, CRC, EOF) containing a test pattern as the payload. Different payload selections are available depending on the Fiber Channel layer to be tested. The payload consists of 0 to 2112 bytes, and is sent in 4 byte increments, otherwise it is considered to be a misaligned frame.

FC-1 Payload (test pattern)

Layer 1 test patterns are formatted using the 8B/10B symbol format and include the PCS layer as part of the BER pattern.

CRPAT, CSPAT, and CJTPAT test patterns according to NCITS-TR-25-1999 and MJSQ, are designed to evaluate frequency fluctuations, transceiver noise and phase jumps caused by jitter and other anomalies. These test patterns are described briefly as follows:

- **CSPAT:** Compliant Supply Noise Pattern
 - Represents worst case power supply noise
- **CRPAT:** Compliant Random Pattern
 - Provides broad spectral content and minimal peaking for the measurement of jitter at component or system level
- **CJTPAT:** Compliant Jitter Test Pattern
 - Jitter Tolerance Pattern that stresses a receiver by exposing it to extreme phase jumps thereby stressing the clock data recovery (CDR) circuitry
 - The pattern alternates between repeating low transition density patterns and repeating high transition density patterns



FC-1 BERT - Payload Setup



FC-1 Test Patterns

CRPAT sequence is offered for TX jitter measurements.

CRPAT and CJTPAT are available for RX jitter tolerance measurements - use these test patterns to test the resilience of the receiver (Clock Data Recovery - CDR) and its tolerance to signals with jitter.


[Go back to top](#) [Go back to TOC](#)

FC-2 Payload (test patterns)

Layer 2 "Compliant" test patterns are modified to resemble a true Fiber Channel frame - the pattern's format is similar to a basic frame which includes a Start of Frame Delimiter (SFD), End of Frame Delimiter (EFD), and Cyclic Redundancy Check (CRC).

Pseudo Random Bit Sequences (PRBS) are commonly used to test the signal integrity of high-speed links and are defined in ITU-T 0.150 & 0.151 Recommendations – These legacy SONET/SDH/PDH test sequences may appear random but they have specific properties that can be used to measure the quality of a link. PRBS patterns can be normal or can be inverted.

- **2E31-1:** 147 483 647-bit pattern used for special measurement tasks, (e.g., delay measurements at higher bit rates)
- **2E23-1:** 8 388 607 bit pattern primarily intended for error and jitter measurements at bit rates of 34 368 and 139 264 kbps
- **2E15-1:** 32 767 bit pattern primarily intended for error and jitter measurements at bit rates of 1544, 2048, 6312, 8448, 32 064 and 44 736 kbps
- **2E11-1:** 2047 bit pattern primarily intended for error and jitter measurements on circuits operating at bit rates of 64 kbps and N x 64 kbps

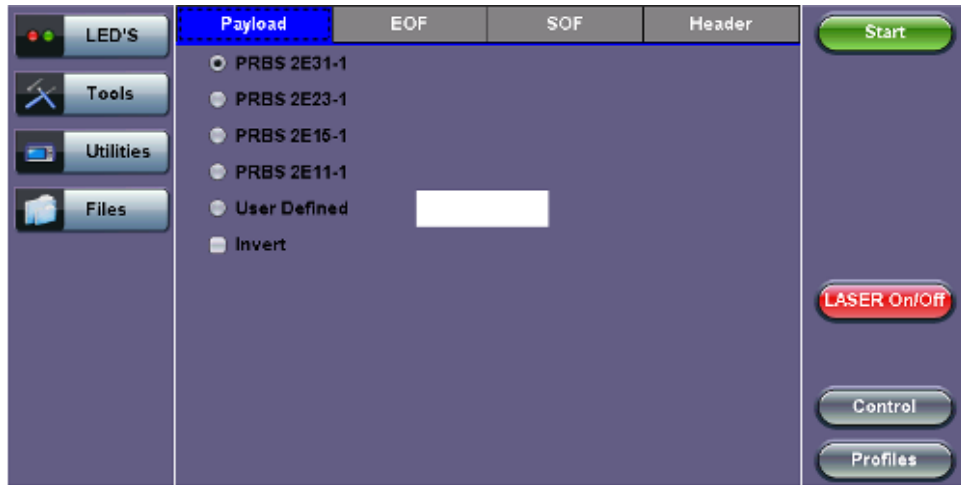

FC-2 BERT - Payload Setup



BERT Testing Tips

A BERT samples every incoming bit and looks for something that doesn't occur often. This traditional method typically used in SONET/SDH measurements, can however take a very long time. For example, in a 1Gbps Fiber Channel system, errors occur on average once every 1000 s (about 17 Min) for 1×10^{-12} BER, so you would need to detect at least 10 to 100 errors before you can have confidence in your measurement. Bear in mind that for a quick measurement, you need a test pattern that repeats frequently. A PRBS-11 sequence (2047 bits) repeats many times a second at a 1-Gbps rate, however a PRBS-31 pattern, with 2 billion bits, repeats only every 2 s at 1 Gbps.

A general rule of thumb is to choose a PRBS that is closest to the nature of the data you will be passing through your network. Patterns between $2^{11}-1$ and $2^{31}-1$ (such as $2^{15}-1$ and $2^{23}-1$) offer good gradual steps in difficulty that allow you to see where networks fail, or how much margin you have beyond pass/fail thresholds.


Bit errors can affect the data frames - these frames will be re-transmitted at the request of the upper-layer protocols. If the FC link suffers a lot of bit errors, you may experience a slight performance loss. These bit errors can also affect the Receiver Ready (R_RDY) messages. A R_RDY is never repeated, so the buffer credit is one BB_Credit short until the link is reset.

The Fiber Channel standard allows a 1×10^{-12} maximum error rate.

[Go back to top](#) [Go back to TOC](#)

Header Setup (FC-2 only)

The FC-2 Frame Header is subdivided into the fields as shown in the diagram below.

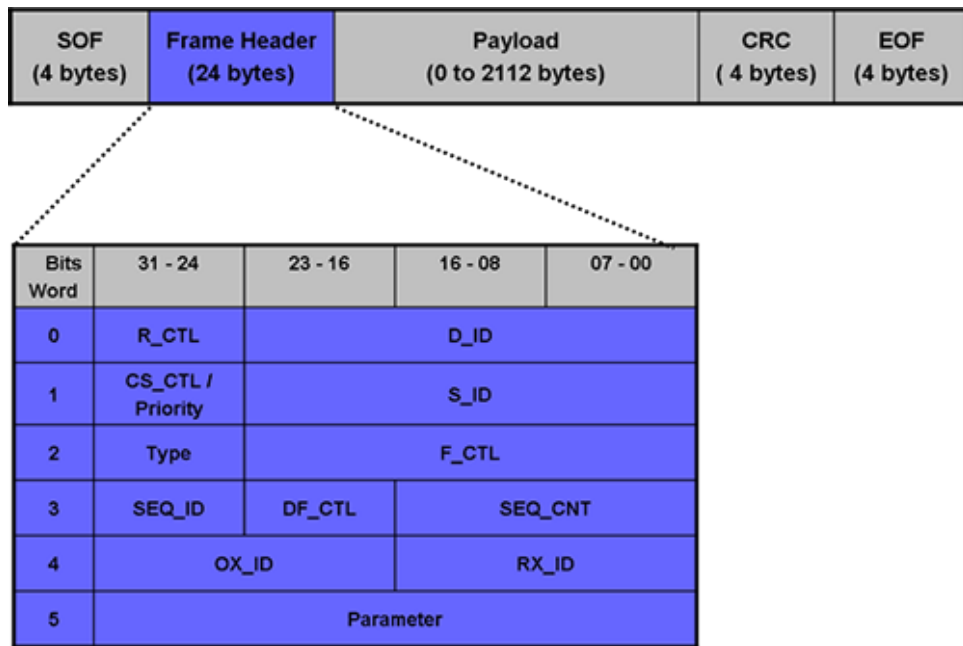

FC-2 Header Format

The Frame Header is the first field of the frame content and immediately follows the SOF delimiter. The Frame Header is used to control link operations and device protocol transfers as well as detect missing or out of order frames. The values of each field can be edited depending on network setup and test scenario. A brief description of each parameters is provided below.

FC-2 Header Setup

- **Routing Control (R_CTL):**
 - The R_CTL field is a one-byte field in Word 0 Bits 31-24 that contains routing bits and information bits to categorize the frame function.
 - When used in combination with the TYPE field (Word 2, bits 31-24), it provides an FC_Port with assistance in frame routing, data routing, or addressing.
 - The R_CTL field is further subdivided into the ROUTING field (bits 31-28) and the INFORMATION field (bits 27-24).
- **D_ID Address Identifier:**
 - Destination Identifier is a three-byte field (Word 0, Bits 23-0) that contains the address identifier of the destination Nx_Port.
 - Each Nx_Port has a native N_Port_ID that is unique within the address domain of a Fabric. It may also represent hunt groups, domain controllers, and other servers.
- **Class Specific Control (CS_CTL)/Priority:**
 - When bit 17 of F_CTL is set to zero, Word 1, bits 31-24 of the Frame_Header is defined as the CS_CTL field.
 - Contains management information for the class of service identified by the SOF. The meaning of the CS_CTL field is dependent on the class of service.
 - When supported by FC_Ports, the Priority field shall be used to resolve resource contention or to determine the order to deliver frames. The definition and use of the Priority field is class dependent.
- **S_ID Address Identifier:**

- The S_ID is a three-byte field (Word 1, Bits 23-0) that contains the address identifier of the source Nx_Port.
- **Type (Data Structure Type):**
 - The data structure type (TYPE) is a one-byte field (Word 2, Bits 31-24) that identifies the protocol of the frame content for Data frames.
- **Frame Control (F_CTL):**
 - The Frame Control (F_CTL) field (Word 2, Bits 23-0) is a three-byte field that contains control information relating to the frame content such as exchange, retransmission, or sequence control. It is also used to identify the function of the CS_CTL/P field.
- **Sequence Identifier (SEQ_ID):**
 - The SEQ_ID is a one-byte field (Word 3, Bits 31-24) assigned by the Sequence Initiator that is unique for a specific D_ID and S_ID pair while the Sequence is open.
 - Both the Sequence Initiator and the Sequence Recipient track the status of frames within the Sequence using fields within the Sequence_Qualifier.
- **Data Field Control (DF_CTL):**
 - Data Field Control (DF_CTL) is a one-byte field (Word 3, Bits 23-16) that specifies the presence of optional headers at the beginning of the Data_Field for Device_Data or Video_Data frames.
 - DF_CTL bits are not meaningful on Link_Control or Basic Link Service frames.
- **Sequence count (SEQ_CNT):**
 - The sequence count (SEQ_CNT) is a two-byte field (Word 3, Bits 15-0) that indicates the sequential order of Data frame transmission within a single Sequence or multiple consecutive Sequences for the same Exchange.
- **Originator Exchange_ID (OX_ID):**
 - The Originator Exchange_ID is a two-byte field (Word 4, Bits 31-16) that identifies the Exchange_ID assigned by the Originator of the Exchange.
 - Each Exchange is assigned an identifier unique to the Originator or Originator - Responder pair.
- **Responder Exchange_ID (RX_ID):**
 - The Responder Exchange_ID is a two byte field (Word 4, Bits 15-0) assigned by the Responder that provides a unique, locally meaningful identifier at the Responder for an Exchange established by an Originator and identified by an OX_ID.
- **Parameter:**
 - The Parameter field (Word 5, Bits 31-0) has meanings based on frame type.
 - For Link_Control frames, the Parameter field is used to carry information specific to the individual Link_Control frame.
 - For Data frames with the relative offset present bit set to 1, the Parameter field specifies relative offset, a four-byte field that contains the relative displacement of the first byte of the Payload of the frame from the base address as specified by the ULP.

For detailed information, please visit <http://www.incits.org/> and download the Fiber Channel FRAMING AND SIGNALING-2 (FC-FS-2) standard.

[Go back to top](#) [Go back to TOC](#)

16.2.3 Traffic Generation and Error Injection

Traffic Setup

- **Traffic Flow:** Select from Constant, Ramp, or Burst traffic flow - available selections depend on FC-1 or FC-2
 - **Constant:** Continuous traffic (no traffic shaping)
 - **Burst:** Two burst bandwidths are configured with variable burst time in seconds
 - **Ramp:** Start and stop bandwidths are configured along with the bandwidth step size and duration
- **Frame Size:** Set the frame size in bytes.
 - Available in FC-2 mode only
 - Valid settings are 56 bytes to 2148 bytes.
 - The frame length includes the SOF and EOF overhead bytes.
- **Constant Bandwidth:** Configure the transmit rate or bandwidth in %
 - Valid settings are 1% to 100% in 0.01% increments

[Go back to top](#) [Go back to TOC](#)


General tab (Throughput only)

- **RTD Measurement:** Enable or Disable Round Trip Delay Measurement
- **SDT Measurement Trigger (>μs):** Any inter-frame gap that is equivalent or greater than the configured threshold will trigger the SDT measurement. This is useful if a known threshold is expected from a given network under test. For example, if the known switchover time is 50ms, the trigger can be set to a value slightly below 50ms to assure that the SDT is measured.
- **SDT Violation Threshold (μs):** Triggers an SDT Violation event in the event log. This is helpful for historical purposes during any given test. If the measured SDT is equivalent or greater than the configured threshold an SDT Violation event is counted.

[Go back to top](#) [Go back to TOC](#)

16.2.4 Starting Measurements

- **Start** button: Click to start the measurement.
- **Laser** button: Can be turned On or Off to make adjustments to the fiber patch cord, etc.
- **TX Start** button: Activate the Transmitter to initiate the BER measurement.

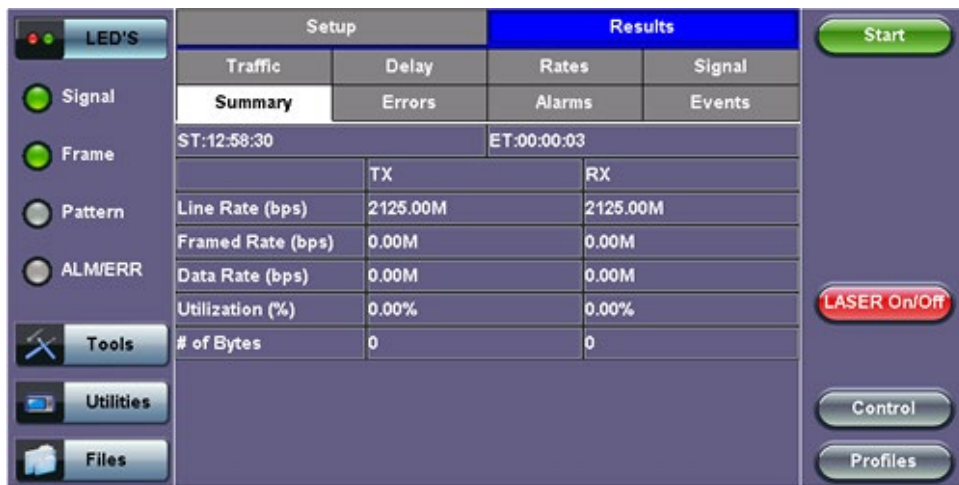

FC-1/2 BERT - Prior to Starting

[Go back to top](#) [Go back to TOC](#)

16.2.5 Results

Summary

- **Line Rate:** Indicates the transmitted and received bit rate
 - 1.0625 Gbps, 2.125 Gbps, 4.25 Gbps, 8.50Gbps, or 10.52 Gbps, 14.025G, 16G displayed in Mbps
- **Framed Rate:** Total number of frames including overhead of any type per second (Mbytes)
- **Data rate:** Total count of frames with payload data per second (Mbytes)
- **Utilization:** Bandwidth utilization in %
- **# of Bytes:** Number of bytes transmitted versus bytes received.
- **BB Credits Used:** Number of Buffer Credits used.

Summary (Throughput only)

- **Total Frames:** Total number of frames transmitted versus frames received
- **Bad Frames:** Number of frames transmitted but not received.

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Traffic

Delay

Rates

Signal

Summary

Errors

Alarms

Events

ST:12:14:19

ET:00:01:49

TX

RX

Line Rate (bps)

2125.00M

2125.00M

Framed Rate (bps)

1700.04M

1700.03M

Data Rate (bps)

1649.84M

1649.83M

Utilization (%)

100.00%

100.00%

of Bytes

20730518268

20730517988

Stop

Restart

Tx Stop

Err inj.

LASER On/Off

Control

Profiles

FC - BERT - Summary

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Setup		Results		
Events	Traffic	Delay	Rates	Signal
Summary		Errors	Alarms	SDT
ST:2017-6-7 17:01:04		ET:00:00:07		
	TX	RX		
Line Rate (bps)	2125.000M	2125.000M		
Framed Rate (bps)	1679.917M	1679.932M		
Data Rate (bps)	1649.799M	1649.813M		
Utilization (%)	100.000%	100.000%		
Total Frames	737554	737557		
Bad Frames	0	0		
BB Credits Used	2			

Stop

Restart

TX Stop

Err Inj.

LASER Off

FC - Throughput - Summary

[Go back to top](#) [Go back to TOC](#)

Errors

Current and Total values for:

- **Bits:** Number of bits received
- **BER:** Bit error ratio based on PRBS received or ratio of payload bit errors to total received payload bits
- **Symbol:** Symbol error or Code Violation is a bit error or disparity error occurring in a primitive sequence or Ordered Set
- **FCS/CRC:** Number of frames with either a bad or missing CRC or Frame Check Sequence
- **Oversize:** Number of Oversize frames received (> 2112 bytes)
- **Undersize:** Number of Undersize frames received (< 28 bytes)

Errors (Throughput only)

- **Frame Loss:** Number of frames lost
- **Frame Loss (%):** Percentage of frames lost
- **OOS:** Number of out-of-sequence frames received

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Traffic	Delay	Rates	Signal
Summary	Errors	Alarms	Events
	Current	Total	
Bits	0	0	
BER	0.000000E+00	0.000000E+00	
Symbol	0	0	
FCS/CRC	0	0	
Oversize	0	0	
Undersize	0	0	

Stop

Restart

Tx Stop

Err inj.

LASER On/Off

Control

Profiles

BERT - Errors

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Setup

Results

Events

Traffic

Delay

Rates

Signal

Summary

Errors

Alarms

SDT

Current

Total

Bits

0

0

BER

0.000000E+00

0.000000E+00

Symbol

0

0

FCS/CRC

0

0

Frame Loss

0

0

Frame Loss %

0.000%

0.000%

OOS

0

0

Page 1 of 2

Start

LASER OFF

Throughput - Errors (Page 1)

LEDs

Signal

Frame

Pattern

ALM/ERR

History

Setup

Results

Events	Traffic	Delay	Rates	Signal
Summary	Errors	Alarms	SDT	
	Current	Total		
Oversize	0	0		
Undersize	0	0		

Page 2 of 2

Start

LASER OFF

Throughput - Errors (Page 2)

[Go back to top](#) [Go back to TOC](#)

Alarms

Current and Total values for:

- **LOS:** Number of times the Link has transitioned to a Loss of Signal state in the measurement interval. Generally loss of optical signal.
- **LOSync:** Number of times the Link has transitioned to a Loss of Sync state in the measurement period
- **Pattern Loss:** Number of times test pattern or test sequence was lost
- **Service Disruption**

- **Current:** Current disruption in ms
- **Total:** Total measurement period
- **Last:** Last disruption measurement time
- **Min/Max:** Minimum and Maximum disruption time
- **No. of Occurrences:** A count of the disruption events over the measurement period

Setup		Results	
Traffic	Delay	Rates	Signal
Summary	Errors	Alarms	Events
Current		Total	
LOS (ms)	0	0	
LOSync	0	0	
Pattern Loss	0	0	
Service Disruption (ms)			
Current		0	
Total		0	
Last		0	
Min/Max	0	0	
No. of Occurrences		1	

FC-BERT/FC-Throughput - Alarms

[Go back to top](#) [Go back to TOC](#)

Service Disruption Test (SDT) (Throughput only)

- **Total:** Total cumulative service disruption for the duration of the test.
- **Last:** Last SDT measured during the test.
- **Min/Max:** Minimum and maximum SDT measured during the test.
- **No. of Occurrences:** Number of service disruption events (SDTs).
- **No. of SDT Violations:** Number of instances the SDT threshold was met or exceeded.

Setup		Results	
Events	Traffic	Delay	Rates
Summary	Errors	Alarms	SDT
Service Disruption			
Total		0.00us	
Last		0.00us	
Min/Max	0.00us	0.00us	
No. of Occurrences		0	
No. of SDT Violations		0	

FC-Throughput Results - SDT

[Go back to top](#) [Go back to TOC](#)

Events

Time stamped event table:

- **Time:** Indicates when the test was started, an anomaly occurred or a test was stopped
- **Event/Event Type:** Indicates type of anomaly
- **# of Events:** Indicates the number of times the event occurred
- **Test:** Indicates the test mode

LED'S

Signal

Frame

Pattern

ALMERR

Tools

Utilities

Files

Setup

Results

Traffic	Delay	Rates	Signal
Summary	Errors	Alarms	Events
Time	Events	Test	
30-8-2011 12:14:19	Test Started	BERT	
30-8-2011 12:20:59	CRC Errors	BERT	
30-8-2011 12:21:02	CRC Errors	BERT	

Page 1 of 1

Stop

Restart

Tx Stop

Err inj.

LASER On/Off

Control

Profiles

BERT - Events

LED'S	Setup		Results		Stop Restart TX Stop Err Inj. LASER On
	Summary	Errors	Alarms	SDT	
	Events	Traffic	Delay	Rates	
	Time	Event Type	# of Events	Test	
☒ Signal	2017-3-2 18:11:55	LOS Begin		Throughput	
☐ Frame	2017-3-2 18:11:54	Test Started		Throughput	
☐ Pattern					
☐ ALMERR					
History					
Page 1 of 1					


Throughput - Events

[Go back to top](#) [Go back to TOC](#)

Traffic Distribution Overview

Graphical representation of:

- **Frame type:** Test frames in BER mode
- **Traffic type:** Class of service set by the SOF delimiter
- **Frame size:**
 - FC-1 mode - the frame size is determined by the test sequence being used
 - FC-2 mode - the frame size corresponds to the frame size configured in the traffic menu

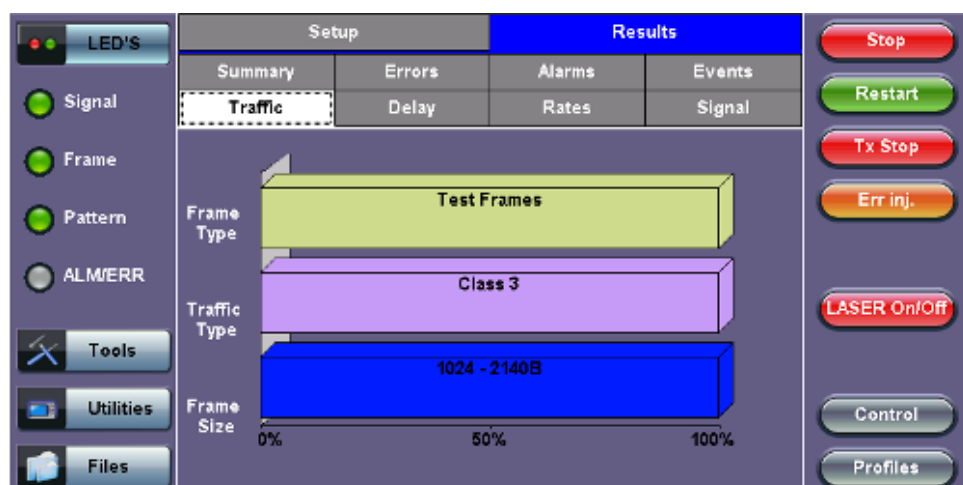


FC-BERT/FC-Throughput - Traffic Summary

Traffic Distribution Details - Frames

- **RX (Received) Frames**
 - **Total:** Total number of frames received
 - **Test:** Number of test frames received
 - **Non-Test:** Number of non-test frames received
- **TX (Transmitted) Frames**
 - Total: Number of test frames transmitted
- **Flow Control:** Flow control is the FC-2 control process to pace the flow of frames between Nx_Ports, an Nx_Port and the Fabric and within the Fabric to prevent overrun at the receiver.
 - Flow control is managed between Nx_Ports (end-to-end) and between FC_Ports (buffer-to-buffer). Flow control management has variations dependent upon the service class, however Class 3 uses only buffer-to-buffer flow control.
- **RR-RDY:** For Class 3 frames transmitted and received, a R_RDY is issued when a receive buffer is available.

Memory or “buffers” to temporarily store frames as they arrive and until they are assembled in sequence, and delivered to the upper layer protocol. Buffer Credits are the number of frames a port can store. To track the number of frames transmitted for which R_RDY responses are outstanding, the transmitting FC_Port uses the BB_Credit_CNT.

- **BB Credits Used:** The number of unacknowledged or outstanding frames awaiting R_RDY responses from the directly attached FC_Port.
- **BB Credits Available:** The number of frames transmitted and received R_RDY responses from the directly attached FC_Port.

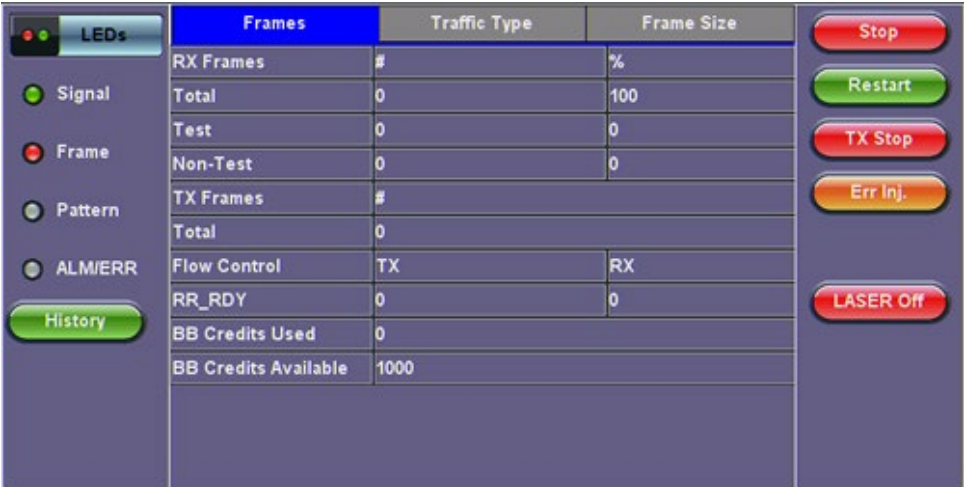


FC-BERT/FC-Throughput - Frame Distribution

Traffic Distribution - Traffic Type

Fibre Channel supports three classes of services, and a fourth which is a combination of classes 1 and 2.

Similar to ATM, different classes allow Fibre Channel to support a variety of communication needs.

- **Class 1:** Provides a circuit-emulation service for time-sensitive applications such as video teleconferencing.
 - Designed for dedicated, non-bursty links between supercomputers. Class 1 traffic is circuit-switched.
- **Class 2:** Provides guaranteed delivery for connectionless traffic.
 - Class 2 traffic is switched on each frame rather than on a connection. An acknowledgment from the destination provides an end-to-end guarantee of delivery.
- **Class 3:** Offers a best-effort connectionless service.
 - Class 3 is similar to Class 2, except that no guarantee is given for delivery.

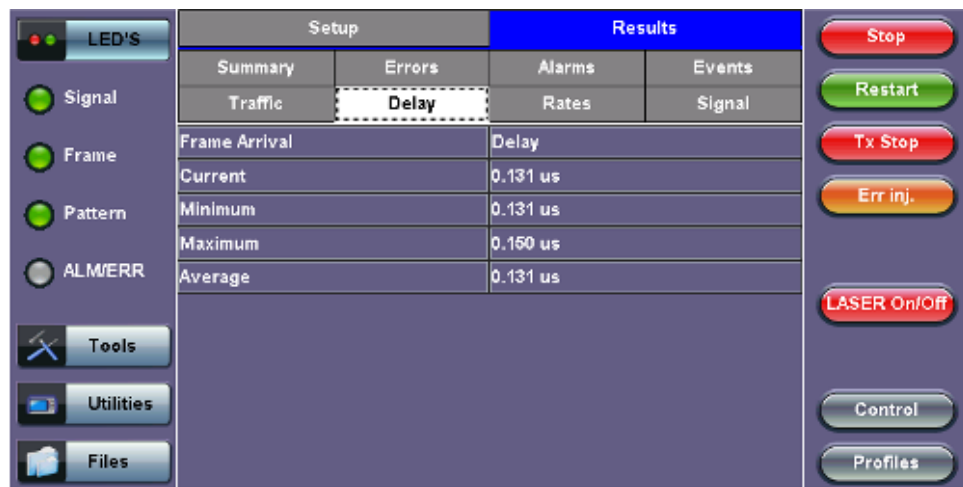

FC - BERT - Delay




FC - Throughput - Delay

[Go back to top](#) [Go back to TOC](#)

Frame Rate Summary

Graphical representation of the Frame rates and Data rates.

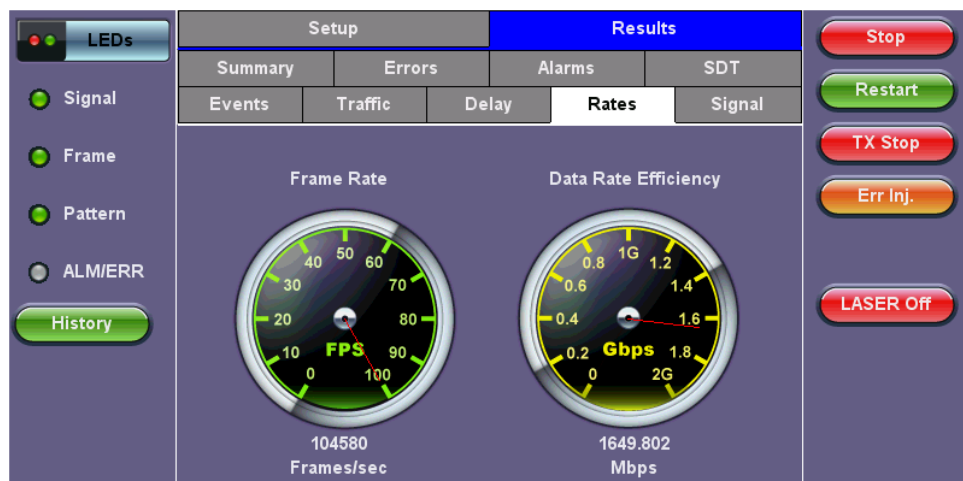


FC-BERT/FC-Throughput - Frame Rate Summary

[Go back to top](#) [Go back to TOC](#)

Frame Rate Details

Tabular representation of the Transmitted and Received frames and the corresponding Data Rates in Mbps.

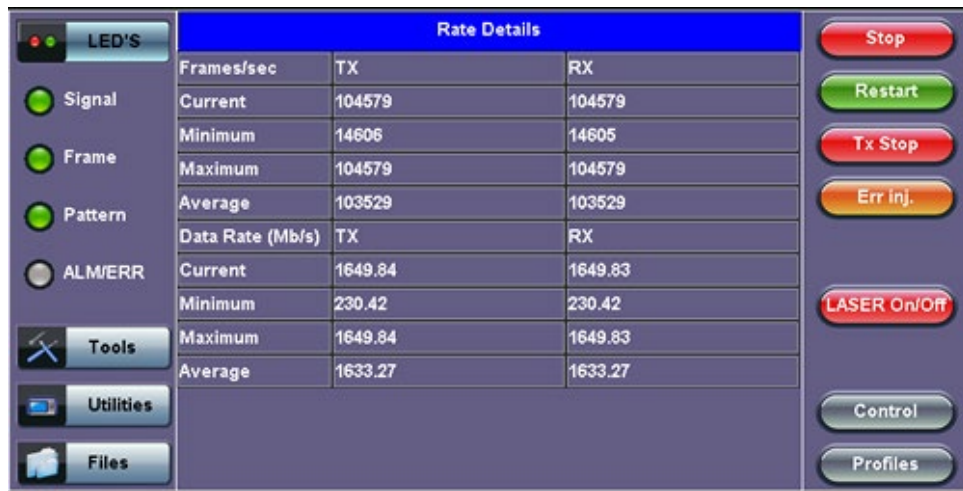


FC-BERT/FC-Throughput - Frame Rate Details

[Go back to top](#) [Go back to TOC](#)

Signal

Level (Page 1)


The Signal tab displays the Level and Frequency screen. Page 1 displays the level measurement Loss of Signal (LOS), and the Saturation level for optical signals is shown graphically, including the level measurement in dBm.

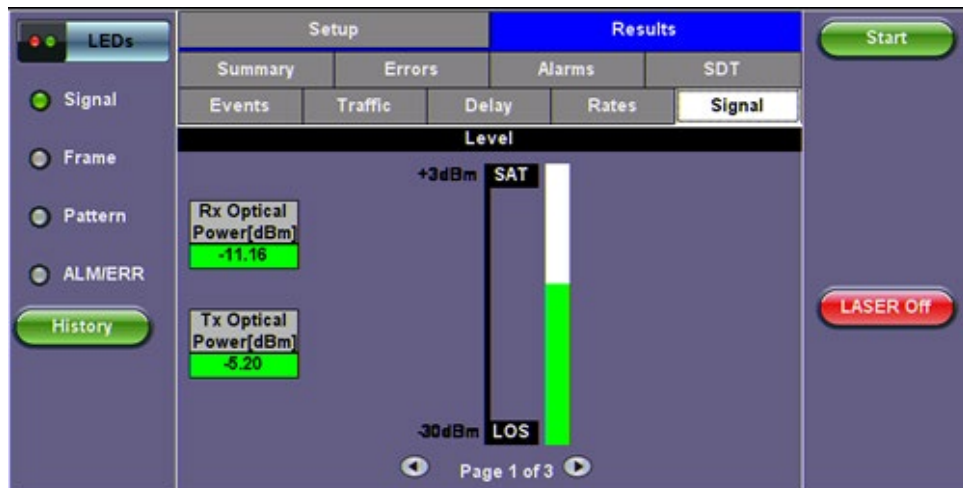

FC-BERT/FC-Throughput Signal - Level (Page 1)

Optical Information (Page 2)

Page 2 displays the Optical module XFP information which includes Vendor name, Part number, and Optical Wavelength.

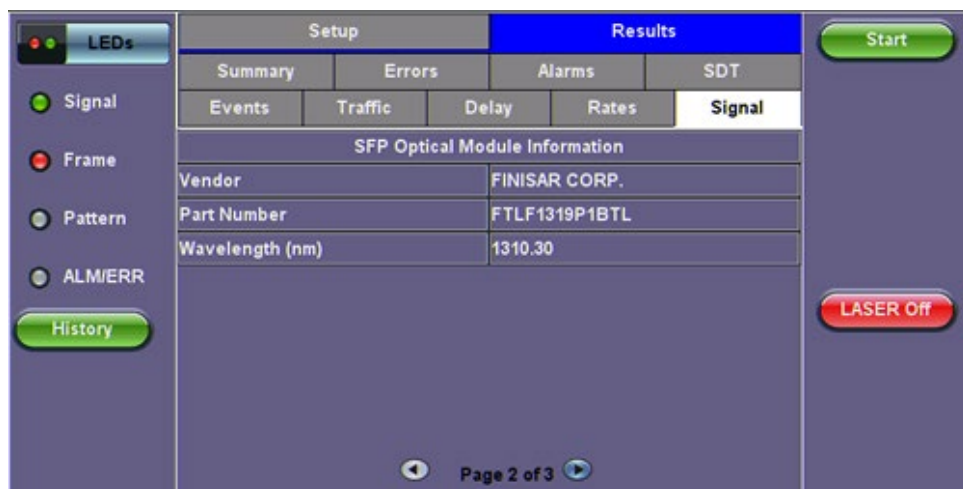

Frequency (Page 3)

Page 3 displays the Frequency information which includes:

- **Current [bps]**: Indicates current frequency level.
- **Offset [ppm]**: Indicates the frequency offset.
- **Min [ppm]**: Indicates the minimum frequency detected.
- **Max [ppm]**: Indicates the maximum frequency detected.



FC-BERT/FC-Throughput Signal - Frequency (Page 3)

[Go back to top](#) [Go back to TOC](#)

16.3 RFC 2544

The RFC 2544 Ethernet test suite is adapted to Fiber Channel circuits to verify 1Gbps, 2Gbps, 4Gbps, 8Gbps, 10Gbps and 16Gbps SAN networks. The automated RFC 2544 test routine/analysis ensures repeatable installations:

- Check buffer parameters needed to achieve desired Service Level Agreement (SLA)
- Determine optimum buffer size - Capacity versus link speed
- Determine minimum buffer credits for selected throughput for each frame length
- Measuring throughput at various buffer credit sizes to check link quality




The test methodology is the same as for Ethernet testing. Please refer to the [RFC 2544](#) section for details.

[Go back to top](#) [Go back to TOC](#)

16.4 Loopback


The Loopback function can be found on the Fiber Channel Home menu.

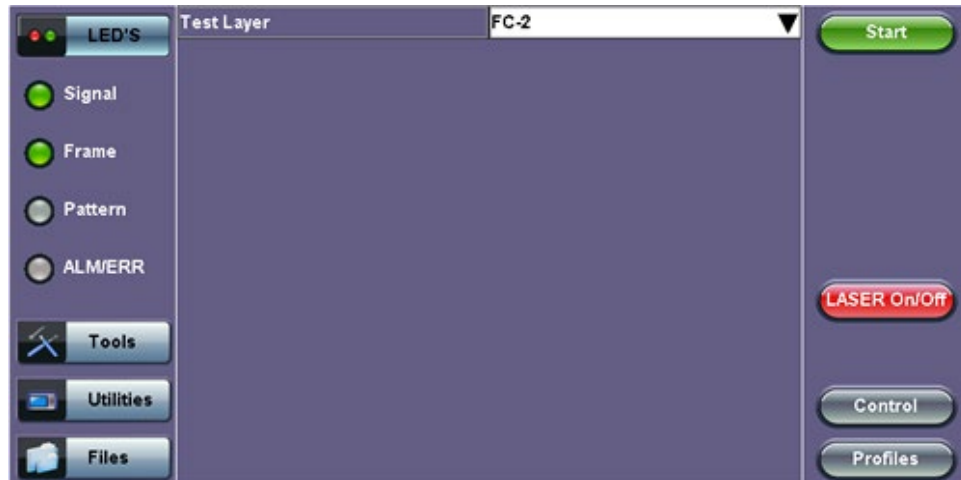

FC-1/2 Manual Loopback Setup

Modes of operation: Manual and Responder (future)

Mode (FC layer): FC-1 or FC-2 Layer loopbacks are supported. In FC-2 mode, the destination and source IDs (D_ID and S_ID) are swapped including any other relevant Header fields (e.g., OX_ID, RX_ID, etc.).

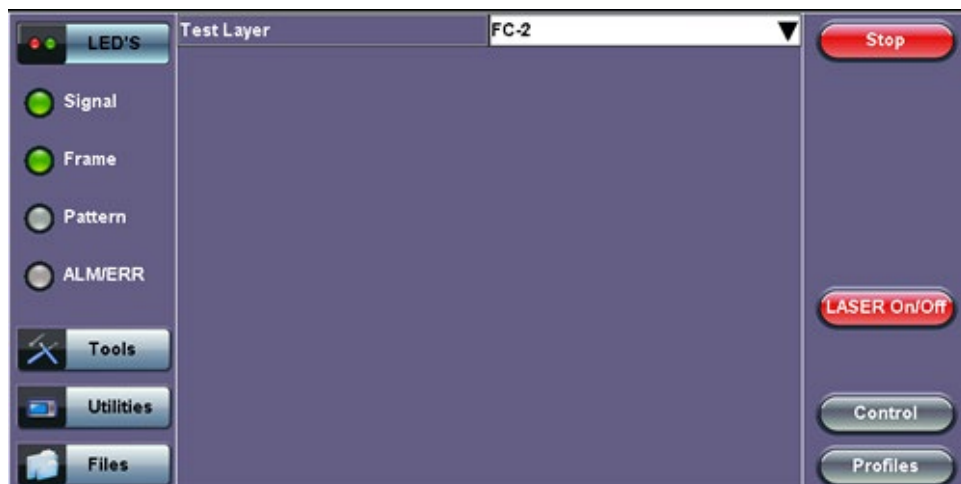

FC-1/2 Manual Loopback Active

To enable the loopback, press **Start** from the drop-down menu. Once the loopback is enabled, a message appears indicating that the loopback is active.

[Go back to top](#) [Go back to TOC](#)

16.5 Packet Capture

The packet capture function can be used to capture packets to Fiber Channel test ports. The packet capture format is compatible with Wireshark and can be viewed on a PC.


The following packet capture options are available in the **Capture Mode** tab:

- **Profile:** Drop-down selections are Default, Delete, Save, Save As...
- **Mode:** Automatic. Packet capture is automatically started when pressing the **CAP ON** function key.
- **Buffer Size:** Defines the size of the storage allocated to packet capture.
- **Truncate:** Captures the whole frame or first number of bytes of that frame.


Tap on the **Filter** tab to select frame header parameters to filter for. Refer to [Header Setup \(FC-2 only\)](#) for a brief description of each parameter.

Press the green **Start** button to begin packet capture. To store these results packets:

1. Press **Stop**, then press **Save as**.
2. Enter a name for the results file, and then press **Apply** to save the file. The file is saved under the Files folder on the unit in pcap format. The file can be later exported to a PC and analyzed using Wireshark.

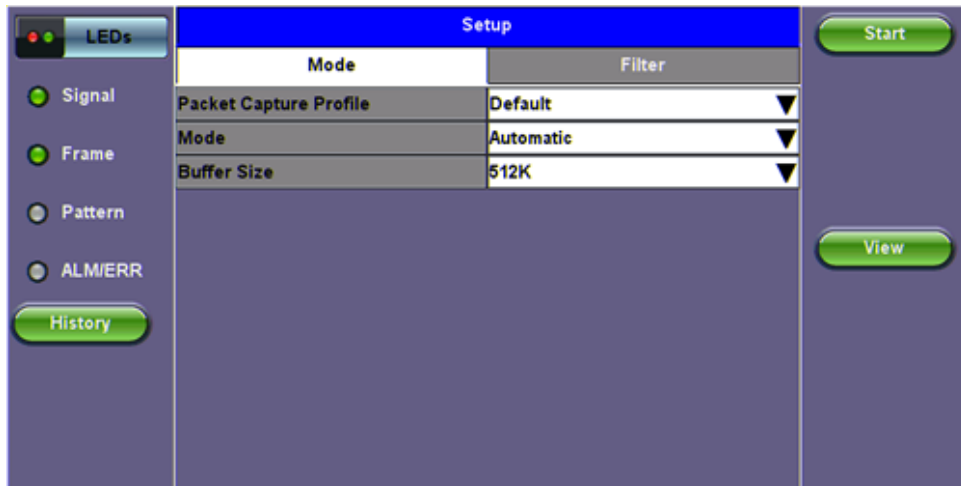

Capture Mode

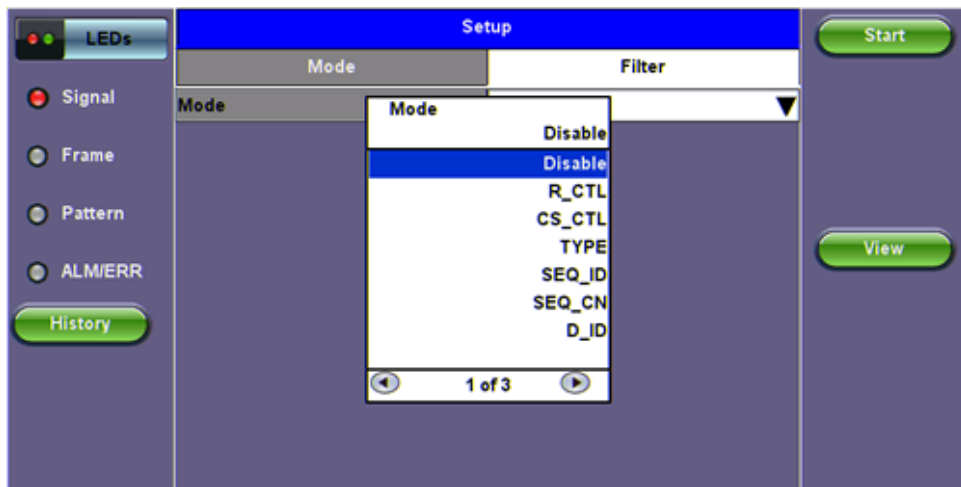

Filter



Capture Save

[Go back to top](#) [Go back to TOC](#)

17.0 CPRI/OBSAI Testing

- [Overview](#)
- [Interface Specifications](#)
- [CPRI Testing](#)
 - [Test Ports](#)
 - [Test Modes](#)
- [CPRI Unframed Setup](#)
 - [Test Pattern](#)
 - [Traffic Pattern](#)
 - [Error Injection](#)
- [CPRI Unframed Results](#)
 - [Summary](#)
 - [Signal](#)
 - [Errors](#)
 - [Alarms](#)
 - [Events](#)
- [CPRI Layer 1 Framed Testing](#)
 - [Setup](#)
 - [Results](#)
 - [L1 RTD](#)
- [CPRI Layer 2 Framed Testing](#)
 - [Setup](#)
 - [Results](#)
 - [CPRI Round Trip Delay](#)
 - [SDT Results](#)
 - [Control Words](#)
 - [Frame Capture](#)
 - [Wander](#)
- [CPRI Layer 2 Monitor](#)
 - [Setup](#)
 - [Results](#)
 - [Service Disruption Test \(SDT\) Results](#)
 - [Control Words](#)

CPRI Overview


- CPRI stands for **Common Public Radio Interface**
- This protocol has been developed by Ericsson AB, Huawei Technologies Co. Ltd, NEC Corporation, Alcatel Lucent and Nokia Siemens
- It is an industry cooperation aimed at defining a publicly available specification for the key internal interface of radio base stations between the Radio Equipment Control (REC) and the Radio Equipment (RE)
- The standard is public and can be downloaded from <http://www.cpri.info>

OBSAI

- OBSAI stands for **Open Base Station Architecture Initiative**
- This protocol has been developed by Hyundai, LGE, Nokia, Samsung and ZTE
- OBSAI Rates range from 728 Mbps to 6.8 Gbps

[Go back to top](#) [Go back to TOC](#)


17.1 Interface Specifications

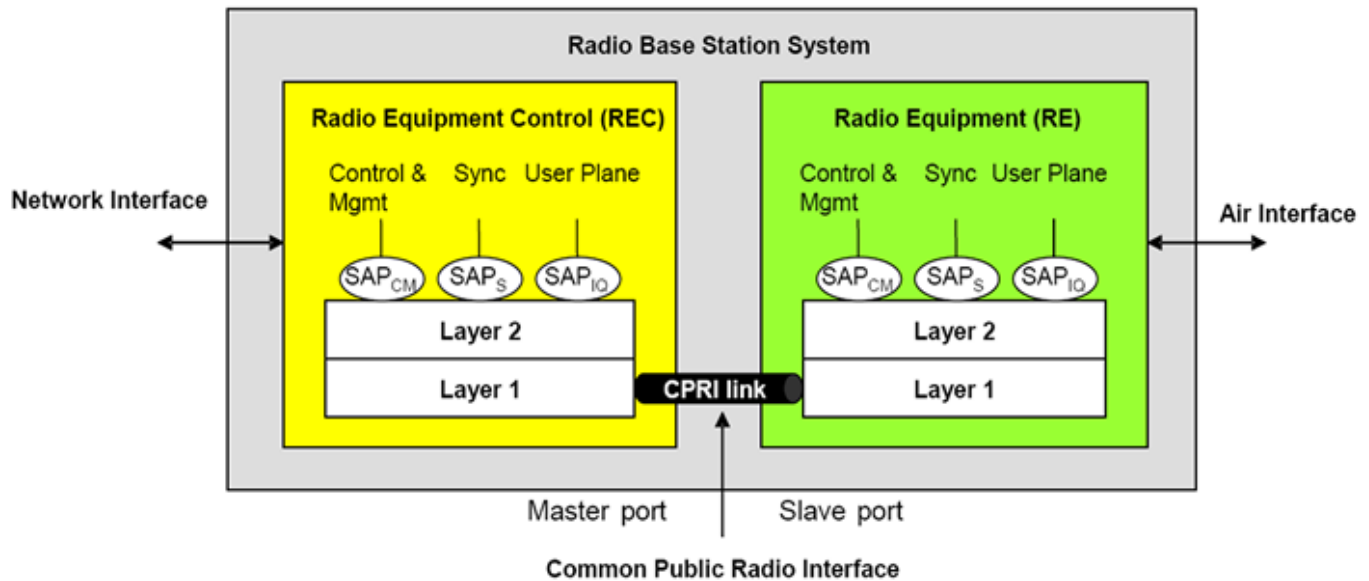

- CPRI specification defines only Layer 1 and Layer 2
- Specification written with the goal to be generic enough to support scalable rates, physical access medium type, and air interface technologies

[Go back to top](#) [Go back to TOC](#)

Protocol Stack

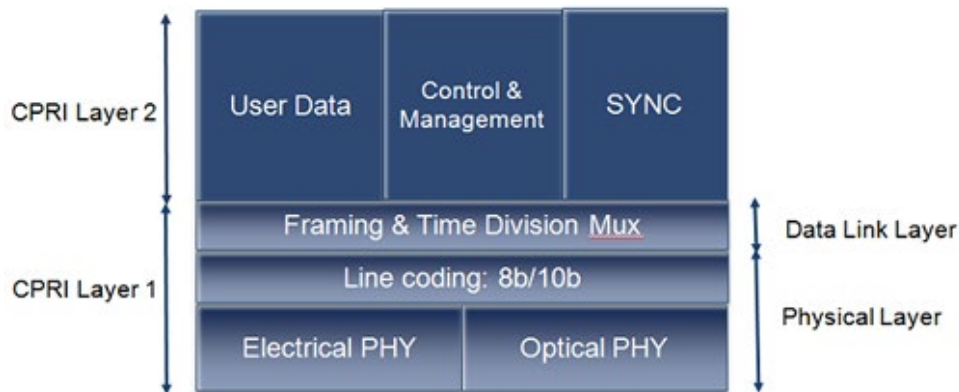

[Go back to top](#) [Go back to TOC](#)

Physical Layer

The following Line bit rates are defined from the standard:

- **Line Coding:**
 - 8B/10B line coding shall be used for serial transmission according to IEEE 802.3-2005, clause 36. (Same encoding as used for Gigabit Ethernet and Fibre Channel)
- **Bit Error Correction/Detection:**
 - The physical layer is designed in such a way that a very low bit error ratio can be achieved without expensive forward error correction schemes. Therefore, no general bit error correction is applied at Layer 1.
 - The RE and the REC shall support detection of 8b/10b code violations. Link failures shall be detected by means of 8b/10b code violations.



8B/10B Encoding - What is it and Why is it Used?


- 8b/10b is the line code used for Gigabit Ethernet and Fibre Channel.
- It maps 8 bits of data into a 10 bits symbol, each 8 bits can map into 2 possible 10 bit symbols. The symbols are chosen so that there is a limit of 5 consecutive equal bits and the difference of the count of 0s and 1s is no more than 2.
- The goal is to achieve DC balance by having a running disparity of 1s and 0s and to provide enough state changes to allow clock recovery.
- Clock recovery is particularly important because in the CPRI implementation, the RE must recover timing from the 8B/10Bencoded line rate and regenerate the original reference frequency to the required UMTS accuracy.
- In addition the 8b/10b has several error detection mechanisms: Validation of correct codes (only 268 of the possible 1024 10-bit codes are used)
 - Validation of correct running disparity
 - Validation that running number of 1s or 0s does not exceed 5

[Go back to top](#) [Go back to TOC](#)


17.2 CPRI/OBSAI Ports and Test Modes

Test Ports

TX300S Module

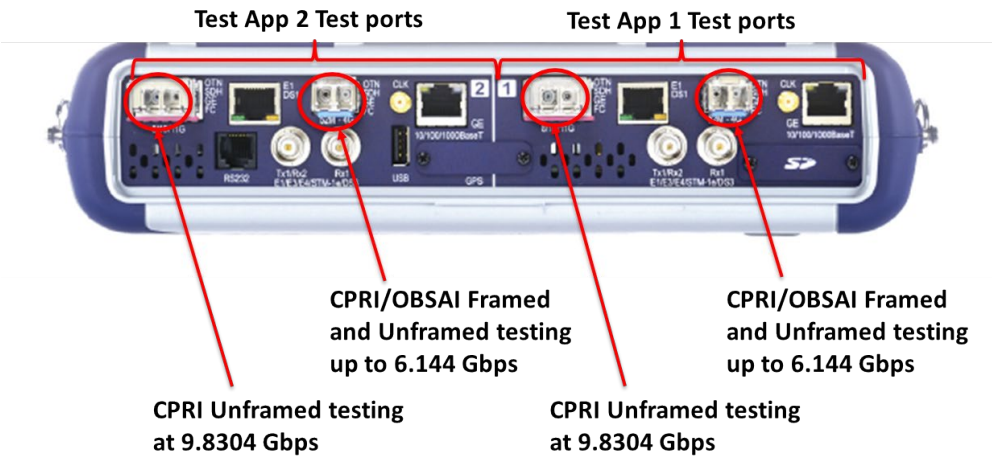


TX320S/MTTplus-320S Modules

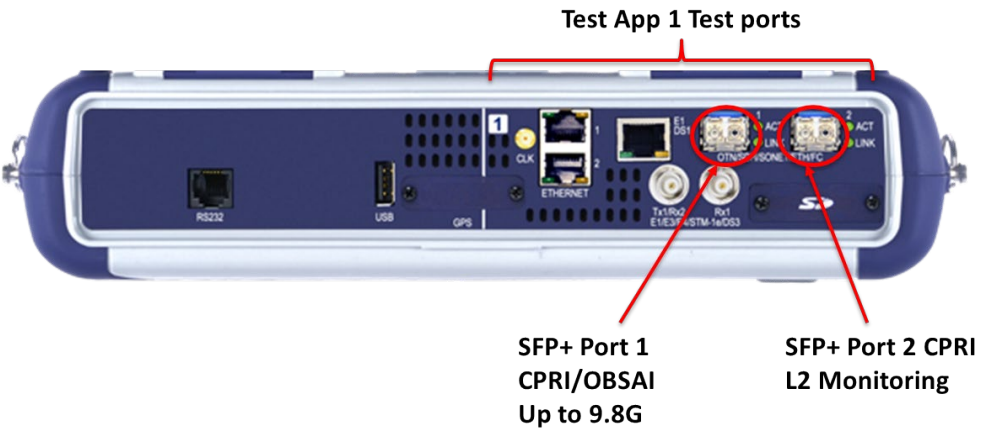

TX340S Module



RXT-3900 Module

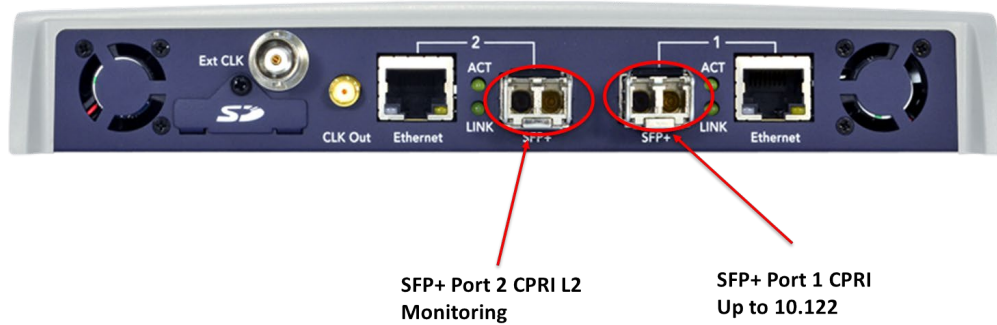

Test Modes

Refer to the latest specification sheet for a breakdown of available test modes for each platform and module. Available test modes vary depending on the test platform and module, but may include the following:

- CPRI/OBSAI Unframed
- CPRI Layer 1 Framed (CPRI Layer 1 Testing)
- CPRI Layer 2
- CPRI Layer 2 Monitor

Available CPRI test rates vary depending on the test platform and module, but may include the following:

- CPRI line bit rate option 1: 614.4 Mbit/s
- CPRI line bit rate option 2: 1228.8 Mbit/s
- CPRI line bit rate option 3: 2457.6 Mbit/s
- CPRI line bit rate option 4: 3072.0 Mbit/s
- CPRI line bit rate option 5: 4915.2 Mbit/s
- CPRI line bit rate option 6: 6144.0 Mbit/s
- CPRI line bit rate option 7: 9830.4 Mbit/s
- CPRI line bit rate option 8: 10137.6 Mbit/s, 64B/66B line coding (20 x 491.52 x 66/64 Mbit/s)

Available OBSAI Test rates vary depending on the test platform and module, but may include the following:

- OBSAI line bit rate: 768 Mbit/s
- OBSAI line bit rate: 1536 Mbit/s
- OBSAI line bit rate: 3072 Mbit/s
- OBSAI line bit rate: 4915.2 Mbit/s
- OBSAI line bit rate: 4144 Mbit/s

Test App 1 - Test Mode Selection

Ethernet >	☐ CPRI/OBSAI Unframed ☐ CPRI Layer 1 Framed ☐ CPRI Layer 2 ☒ CPRI Layer 2 Monitor
Fiber Channel >	
OTN/SONET/DSn >	
CPRI/OBSAI	
Additional Tests >	

Release
OK
Cancel

[Go back to top](#) [Go back to TOC](#)


17.2.1 CPRI/OBSAI Unframed BERT Setup

Tap on **Test Mode** and select **CPRI / OBSAI Unframed Testing** from the menu to access this feature.



CPRI/ OBSAI Home

Before proceeding with BER testing, configure the Header, Traffic, and Error Injection tabs under **Setup (BERT button > Setup)**. When finished configuring BERT settings, press the **Start** button  to run the tests. This will automatically displays the **Results** screen.

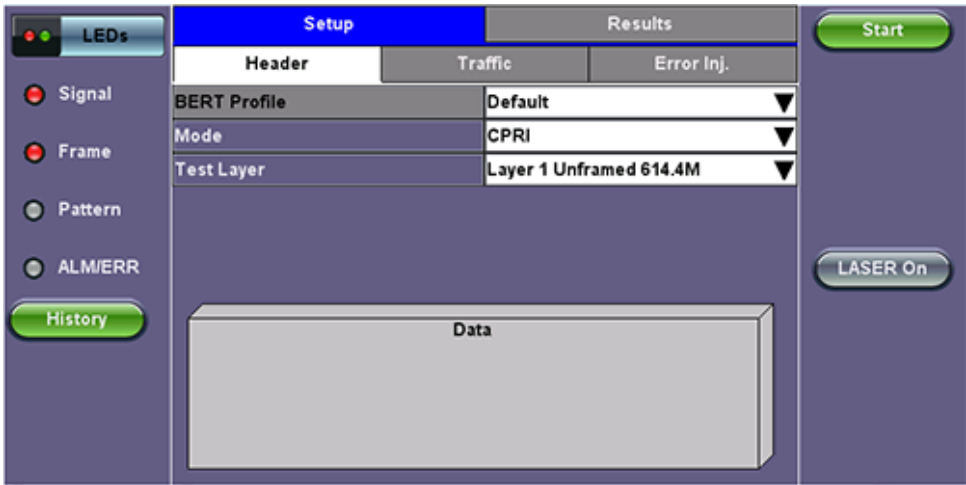

BERT Header Setup

From the Header tab, select a **BERT Profile** from the drop-down menu.

Select a **Test Layer**:

CPRI:

- Layer 1 Unframed 614.4M
- Layer 1 Unframed 1.2288G
- Layer 1 Unframed 2.4576G
- Layer 1 Unframed 3.072G
- Layer 1 Unframed 4.9152G
- Layer 1 Unframed 6.144G
- Layer 1 Unframed 9.8304G
- Layer 1 Unframed 12.168G

OBSAI:

- Layer 1 Unframed 768M

- Layer 1 Unframed 1.536G
- Layer 1 Unframed 3.072G
- Layer 1 Unframed 4.9152G
- Layer 1 Unframed 6.144G

[Go back to top](#) [Go back to TOC](#)

17.2.1.1 Test Pattern




Header Configuration

Tap on the **Data** button to reach the Header Configuration and select a test pattern.

Tap the **close** button , located at the top right corner of the screen to apply configurations and return to the previous screen.

[Go back to top](#) [Go back to TOC](#)

17.2.1.2 Traffic Pattern

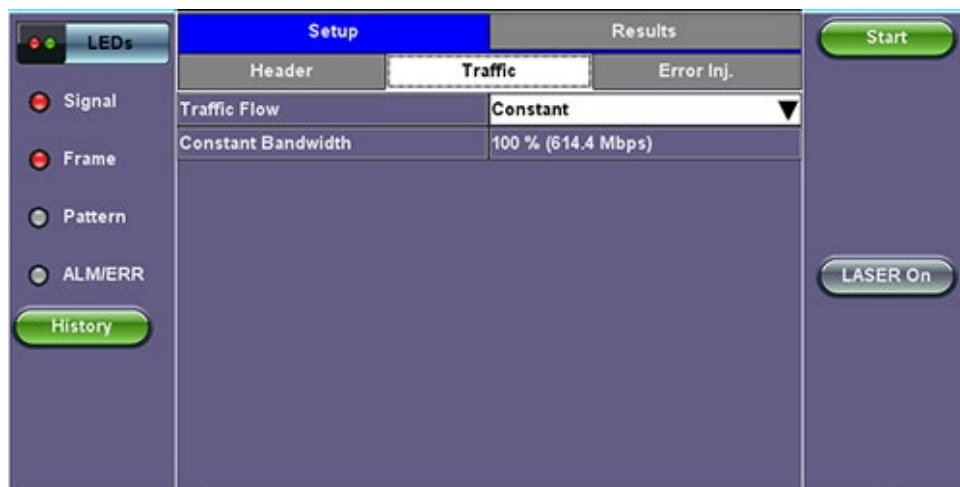

BERT Traffic Setup

Constant traffic flow at 100% constant bandwidth is fixed.

[Go back to top](#) [Go back to TOC](#)

17.2.1.3 Error Injection



Error Injection

The error type is fixed as Bit at Single error injection. An error injects each time the **Error Injection** button is pressed.

[Go back to top](#) [Go back to TOC](#)

17.2.2 CPRI/OBSAI Unframed BERT Results

Pressing the **Start** button  brings up the **Results** screen.

[Go back to top](#) [Go back to TOC](#)

17.2.2.1 Summary

The following screen displays a **Summary** of the test results:




Summary tab

- **Line Rate** (bps): Negotiated rate of the interface. This value is always fixed since it depends on the maximum capacity of the link under test, hence the test interface that is configured.
- **Utilization**: % of Line Rate. Unframed traffic is transmitted at 100% line rate.
- **TX Pattern**: The test pattern being transmitted.
- **RTD**: If Round Trip Delay measurements are enabled, RTD will be indicated as On and results (Current/Average/Min/Max) will be displayed. To enable or disable Round Trip Delay measurement, tap on the **RTD On/Off** button  , located in the right side column.

 *Round Trip Delay measurements require a physical Loopback at the far-end.*



Verify that no errors are present and the TX and RX Utilization (%) is at 100%. Press the **Restart** button  if errors are present.

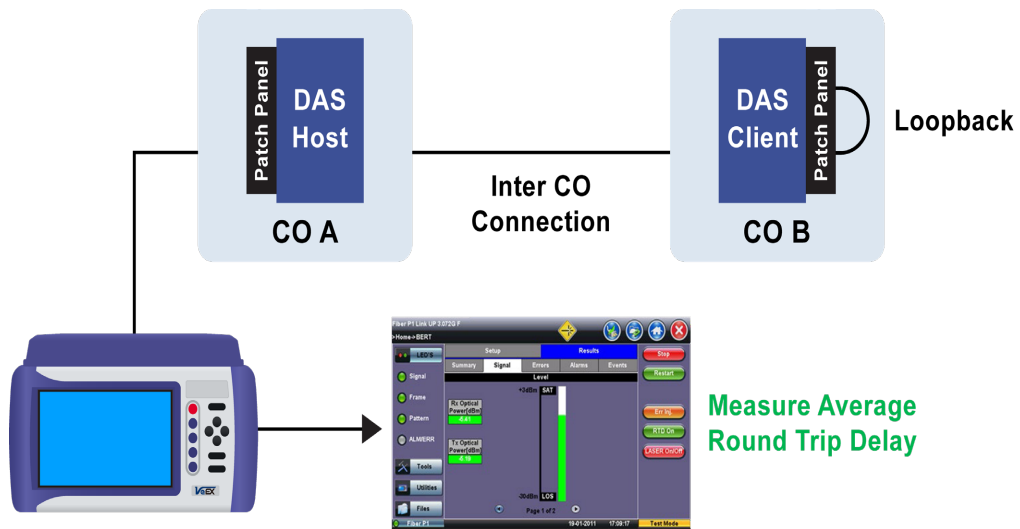

Round Trip Delay Diagram

[Go back to top](#) [Go back to TOC](#)

17.2.2.2 Signal

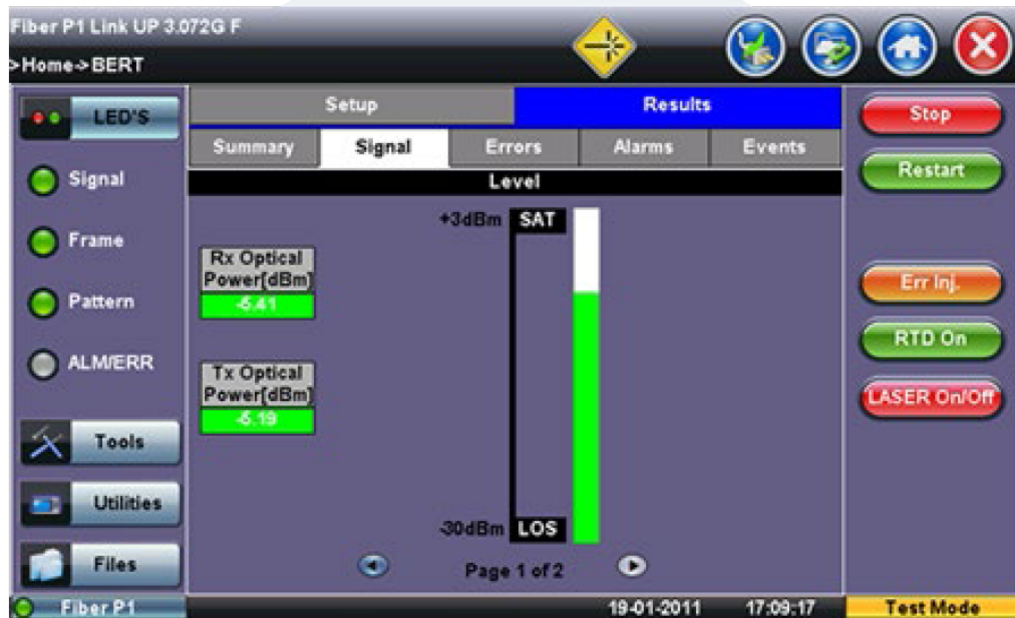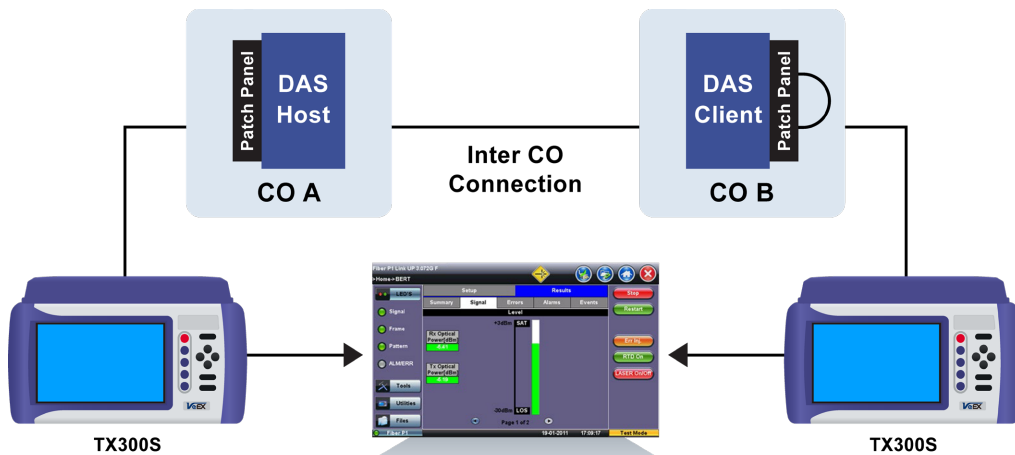

Signal Diagram

The Signal tab shows Receiver Saturation and Loss of Signal thresholds. Tx and Rx optical power levels are measured by the transceiver.

Page 2 displays the Optical module (SFP or XFP) information which includes Vendor name, Part Number and Optical Wavelength.

[Go back to top](#) [Go back to TOC](#)

17.2.2.3 Errors

Tap on the **Errors** tab to view test measurements.

- **Bits:** Indicates errors related to test pattern (Bit Error or LSS [Pattern Loss])
- **BER:** Bit Error Ratio

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Summary

Signal

Errors

Alarms

Events

	Current	Total
Bits	0	1
BER	0.000000E+00	5.087223E-12
Symbol	0	0

Stop

Restart

Err Inj.

RTD On

LASER On/Off

Errors tab

[Go back to top](#) [Go back to TOC](#)

17.2.2.4 Alarms

Tap on the **Alarms** tab to view the Loss of Signal (duration) and Pattern Loss (events).

LED'S

Signal

Frame

Pattern

ALM/ERR

Tools

Utilities

Files

Setup

Results

Summary

Signal

Errors

Alarms

Events

Current

Total

LOS (ms)

0

0

Pattern Loss

0

0

Stop

Restart

Err Inj.

RTD On


LASER On/Off

Alarms tab

[Go back to top](#) [Go back to TOC](#)

17.2.2.5 Events


This **Events** tab displays a list of events for the test in progress.

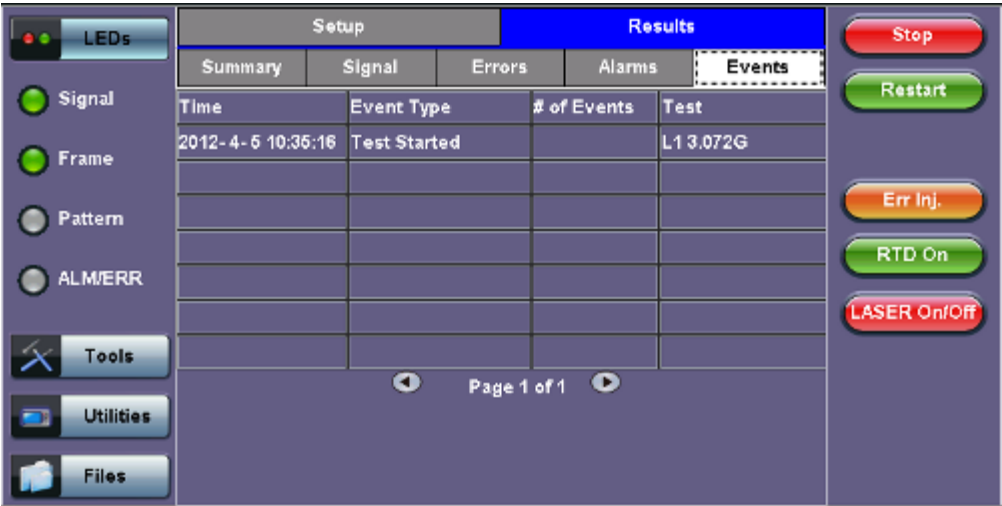

Events tab

[Go back to top](#) [Go back to TOC](#)

17.3 CPRI Layer 1 Framed Testing

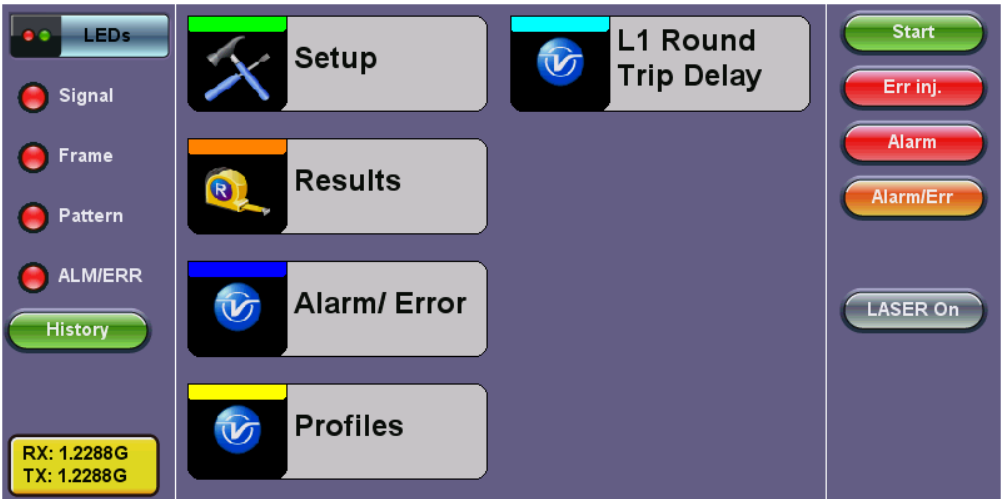


CPRI Layer 1 Main Menu

[Go back to top](#) [Go back to TOC](#)

17.3.1 Setup

The Setup page has four tabs for setting up test parameters: Signal, Measurements, General, and SDT tabs.

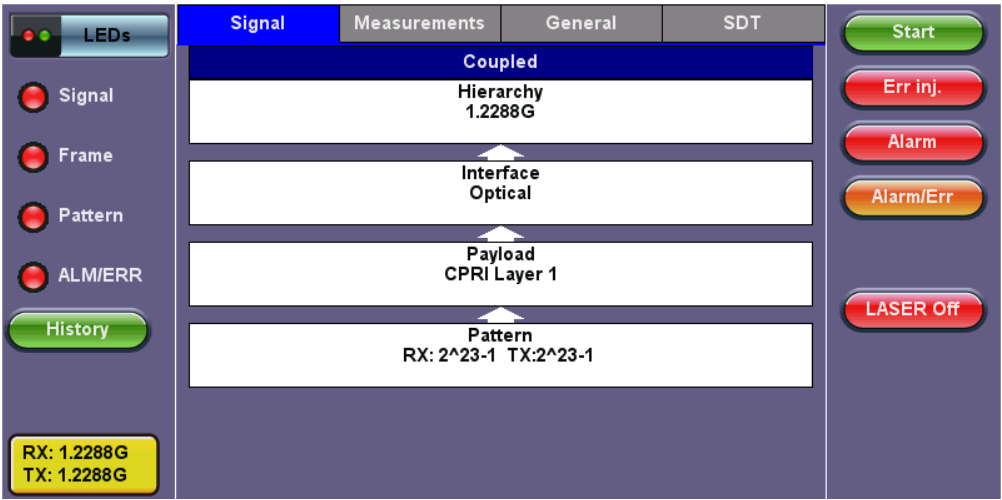


Setup Menu

Configure the following:


Signal

- **Hierarchy:** CPRI Speed Selection from 614.4Mbps to 12.168Gbps. Check with SFP+ manufacturer specifications to make sure rates are supported. Available speed rates will vary depending on the test platform and module. The test application button, indicated by the 1 and 2 tabs, shows the selected CPRI speed rate. In the example below, 1.2288G is the CPRI speed rate.

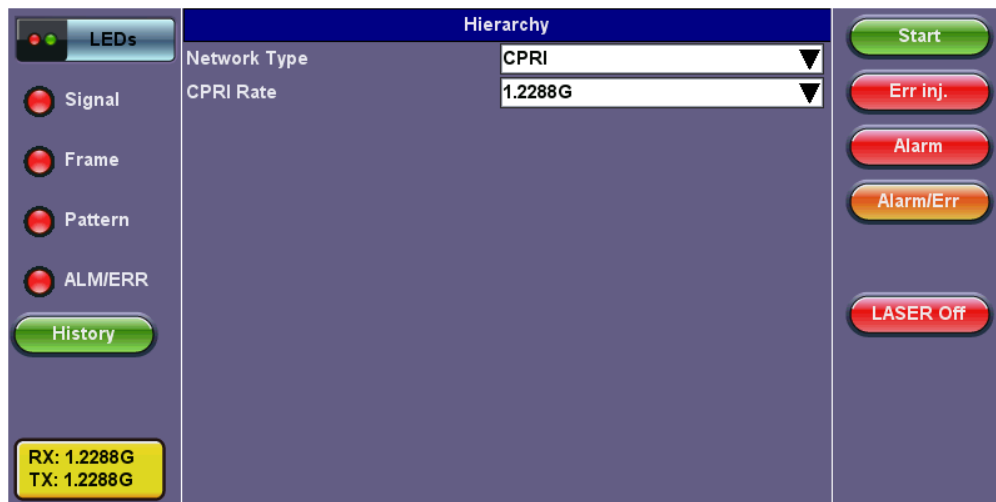

Hierarchy Setup

- **Interface:** CPRI Clock Selection Internal/External.
- If the unit is set as Master emulation mode, the following options are available:
 - **Internal:** The clock for the transmitter is derived from the internal clock. The internal clock has an accuracy of +/- 3.5ppm conforming to G.812 recommendations.
 - **External Clock Sources:** 1.5MHz, 2MHz, 1.5Mbit/s, 2Mbit/s, 10MHz. For External clock connection use the unit's SMA CLK port.
 - **Offset:** The clock for the transmitter is derived from internal clock generator. It can change the offset while measurements are running. Use numeric key to increase and decrease the frequency shift, up to 0.01ppm. Frequency offset: ± 50 ppm with 1, 0.1, 0.01ppm resolution.
 - **Atomic 10MHz:** The built-in Atomic Clock hardware option can provide highly stable frequency references on its own.

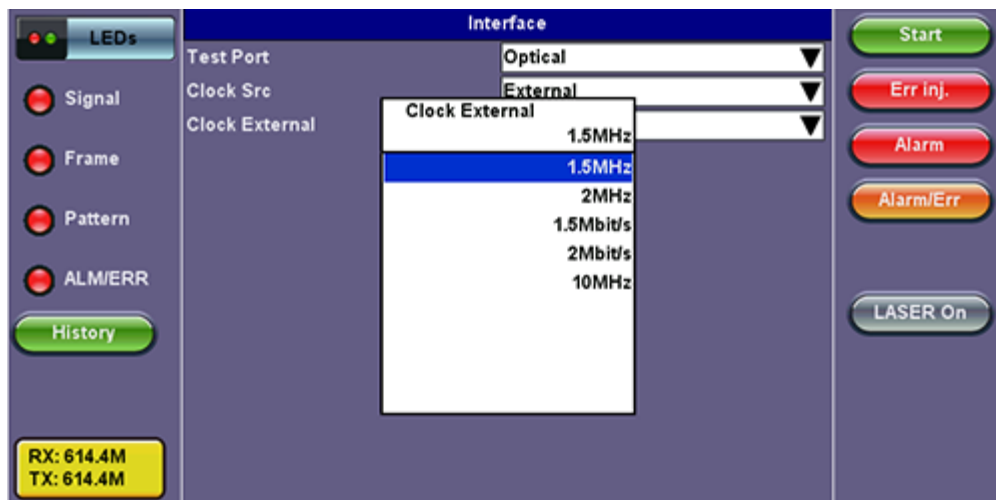

Clock Source Setup

- If the unit is set in slave emulation mode, the clock is recovered from the RX CPRI link.
- **Payload: #Z.0.1 Byte:** Sync Control Word Z.0.1 set to D16.2 or D5.6.

[Go back to top](#) [Go back to TOC](#)

Measurements

Measurements Setup

Configure a test to run for a fixed duration or a delayed start.

Mode: Manual, Timed, and Auto selections are available.

- **Manual:** This is linked to the Start/Stop function.
- **Timed:** The test duration can be set by the user. The test duration can be set in seconds, minutes, hours or days. The test is activated by the Start/Stop function.
- **Auto:** A predetermined start time can be set by the user. The test duration can be set in seconds, minutes, hours or days. After programming the start time and duration, press the Start button and the test will be activated automatically when the programmed start time is reached.

Interval Save/Results Auto Save and Auto Server Upload is available in all modes. Depending on the V300 unit and test module installed, Interval Save will appear as Results Auto Save.

Interval Save or Results Auto Save: Test results automatically save at a specified interval. To enable interval save, select **ON** and enter the **Save Interval** (in minutes).

Auto Server Upload: Automatically uploads results to the server. The unit needs to be connected and registered to an R-Server or FTP-Server to use this function. Selecting a server type will display a message prompt with the option to connect and register to the server.

[Go back to top](#) [Go back to TOC](#)

General

General Setup

- **Audible Alarm:** OFF / ON. A sound will be generated every time there is an alarm. This feature is not available on all test

sets.


- **Results on start:** OFF / ON. Shows the results screen on pressing Start.
- **Auto Save:** OFF / ON. Automatically Save the test results.
- **Measurement Clock Source:** Select the Measurement clock source used for Frequency measurement.
For Master: Internal or TX clock source (if external clock source is used)
For Slave: Internal

Service Disruption Test (SDT)

A service disruption is triggered by any qualifying error or alarm determined by the user and continues to count until the error-free condition (Gate Time) is met. If SDT is enabled and alarm/error triggers are selected, the results will appear in the Results section under the SDT tab.

Testing Process


- The test set measures how long the event remains present after it is first recognized and will continue to measure the total service disruption time in the event of multiple disruptions.
- Before starting, ensure that no errors or alarms are present on the transmission system because this will impact the measurement.
- In the past, Automatic Protection Switching (APS) was used to measure physical service cuts, especially in optical links. Service disruption measurements are meant to measure the total time the service is not available to customers, which is not limited by the optical path cut. Therefore, it is configured to include the time the whole system takes to recover.
- Service Disruption can still be used to measure APS time, if the trigger selected is LOS only. This will just measure the physical protection switch time.

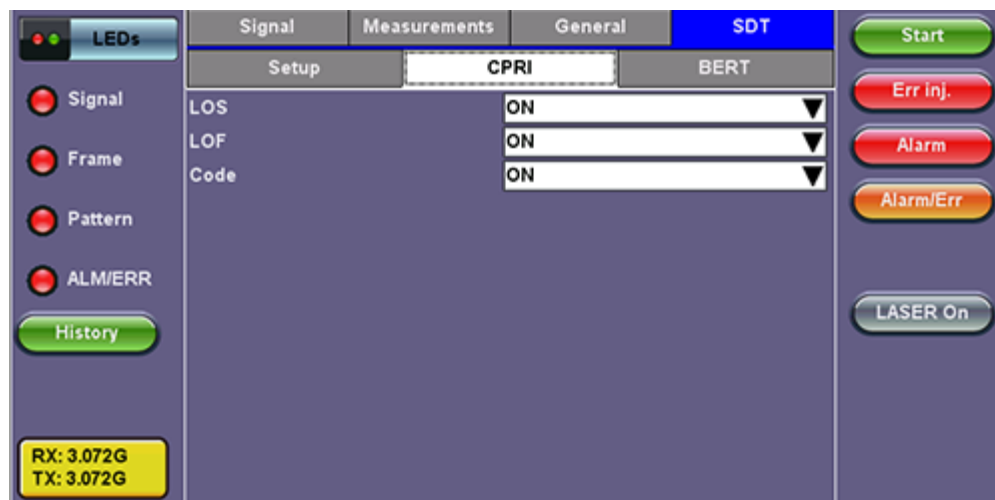

SDT CPRI Setup

Setup

1. Set **Enable** to ON to activate testing.
2. Set a limit time and gate time. Limit and Gate Time counters begin at the onset of the first valid event.
 - **Limit Time:** Specifies pass/fail criteria for SDT events. This represents the acceptable amount of time for the customer to experience a service disruption. Events greater than the limit time are considered a fail. Configurable from 20 to 1000 ms.
 - **Gate Time:** Specifies the length of error free signal time used to determine the number of service disruptions. Configurable from 20 to 10000 ms. The Gate Time is not included in the service disruption time calculation.
3. Select the type of errors/alarms from the CPRI and BERT tabs that will trigger the SDT test.
4. Press the **Start** button to begin testing.

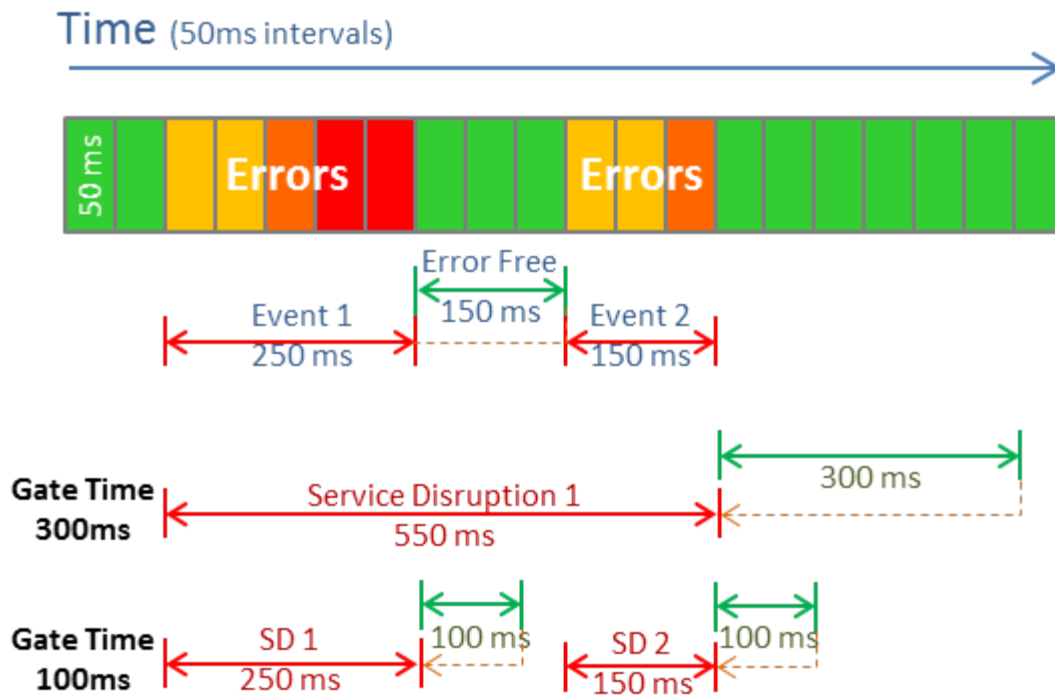


Multiple Service Disruptions

In the simplified example above, two events occur with 150ms of error free time in between. A gate time of 300ms counts them as one service disruption because the error-free section is less than the gate time. Using a gate time of 100ms to evaluate the same situation would count two service disruptions, because the Gate Time condition is met within the error-free section.

[Go back to top](#) [Go back to TOC](#)

Alarm and Error Injection

The alarm and error functions are used in conjunction with the drop-down menu which has dedicated buttons for error injection and alarm generation.

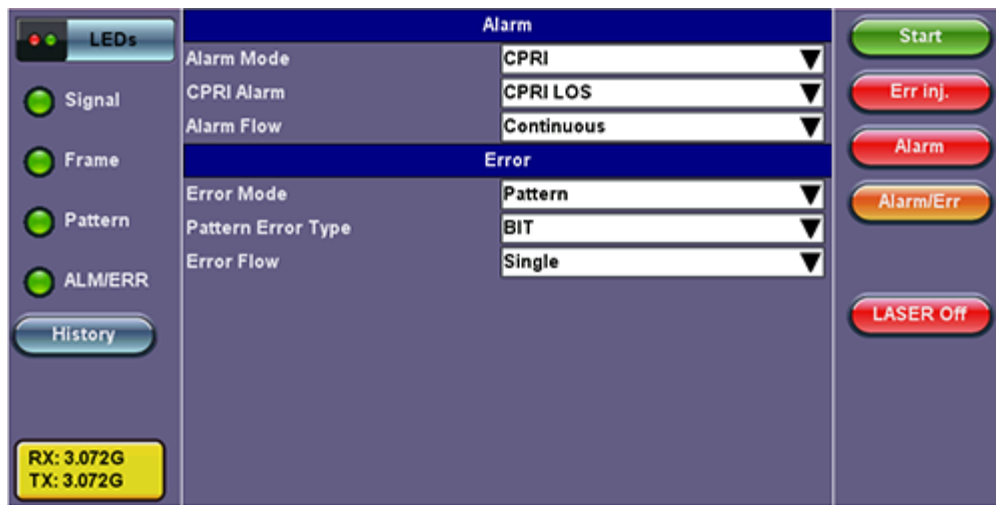

Alarm and Error Injection

The alarm section features a range of different anomalies that can be generated in the transmit signal. Alarm generation modes include:

- **Alarm Injection:**
 - CPRI LOS = Loss of Signal
 - CPRI LOF = Loss of Framing


- **Alarm Flow:**
 - Continuous: Generates a continuous alarm when the button is tapped
 - Count: Specific count for 0.1s, 1s, 10s, 100s when button is tapped
- **Error Injection:**
 - **Error Mode:**
 - **Pattern:** BIT - Bit error injection in test pattern
 - **CPRI:** Code: Code violation error injection
 - **Error Flow:**
 - **Single**
 - **Count:** Enter the value
 - **Rate:** 1E-3, 5E-4, 2E-4, 1E-4, 5E-5, 2E-5, 1E-5, 5E-6, 2E-6, 1E-6, 5E-7, 2E-7, 1E-7, 5E-8, 2E-8, 1E-8, 5E-9, 2E-9, 1E-9

Press Start to start the test.

[Go back to top](#) [Go back to TOC](#)

17.3.2 Results

Summary

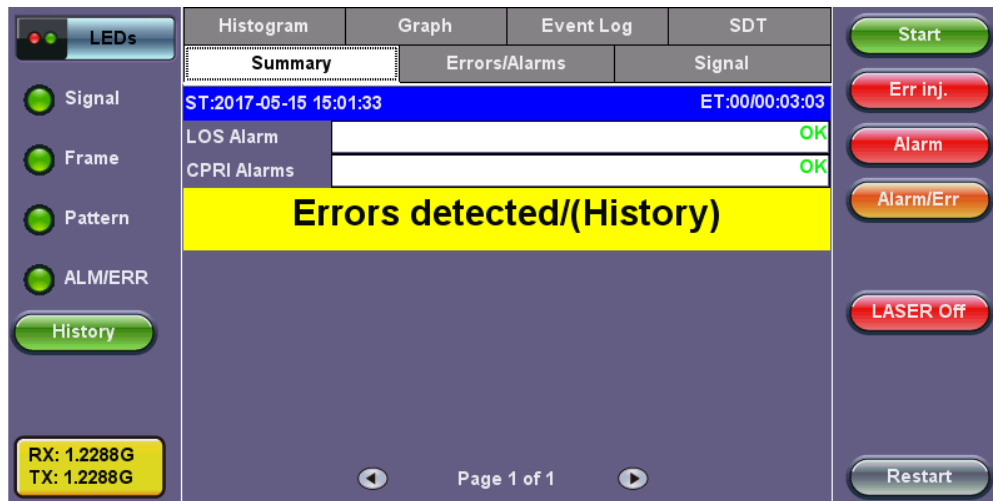

Results Summary

The **Summary** tab displays a summary of test results and parameters. At a glance, the user is able to see if there are any alarms, errors, or signal failure pertaining to the signal and its payload.

Alarms and Errors

The Error/Alarm tab displays several pages showing the errors and alarm status. Alarms/Errors results provides an overview of all the Errors and Alarms applicable to the signal or network under test.


The soft LED blocks on screen are arranged logically and will depend on signal hierarchy, interface, payload and pattern selected. The soft LED blocks have a tricolor function:

■ **Green:** No error or alarm is present.

■ **Red:** An error or alarm condition is detected and is currently present.

■ **Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.

■ **Gray:** Indicates that the measurements are masked by a higher layer alarm or error.

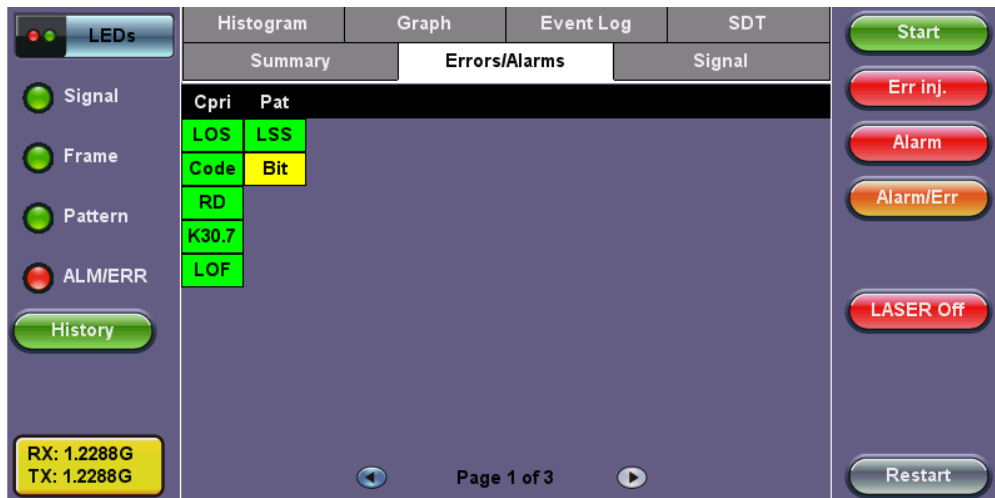

Alarms and Errors Page 1


Tapping the individual soft LED will automatically link directly to the applicable result screen which provides detailed information.

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 2) - CPRI

Page 2 lists CPRI Errors/Alarms associated with the signal under test. Some options may not be available depending on the platform and module.

- **LOS:** Loss of Signal detection in seconds
- **Code:** 8b/10b code violation detected count and rate
- **Running Disparity:** 8b/10b running disparity error
- **K30.7:** Control word K30.7 detection
- **LOF:** Loss of framing seconds detected if invalid Z.0.0 sync byte is received

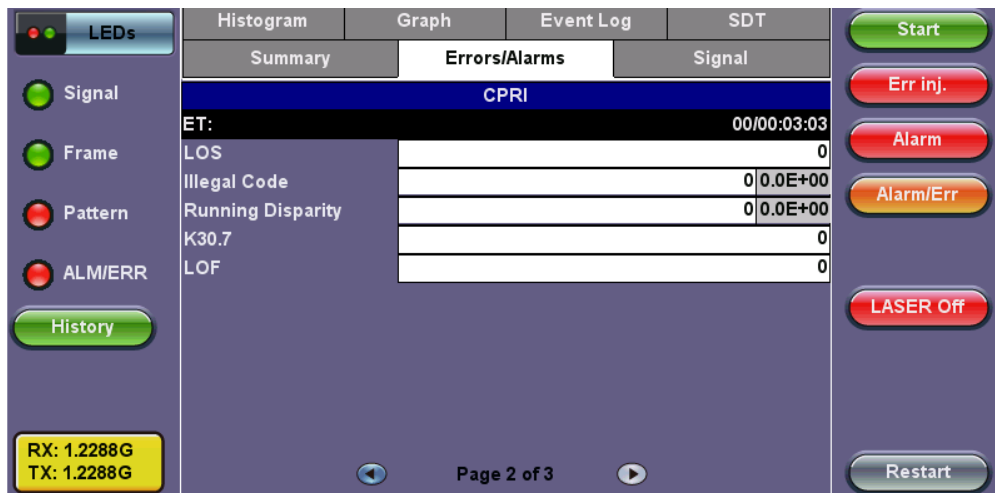

Alarms and Errors Page 2

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 3) - BERT

Page 3 lists BERT Errors/Alarms associated with the signal under test.


- **LSS:** Loss of test pattern seconds.
- **Bit:** Number of test pattern bit errors. Displays count and rate.



Alarms and Errors Page 3

[Go back to top](#) [Go back to TOC](#)

Signal

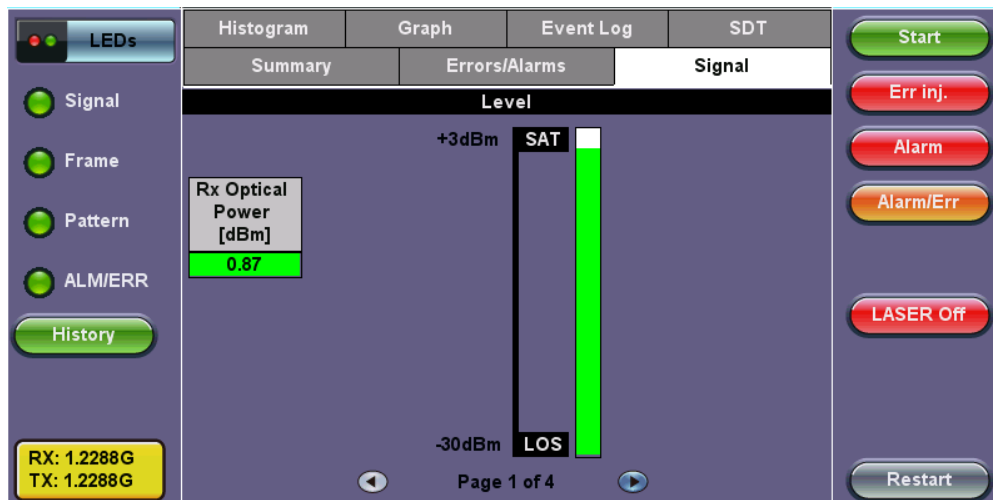


Signal


The **Signal** tab displays the frequency and level result screen. Page 1 displays the level measurement. Loss of Signal (LOS) and the Saturation level for optical signals is shown graphically including the level measurement in dBm.

Frequency (Page 2)

- **Frequency:** The received signal frequency and offset is measured and displayed.
 - **Offset:** Indicates the difference between the standard rate and the rate of the input signal.
 - **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal.
 - **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal.
- **Frame Count:** Indicates CPRI frames counter

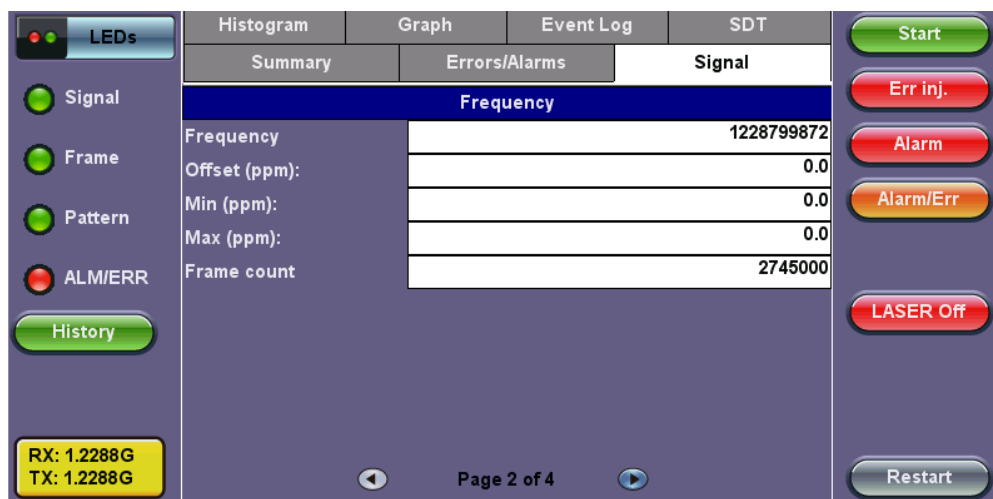

Signal Page 2

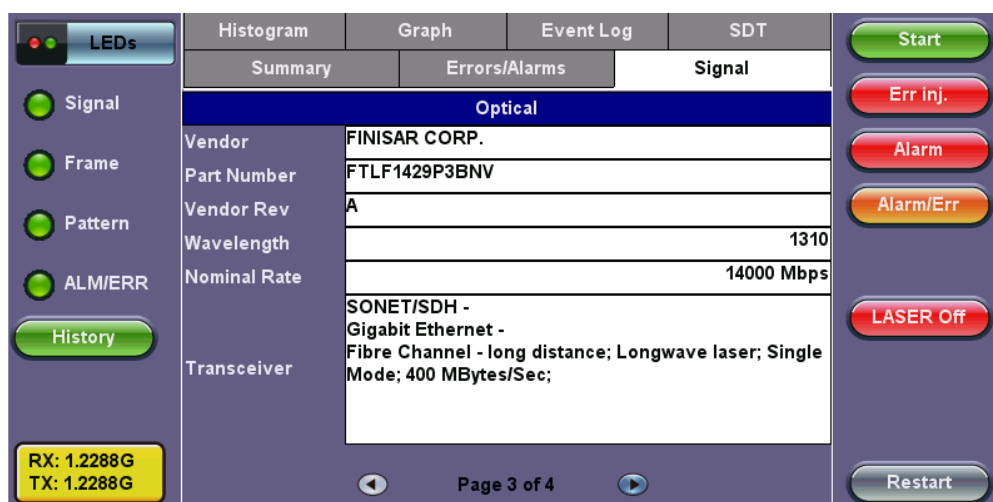


Signal Page 3

Signal - Optical Information (Page 3)

Page 3 displays the Optical module (SFP or XFP) information which includes Vendor name, Part number, and Optical Wavelength.

Signal - Optical Information (Page 4)


Page 4 displays the Optical module (SFP or XFP) Power Measurement Graph.

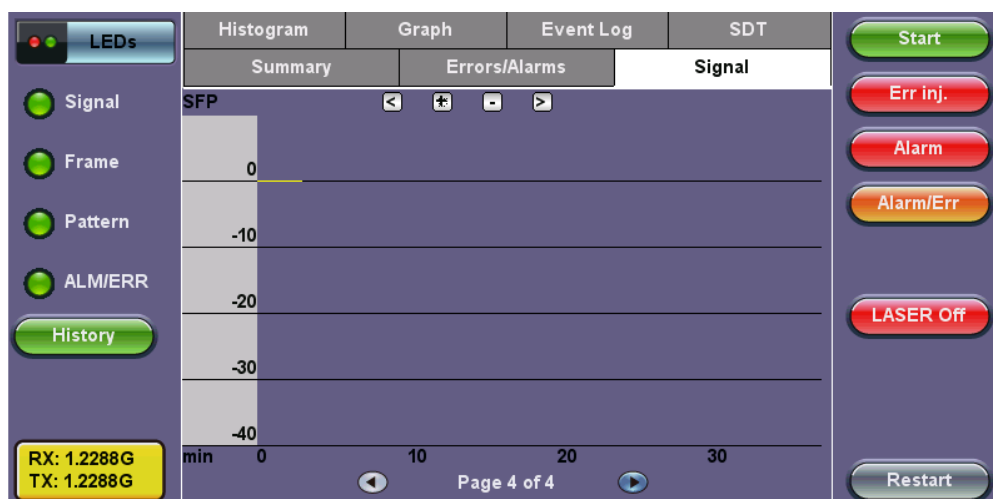

[Go back to top](#) [Go back to TOC](#)

Histogram

The **Histogram** tab a historical record of the Alarms and Errors recorded during the measurement interval. A dedicated Page is available for CRPI and BERT errors and alarms.

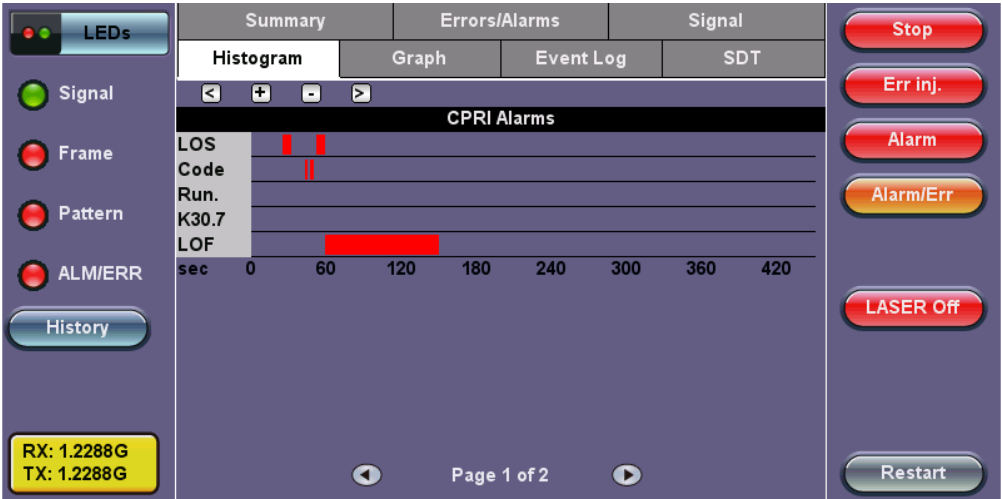


Histogram

[Go back to top](#) [Go back to TOC](#)

Graph

The **Graph** tab displays a log of the Errors recorded during the measurement interval. A dedicated page is available for each of the error types.

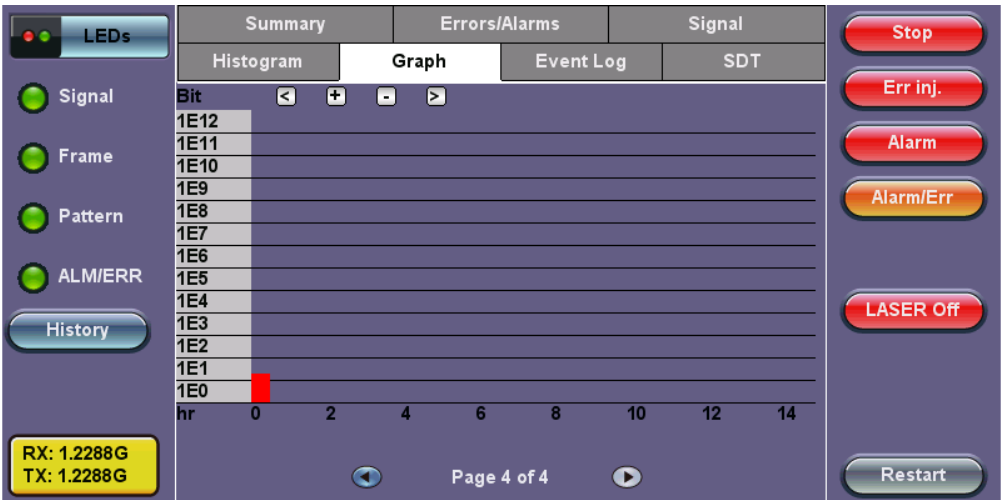

Graph

[Go back to top](#) [Go back to TOC](#)

Event Log

Logs CPRI Alarms and Errors events along with corresponding count and duration for each event.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 1.2288G
TX: 1.2288G

Summary

Errors/Alarms

Signal

Histogram

Graph

Event Log

SDT

Results

Event Log

Type	Start	Duration [ms]	Verdict
Start	17/05/15 15:01:33.0		
Disruption	17/05/15 15:01:34.581440	0.010	Pass
-BIT	17/05/15 15:01:34.581440	0.010	
Stop	17/05/15 15:04:36.3		

Page 1 of 1

Start

Err inj.

Alarm

Alarm/Err

LASER Off

Restart

SDT Results - Event Log

[Go back to top](#) [Go back to TOC](#)

17.3.3 L1 Round Trip Delay

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 1.2288G
TX: 1.2288G

Setup

Repeat ON

ST:2017-08-30 15:11:25
Results
ET:00/00:00:16

Time	2.4 ns
Max Time	2.4 ns
Min Time	2.4 ns
Average Time	2.4 ns
Result	Running...

Stop

LASER Off

With a loopback at the far-end, the test set inserts a bit error in the transmitted data stream and measures the time it takes for the error to be received in order to evaluate round trip delay. This measures the total fiber length and equipment delay combined. The loopback can be fiber optics or logical (triggered inside network elements).

The test can be configured to run a single measurement, Repeat = OFF, if the total delay is not expected to change over time, or Repeat = ON to run it continuously. When Repeat is enabled, the test set will keep track of the Current (last), Maximum, Minimum and Average times measured. Turn the Laser ON and Calibrate it by looping the test patch cord, before measuring the link's RTD.

[Go back to top](#) [Go back to TOC](#)

17.4 CPRI Layer 2 Framed Testing


Refer to the **Getting Started** section, in the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for more information on how to launch test applications.



CPRI Layer 2 Main Menu

[Go back to top](#) [Go back to TOC](#)

17.4.1 Setup

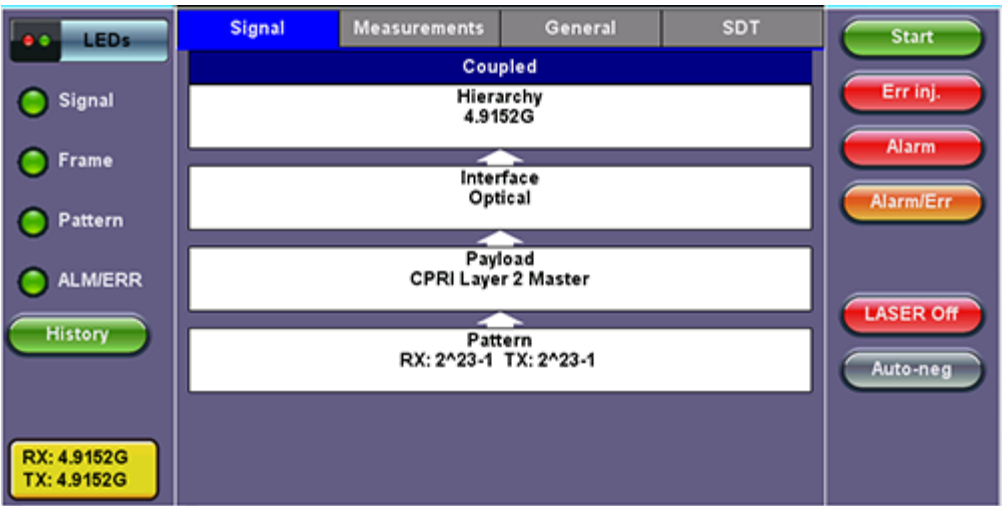


Setup Menu

[Go back to top](#) [Go back to TOC](#)

Configure the following:


Signal

- **Hierarchy:** CPRI Rate selection from 614.4 Mbps to 12.168 Gbps. Check with SFP+ manufacturer specifications to make sure rates are supported. Available speed rates will vary depending on the test platform and module. The test application button, indicated by the **1** and **2** tabs, shows the selected CPRI speed rate.

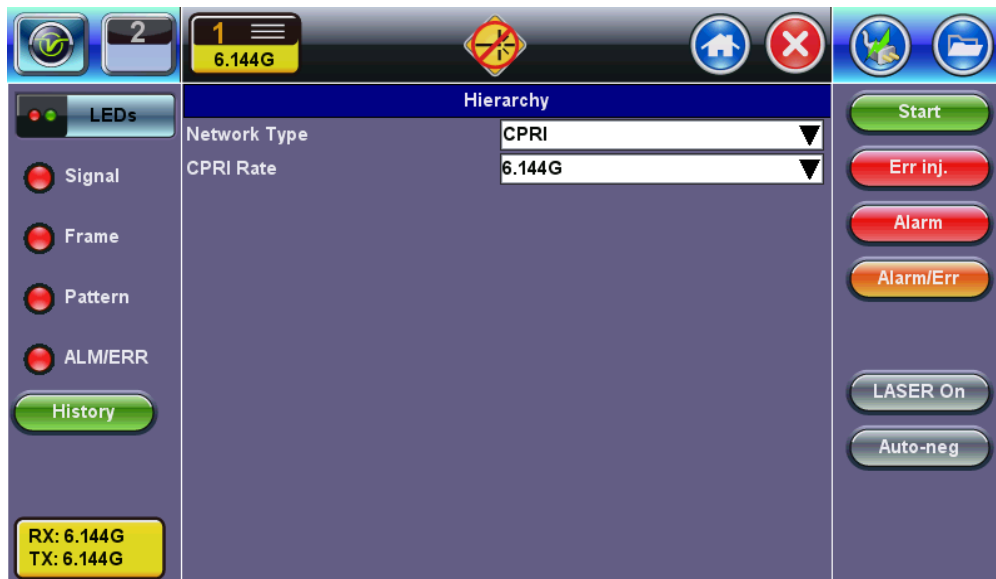

Hierarchy

- **Interface:** CPRI Clock Selection Internal/External (Master mode only). Slave uses RX signal recovered clock.
- If the unit is set as Master emulation mode, the following options are available:
 - **Internal:** The clock for the transmitter is derived from the internal clock. The internal clock has an accuracy of +/- 3.5ppm conforming to G.812 recommendations.
 - **External Clock Sources:** 1.5MHz, 2MHz, 1.5Mbit/s, 2Mbit/s, 10MHz. For External clock connection use the unit's SMA CLK port.
 - **Offset:** The clock for the transmitter is derived from internal clock generator. It can change the offset while measurements are running. Use numeric key to increase and decrease the frequency shift, up to 0.01ppm. Frequency offset: ±50ppm with 1, 0.1, 0.01ppm resolution.
 - **Atomic 10MHz:** The built-in Atomic Clock hardware option can provide highly stable frequency references on its own.
- If the unit is set in slave emulation mode, the clock is recovered from the RX CPRI link.

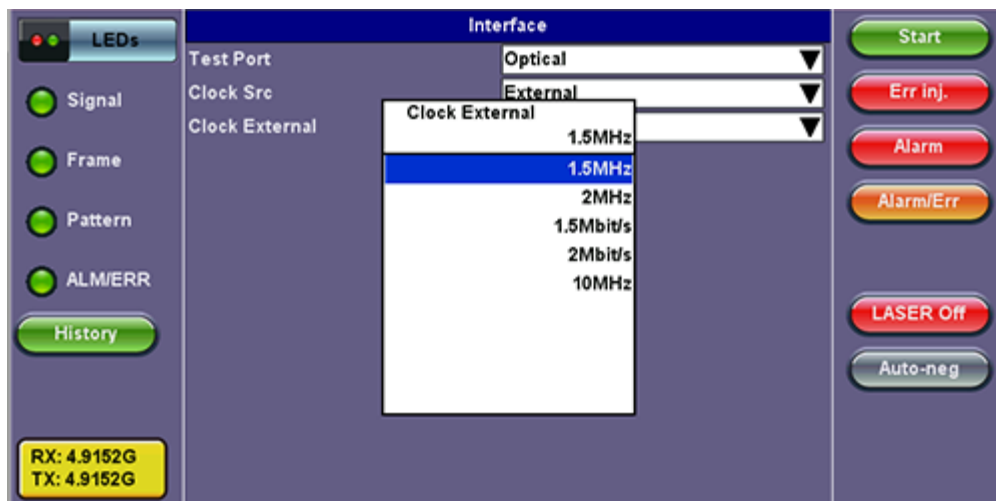

Interface

- **Payload:** CPRI Layer 2 configuration
 - **CPRI Emulation Type:** CPRI Master emulation (Radio Equipment Controller Emulation)
CPRI Slave emulation (Remote Radio Unit). Slave = RE. Master is responsible for CPRI Start up sequence and Synchronization
 - **CPRI Protocol:** Version 1 supported
 - **#Z.0.1 Byte:** Sync Control Word Z.0.1 set to D16.2 or D5.6
 - **Channels:**
 - **Single:** PRBS test pattern transmitted on one AxC
 - **All:** PRBS test pattern transmitted on all AxC

Control and Management (C&M) channel configuration:

- **Slow C&M Rate:**
 - **None:** HDLC channel disabled
 - **Configurable rate:** 240kb/s to 2400 kb/s HDLC channel data rate depending on CPRI Link speed
- **Fast C&M Enabled:** Ethernet channel, configurable start of Ethernet channel pointer in Control word or channel disabled.
 - **OFF:** Ethernet Channel disabled
 - **ON:** Ethernet Channel enabled, configure Ethernet pointer location from 20 to 63

Auto-negotiation can be used for Master/Slave to negotiate their maximum C&M channels capabilities

Payload	
CPRI Layer	Layer 2
CPRI Emulation Type	Master
CPRI Protocol	1
#Z.0.1 Byte	D16.2
Channels	Single
C&M plane	
Slow C&M Rate	None
Fast C&M Enabled	OFF

Payload

- **Pattern:** Independent TX/RX test Pattern selection. PRBS $2^{23}-1$ (normal or inverted) or PRBS $2^{31}-1$ (normal or inverted)

Pattern	
TX	
PRBS Pattern	$2^{23}-1$
Invert	OFF
RX	
Out of service	ON
PRBS Pattern	$2^{23}-1$
Invert	OFF

Pattern

[Go back to top](#) [Go back to TOC](#)

Measurements

Measurements Setup

Configure a test to run for a fixed duration or a delayed start.

- **Mode:** Manual, Timed, and Auto selections are available.
 - **Manual:** This is linked to the Start/Stop function.
 - **Timed:** The test duration can be set by the user. The test duration can be set in seconds, minutes, hours or days. The test is activated by the Start/Stop function.
 - **Auto:** A predetermined start time can be set by the user. The test duration can be set in seconds, minutes, hours or days. After programming the start time and duration, press the **Start** button and the test will be activated automatically when the programmed start time is reached.

Interval Save/Results Auto Save and Auto Server Upload is available in all modes. Depending on the V300 unit and test module installed, Interval Save will appear as Results Auto Save.

- **Interval Save or Results Auto Save:** Test results automatically save at a specified interval. To enable interval save, select **ON** and enter the **Save Interval** (in minutes).
- **Auto Server Upload:** Automatically uploads results to the server. The unit needs to be connected and registered to an R-Server or FTP-Server to use this function. Selecting a server type will display a message prompt with the option to connect and register to the server.

[Go back to top](#) [Go back to TOC](#)

General

General Setup

- **Audible Alarm:** OFF / ON. A sound will be generated every time there is an alarm. This feature is not available on all V300 units.
- **Results on start:** OFF / ON. Shows the results screen on pressing Start.
- **Auto Save:** OFF / ON. Automatically Save the test results.
- **Measurement Clock Source:** Select the Measurement clock source used for Frequency measurement.
For Master: Internal or TX clock source (if external clock source is used)
For Slave: Internal

[Go back to top](#) [Go back to TOC](#)

Service Disruption Test (SDT)

A service disruption is triggered by any qualifying error or alarm determined by the user and continues to count until the error-free condition (Gate Time) is met. If SDT is enabled and alarm/error triggers are selected, the results will appear in the Results section under the SDT tab.

Refer to [Service Disruption Test \(SDT\)](#) in CPRI Layer 1 Framed Testing for setup instructions.

LEDs Signal Frame Pattern ALM/ERR History RX: 4.9152G TX: 4.9152G	Signal	Measurements	General	SDT	Start Err Inj. Alarm Alarm/Err LASER Off Auto-neg
	Setup		CPRI	BERT	
	Enable		ON		
	Limit [ms]		50		
	Gate Time [ms]		300		


SDT Setup

LEDs Signal Frame Pattern ALM/ERR History RX: 4.9152G TX: 4.9152G	Signal	Measurements	General	SDT	Start Err Inj. Alarm Alarm/Err LASER Off Auto-neg
	Setup		CPRI	BERT	
	LOS		ON		
	LOF		ON		
	SDI		OFF		
	RAI		OFF		
	RLOS		ON		
	RLOF		OFF		
	Code		ON		

CPRI Event Setup

[Go back to top](#) [Go back to TOC](#)

Alarm and Error Injection

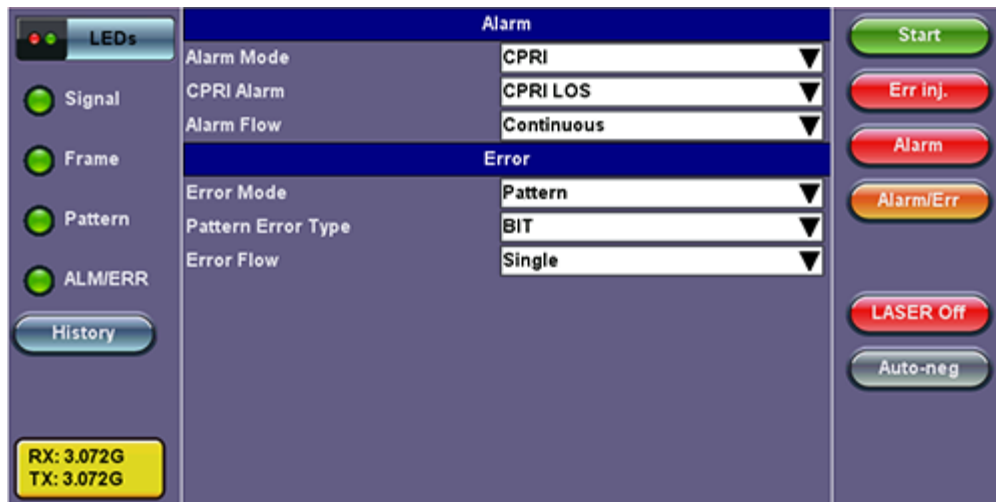

Alarm and Error Injection

The alarm and error functions are used in conjunction with the drop-down menu which has dedicated buttons for error injection and alarm generation.

The alarm section features a range of different anomalies that can be generated in the transmit signal. Alarm generation modes include:

- **CPRI Alarms:**
 - **LOS:** Trigger a Loss of Signal event (Laser OFF)
 - **LOF:** Trigger a Loss of Framing event. The Z.0.0 control byte is modified to send an invalid byte of value 0xff
 - **SDI:** Service Defect Indication is transmitted in the Control bytes for L1 inband protocol
 - **RAI:** Remote Alarm Indication is transmitted in the Control bytes for L1 inband protocol
 - **RLOS:** Remote Loss of Signal is transmitted in the Control bytes for L1 inband protocol
 - **RLOF:** Remote Loss of Framing is transmitted in the Control bytes for L1 inband protocol
- **Alarm Flow:**
 - Continuous: Generates a continuous alarm when button is tapped
 - Count: Specific count for 0.1s, 1s, 10s, 100s when button is tapped


Error Injection:

- **Error Mode:**
 - **Pattern:** BIT - Bit error injection in test pattern
 - **CPRI:** Code: 8B/10B Code violation error injection, K30.7 Control Word error injection
- **Error Flow:**
 - **Single**
 - **Count:** Enter the value
 - **Rate:** 1E-3, 5E-4, 2E-4, 1E-4, 5E-5, 2E-5, 1E-5, 5E-6, 2E-6, 1E-6, 5E-7, 2E-7, 1E-7, 5E-8, 2E-8, 1E-8, 5E-9, 2E-9, 1E-9

Press **Start** to start the test.

[Go back to top](#) [Go back to TOC](#)

17.4.2 Results

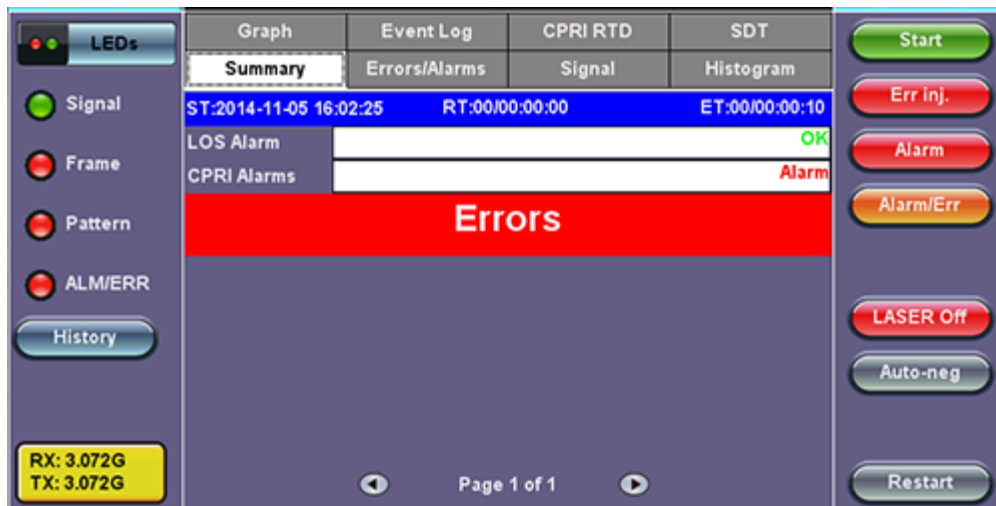

Results Summary

Summary

The **Summary** tab displays a summary of test results and parameters. At a glance, the user is able to see if there are any alarms, errors, or signal failure pertaining to the signal and its payload.

[Go back to top](#) [Go back to TOC](#)

Alarms and Errors

The **Error/Alarm** tab displays several pages showing the errors and alarm status. This include Hyperframe Synchronization indication and BFN (NodeB Radio Frame) Synchronization indication for CPRI. Alarms/Errors results provides an overview of all the Errors and Alarms applicable to the signal or network under test.

The soft LED blocks on screen are arranged logically and will depend on signal hierarchy, interface, payload and pattern selected. The soft LED blocks have a tricolor function:

■ **Green:** No error or alarm is present.

■ **Red:** An error or alarm condition is detected and is currently present.

■ **Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.

■ **Gray:** Indicates that the measurements are masked by a higher layer alarm or error.



Alarms and Errors (Page 1)

Tapping on an individual soft LED block will automatically link directly to the applicable result screen which




provides detailed information.

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 2) - CPRI

Page 2 lists CPRI Errors/Alarms associated with the signal under test. Some options may not be available depending on the platform and module.

- **LOS:** Loss of Signal detection in seconds
- **Code:** 8b/10b code violation detected count and rate
- **Running Disparity: 8b/10b running disparity error**
- **K30.7:** Control word K30.7 detection
- **LOF:** Loss of framing seconds detected if invalid Z.0.0 sync byte is received
- **HLOF:** Loss of Hyperframe synchronization seconds
- **BLOF:** Loss for Basic Frame (NodeB) frame synchronization seconds
- **SDI:** Service Defect Indication is detected in the Control bytes for L1 inband protocol
- **RAI:** Remote Alarm Indication is detected in the Control bytes for L1 inband protocol
- **RLOS:** Remote Loss of Signal is detected in the Control bytes for L1 inband protocol
- **RLOF:** Remote Loss of Framing is detected in the Control bytes for L1 inband protocol

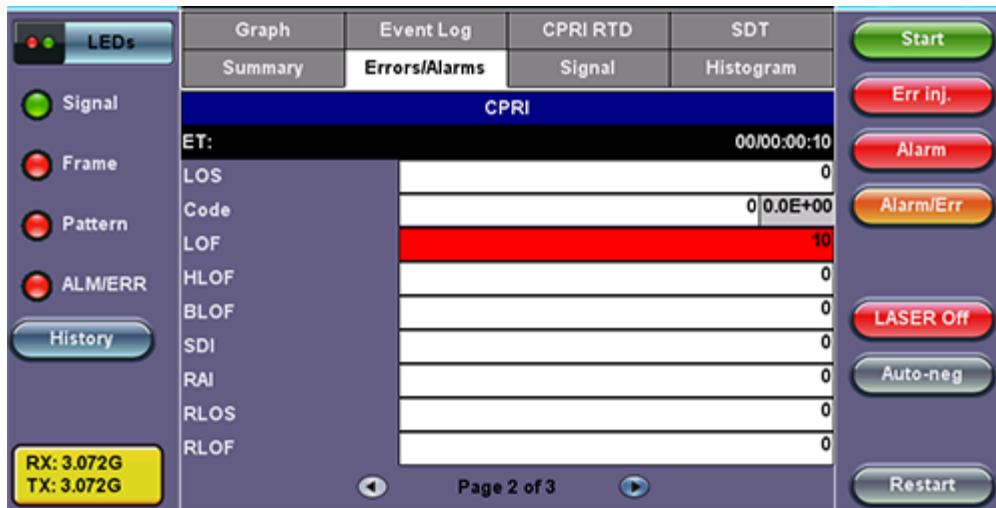


Alarms and Errors (Page 2)

[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 3) - BERT

Page 3 lists BERT Errors/Alarms associated with the signal under test.


- **LSS:** Loss of test pattern seconds
- **Bit:** Number of test pattern bit errors detected count and rate

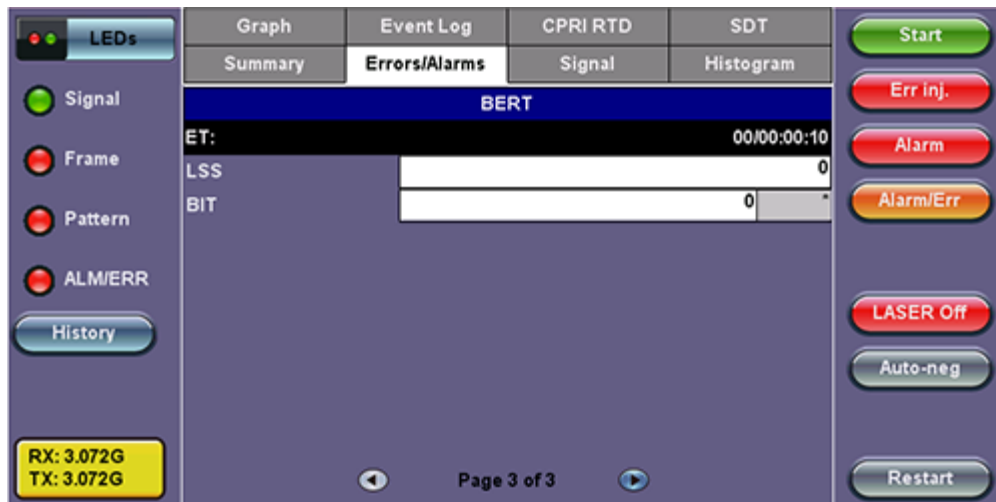

Alarms and Errors (Page 3)

[Go back to top](#) [Go back to TOC](#)

Signal

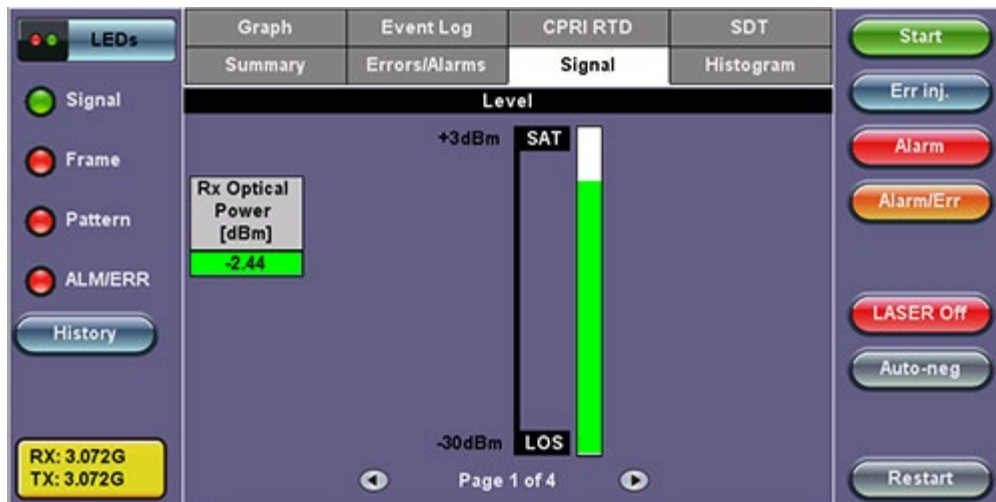


Signal (Page 1)


The Signal tab displays the frequency and level result screen. Page 1 displays the level measurement. Loss of Signal (LOS) and the Saturation level for optical signals is shown graphically including the level measurement in dBm.

Page 2 includes:

- **Frequency:** The received signal frequency and offset is measured and displayed.
 - **Offset:** Indicates the difference between the standard rate and the rate of the input signal.
 - **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal.
 - **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal.
- **Hyperframes TX/RX:** counters of Transmitted/Received Hyperframes
- **NodeB frames TX/RX:** counters of Transmitted/Received NodeB (Radio) framed

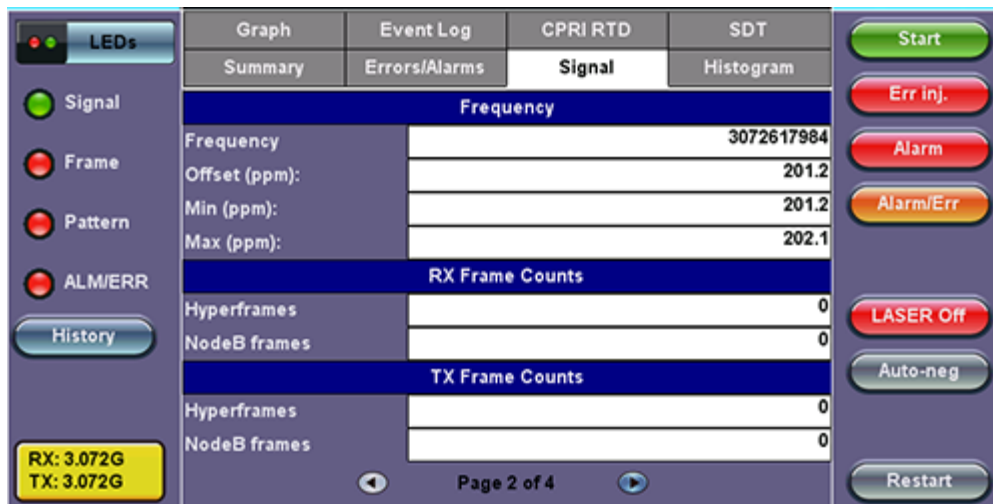

Signal (Page 2)

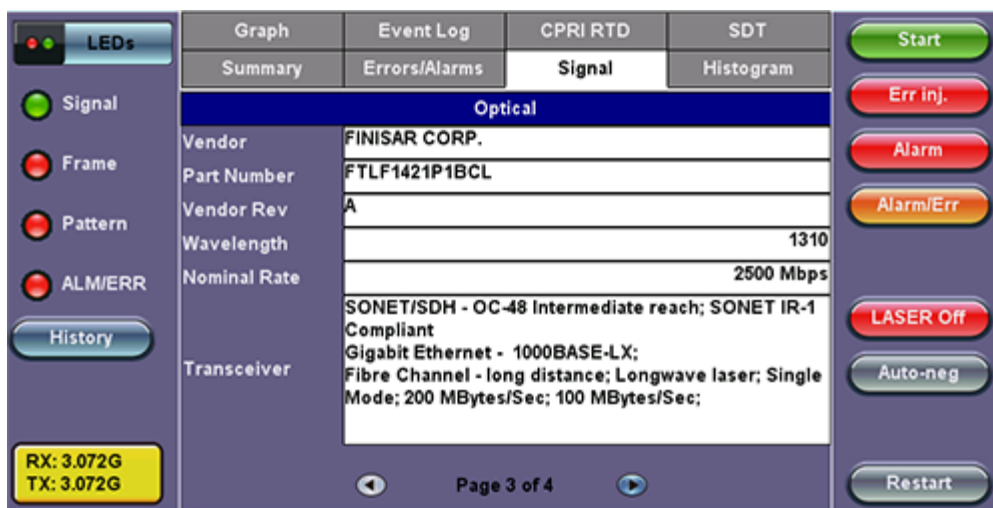


Signal (Page 3)

Signal - Optical Information (Page 3)

Page 3 displays the Optical module (SFP or XFP) information which includes Vendor name, Part number, and Optical Wavelength.

Signal - Optical Information (Page 4)

Page 4 displays the Optical module (SFP or XFP) Power Measurement Graph.

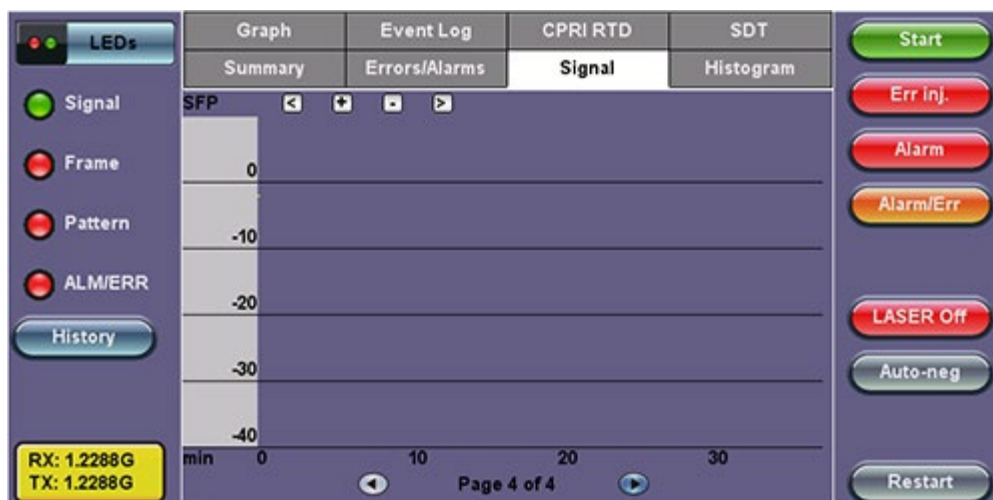


Signal (Page 4)

[Go back to top](#) [Go back to TOC](#)

Histogram

The **Histogram** tab displays a historical record of the Alarms and Errors recorded during the measurement interval. A dedicated Page is available for CPRI and BERT errors and alarms.

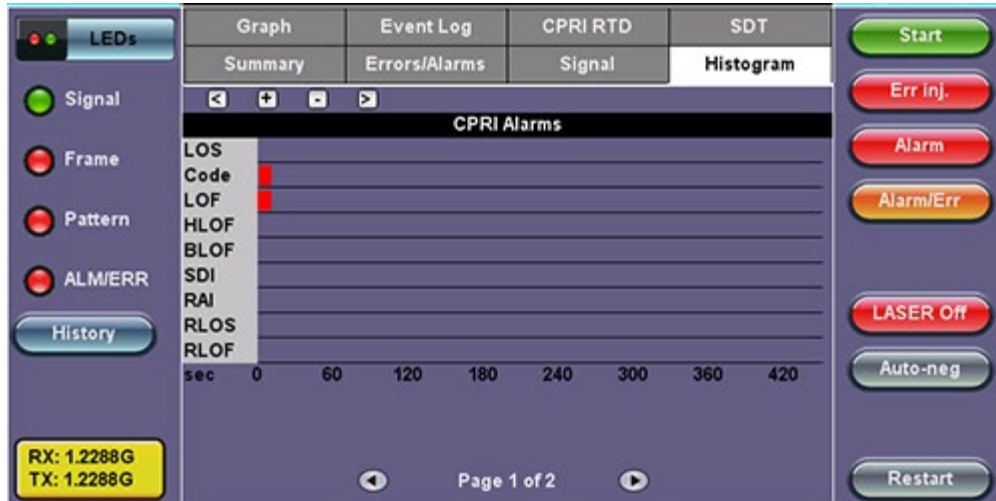


Histogram (Page 1)

[Go back to top](#) [Go back to TOC](#)

Graph

The **Graph** tab displays a log of the Errors recorded during the measurement interval. A dedicated page is available for each of the error types.

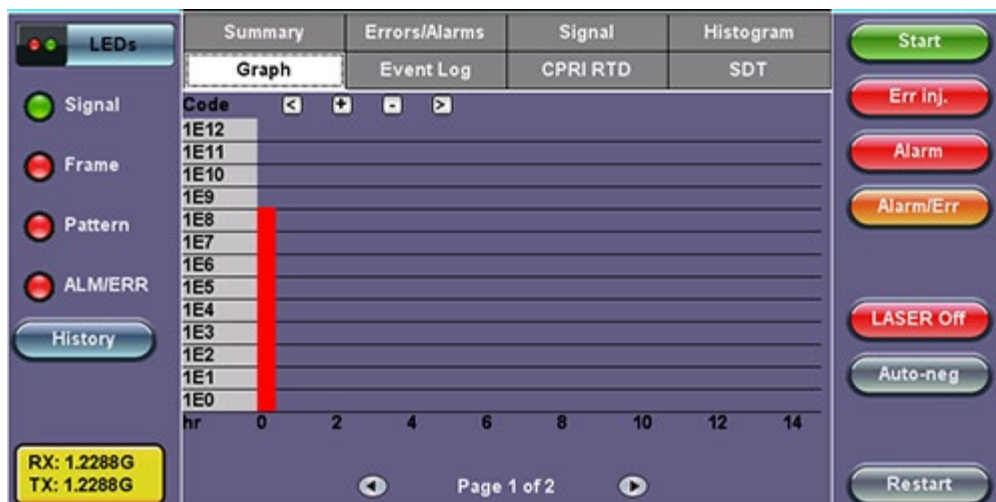

Graph (Page 1)

[Go back to top](#) [Go back to TOC](#)

Event Log

Logs CPRI Alarms and Errors events along with corresponding count and duration for each event.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 1.2288G

TX: 1.2288G

Summary

Errors/Alarms

Signal

Histogram

Graph

Event Log

CPRI RTD

SDT

Start

Err Inj.

Alarm

Alarm/Err

LASER Off

Auto-neg

Restart

#	Type	Start	Durl/Count
1	Start	2014-11-05 17:03:52.0	
2	CPRI:LOF	2014-11-05 17:03:52.1	
3	CODE	2014-11-05 17:03:53.0	107708729
4	CODE	2014-11-05 17:03:54.0	107744330
5	CODE	2014-11-05 17:03:55.0	107743821
6	CODE	2014-11-05 17:03:56.0	107755758
7	CODE	2014-11-05 17:03:57.0	107837711
8	CODE	2014-11-05 17:03:58.0	107843294
9	CODE	2014-11-05 17:03:59.0	107818870

◀

Page 1 of 2

▶

Event Log


[Go back to top](#) [Go back to TOC](#)

17.4.3 CPRI Round Trip Delay

CPRI Standard Cable Delay Measurement reference points:

- Toffset = Frame offset delay between Slave RX and Slave TX
- T_{1,4} = Frame delay between Master TX and Master RX
- Cable Delay (round trip) = T_{1,4} – Toffset

The figure below shows the definition of reference points for delay calibration (single-hop configuration):

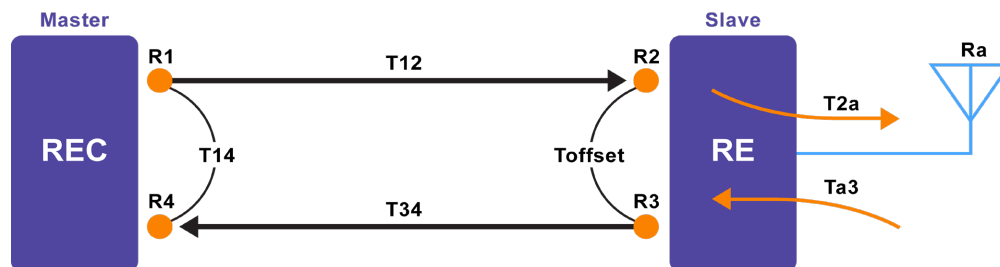

Round trip delay Measurement procedure:

1. Slave Side: Start the test and note Toffset value
2. Master Side: Enter the Slave Toffset value using keypad
3. Master Side: Start the Test
4. Master Side: Note Cable Delay measurement min, max and current values

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 6.144G

TX: 6.144G

Summary	Errors/Alarms	Signal	Histogram
Graph	Event Log	CPRI RTD	SDT
Setup			
Slave Toffset		337.70	
Results			
T14		70690.6 ns	
Cable Delay		70352.9 ns	
Cable Delay Min		70352.7 ns	
Cable Delay Max		70353.4 ns	

Stop

Err inj.

Alarm

Alarm/Err

LASER Off

Restart

[Go back to top](#) [Go back to TOC](#)

17.4.4 Service Disruption Test (SDT) Results

Refer to [SDT Results](#) in the CPRI Layer 1 Framed section for more information on test results.

[Go back to top](#) [Go back to TOC](#)

17.4.5 Control Words

Display of Control words content in the 64 Subchannels.

Tap on any **subchannel** to display Hex and Binary value of the contents.

0-15		16-31				32-47				48-63			
0	Sync & timing	SYN BC	HFN 58	BFN 80	BFN 03	8	Reserved	RES	RES	RES	RES	RES	RES
1	Slow C&M	C&M 00	C&M 00	C&M 00	C&M 00	9	Reserved	RES	RES	RES	RES	RES	RES
2	L1 inband prot.	VER 01	STR 00	L1 00	Ptr 00	10	Reserved	RES	RES	RES	RES	RES	RES
3	Reserved	RES 00	RES 00	RES 00	RES 00	11	Reserved	RES	RES	RES	RES	RES	RES
4	Ctrl_AxC low Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	12	Reserved	RES	RES	RES	RES	RES	RES
5	Ctrl_AxC low Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	13	Reserved	RES	RES	RES	RES	RES	RES
6	Ctrl_AxC high Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	14	Reserved	RES	RES	RES	RES	RES	RES
7	Ctrl_AxC high Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	15	Reserved	RES	RES	RES	RES	RES	RES

Control Words Display


Byte Analyzer	
Type	Sync byte
Value	BC, 50, 50, 50, 50

Control Words Byte Analyzer

[Go back to top](#) [Go back to TOC](#)

17.4.6 Frame Capture

The test set must be set to Slave mode or use the Master's ref. Clock.

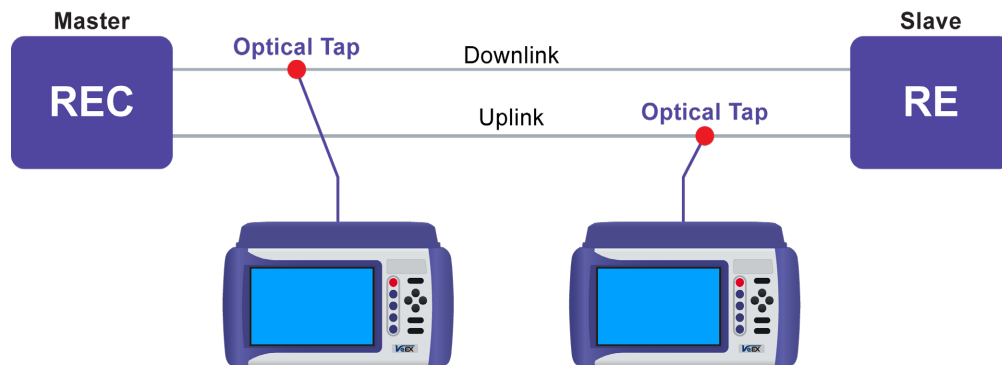

- Capture up to 5000 Hyperframes
- CSV, IQ, or raw frame format
- Compression (gzip format)
- Capture file written directly to USB drive

The screenshot shows the Frame Capture Setup interface. The Setup tab is active, displaying the following settings:

Setup	
Hyperframes	5000
Format	Raw
Compress	ON

Buttons: Start, LASER Off, History. Left sidebar: LEDs (Signal, Frame, Pattern, ALM/ERR). Yellow status bar: RX: 3.072G, TX: 3.072G.

Frame Capture Setup

[Go back to top](#) [Go back to TOC](#)

17.4.7 Wander Measurements

The screenshot shows the Wander Setup interface. The Setup tab is active, displaying the following settings:

Setup	
Measurement Clock Source	Atomic 10MHz
Mode	Timed
Duration	10 s
Save TIE	OFF
Sampling Rate	30/s

Buttons: Stop, Analysis, LASER Off, History. Left sidebar: LEDs (Signal, Frame, Pattern, ALM/ERR). Right sidebar: TIE Monitor Graph.


Wander Setup

Refer to [Wander Measurements and Analysis](#) for a description of the Wander function, test setup, and results.

[Go back to top](#) [Go back to TOC](#)

TIE Monitor Graph

The real time monitoring TIE graph shows current test results as the test is running. Based on current test measurements, users can decide to continue with long term testing or change configuration settings. The Y scale is auto-ranging and displays the last seven minutes of measurement results.

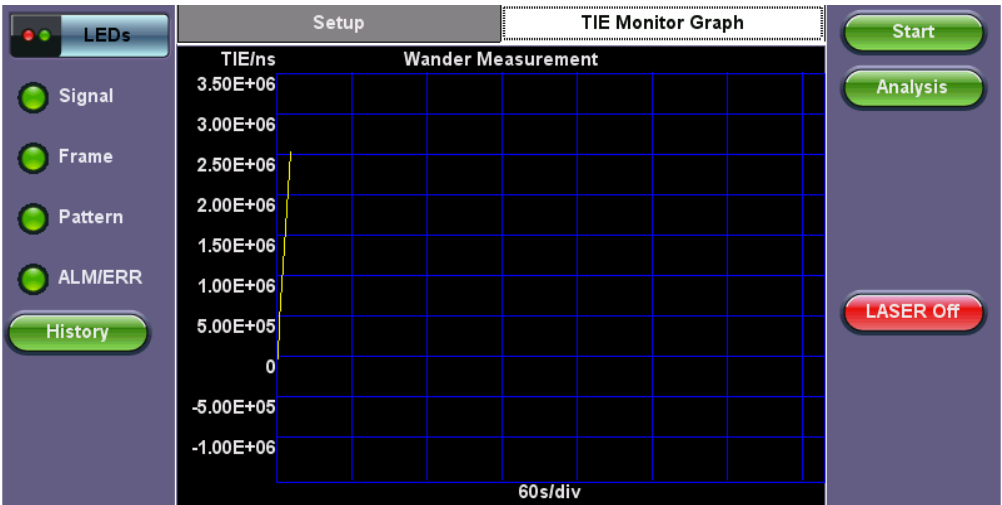

TIE Monitor Graph

[Go back to top](#) [Go back to TOC](#)

17.5 CPRI Layer 2 Monitor




CPRI Layer 2 Monitor Main Menu

CPRI bi-directional monitoring can be configured with dual port pass through monitoring or with optical splitters. It also offers the following features:


- Troubleshoot protocol interop with Control words display
- Link status and alarm display
- Hyperframe capture

[Go back to top](#) [Go back to TOC](#)

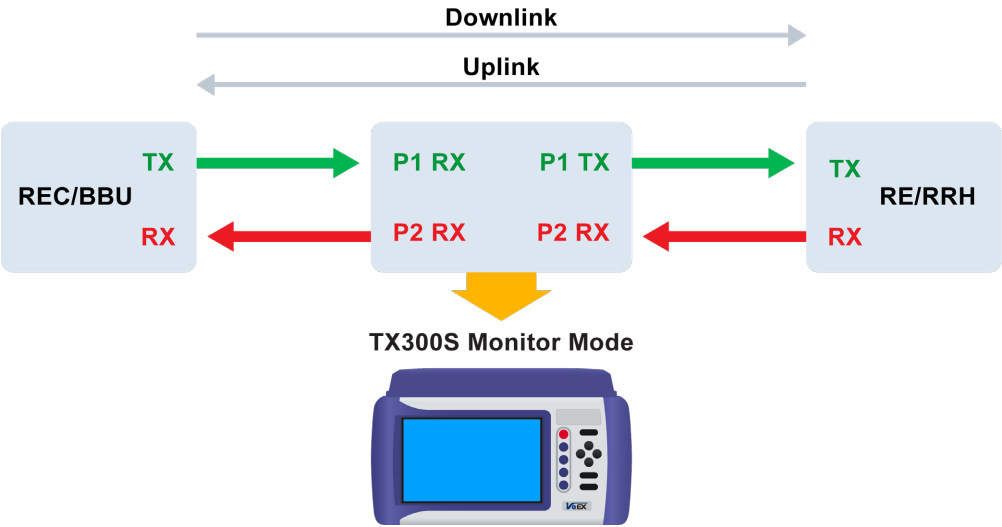

Pass Through Monitoring Connection Diagram

17.5.1 Setup

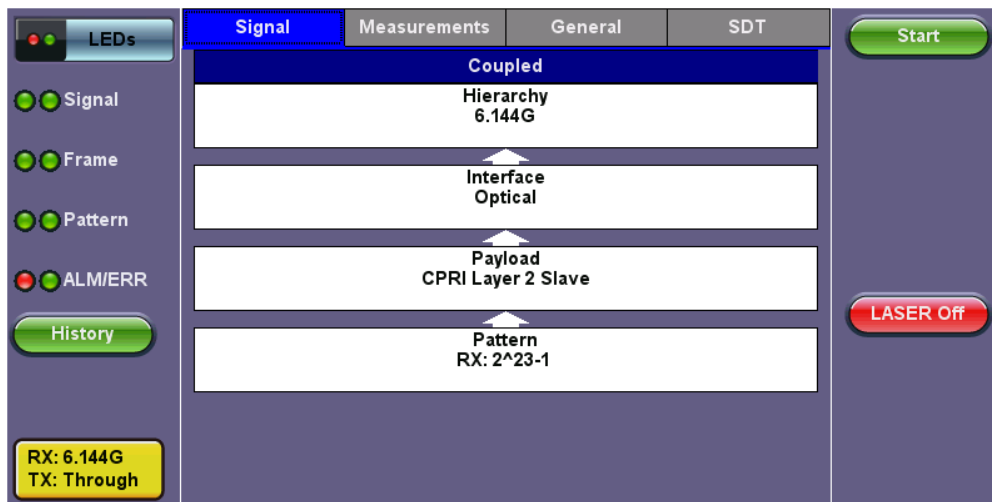

Setup Menu


The Setup page has four tabs for setting up test parameters: Signal, Measurements, General, and SDT tabs.

[Go back to top](#) [Go back to TOC](#)

Configure the following:

Signal

- **Hierarchy:** CPRI Speed Selection from 614.4Mbps to 12.168G. Check with SFP+ manufacturer specifications to make sure rates are supported. Available speed rates will vary depending on the test platform and module. The test application button, indicated by the 1 and 2 tabs, shows the selected CPRI speed rate.

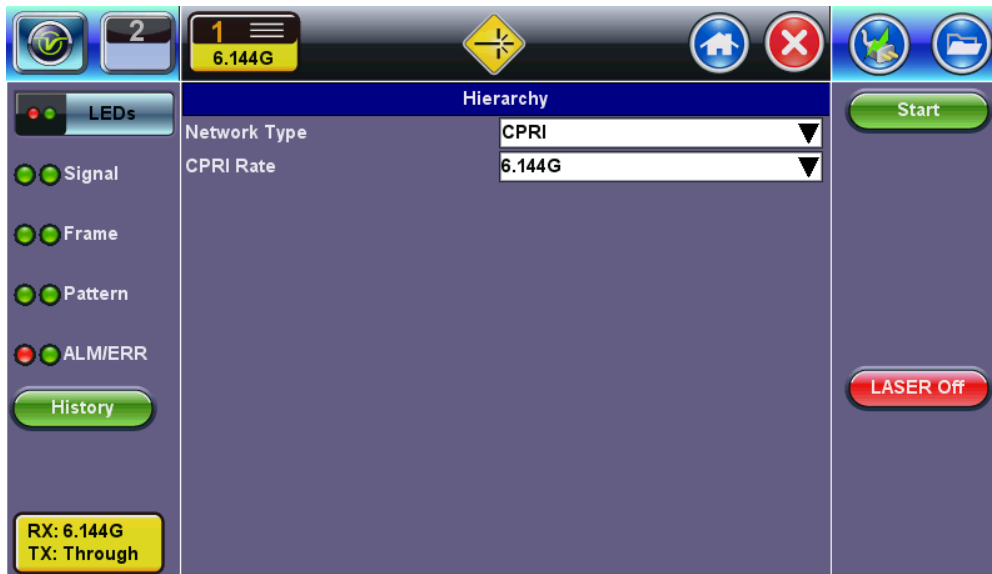

Hierarchy

- **Interface:** The optical test port and Clock Source for the receiver is derived from the internal clock. The internal clock has an accuracy of +/- 3.5ppm conforming to G.812 recommendations.

Interface

- **Payload:** CPRI Layer 2 configuration
 - **CPRI Emulation Type:** CPRI Slave emulation is chosen by default
 - **CPRI Protocol:** Version 1 supported
 - **#Z.0.1 Byte:** Sync Control Word Z.0.1 set to D16.2 or D5.6
 - **Channels:**
 - **Single:** PRBS test pattern monitored on one AxC
 - **All:** PRBS test pattern monitored on all AxC

Control and Management (C&M) channel configuration:

- **Slow C&M Rate:**
 - **None:** HDLC channel disabled
 - **Configurable rate:** 240kb/s to 2400 kb/s HDLC channel data rate depending on CPRI Link speed. Fastest selects the fastest speed rate available, 2400 kb/s.
- **Fast C&M Enabled:** Ethernet channel, configurable start of Ethernet channel pointer in Control word or channel disabled.
 - **OFF:** Ethernet Channel disabled
 - **ON:** Ethernet Channel enabled, configure Ethernet pointer location from 20 to 63

Payload

- **Pattern:** Independent RX test Pattern selection. PRBS $2^{23}-1$ (normal or inverted) or PRBS $2^{31}-1$ (normal or inverted)

Pattern

[Go back to top](#) [Go back to TOC](#)

Measurements

Measurements Setup

Configure a test to run for a fixed duration or a delayed start.

Mode: Manual, Timed, and Auto selections are available.

- **Manual:** This is linked to the Start/Stop function.
- **Timed:** The test duration can be set by the user. The test duration can be set in seconds, minutes, hours or days. The test is activated by the Start/Stop function.
- **Auto:** A predetermined start time can be set by the user. The test duration can be set in seconds, minutes, hours or days. After programming the start time and duration, press the **Start** button and the test will be activated automatically when the programmed start time is reached.

Interval Save/Results Auto Save and Auto Server Upload is available in all modes. Depending on the V300 unit and test module installed, Interval Save will appear as Results Auto Save.

- **Interval Save or Results Auto Save:** Test results automatically save at a specified interval. To enable interval save, select **ON** and enter the **Save Interval** (in minutes).
- **Auto Server Upload:** Automatically uploads results to the server. The unit needs to be connected and registered to an R-Server or FTP-Server to use this function. Selecting a server type will display a message prompt with the option to connect and register to the server.

[Go back to top](#) [Go back to TOC](#)

General

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 6.144G
TX: Through

Signal

Measurements

General

SDT

Audible Alarm

Results on start

Auto Save

Measurement Clock Source

OFF

ON

OFF

Internal

Start

LASER Off

General Setup

- **Audible Alarm:** OFF / ON. A sound will be generated every time there is an alarm. This feature is not available on all test sets.
- **Results on start:** OFF / ON. Shows the results screen on pressing Start.
- **Auto Save:** OFF / ON. Automatically Save the test results.
- **Measurement Clock Source:** The Internal clock source is selected as the default used for Frequency measurement.

[Go back to top](#) [Go back to TOC](#)

Service Disruption Test (SDT)

A service disruption is triggered by any qualifying error or alarm determined by the user and continues to count until the error-free condition (Gate Time) is met. If SDT is enabled and alarm/error triggers are selected, the results will appear in the Results section under the SDT tab.

Refer to [Service Disruption Test \(SDT\)](#) in CPRI Layer 1 Framed Testing for setup instructions.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 6.144G
TX: Through

Signal

Measurements

General

SDT

Setup

CPRI

BERT

LOS

LOF

SDI

RAI

RLOS

RLOF

Code

Run. Disp.

K30.7

OFF

ON

OFF

OFF

OFF

ON

ON


OFF

OFF

Start

LASER Off

SDT Setup

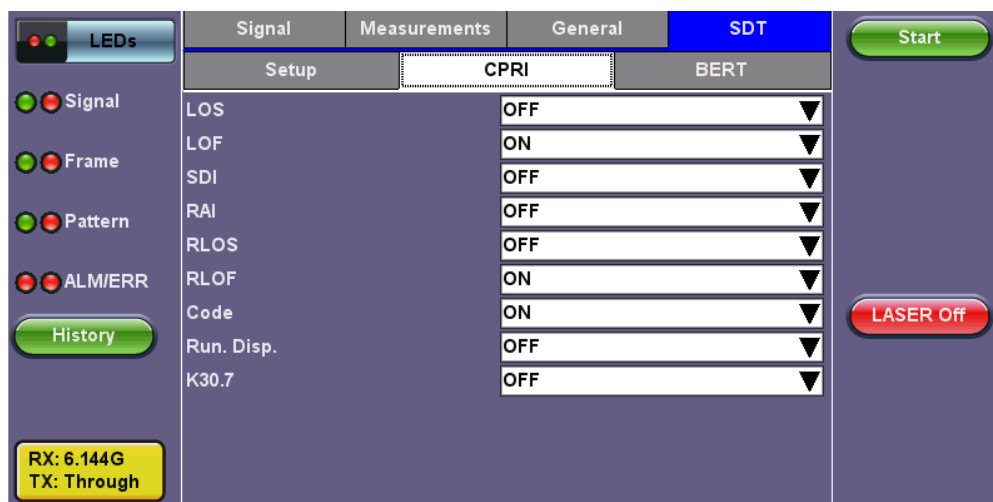


CPRI Event Setup

[Go back to top](#) [Go back to TOC](#)

17.5.2 Results

Results for both ports are displayed in each tab.

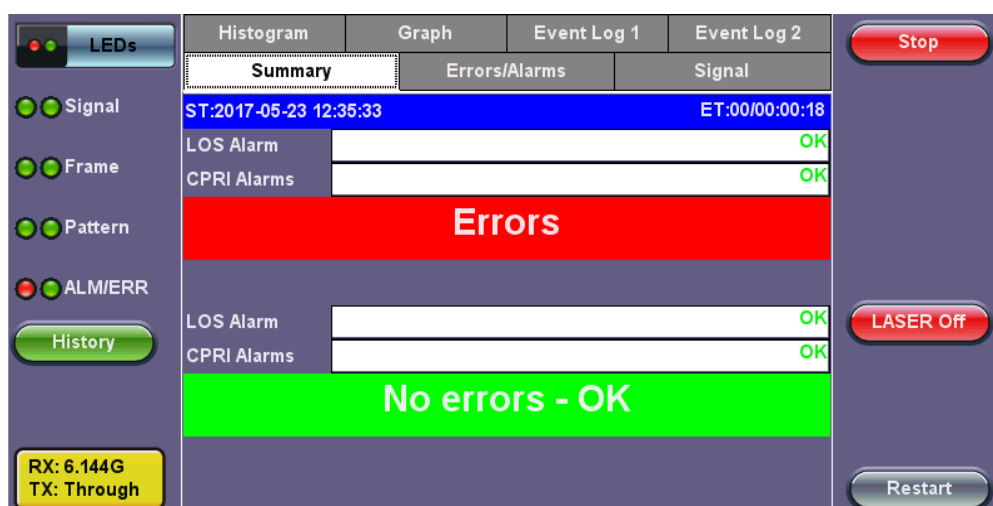

Results Summary

Summary

The Summary tab displays a summary of test results and parameters. At a glance, the user is able to see if there are any alarms, errors, or signal failure pertaining to the signal and its payload. The top summary refers to results for Port 1 and the bottom for Port 2.

Alarms and Errors

The **Error/Alarm** tab displays several pages showing the errors and alarm status. This includes Hyperframe Synchronization indication and BFN (NodeB Radio Frame) Synchronization indication for CPRI.

Alarms/Errors results provides an overview of all the Errors and Alarms applicable to the signal or network under test.

The soft LED blocks on screen are arranged logically and will depend on signal hierarchy, interface, payload and pattern selected. The soft LED blocks have a tricolor function:


■ **Green:** No error or alarm is present.

■ **Red:** An error or alarm condition is detected and is currently present.

 **Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.

 **Gray:** Indicates that the measurements are masked by a higher layer alarm or error.

Alarms/Errors for Port 1 are featured on the left, while Alarms/Errors for Port 2 are on the right.

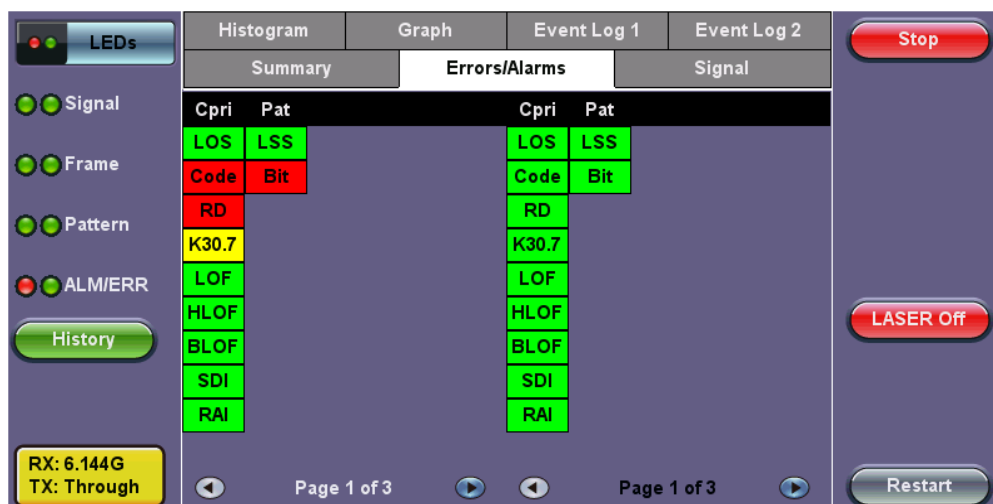

Alarms and Errors Page 1 (Port 1 & Port 2)

 Tapping on an individual colored block will automatically link directly to the applicable result screen which provides detailed information.


[Go back to top](#) [Go back to TOC](#)

Errors/Alarms (Page 2) - CPRI

Page 2 lists CPRI Errors/Alarms associated with the signal under test. Some options may not be available depending on the platform and module.

CPRI:

- **LOS:** Loss of Signal detection in seconds
- **Code:** 8b/10b code violation detected count and rate
- **RD:** Running Disparity 8b/10b running disparity error
- **K30.7:** Control word K30.7 detection
- **LOF:** Loss of framing seconds detected if invalid Z.0.0 sync byte is received
- **HLOF:** Loss of Hyperframe synchronization seconds
- **BLOF:** Loss for Basic Frame (NodeB) frame synchronization seconds
- **SDI:** Service Defect Indication is detected in the Control bytes for L1 inband protocol
- **RAI:** Remote Alarm Indication is detected in the Control bytes for L1 inband protocol
- **RLOS:** Remote Loss of Signal is detected in the Control bytes for L1 inband protocol
- **RLOF:** Remote Loss of Framing is detected in the Control bytes for L1 inband protocol

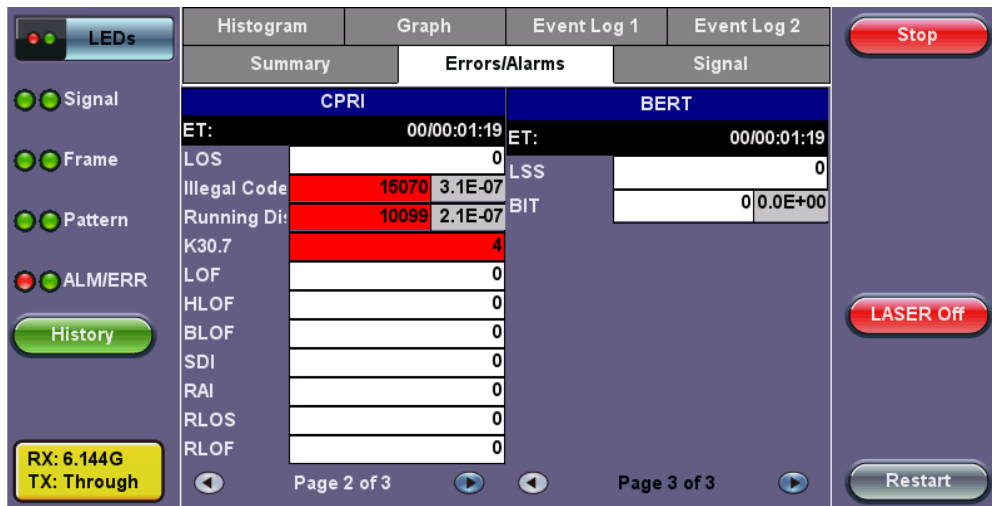

Alarms and Errors - CPRI (Port 1) / BERT (Port 2)


Errors/Alarms (Page 3) - BERT

Page 3 lists BERT Errors/Alarms associated with the signal under test.


- **LSS:** Loss of test pattern seconds.
- **Bit:** Number of test pattern bit errors. Displays count and rate.

[Go back to top](#) [Go back to TOC](#)

Signal

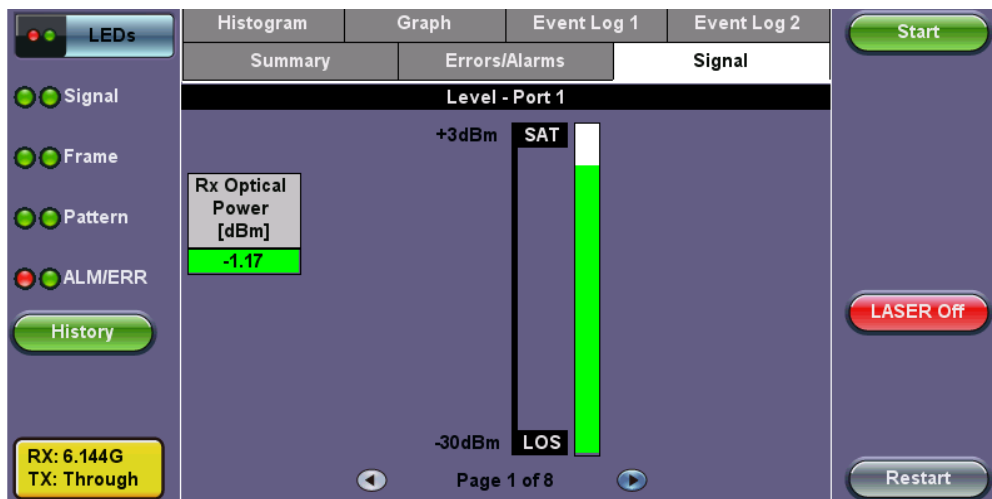

Signal - Level - Page 1 (Port 1)

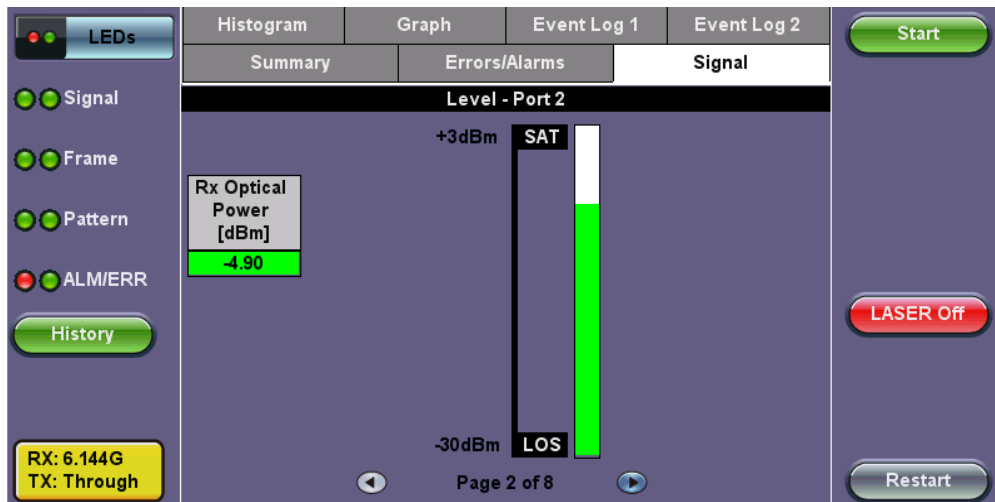


Signal - Level - Page 2 (Port 2)


The Signal tab displays the frequency and level result screen. Page 1 & 2 displays the level measurement. Loss of Signal (LOS) and the Saturation level for optical signals is shown graphically including the level measurement in dBm.

Each page displays measurements for an individual port.

- **Frequency (Page 3 & 4)**
 - **Frequency:** The received signal frequency and offset is measured and displayed.
 - **Offset:** Indicates the difference between the standard rate and the rate of the input signal.
 - **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal.
 - **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal.
- **Hyperframes TX/RX:** Counts transmitted/received Hyperframes.
- **NodeB frames TX/RX:** Counts transmitted/received NodeB (Radio) framed.

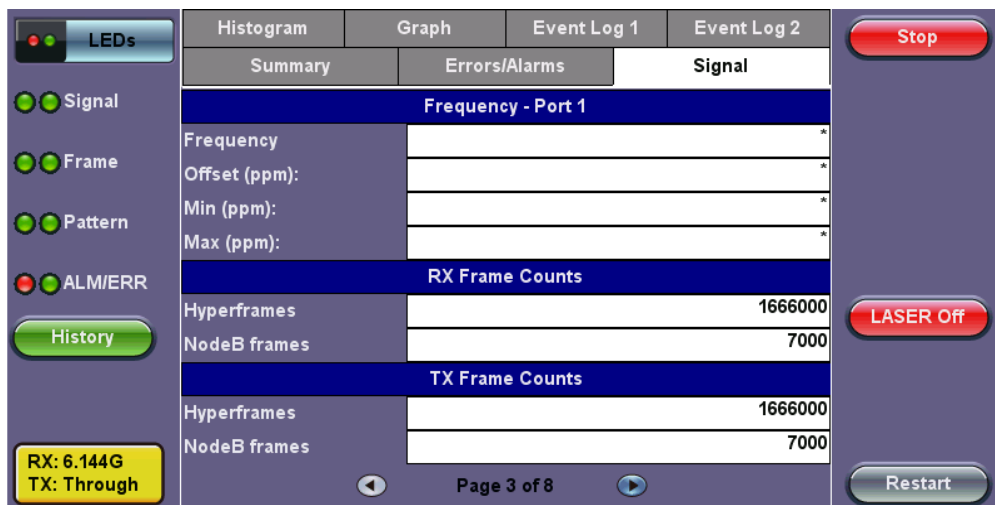

Signal - Page 3 (Port 1)

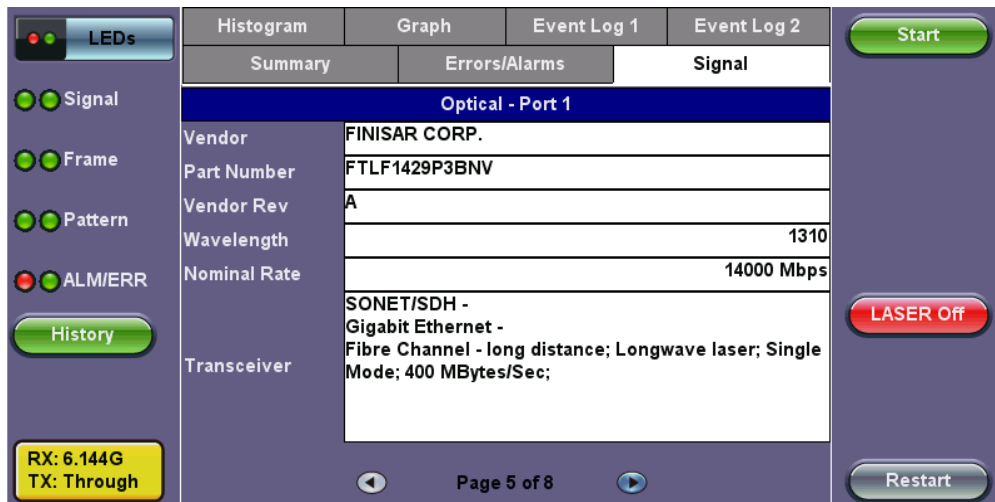

Signal - Page 5 (Port 1)


Signal - Optical Information (Page 5 & 6)

Page 5 & 6 display the Optical module (SFP or XFP) information which includes Vendor name, Part number, and Optical Wavelength.

Signal - Optical Information (Page 7 & 8)

Page 7 & 8 display the Optical module (SFP or XFP) Power Measurement Graph.

Histogram showing the fluctuation in RX optical signal level.

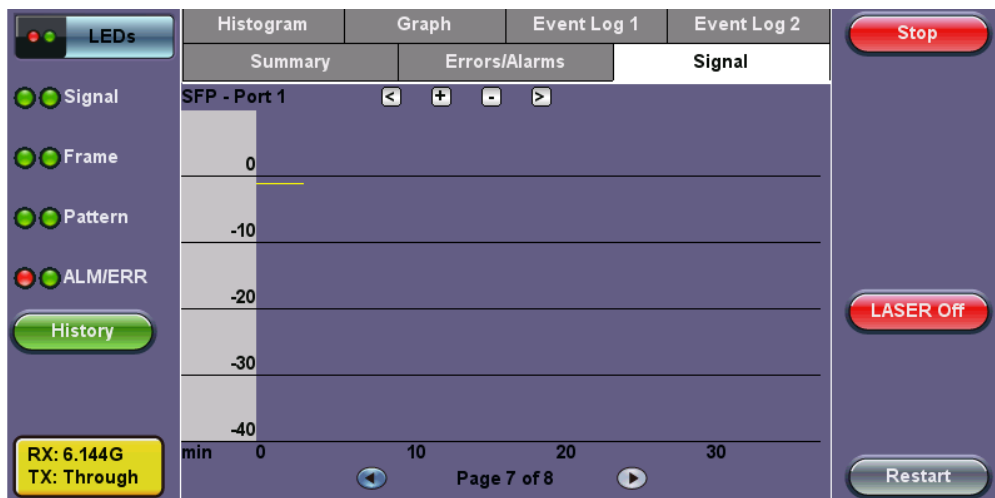


Signal - Page 7 (Port 1)

[Go back to top](#) [Go back to TOC](#)

Histogram

The **Histogram** tab displays a historical record of the Alarms and Errors recorded during the measurement interval. A dedicated Page is available for CPRI and BERT errors and alarms. Port 1 results are displayed on the left; Port 2 results are displayed on the right.

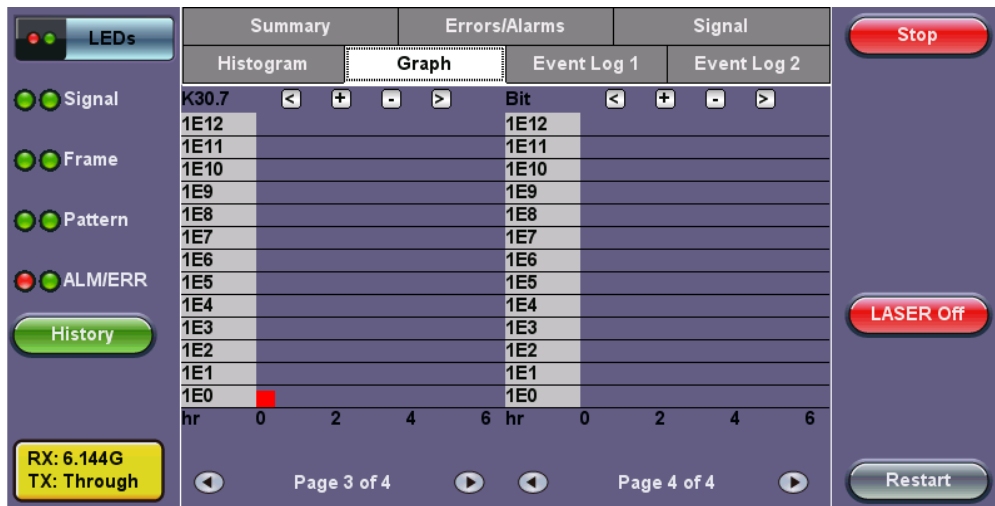

Graph - K30.7 (Port 1) / Bit (Port 2)

[Go back to top](#) [Go back to TOC](#)

Event Log 1 & 2

Logs CPRI Alarms and Errors events along with corresponding count and duration for each event. Event Log 1 refers to Port 1 events, while Event Log 2 refers to Port 2 events.

Summary	Errors/Alarms	Signal	Histogram
Graph	Event Log 1	Event Log 2	SDT 1
SDT 2			
#	Type	Start	Dur/Count
1	Start	2017-05-23 12:35:33.0	
2	BIT	2017-05-23 12:35:34.0	18
3	CODE	2017-05-23 12:35:34.0	174
4	CPRI:RD	2017-05-23 12:35:34.0	108
5	BIT	2017-05-23 12:35:35.0	12
6	CODE	2017-05-23 12:35:35.0	182
7	CPRI:RD	2017-05-23 12:35:35.0	112
8	BIT	2017-05-23 12:35:36.0	16
9	CODE	2017-05-23 12:35:36.0	199

Page 1 of 78

Event Log 1 (Port 1)

Summary	Errors/Alarms	Signal	Histogram
Graph	Event Log 1	Event Log 2	SDT 1
SDT 2			
#	Type	Start	Dur/Count
1	Start	2017-05-23 12:35:33.0	
2			
3			
4			
5			
6			
7			
8			
9			

Page 1 of 1

Event Log 2

17.5.3 Service Disruption Test (SDT) Results

Refer to [SDT Results](#) in the CPRI Layer 1 Framed section for more information on test results.

17.5.4 Control Words 1 & 2

Display of Control words content in the 64 Subchannels.

Tap on any **subchannel** to display Hex and Binary value of the contents.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 6.144G

TX: Through

0-15					16-31				32-47				48-63			
0	Sync & timing	SYN BC	HFN 33	BFN 80	BFN 07	8	Reserved	RES 00	RES 00	RES 00	RES 00					
1	Slow C&M	C&M 00	C&M 00	C&M 00	C&M 00	9	Reserved	RES 00	RES 00	RES 00	RES 00					
2	L1 inband prot.	VER 01	STR 00	L1 00	Ptr 00	10	Reserved	RES 00	RES 00	RES 00	RES 00					
3	Reserved	RES 00	RES 00	RES 00	RES 00	11	Reserved	RES 00	RES 00	RES 00	RES 00					
4	Ctrl_AxC low Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	12	Reserved	RES 00	RES 00	RES 00	RES 00					
5	Ctrl_AxC low Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	13	Reserved	RES 00	RES 00	RES 00	RES 00					
6	Ctrl_AxC high Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	14	Reserved	RES 00	RES 00	RES 00	RES 00					
7	Ctrl_AxC high Byte	Ctl 00	Ctl 00	Ctl 00	Ctl 00	15	Reserved	RES 00	RES 00	RES 00	RES 00					

Control Words Display

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 6.144G

TX: Through

Byte Analyzer

Type	Sync byte
Value	BC, 50, 50, 50, 50, 50, 50, 50, 50, 50

Control Words Byte Analyzer


Byte Analyzer	
Type	Slow C&M
Byte	4
Value	00
Binary	00000000

RX: 6.144G
TX: Through

Control Words Byte Analyzer

[Go back to top](#) [Go back to TOC](#)

Frame Capture

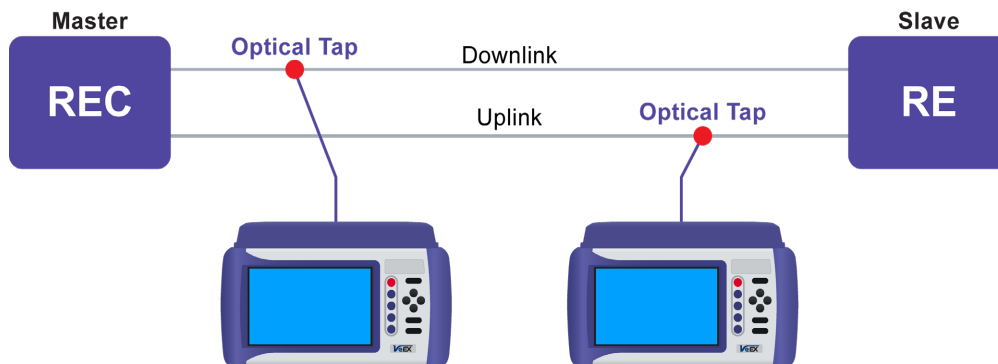

When configured in L2 Monitoring mode, the unit captures P1 and P2 simultaneously.

The following lists Frame capture options:

- Capture up to 5000 Hyperframes
- CSV or raw frame format
- Compression (gzip format)
- Capture file written directly to USB drive

Setup	
Hyperframes	5000
Format	Raw
Compress	OFF

RX: 6.144G
TX: Through

Start

LASER Off

Frame Capture Setup

18.0 IEEE C37.94™ Testing

Optical Interface between Teleprotection & Multiplexer Equipment

18.1 Introduction

The IEEE C37.94™-2002 standard (reaffirmed in 2008) defined a multi-vendor optical transmission interface to be used by power utility companies to replace existing electrical supervisory control and data acquisition links. Low level electrical links were considered unreliable for use in the power industry as they are prone to interference and damages due to intra-substation electromagnetic interference (EMI), electric shock, signal ground loops, ground potential rise and safety, among other electrical issues. Optical links and fiber optics don't have such problems.

C37.94 was originally defined as an 850 nm MMF interface with ST (BFOC/2.5) connectors, but 1310 nm MMF and SMF variants with other connector types could be found today. It is capable of transmitting a single data stream at Nx64 kbit/s, with N being 1 to 12 (64 to 768 kbit/s). It uses a simple framing structure and a line rate of 2048 kbit/s. Every bit in the data channel is encoded as a two-bit symbol consisting of the original data bit and its complement (01 or 10) assuring enough transitions to help with clock recovery.

The frame alignment signal is carried in the header, as a 16-bit pattern that alternates with every frame:

- Framing pattern 1: 1001 1011 0000 1111
- Framing pattern 2: 11y1 1111 0000 1111 (y = yellow alarm indication bit. 1 indicates alarmed condition)

The framing pattern is followed by a 48-bit p -p q -q r -r s -s 1 0 1 0 1 0 1 0...1 0 overhead pattern, where the pqrs bits represent the N value or data rate multiplier. The alternate trailing **10101010** pattern in the following five time slots is used to seed the clock recovery circuitry and serve as a preamble to client data.

Loss of Signal (LOS) and Loss of Frame Alignment (LOF)

Although the standard recognizes the ITU-T G.706 LOF definition as the event that starts after the detection of three consecutive incorrect frame alignment signals, IEEE considers loss of framing a link Loss of Signal (LOS) condition. In C37.94, LOS is declared when the optical signal is too low or the frame alignment is lost.

Per IEEE, the LOS condition is declared upon receiving two or more errors in eight consecutive framing patterns, and cleared upon receiving eight consecutive correct framing patterns.

VeEX test sets report Frame (induced) LOS and Signal (induced) LOS separately to provide extra information to users for better problem isolation and troubleshooting purposes.

Remote Defect Indication (RDI) and Yellow Alarm

Although the IEEE C37.94 refers to RDI path defects (as defined by ITU-T G.775), their official name for this far-end alarm status is **Yellow alarm**. RDI has become a more common term, but some users may use RDI and others Yellow, to refer to the alarm sent by the far end to indicate that there is a problem with the received signal. The yellow alarm indicator is carried by the third bit (y) in the second frame alignment signal.


Alarm Indication Signal (AIS)

When a network element declares loss of signal at its receiver, it sends a Yellow (RDI) alarm back to the originating equipment to notify the problem and an AIS alarm to all other equipment located upstream (in the direction of the original transmission). The AIS consist in replacing data channels' line bits (time slots 8 to 31) with an All 1s pattern.

[Go back to top](#) [Go back to TOC](#)

18.2 Getting Started

Starting the C37.94 Test Application

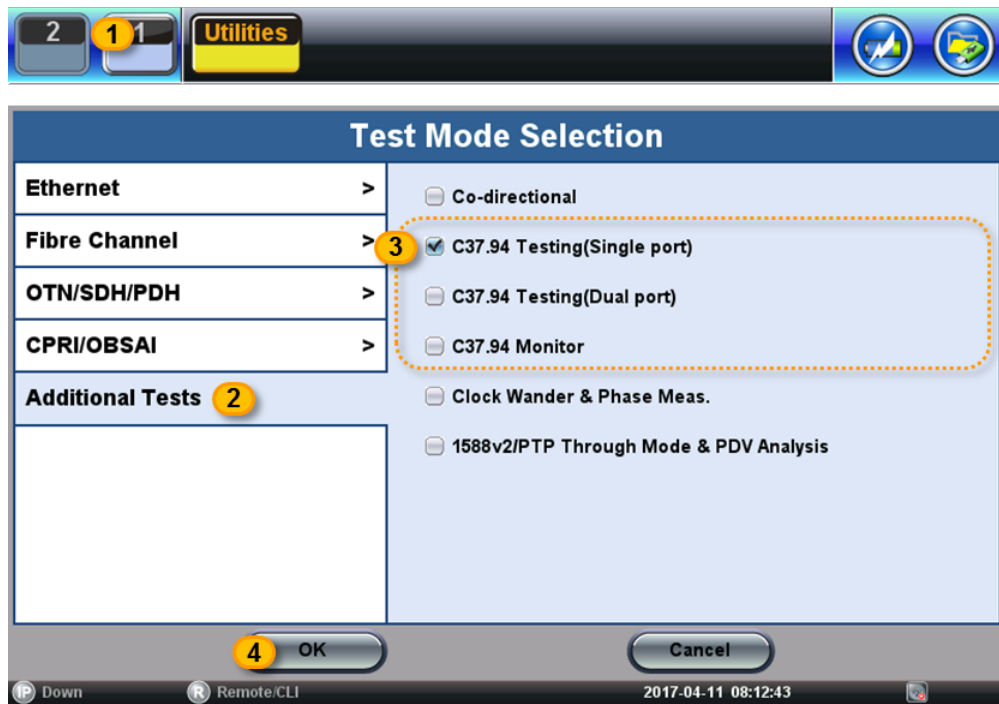

1. From the welcome screen, select the Test Application button 1.
2. Select **Additional Tests** from the technologies section.
3. Check the C37.94 Testing (Single Port) or (Dual Port) test mode, for single or dual BERT capabilities. A C37.94 Monitor test mode is also available for bidirectional monitoring (Rx-only with optical splitters) or in-line pass-through* mode (each port retransmits what it receives).
4. Press **OK** to start the C37.94 application.

After a few seconds the C37.94 Menu is displayed and the application button turns yellow (active), displaying C37.94 as the application running.

In-line pass-through, also known as “transparent” mode, is an intrusive test that is usually not recommended for the following reasons: (a) It changes the condition of the link under tests. The signal is regenerated with clean shape and full power, removing the effects from long fiber links, which are common causes of problems in point-to-point optical links. (b) Changing the settings or losing power will make the link fail. Avoid using this test configuration in live links. (c) If connected incorrectly, the test set may loopback both directions of the traffic, which is a condition that could be difficult to identify.

[Go back to top](#) [Go back to TOC](#)

18.3 Testing C37.94

Fiber optics links or network elements using this simple transmission technology can be verified like regular PDH signals, performing bit error rate tests (BERT), monitoring signal levels, errors and alarms.

- C37.94 Testing is an optional feature and it must be activated in order to have access to its functions.
- The C37.94 optical data rate is very low by today’s standards and not all modern SFPs are compatible with it (most are designed for rates ≥ 100 Mbit/s). Only use SFPs recommended by VeEX, which have are non-blocking and have a clock and data recovery (CDR) capable of working at 2048 kbit/s.
- The output signal of modern 850nm SFP modules is stronger than the original standard teleprotection equipment input range. To avoid saturation or invalid measurements, use an optical loopback cord to measure the actual SFP output power. Then add the appropriate in-line attenuator, in the TX direction, to match network elements’ output, if necessary (e.g. 5 or 10 dB). Although some modern C37.94 equipment can accept higher power inputs, the original IEEE standard refers to a maximum of -11 dBm output at the TX port. The original dynamic range at the RX was defined as -32 to -11 dBm.
- Although C37.94 defines an optical interface operating at 830 ± 40 nm over multi-mode fiber (MMF) with


BFOC/2.5 (ST) connector, it is not uncommon today to find implementations running at 1310 nm MMF or SMF, for longer reach or to reuse existing SMF fiber used for other telecommunication purposes. Common fiber optics connectors or adapters, other than BFOC, may also be found in the field.

[Go back to top](#) [Go back to TOC](#)

18.3.1 Test Setup

Signal

The C37.94 Test Application uses VeEX's signature layered test signal configuration user interface, allowing users to build the desired test signal using an intuitive flow chart structure. Tap on each box to have access to all applicable parameters that can be configured.

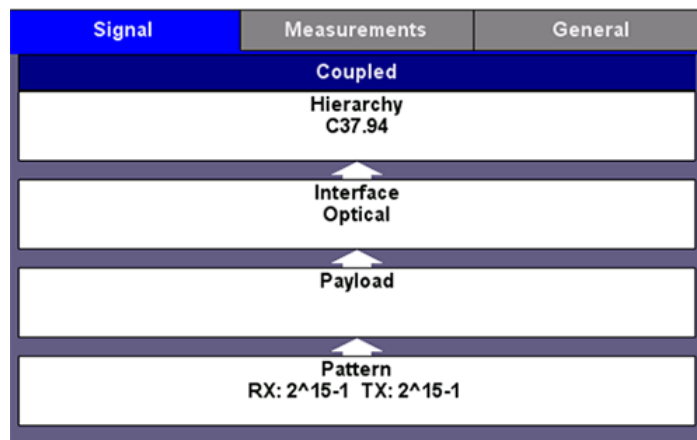

- **Hierarchy:** No selection. Fixed to C37.94.
- **Interface:** Let users select the Clock Source to be used to drive the optical interface.
 - **Internal:** Uses the test set's oscillator to generate the TX test signal.
 - **External:** Uses an external reference clock source applied to the CLK input in the connector panel.
 - **From RX:** Uses the clock recovered from the received signal to time the TX test signal.
 - **Offset:** Adds frequency offset to the internal oscillator to stress the far end receiver clock recovery circuits and verify it complies with the minimum ± 100 ppm deviation tolerance required by the standard.
- **Payload:** Allow users to configure the TX data rate by entering the number of Nx64 kbit/s data Channels to be used for the test. N can be any number between 1 and 12.
If the RX is already connected to the far-end signal, this screen will also show the N value sent by the far end equipment and auto configure the test set's receiver to match. The Received Channels information can also be used to confirm the N value to be configured in test set's TX channels.
- **Pattern:** C37.94 is a datacom interface and it is always tested with a bulk constant bit rate (CBR) payload carrying a pseudo random bit sequence (PRBS) or test pattern, to identify any data errors.

Measurement Setup

Select this tab to configure how the BER test behaves. The menu fields will change depending on the selections made.

Signal	Measurements	General
Mode		Auto ▼
Start		
Start Time [YYYY-MM-DD hh:mm:ss]		2015 12 31 23 59 00
Duration		
Duration		10
Units		Hours ▼
Results Auto Save		ON ▼
Results Save Interval (min)		60
Auto Server Upload		R-Server ▼
Analysis		
G.821 Allocation		100.00

- **Mode:**
 - **Manual:** User starts and stops the test.
 - **Timed:** Allows user to program the duration of the test. When the set time has elapsed, the test set automatically stops the test.
 - **Auto:** Programmable start time. Users can enter the exact date and time when they want the test to start and its duration. Press the Start button to trigger the function and leave the test set on. Note that no measurements are made until the test starts.
- **Auto Save:** The test set can also be programed to automatically save results at specific intervals. When enabled, users can also select to automatically upload these results to a centralized R300-Server (requires Advanced Management option and R-Server account) or to an FTP server. Requires server login.
- **Analysis:** User can program the hypothetical reference configuration (HRX) allocation to be used for the ITU-T G.821 Pass/Fail performance evaluation.
Three distinct quality levels are defined for an end-to-end path (link); two access links (one at each end) with Local and Medium grade and one long-haul link in the middle with High grade. Local links are allowed 15%, Medium grade are allowed 15% and High grade are allowed 40%, for a total of 100% (Local+Medium+High+Medium+Local). Enter the appropriate allocation depending on the section of the end-to-end path being tested. In practice, users testing complete links leave this at 100% block error allocation.

General Setup

Provides extra configuration parameters applicable to the test.

Signal	Measurements	General
Audible Alarm		OFF ▼
Results on start		ON ▼
Auto Save		OFF ▼
Measurement Clock Source		Internal ▼

- **Audible Alarm:** Enables or disables the audible alarm. When enabled the test set buzzer emits a warning tone. This function is test application dependent and not functional in C37.94 test modes.
- **Results on start:** When turned **ON**, the test set automatically jumps to the Results screen when the **Start** button is pressed. If set to **OFF**, user has to manually navigate to the test Results section.
- **Auto Save:** When turned ON, the test set automatically saves the test results when the **Stop** button is pressed. The file is saved with a temporary name based on the yyymmdd-hhmmss time stamp format.
- **Meas. Clock Source:** This is a selection for the reference clock that will be used to perform frequency-related measurement on the received signal. **Internal** mode uses the test set's crystal oscillator, while **TX Clock Source** uses the same clock selection set for the transmitter, as configured in **>Setup >Signal >Interface**.

[Go back to top](#) [Go back to TOC](#)

18.3.2 Test Results

In general, the following color coding is used to identify the status.

- **Red:** Errors or alarms are present.
- **Yellow:** Errors or alarms have been detected but no longer present.

- **Green:** Good! No errors or alarms have been detected.

Summary

Shows the overall status of the current test.

Histogram	Graph	Event Log	Analysis
Summary	Errors/Alarms		Signal
ST:2015-09-16 16:11:38			ET:00/00:14:01
LOS Alarm	OK		
C37.94 Alarms	Alarms detected		
C37.94 Errors	OK		
Errors			
Errors detected/(History)			
No errors - OK			

- **ST:** Start Time. Date and time when the test started.
- **ET:** Elapsed Time. Total time that the current test has been running.
- **RT:** Remaining Time. During timed tests it indicates how much time is still left before the test stops.

The bottom banner shows the overall status, while the individual fields at the top provide more information about which layers may have been affected.

Errors/Alarms

The first page of this detailed test results report shows a layer-by-layer summary of all Alarms and Errors being monitored. Tap on the individual indicators to quickly access detailed count and rate measurements. The arrow buttons at the bottom can also be used to navigate the results page by page.


Histogram	Graph	Event Log	Analysis
Summary	Errors/Alarms	Signal	
Signal	C37.94	Pattern	
LOS	LOS	LSS	
	AIS	Bit	
	FAS		
	RDI		

Signal

All physical layer information can be found in this tab.

- **Level:** Received optical power readings as reported by the transceiver. Presented in numerical and graphical format.
- **Frequency:** Received clock measurement and clock offset calculation in parts per million (ppm).
- **Optical:** Displays transceiver related information.
- **SFP:** Graphical display of received power level fluctuations over time.

Histogram

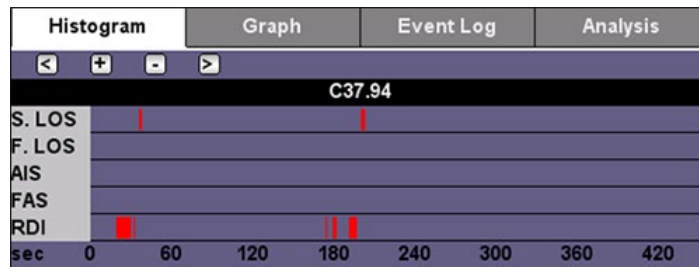

Shows the sequence of errors and alarms over time. It can be used to correlate intermittent problems to other events (e.g. power loss, storms, vibration, etc.) or identify if the problem is cyclic or random in nature. User can zoom in and zoom out using the **[+]** and **[-]** buttons to view the results in hours, minutes or seconds. In zoom mode, use the **[<]** and **[>]** buttons to navigate the different time windows.

Graph

Displays the behavior of individual error or alarm in a bar graph format over time. It is used to identify the severity of each event over time to understand its behavior. User can zoom in and zoom out using the **[+]** and **[-]** buttons to view the results in hours, minutes or seconds. In zoom mode, use the **[<]** and **[>]** buttons to navigate the different data windows.

Event Log

Shows a time-stamped sequence of all events detected during the test, including the length or error count for each of the events.

Analysis

Shows G.821 out-of-service (OOS) BER performance analysis with Pass/Fail evaluation. Errored Second (ES), Severely Errored Seconds (SES), Available Seconds (AS), Unavailable Seconds (UAS), Error Free Seconds (EFS).

Alarm / Error

Configures the behavior of the Alarm Generation and Error injection soft buttons.

Alarm	
Alarm Mode	C37.94 ▼
C37.94 Alarm	RDI (Yellow) ▼
Alarm Flow	Count ▼
Alarm Length	10s ▼
Error	
Error Mode	Pattern ▼
Pattern Error Type	Bit ▼
Error Flow	Rate ▼
Error Rate	1E-3 ▼

- **Alarms:** The test set can generate Signal-based LOS, Frame-based LOS, AIS and RDI (Yellow), in Continuous or Count (timed) modes. In timed mode the alarms can be set to last 0.1, 1, 10 or 100 seconds.
- **Errors:**
 - **Error Mode:** The test set can inject errors to the C37.94 structure or to the test Pattern.
 - **Error Type:** FAS, Bit
 - **Error Flow:** Determines the behavior of the error injection. It can be set to inject a **Single** error, a **Count** or specific number of errors from 1 to 1000, or a continuous error **Rate** from as low as 1E-9 (1×10^{-9}) to as high as 1E-3 (1×10^{-3}).

[Go back to top](#) [Go back to TOC](#)

18.3.3 Test Profiles

Test configurations can be saved and later retrieved using the Test Profiles function.

- To save the current test configuration, select the **Save** function and use the keypad to give it a name that represents the use case or test scenario for that specific configuration (site, network element, type of link, etc.). Press **Apply** to save.

- To update a test profile with the current test setup, open the profile pull-down menu and select **Save**.
- To retrieve a saved test profile, open the profile menu, select the desired profile from the list and press **Load**. The setting are immediately copied to the test set.
- To delete a test profile, open the profile pull-down menu and select the desired profile from the list to activate it, open the pull-down menu again and select **Delete**.

Test profiles can also be managed using the test platform File Manager. Go to **Utilities >Files >Saved** to manage (view, rename, delete, lock) test results, test profiles and captured screens. Here you can also export and import test results to/from a USB memory stick or create PDF reports (directly saved into the USB memory).

[Go back to top](#) [Go back to TOC](#)

18.3.4 Round Trip Delay (RTD)

With a loopback at the far-end, the test set can measure the time it takes for test bits to make the round trip. This measures the total fiber length and equipment delay combined. The loopback can be fiber optics, electrical (in case it terminates in other Datacom interface) or logical (triggered inside network elements).

Setup

Repeat

ON

ST:2015-09-15 15:52:03

Results

ET:00:00:00:07

Time [ms]	37.0 ns
Max Time [ms]	37.5 ns
Min Time [ms]	36.0 ns
Average Time [ms]	37.0 ns
Result	Running...

The test can be configured to run a single measurement, **Repeat = OFF**, if the total delay is not expected to change over time, or **Repeat = ON** to run it continuously. When Repeat is enabled, the test set will keep track of the Current (last), Maximum, Minimum and Average times measured. Turn the **Laser ON** and **Calibrate** it by looping the test patch cord, before measuring the link's RTD. Measurement resolution is 1 μ s.

[Go back to top](#) [Go back to TOC](#)

18.3.5 C37.94 Data (Received)

Displays a sampling of the C37.94 raw data being received, including framing bits (yellow), Overhead N bits and its complements (blue) and the overhead preamble bits (light gray), followed by data bits and their respective complements (white). Note that only the active channels' pairs of bytes will update (depending on the N value). Unused channels (two bytes) will display the idle code 10101010 10101010 (FF).

T/S	Line bits	Hex	T/S	Line bits	Hex	T/S	Line bits	Hex
0	10011011	9B	1	00001111	0F	2	01001011	4
3	11101010	F	4	10101010	F	5	11101010	F
6	11101010	F	7	10101010	F	8	01101001	6
9	01001010	1	10	10010101	8	11	01101010	4
12	10010101	8	13	10101001	E	14	10011001	A
15	01011001	2	16	10101010	F	17	10101010	F
18	10101010	F	19	10101010	F	20	10101010	F
21	10101010	F	22	10101010	F	23	10101010	F
24	10101010	F	25	10101010	F	26	10101010	F
27	10101010	F	28	10101010	F	29	10101010	F
30	10101010	F	31	10101010	F			

Page 1

Prev

Next

The **Page** field at the bottom is to review up to 16 captured frames. Odd frames show Framing Pattern 1 and even frames show Framing Pattern 2, including the RDI (Yellow) alarm bit.

Use the **Pause** button to freeze the 16 consecutive frames.

[Go back to top](#) [Go back to TOC](#)

18.3.6 One-Way Delay Measurements (Latency and Asymmetry)

Certain timing-sensitive applications require symmetric data links so a dual-ended One-Way Delay (OWD) test is required to verify the data latency in each direction of the link. The two test sets used, one at each end, require access to accurate time. This timing source is provided by a 1PPS signal from GPS Clock (built-in or external). The rising edge of the one-pulse-per-second signal indicates the beginning of a second everywhere in the world. The 1PPS is used to synchronize the clocks in both test sets.

The OWD test must work with C37.94 bursty behavior (data transmitted every 125µs) and be compatible with any Nx64k data rate, network element, multiplexer, DS_n, PDH, SDH or SONET equipment in the path, to achieve meaningful resolution and accuracy.


OWD is a coordinated test that requires both test sets (and users) to be ready and following each other's status over the phone or any other communication mean. Users in sites A and B must have access to:

- A traceable External 1PPS signal (from a GPS clock) connected to the test set's CLK (SMA) input port, or
- The built-in GPS option in the test set and have its antenna installed with unobstructed wide view to the sky.

For the built-in GPS receiver:

1. Connect the antenna to the SMA connector.
2. Go to **Utilities > Settings > More > High Precision Clock Source > GPS** and turn **GPS ON**. Wait until satellites are detected (at least four with >36 dBHz) and the GPS Status = Lock (the GPS button  on the bottom-right of the screen turns green).
3. Notify your partner at the far end and go back to the C37.94 app to begin testing. This is not required if an External 1PPS is used as reference.
4. Once both test sets are synchronized to the standard second (1PPS), connect them to their respective local C37.94 ports, turn the laser ON and verify proper end-to-end connectivity (Signal, Frame, Pattern and no errors or alarms).
5. Enter the One Way Delay function and confirm with the far-end that they are also in the OWD measurement screen. Press the **Start** button to start measuring the incoming delay (Return Path) and receiving the outgoing delay from the far end (forward path).

Network elements and multiplexers are usually responsible for most of the latency added to the path (link), with fiber being responsible for adding around 0.5µs for every 100m of cable. The example diagram only includes the fiber part of the link, as it is considered the worst case scenario (shortest delays) and highlights the importance of having enough accuracy and resolution (1µs or better) in order to measure cables' contribution.

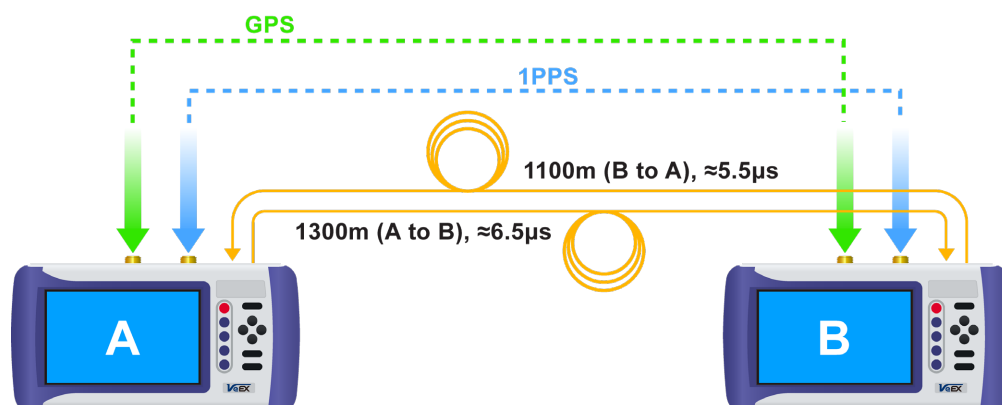



One-Way Delay: Site A to B



One-Way Delay: Site B to A




Keep both test sets in the One Way Delay screen. If one of the test sets leaves the OWD test feature, the other test set may start reporting invalid results. Stop the test and save the results before quitting the OWD application.

In Dual Port mode, the test set allows running a bi-directional OWD test with only one meter. This is useful for troubleshooting problems in a lab or repair center or fine-tuning network settings when access to both ends of the links are available in one site.

[Go back to top](#) [Go back to TOC](#)

19.0 G.703 64k Codirectional

19.1 Setup

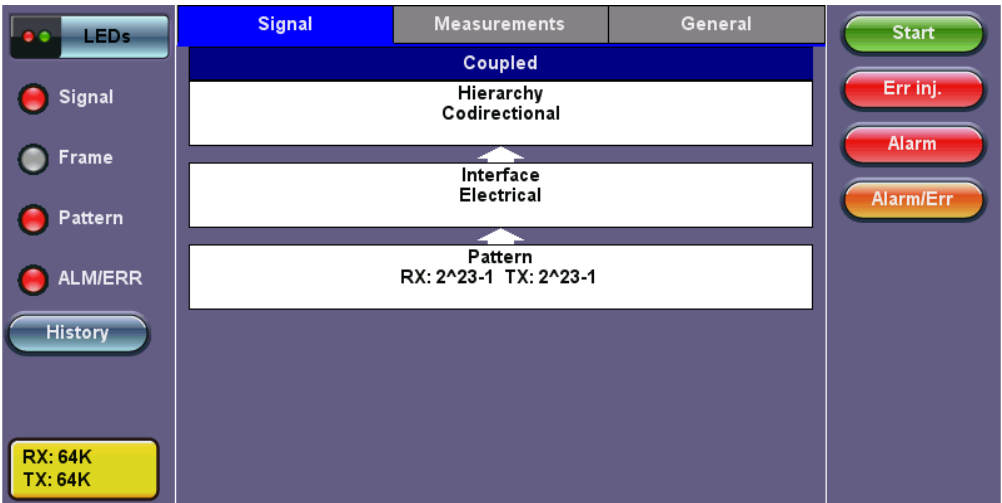

Setup - Signal

19.1.1 Signal

Tap on the **Signal** tab to set up the interfaces and associated test parameters prior to running a test. The configuration is grouped into a simple yet intuitive block diagram. Signal parameters can be modified by tapping the applicable block which displays a new dialog window displaying additional input and specific selection settings. The Transmitter transmits as soon as a valid configuration is entered. The Receiver will check for a valid signal on its input so the measurement function is synchronized. When a test is not running, the LEDs will still indicate errors and alarms, but any other results displayed will be the results of a previous test.

Hierarchy

The Hierarchy block displays the Network Type. Co-directional is selected as the default Network Type.



Setup - Signal - Hierarchy

Interface

Setup - Signal - Interface

The Tx Interface Setup screen features the following options:

Test Port: The electrical interface is selected as the only option for this application

Clock Source: Can be configured as follows:

- **Internal clock:** The clock for the transmitter is derived from the internal oscillator. The internal clock has an accuracy of +/- 3.5ppm conforming to G.812 recommendations.
- **External clock:** 1.5MHz, 2MHz, 1.5Mbps, 2Mbps, and 10MHz signals are present on the SMA connector. Only 2Mbps signals are available on the RX2 balanced and RX2 BNC unbalanced ports.
- **From RX:** The clock for the transmitter is derived from the received signal and the jitter of the incoming signal is suppressed.
- **Offset:** The clock for the transmitter is derived from internal oscillator. It can change the frequency offset while measurements are running. Use numeric key to increase and decrease the frequency shift. Frequency offset: ± 50 ppm with 1, 0.1, 0.01ppm resolution.
- **Atomic 10MHz** (Atomic Clock option required): The built-in Atomic Clock hardware option can provide highly accurate and stable frequency references

Test Pattern

Setup - Signal - Pattern

Pattern: Use the pattern drop-down box to select the test pattern which will be inserted into the transmitted signal. Pseudo Random Bit Sequences (PRBS) defined by ITU-T 0.150 and 0.151 standards, fixed words and 24-bit or 32 bit user defined patterns are available. **Note:** If the 32 bit user pattern entered is incorrect, the default pattern will be 0xFFFFFFFF.


Invert: Inversion of polarity is also available.

 ITU-T specification 0.150 recommends the following test patterns:

Test Sequences for PDH signals according to ITU-T 0.150 recommendation		
PRBS	Zeros	Application
2 ⁿ -1	8	Error measurements for bit rates ≤ 14,400 kbits/s
2 ⁿ 11-1	10	Error & jitter measurements for bit rates of n x 64 kbit/s & 64 kbits/s
2 ⁿ 15-1	15	Error & jitter measurements for T1, E1, E3 and DS3 bit rates
2 ⁿ 20-1	14	Error & jitter measurements for T1, E1, E3 and DS3 bit rates
2 ⁿ 23-1	23	Error & jitter measurements for E3 and E4 bit rates
2 ⁿ 31-1	31	Delay measurements for E3, DS3 and E4 bit rates

[Go back to top](#) [Go back to TOC](#)

19.1.2 Measurements

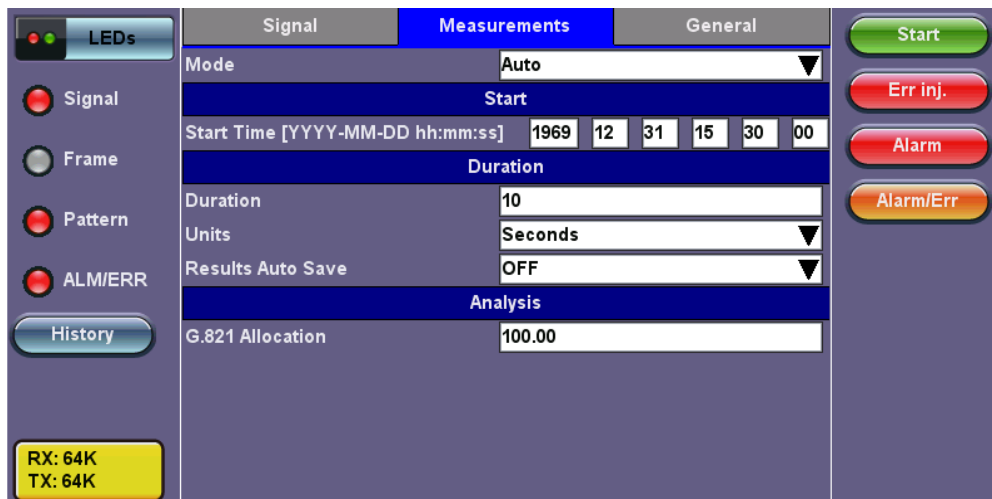

Setup - Measurements

Tapping the **Measurements** tab opens the setup screen for the Timer, Performance Analysis, and General configurations.

Configure a test to run for a fixed duration or a delayed start.

Mode: Manual, Timed, and Auto selections are available

- **Manual:** This is linked to the Start/Stop button.
- **Timed:** The test duration can be set by the user. The test duration can be set in seconds, minutes, hours or days. The test is activated by the Start/Stop button.
- **Auto:** A predetermined start time can be set by the user. The test duration can be set in seconds, minutes, hours or days. After programming the start time and duration, press the **Start** button and the test will be activated automatically when the programmed start time is reached.

Performance Analysis


The ITU-T G.821 performance test will be performed by the unit. Recommendation G.821 is briefly defined as follows:

G.821: Error performance of an international digital connection operating at a bit rate below the primary rate and forming part of an Integrated Service Digital Network (ISDN)

- Long term error performance conducted Out of Service (OOS)
- Based on measuring bit errors
- Evaluation period of 30 days
- Since there is no overhead structure at these bit rates, in-service measurements are extremely difficult

19.1.3 General

The General setup page configures the audible alarm, Save, and Measurement Clock Source.

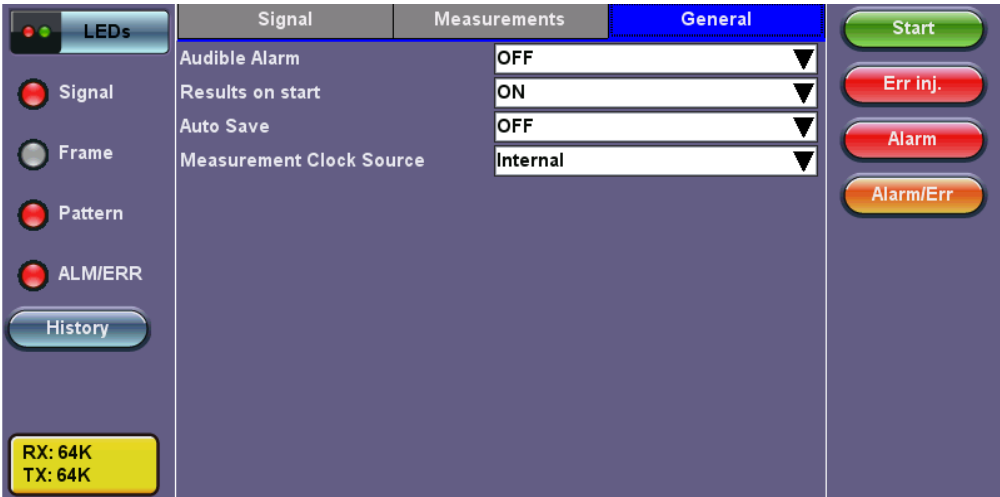

Setup - General


- **Audible Alarm:** Unit emits a sound if an alarm is detected. This feature is not available on all units.
- **Result on start:** On or Off. Provides an automatic move to Result screen when it starts.
- **Auto Save:** Tap Auto Save and set it to **ON** to automatically save the results file.
- **Measurement Clock Source:** Internal Clock or Tx Clock Source; the measurement is synchronized to the Transmitted (Tx) Clock.

19.2 Results

Tap **Start** or **Results** to view test measurements.

19.2.1 Summary

The **Summary** tab displays an overview of the major test parameters. At a glance, the user is able to see if there are any alarms, errors, or signal failure.

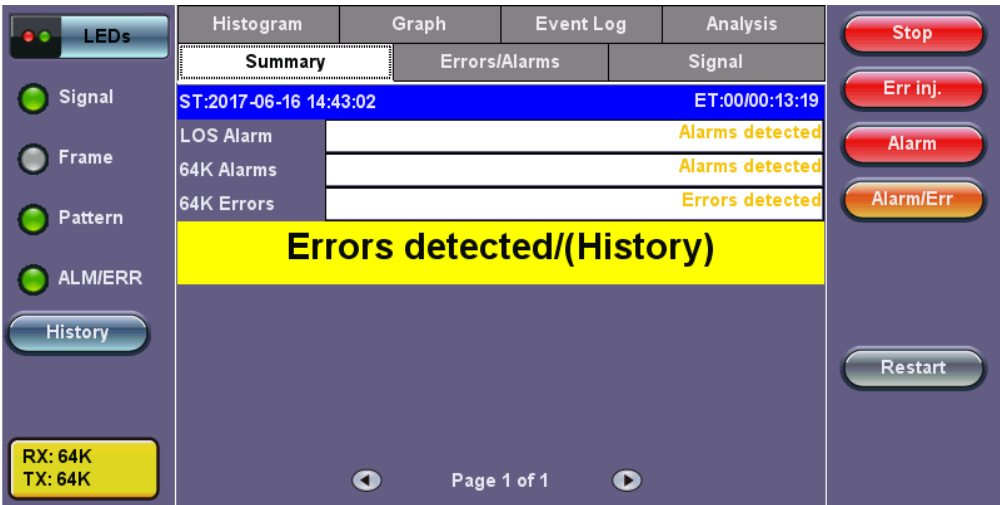

Results - Summary

19.2.2 Errors and Alarms

The **Error/Alarm** tab displays several pages showing the errors and alarm status. Alarms/Errors results provides an overview of all the Errors and Alarms applicable to the signal or network under test. The color of the page tab is normally blue; however, it will turn red when an alarm error condition has been detected or recorded.


The soft LEDs on screen are arranged logically and will depend on signal hierarchy, structure, payload and framing selected. The soft LEDs have a tricolor function:

-  **Green:** No error or alarm is present.
-  **Red:** An error or alarm condition is detected and is currently present.
-  **Yellow:** Indicates a history condition. An error or alarm was detected during the measurement interval but it is no longer present or active.



Errors/Alarms (Page 1)


 Tapping the individual soft LED will automatically link directly to the applicable result screen which provides detailed information.

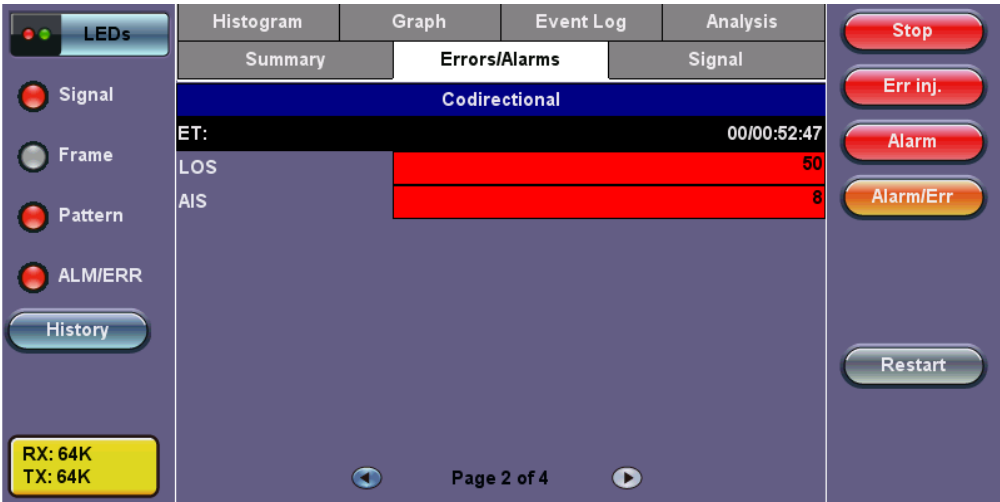

Errors/Alarms - Codirectional (Page 2)

Errors/Alarms (Page 2)


Page 2 lists the Alarms in logical order that are associated with the signal under test. All alarms are evaluated and stored.

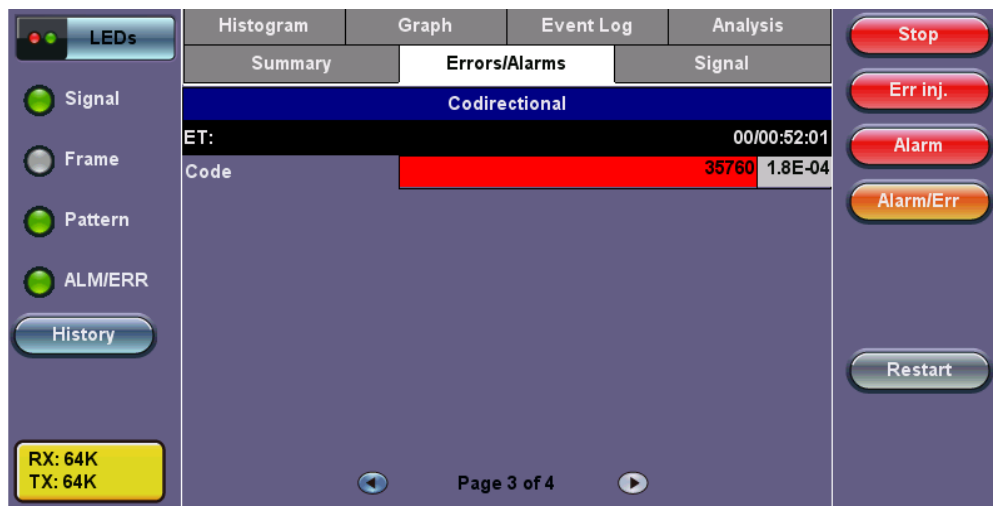

Errors/Alarms - Codirectional (Page 3)

Errors/Alarms (Page 3)

Page 3 lists the Errors in logical order that are associated with the signal under test. All alarms are evaluated and stored.

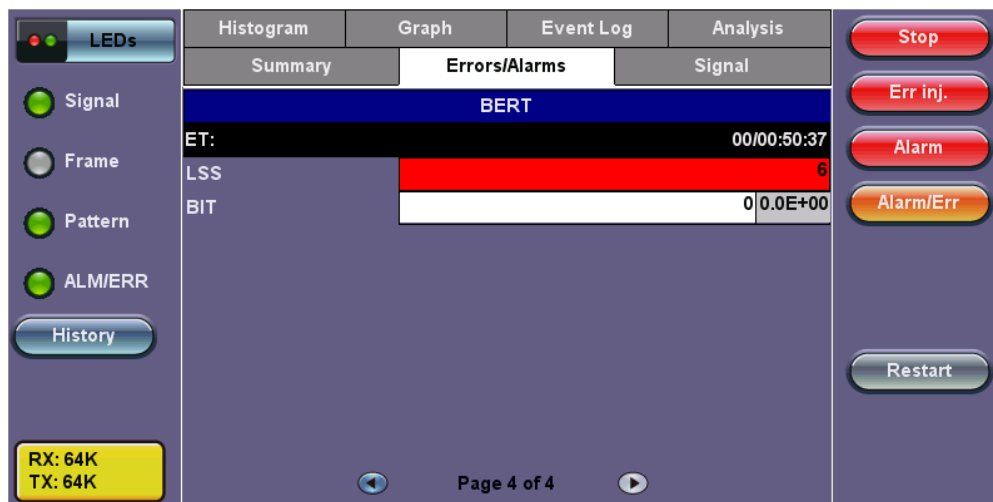

Errors/Alarms - BERT (Page 4)

Errors/Alarms (Page 4)

Page 4 lists the Bit Error Performance (BERT) associated with the signal under test.

[Go back to top](#) [Go back to TOC](#)

19.2.3 Event Log

The **Event log** tab displays the screen listing the Error and Alarm events recorded during a test. The events are presented in chronological sequence:

- **Number (#):** Event number, events are numbered sequentially
- **Type:** Indicates alarm or error type
- **Start:** Indicates when the alarm or error was detected
- **Dur/Count:** Indicates for how long the alarm or error was detected and provides duration (alarms) and ratio/count (errors). The duration format is day:hour:minute:second
- **Pages:** Scroll through the pages depending on the number of events recorded

LEDs Signal Frame Pattern ALM/ERR History RX: 64K TX: 64K	Summary		Errors/Alarms	Signal
	Histogram		Graph	Analysis
			Event Log	
	#	Type	Start	Dur/Count
	1	Start	2017-06-16 14:43:02.0	
	2	LOS	2017-06-16 14:43:36.0	00:00:12.6
	3	LSS	2017-06-16 14:43:48.6	00:00:00.1
	4	CODE	2017-06-16 14:43:49.0	14570
	5	CODE	2017-06-16 14:43:50.0	256
	6	CODE	2017-06-16 14:43:51.0	256
	7	CODE	2017-06-16 14:43:52.0	256
	8	CODE	2017-06-16 14:43:53.0	198
	9	LOS	2017-06-16 14:43:55.8	00:00:01.8
Page 1 of 4				

Event Log

[Go back to top](#) [Go back to TOC](#)

19.2.4 Signal

The **Signal** tab displays the frequency and level result screen.

LEDs

Signal

Frame

Pattern

ALM/ERR

History

RX: 64K

TX: 64K

Histogram

Graph

Event Log

Analysis

Summary

Errors/Alarms

Signal

Frequency

Frequency64000

Offset (ppm):0.0

Min (ppm):0.0

Max (ppm):0.0

Level

Voltage0.9 V

Stop

Err Inj.

Alarm

Alarm/Err

Restart

Signal

Frequency: The received signal frequency and offset is measured and displayed. For E1 signals, the measurement is performed on both balanced 100 ohm and unbalanced 75 ohm interfaces.

- **Current:** Indicates the frequency of the input signal
- **Offset:** Indicates the difference between the standard rate and the rate of the input signal
- **Min (ppm):** Indicates the difference between the standard rate and the minimum deviation detected in the input signal
- **Max (ppm):** Indicates the difference between the standard rate and the maximum deviation detected in the input signal

A Min (ppm) and Max (ppm) function can be used to ensure that the received signal is within a certain clock tolerance and that the network element is transmitting correctly.

Frequency Tolerances for PDH and T-Carrier Systems	
Signal	Frequency Specification
E1 PDH	2,048 Mbps $\pm$ 112 bps ($\pm$ 54.6 ppm)
E3 PDH	34,368 Mbps $\pm$ 846 bps ($\pm$ 24.6 ppm)
E4 PDH	139,264 Mbps $\pm$ 2730 bps ($\pm$ 19.6 ppm)
DS1 T-Carrier	1,544 Mbps $\pm$ 57 bps ($\pm$ 36.6 ppm)
DS3 T-Carrier	44,736 Mbps $\pm$ 1101 bps ($\pm$ 24.6 ppm)


Voltage: Measures the Peak voltage value of the incoming signal.

PDH Signal Levels per ITU-T G.703 Recommendations				
Signal	Bit Rate	Line code	Input	
			Termination	Level
E1	2 Mbit/s	HDB3	75 ohm unbalanced BNC	Terminate: 2.37 Volt peak Monitor: 2.37 Volt peak with 20 or 26dB gain
			120 ohm balanced RJ45	Terminate: 3.0 Volt peak Monitor: 3.0 Volt peak with 20 or 26dB gain
E3	34 Mbit/s	HDB3	75 ohm unbalanced BNC	Terminate: 1.0 Volt peak Monitor: 1.0 Volt peak with 20 or 26dB gain
E4	140 Mbit/s	CMI	75 ohm unbalanced BNC	Terminate: 1.0 Volt peak Monitor: 1.0 Volt peak with 20 or 26dB gain

[Go back to top](#) [Go back to TOC](#)


19.2.5 Histogram

The **Histogram** tab displays a historical record of the Alarms and Errors recorded during the measurement interval. A dedicated page is available for errors and alarms including BER. Scroll through the various pages to display the anomalies of interest.

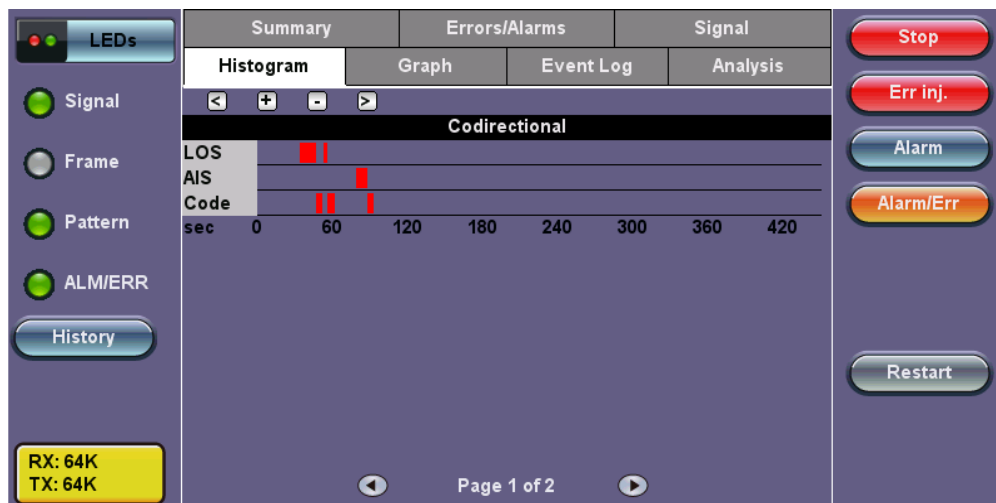

Histogram - Codirectional (Page 1)

A graphical timeline on the horizontal axis indicates when the event occurred since the test was started. The upper left and right arrows allow the user to scroll through the measurement period while the + and – keys allow zooming in/out of the time axis. The events presented above are shown in the table below.

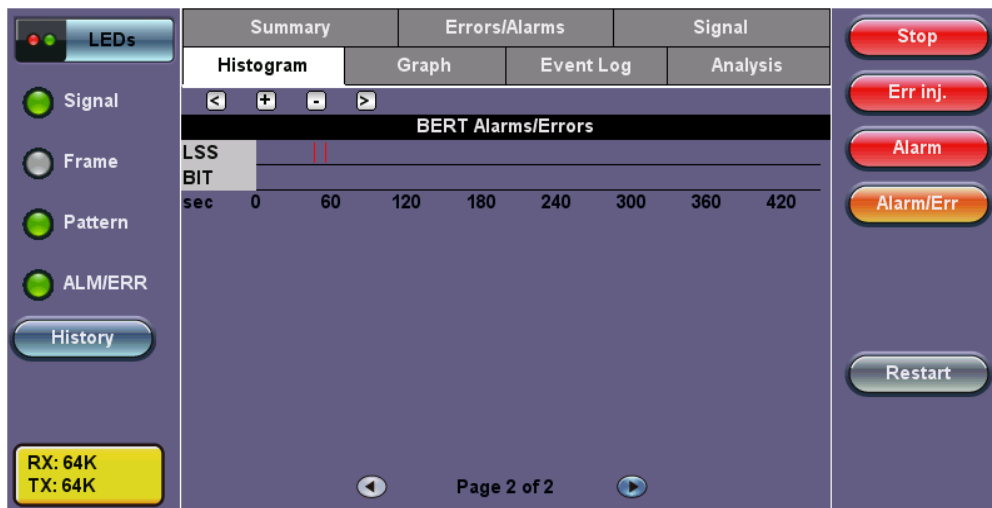


Histogram - Codirectional (Page 2)

[Go back to top](#) [Go back to TOC](#)

19.2.6 Graph

The **Graph** tab displays a screen displaying a log of the errors recorded during the measurement interval. A dedicated page is available for each error type. Scroll through the various pages to display the anomaly of interest.

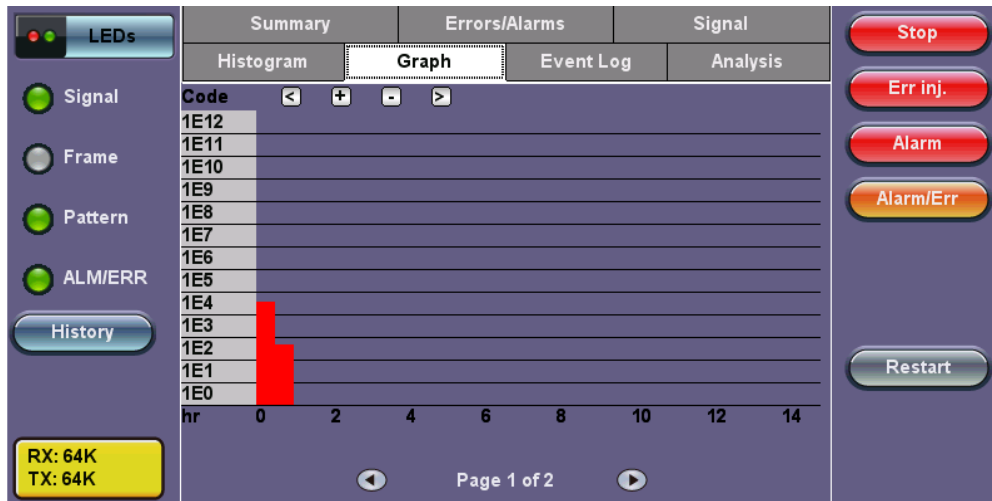


Graph

A graphical timeline on the horizontal axis indicates when the event occurred while the vertical axis indicates the logarithmic scale of errors. The upper left and right arrows allow the user to scroll through the measurement period, while the + and – keys allow zooming in/out of the time axis.

[Go back to top](#) [Go back to TOC](#)

19.2.7 Performance Analysis

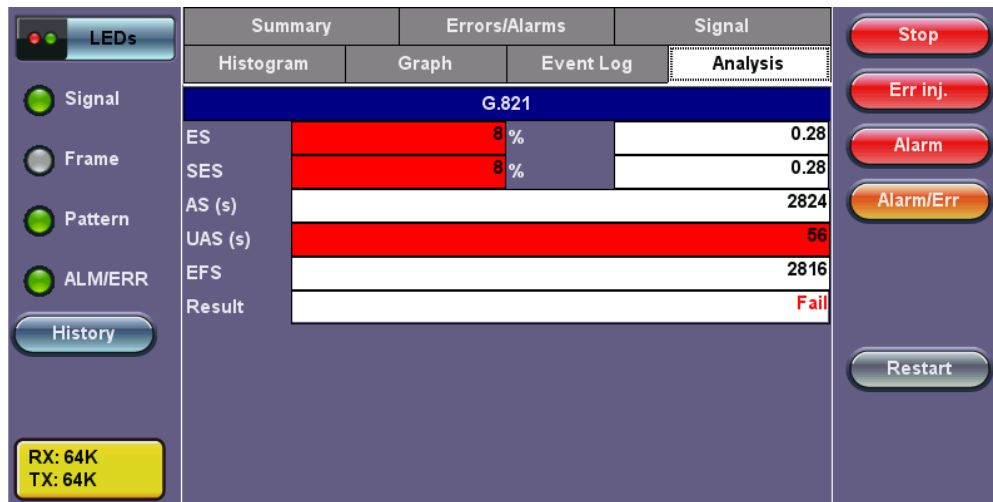

G.821 Analysis

The **Analysis** tab displays measured objectives from ITU-T performance tests selected from the Measurements tab (**Setup > Measurements**).

Evaluation According to ITU-T G.821

This recommendation was originally specified for international circuit-switched N x 64kbps connections.

ES, SES, AS and UAS are evaluated and can be performed on the following events:

- Bit errors (TSE, Test Sequence Error)

The following signals can be measured when performing G.821 evaluation of bit errors (TSE):

- Unframed patterns
- Pass/Fail result is in conjunction with path allocation between 0.1 and 100%

 *ITU-T G.821 relies on the evaluation of bit errors, thus the test channel must be taken out of service to perform the measurement.*

Definitions:

- **Errored Second (ES):** A one-second time interval in which one or more bit errors occur.
- **Severely Errored Second (SES):** A one-second interval in which the bit error ratio exceeds 10^{-3} .
- **Unavailable Second (UAS):** A circuit is considered to be unavailable from the first of at least ten consecutive SES. The circuit is available from the first of at least ten consecutive seconds which are not SES.
- **Available Second (AS):** A one-second time interval in which no bit errors occur.
- **Errored Free Second (EFS):** A one-second time interval in AS during which no errors and no pattern slips have been detected.

[Go back to top](#) [Go back to TOC](#)

19.3 Alarm Generation and Error Insertion

Alarm Generation

Generates Codirectional Alarms (LOS, AIS) into the transmit signal. Alarm generation modes include:

- **Alarm Flow**
 - **Continuous:** Generates a continuous alarm when button is tapped
 - **Count:** Specific count for 0.1s, 1s, 10s, 100s when button is tapped

Alarm/Error Generation

Error Insertion

Error Mode:

- **Pattern:** Bit
- **Codirectional:** Code

Error Flow: Injects different anomalies into the transmit signal. Error insertion flow modes include:

- **Single:** Inserts a single error every time the insertion button is tapped
- **Count:** Specific count or number of errors when the insertion button is tapped
- **Rate:** Specific rate between 1×10^{-3} and 5×10^{-6}

Alarm Generation/Error Insertion

At any time during the test process, tap the **Error Injection** or **Alarm Generation** buttons to inject errors or generate alarms.

[Go back to top](#) [Go back to TOC](#)

19.4 Round Trip Delay

Tap the **Round Trip Delay** in the PDH Tools screen to perform a round trip delay measurement.

The Round Trip Delay (Propagation Delay) measurement works by sending a test pattern with an error. The time it takes for the error to reach the receiver is the propagation time through the network.

Tap **Start** to View the Round Trip Delay of a looped back signal.


ST:2017-05-19 12:09:47	Results	ET:00/00:00:23
Time [ms]	0.0 ms	
Max Time [ms]	0.0 ms	
Min Time [ms]	0.0 ms	
Average Time [ms]	0.0 ms	
Result	Running...	

20.0 Clock Wander & Phase Measurement

Refer to [Advanced Clock Wander & Phase Measurements](#) for more information on PDV Analysis.

[Go back to TOC](#)

21.0 1588v2/PTP Through Mode & PDV Analysis

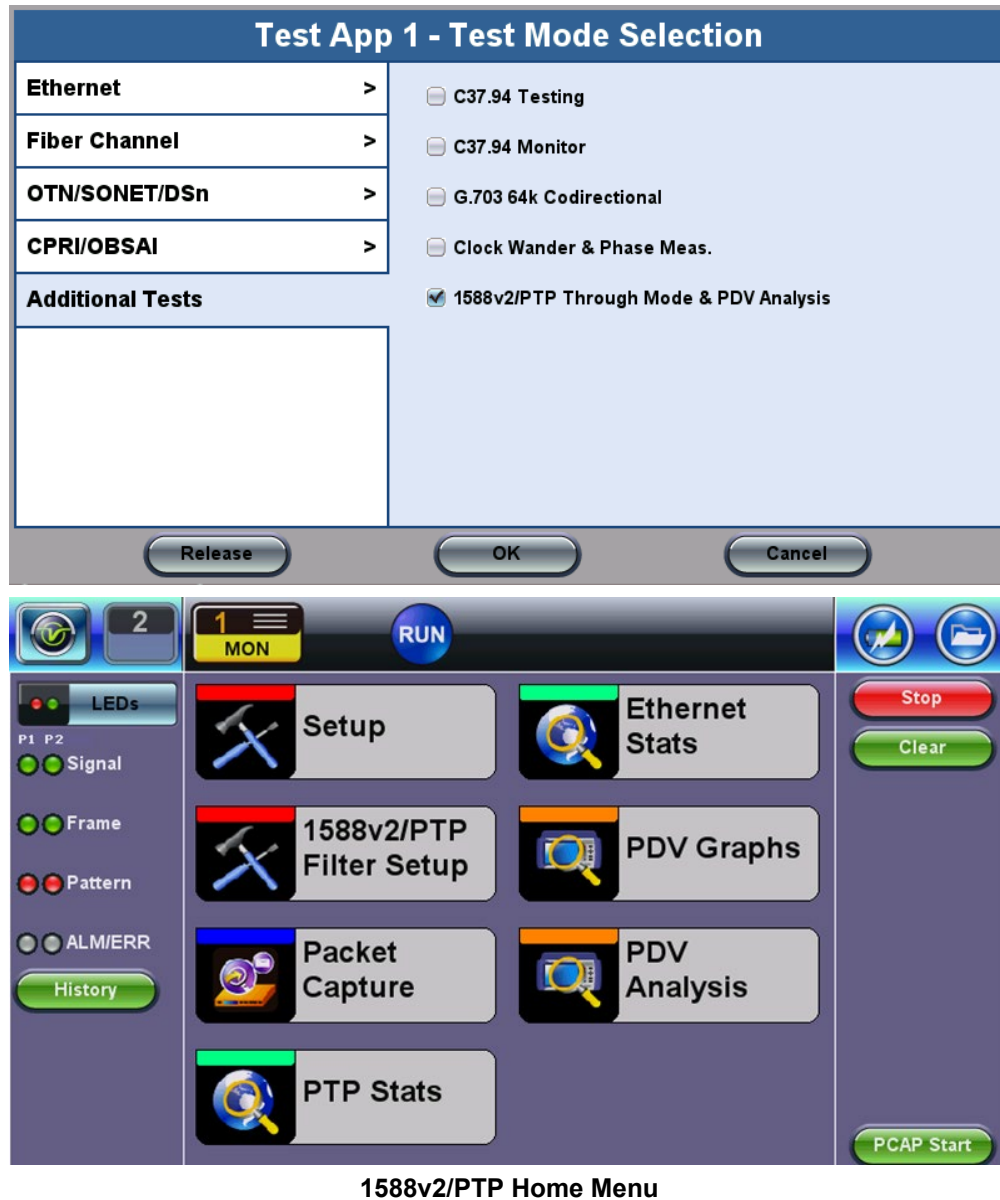


1588v2/PTP Home Menu

When placed in 1588v2/PTP Through Mode, the TX320S makes use of both ports to analyze network 1588v2/PTP traffic exchanged between Master and Slave. The unit can be inserted on the network path in passthrough mode between P1 and P2 or non-intrusively via a network tap.

1588v2/PTP Through Mode & PDV Analysis, located in Additional Tests, offers the following features:

- dual port pass-through monitoring of slave and master clock PTP messages
- transparent monitoring with an optical splitter
- bi-directional analysis of 1588 PTP traffic
- bi-directional analysis of Ethernet traffic (PTP and non-PTP)

Through Mode monitoring is conducted through Ethernet test ports 10/100/1000BaseT or 100/1000BaseX.

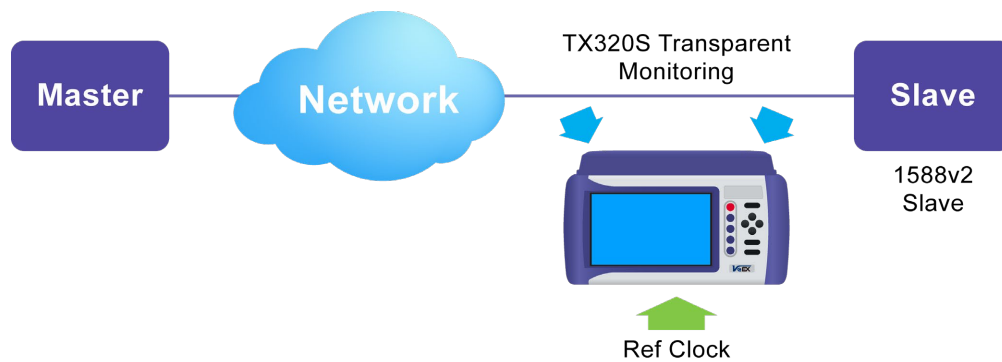

1588v2/PTP Home Menu

 In 1588v2/PTP Through mode, traffic forwarding between P1 and P2 becomes active as soon as it is connected on the network, however measurements and statistics are only active after pressing **Start**.

[Go back to top](#) [Go back to TOC](#)

21.1 Port Setup

Port setup is accessed via the **Setup** menu located on the Home page. Select the operation mode and the test interfaces that will be used to carry out tests. Once the operating mode and interfaces are selected, the user can independently configure the auto-negotiation, speed, duplex, and flow control settings for each port (where applicable).

Port	P1 Status	P2 Status
Port Selection	100/1000Base-X	
Auto Negotiation	On	
Speed	1000 Mbps	
Duplex	Full	
Flow Control	Both On	
Meas. Clock Reference	Internal	

LEDs: P1 P2 Signal Frame Pattern ALM/ERR History

LASER On

Apply Discard


1 GE Fiber Port Setup

Select 10/100/1000BaseT or 100/1000BaseX from **Port Selection** for testing.

1 GE Fiber Port

- **Auto Negotiation:** On or Off. Matches the test set's negotiation settings to those of the link partner.
- **Speed:** 100 Mbps or 1000 Mbps.
- **Duplex:** Default set to Full.
- **Flow Control:** TX On, RX On, Both On, or Off.
 - When flow control is On, the test set will respond to pause frames received by the link partner by adjusting the transmit rate.
 - When flow control is Off, the test set ignores all incoming pause frames from the link partner and continues transmitting at the configured transmit rate.
- **Measurement Clock Reference:** Select between an internal or external clock source. This setting defines the reference clock used for 1588 Slave clock wander measurement.
 - **Possible external clock sources:** 1.5444MHz, 1.544Mbps, 2 MHz, 2Mbps (E1 signal), 10MHz, 25MHz, 125MHz or External1 pps. The external clock source is connected to the SMA port on each Test Module. This port is marked CLK on the connector panel.
 - **Possible internal Clock sources:** Internal Clock (+/-3.5ppm accuracy), Internal GPS 1 PPS (Requires GPS option and Antenna), Internal Atomic 1 PPS (Requires High Precision Atomic Clock option).

 For Delay or TE measurements, 1 PPS Clock source (internal or external) is required.

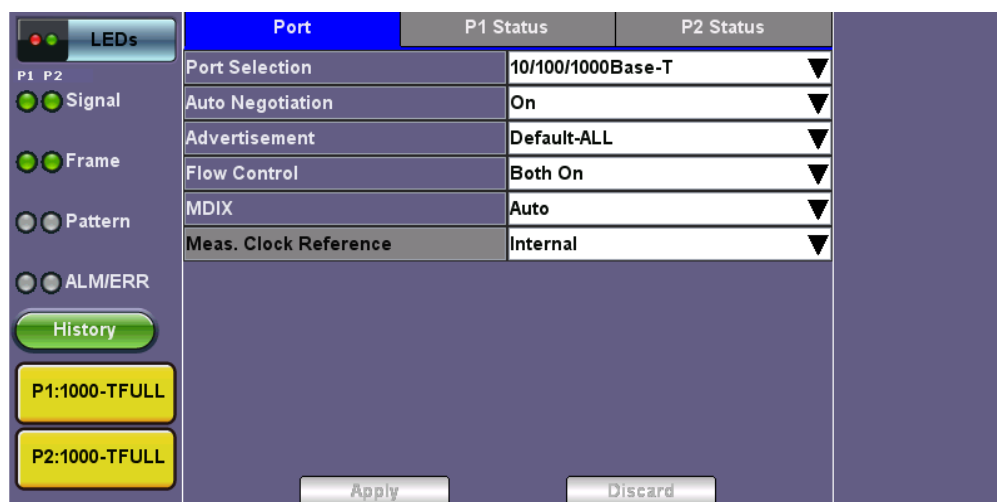

Port	P1 Status	P2 Status
Port Selection	10/100/1000Base-T	
Auto Negotiation	On	
Advertisement	Default-ALL	
Flow Control	Both On	
MDIX	Auto	
Meas. Clock Reference	Internal	

1 GE Copper Port Setup

1 GE Copper Port

- **Auto Negotiation:** On or Off. Matches the test set's negotiation settings to those of the link partner.
 - **Speed** (only when Auto Negotiation is Off): 10 Mbps or 100 Mbps.
 - **Duplex** (only when Auto Negotiation is Off): Half or Full.
 - **Advertisement** (only when Auto Negotiation is On): Default-All or Custom. Custom options include 10/100/1000M/Half or 10/100/1000M/Full.
- **Flow Control:** TX On, RX On, Both On, or Off.
 - When flow control is On, the test set will respond to pause frames received by the link partner by adjusting the transmit rate.
 - When flow control is Off, the test set ignores all incoming pause frames from the link partner and continues transmitting at the configured transmit rate.
- **MDIX:** Off, On, or Auto. When MDIX is set to Auto, the test set detects the required cable connection type and configures the port connection properly for interfacing the partner device, eliminating the need for crossover cables.

 For proper operation, the link's Speed and Duplex must match on P1 and P2.

- **Measurement Clock Reference:** Select between an internal or external clock source. This setting defines the reference clock used for 1588 Slave clock wander measurement.
 - **Possible external clock sources:** 1.5444MHz, 1.544Mbps, 2 MHz, 2Mbps (E1 signal), 10MHz, 25MHz, 125MHz or External1 pps. The external clock source is connected to the SMA port on each test module. This port is marked CLK on the connector panel.
 - **Possible internal Clock sources:** Internal Clock (+/-3.5ppm accuracy), Internal GPS 1 PPS (Requires GPS option and Antenna), Internal Atomic 1 PPS (Requires High Precision Atomic Clock option).

 For Delay or TE measurements, 1 PPS Clock source (internal or external) is required.

When finished with port setup, tap **Apply** to configure settings.

Status

Port	P1 Status	P2 Status	
Link Advertisement	Done		
Link Config. ACK	YES		
Remote Fault	NO		
Local Port	Remote Port		
Speed	1000 Mbps	Speed	1000 Mbps
Duplex	Full	Duplex	Full
MX Link Advertisement	Link Partner Advertisement		
10M/Half	YES	10M/Half	YES
10M/Full	YES	10M/Full	YES
100M/Half	YES	100M/Half	YES
100M/Full	YES	100M/Full	YES
1000M/Full	YES	1000M/Full	YES
	Symmetric Pause	YES	
	Asymmetric Pause	NO	

Port 1 Status tab

The **Status** tab lists current port settings. Please note that the Status tab is only available if a fiber port option is selected from the **Test Port Selection** menu.

 Test units shipped before January 2012 support up to +/- 50 ppm offset only. Units shipped from 2012 onwards, support up to +/- 150 ppm offset. This applies to both 10GE WAN and 10GE LAN modes.

[Go back to top](#) [Go back to TOC](#)


21.2 1588v2/PTP Filter Setup

Configure Through Mode 1588v2/PTP Filter Settings. The filter settings determine the type of 1588v2/PTP traffic being monitored for statistics and measurements.

Setup			
P1 Direction	Master Side		
P2 Direction	Slave Side		
Protocol Mode	Layer 2		
Clock Step	2 step clock(Sync+FollowUp)		
Correction Field	Enable		
VLAN	1 Tag	VLAN ID	0
Filter Settings	Enable		
P1 MAC	00-18-63-00-0C-40	Mask	00-00-00-00-00-00
P2 MAC	00-1E-90-A0-57-3C	Mask	00-00-00-00-00-00

1588v2/PTP Filter Setup

- **P1/P2 Direction:** Configure the expected incoming master/slave traffic direction for port 1 and port 2.
- **Protocol Mode:** Configure the expected incoming 1588v2/PTP traffic type: IPv4 UDP, IPv6 UDP or Layer 2.
 - **IPv4 UDP:** The PTP messages are transmitted with an IPv4 and UDP encapsulation.
 - **IPv6 UDP:** The PTP messages are transmitted with an IPv6 and UDP encapsulation.
 - **Layer2:** The PTP messages are encapsulated directly in an Ethernet frame without IP or UDP header.
- **Clock Step:** Configure the expected Master's clock type. 1-step or 2 Step--1 step clock (Sync) or 2 step clock (Sync+FollowUp).
- **Correction Field:** Enable/Disable. Configure if correction field (transparent clock) is accounted or ignored in the Delay and TE measurements.
- **VLAN:** Off, 1 Tag. Configure if 1588 traffic contains VLAN tags.
- **Filter Settings:** If multiple Master or Slave streams are present on the network, enable filter settings to configure the MAC addresses and IP addresses of the stream to monitor.

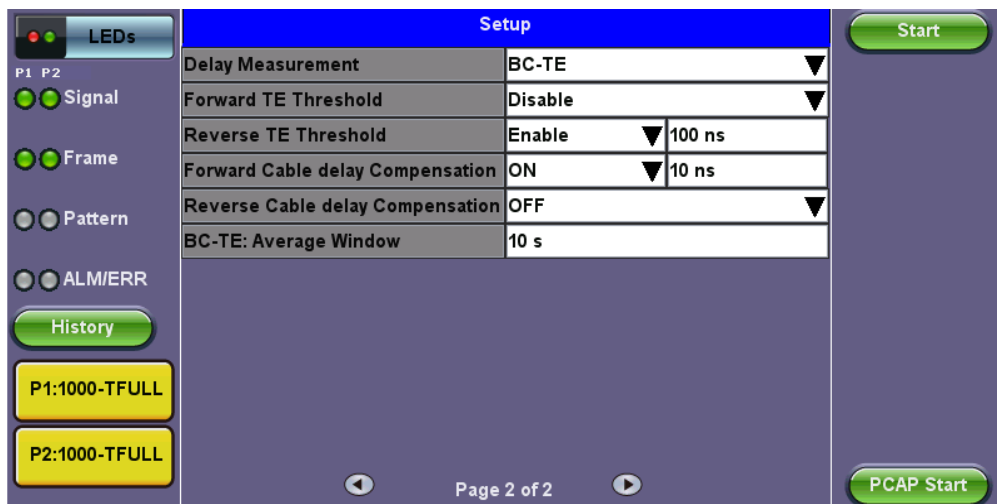

Delay Measurement Setup

- **Delay Measurement:** End to End (M>S, S>M) and BC-TE measurements are the same value, except that BC-TE measurements have additional parameters.




Both modes require a 1 PPS clock source (Ext. 1PPS, Atomic 1PPS, or GPS 1PPS).

- **End to End (M>S, S>M):** Measures the M>S Master to Slave (T1, T2) and S > M Slave to Master (T3, T4) delay based on the monitored messages Sync and Delay_req/Delay_response timestamps.
 - **End to End: Average Window:** Configure the delay measurement averaging window, from 1 second to 300 seconds



For accurate delay measurement, the test equipment should be deployed close to the Slave, in order to account for network delay.

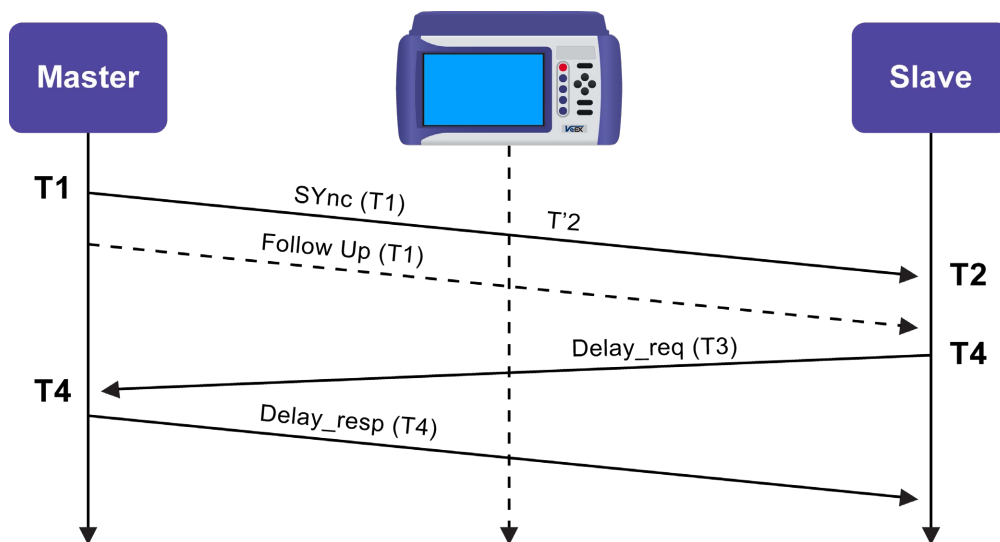

T'2 and T'3 Measurements based on 1 PPS reference clock

Forward Path: Master > Slave Delay Measurement: T'2 – T1


Reverse Path: Slave > Master Delay Measurement: T4 – T'3

Delay Measurement Overview

- **BC-TE Measurements:** Boundary clock Time Error measurement. Time Error Measures how well the Boundary clock

recovers clock from the network, by comparing Sync and Delay_req/Delay_response timestamps to 1 PPS clock source.

- **Forward TE Threshold:** When enabled, triggers an event when the measured Forward TE (T1) exceeds the configured threshold. Threshold values are from 100ns to 1000 us.
 - **Reverse TE Threshold:** When enabled, triggers an event when the measured Reverse TE (T4) exceeds the configured threshold. Threshold values are from 100ns to 1000 us.
- o Cable delay compensation values compensate for cable delay in the calculation of Boundary Clock- Time Error computation. This parameter should zero out the Master to Slave direct delay contribution.
- **Forward Cable delay Compensation:** ON/OFF. Master to Slave Cable delay.
 - **Reverse Cable delay Compensation:** ON/OFF. Slave to Master Cable delay.
 - **BC-TE: Average Window:** Configures the Boundary-Clock Time Error averaging window, configurable from 1 second to 300 seconds.

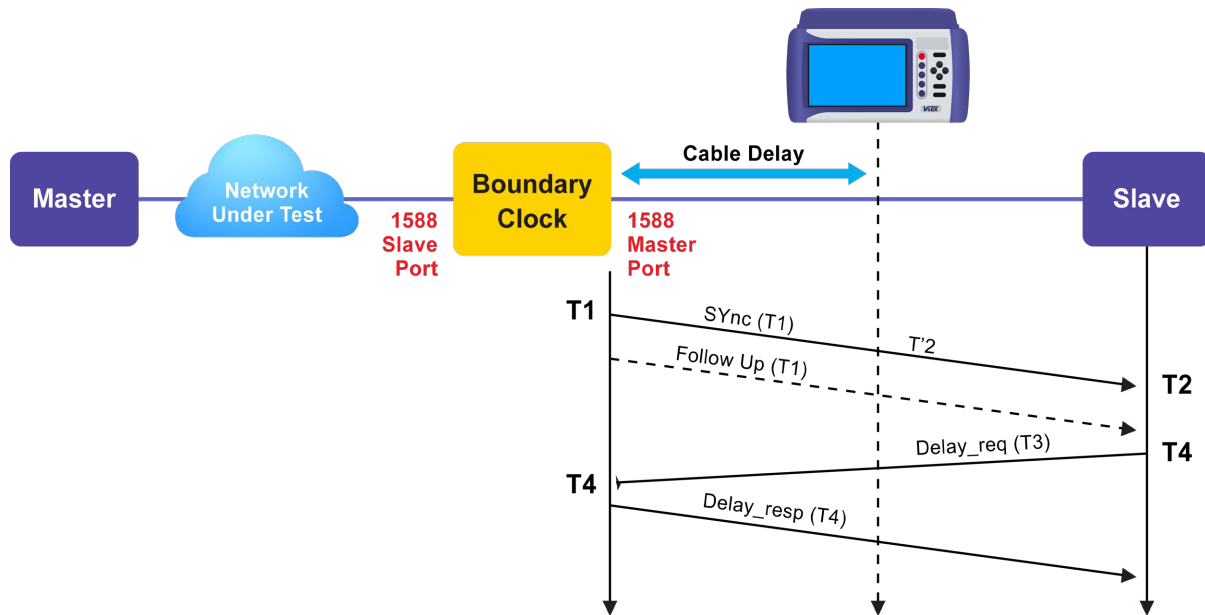

T'2 and T'3 Measurements based on 1 PPS reference clock

$$\text{Forward TE} = T'2 - T1 - \text{cable delay}$$

$$\text{Reverse TE} = T4 - T'3 - \text{cable delay}$$

$$\text{2way-TE} = (\text{Reverse TE} + \text{Forward TE})/2$$

Time Error Test for Boundary Clock

When finished with configurations press **Start** to begin testing.

PCAP Start

While the test is running, the option to capture packets is available through the **PCAP Start** button. Stopping packet capture automatically names and saves results in pcap format. A message displays the name of the saved file. The file is located in **Files > Saved** section of the test set and can be exported to a PC and analyzed using Wireshark. For more information on retrieving saved test results, refer to **File Management** in the **TX300S**, **MTTplus**, **RXT-1200**, or **UX400 platform manuals** for more information.

LEDs	Status			
	Summary	Messages	Decoder	TE Events
P1 P2	Messages	Lost/CRC	Duplicated	Out of Sequence
Signal	Announce	0	0	0
Frame	Sync	0	0	0
Pattern	FollowUp	0	0	0
ALM/ERR	Delay_Req	137	0	0
History	Delay_Resp	137	0	0
P1:1000-TFULL	Pdelay_Req	0	0	0
P2:1000-TFULL	Pdelay_Resp	0	0	0
	Pdelay_Resp_Foll	0	0	0
	Management	0	0	0
	Signalling	0	0	0

Page 2 of 2

Stop

Clear

PCAP Start

Summary (Page 2)

Additional message information is displayed on the Messages screen.

Messages

The Messages screen gives a further breakdown by message type. The total and per second average message rates are displayed.

LEDs	Status		
	Summary	Messages	TE Events
P1 P2		Current Rate	Total
Signal	Announce	1.0	6604
Frame	Sync	2.0	13207
Pattern	FollowUp	2.0	13207
ALM/ERR	Delay_Req	2.0	13082
History	Delay_Resp	2.0	13082
P1:1000-TFULL	Pdelay_Req	0.0	0
P2:1000-TFULL	Pdelay_Resp	0.0	0
	Pdelay_Resp_Followup	0.0	0
	Management	0.0	0
	Signalling	0.0	0

Stop

Clear

PCAP Start

Messages

Decoder

The Tracer shows the 1588v2 messages from both Master and Slave clock devices.

There are four function keys:

- **Pause/Continue** - to pause or continue the tracer.
- **<- & ->** - in Pause mode, use the key to page up or page down.
- **End** - in Pause mode, use End key to jump to the end of the trace.

LEDs

P1 P2

Signal

Frame

Pattern

ALM/ERR

History

P1:1000-TFULL

P2:1000-TFULL

Status

Summary

Messages

Decoder

TE Events

Message	
RX	Sync
RX	Follow Up
RX	Delay response
RX	Delay request
RX	Announce
RX	Follow Up
RX	Delay request
RX	Delay response

Pause

<-

->

End

Stop

Clear

PCAP Start

Decoder

LEDs

P1 P2

Signal

Frame

Pattern

ALM/ERR

History

P1:1000-TFULL

P2:1000-TFULL

message Type: Delay response

transportSpecific: 0x0

versionPTP: 0x2

messageLength: 54

domainNumer: 0

flags: 0x0

C Field: 0x0000000000000000

SRC P ID: 0x001863fffe0137d00000

sequenceID: 18196

controlField: 0x3

logMsgInterval: -1

ToD: 1969 1231 15:30:00.000000000

recvTstamp: 2017 0517 15:24:07.235678624

sourcePortId: 0x001863fffe0137d10001

<

Page 1 of 1

>

Decoded Message

TE Events

LEDs

P1 P2

Signal

Frame

Pattern

ALM/ERR

History

P1:1000-TFULL

P2:1000-TFULL

Status

Summary

Messages

Decoder

TE Events

Time	TE Event Value (ns)	TE Event Type

<

Page 1 of 1

>

Stop

Clear

PCAP Start


TE Events tab

The TE Events tab displays TE Threshold crossing events with a timestamp.

[Go back to top](#) [Go back to TOC](#)

21.5 Ethernet Stats

Ethernet Stats include 1588v2/PTP traffic and non 1588 traffic. It displays Port 1 and Port 2 Ethernet traffic measurements. Tap on P1 and P2 to switch between port 1 and port 2 measurements. For more information on Ethernet traffic tabs and measurements, please refer to the [BERT Results](#) section.

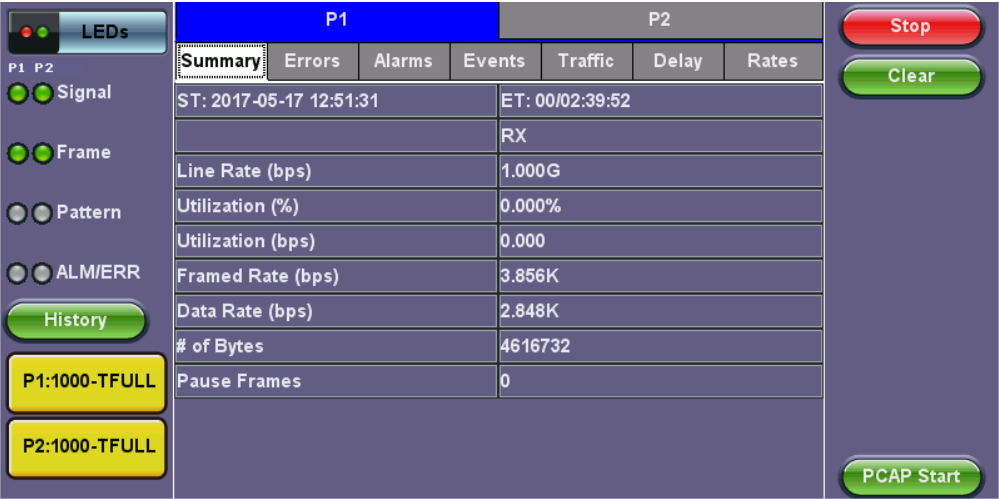

TE Events tab

[Go back to top](#) [Go back to TOC](#)

21.6 PDV Graphs

Tap on the **PDV Graphs** button to access graphical statistics. Select a PDV, RTD, or IPG graph from the **Type** menu to view.

- **PDV:** Delay Request, Asymmetry, and Sync PDV min and max information.
 - **Delay Request:** The Delay_Req PDV measures t4-t3 (delay message jitter)
 - **Asymmetry:** The Asymmetry PDV measures (t4-t3)+(t2-t1) (this measures the Delay)
 - **Sync PDV:** The Sync PDV measures t2-t1 (sync messages jitter)
 - **RoundTrip PDV:** The RoundTrip PDV measures (t4-t3)+(t2-t1), which is the Delay measurement packet delay variation.

Refer to [PTP Messages](#) timing overview graph for t1, t2, t3, t4 definitions.

- **RTD:** RTD and Delay Response RTD min and max information.

The RTD graph measures the time between when the delay_req leaves the slave and the delay_resp is received by the slave.

- **IPG:** Sync and Delay Response IPG min and max information.

The IPG graphs give information about the Sync and Delay_resp arrival rate. This will depend on the setting 16 vs 32 vs 64. It can be used as a confirmation that the rates are as expected. This can be also verified with the packet counters.

The following Delay measurements are only available if Delay Measurement is set to End to End (M>S, S>M) in the 1588v2/PTP Filter Setup menu and Measurement Clock reference is set to 1 PPS (internal or external).

- **M to S DLY:** Measures Forward Path (Master to Slave) delay, based on Sync (t1) timestamp and t'2 measured by test set in Through mode.
- **S to M DLY:** Measures Reverse Path (Slave to Master) delay, based on Delay_response (t4) message and t'3 measured by test set in Through Mode.


Refer to [Delay Measurement Overview](#) for a graphical representation of M > S Master to Slave (T1, T2) and S > M Slave to Master delay measurement.

The following Time Error measurements are only available if Delay Measurement is set to BC-TE in the 1588v2/PTP Filter Setup menu and Measurement Clock reference is set to 1 PPS (internal or external).

- **Forward TE:** Measures the Forward Path (Master to Slave) Time Error, based on Sync (t1) timestamp and t'2 measured by test set in Through mode and configured cable delay.

- **Reverse TE:** Measures Reverse Path (Slave to Master) Time Error, based on Delay_response (t4) message and t'3 measured by test set in Through Mode and configured cable delay.
- **2Way TE:** Uses Forward TE and Reverse TE measurements to computed 2Way TE.

Refer to [Time Error Test for Boundary Clock](#) for a graphical representation of Forward, Reverse, and 2Way TE.

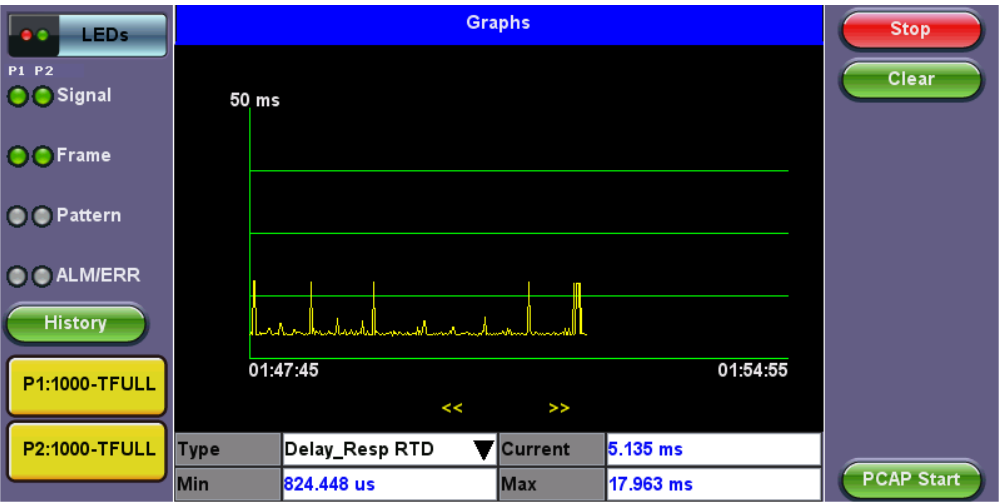

Graphs


[Go back to top](#) [Go back to TOC](#)

21.7 PDV Analysis

Packet Network elements between Master and Slave causes non-linear impairments due to congestions, processing delay, queuing mechanisms in network switches and routers. This is defined as Network PDV (Packet Delay Variation) or packet jitter. PDV is a property of the network that can lead to Frequency wander and Phase inaccuracy on the slave since the slave uses the timing packet to recover Frequency and Phase.

PDV Metrics include: Sync and Follow up PDV, Slave Wander, and Delay Request PDV. This function provides MTIE and TDEV analysis as well as FPP, FPC and FPR measurements as defined in ITU-T G.8261.1 standard.

Tap on the **PDV Analysis** button on the home menu to access this feature.

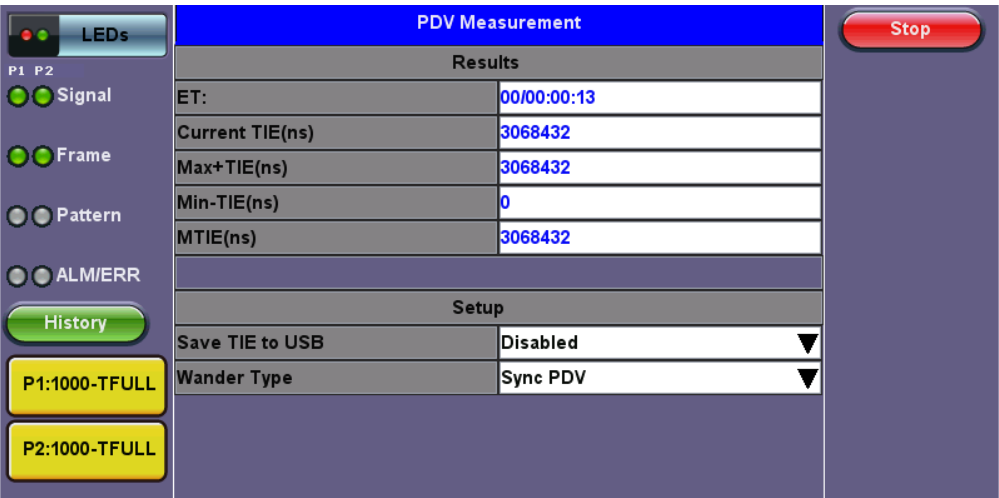

PDV Setup


Setup

Save TIE to USB can be turned ON to write all wander measurements to a FAT32 USB Memory stick in real time, to be analyzed later on.


Select **Wander Type** from the drop down menu:

- **Sync PDV:** Monitors TIE of Sync Messages
- **Follow Up PDV:** Monitors TIE of Follow_Up Messages
- **Slave Wander:** Monitors Slave TIE based on Delay_Request Messages (Note that t3 delay_request timestamp is not always present in the messages originating from the slave).
- **Delay Req PDV:** Monitors TIE of Delay_Request messages based on Delay_Response (t4) timestamps.

Tap on the **Start** button to initiate the measurements and data logging and **Stop** to end recording.
After stopping the test, if the built-in MTIE/TDEV option (license) is enabled, tap on Analysis to view the TIE graph and perform the MTIE/TDEV analysis on the recorded TIE data. Alternatively, tap on **PDV Analysis** to view the PDV graph and perform MTIE/TDEV Analysis.

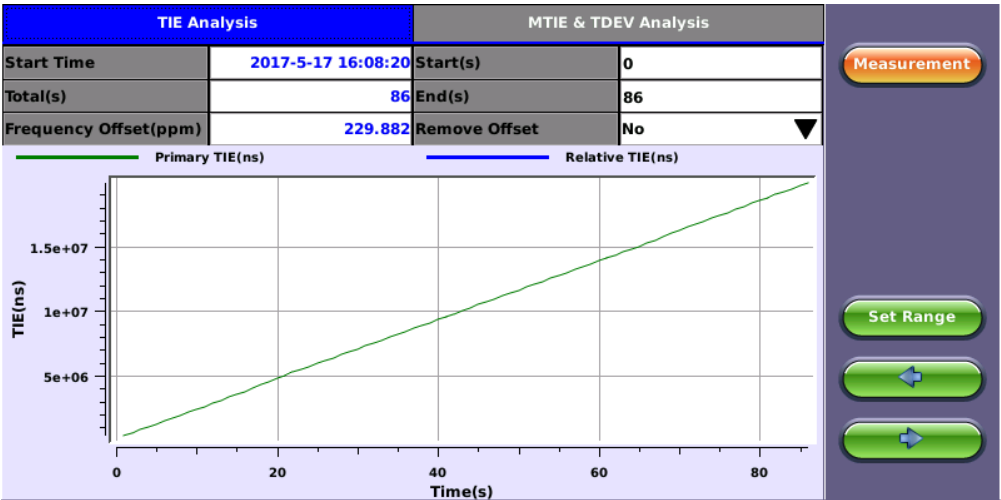

TIE Analysis

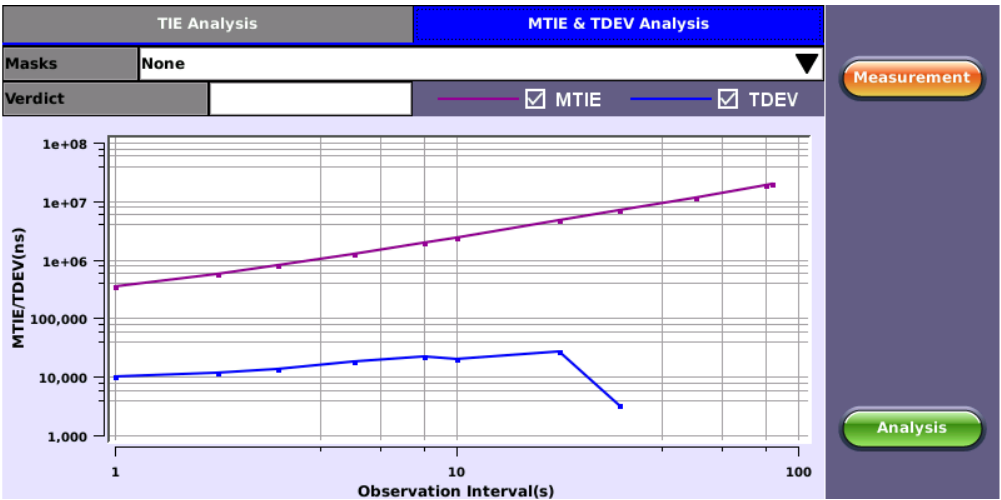


MTIE & TDEV Analysis

Built-in MTIE & TDEV Analysis (Optional License)

For more information on MTIE & TDEV Analysis refer to [Built-in MTIE & TDEV Analysis \(Optional License\)](#) section in the **Jitter and Wander** application.

PDV Analysis Delay

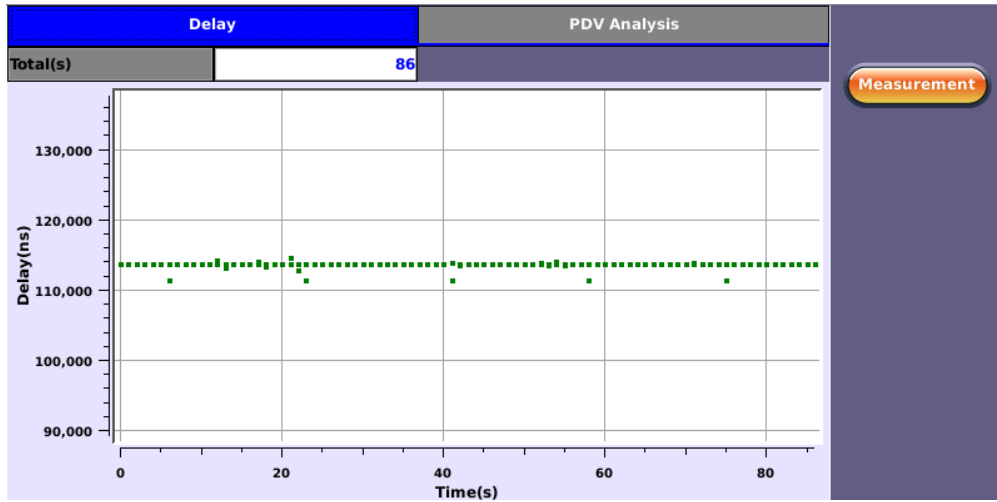


PDV Analysis - Delay

Tap on **PDV Analysis** to view the PDV graph and perform Delay/PDV Analysis per ITU-T G.8261.1 standard.

The objective of this category of PDV metrics is to study the population of timing packets within a certain fixed cluster range starting at the observed floor delay. The population of timing packets can then be compared with acceptance or rejection thresholds. The main idea here is to ensure that at least a minimum number of packets, or alternately a minimum percentage of packets, always remains within the specified fixed cluster range starting at the observed floor delay.

PDV Analysis

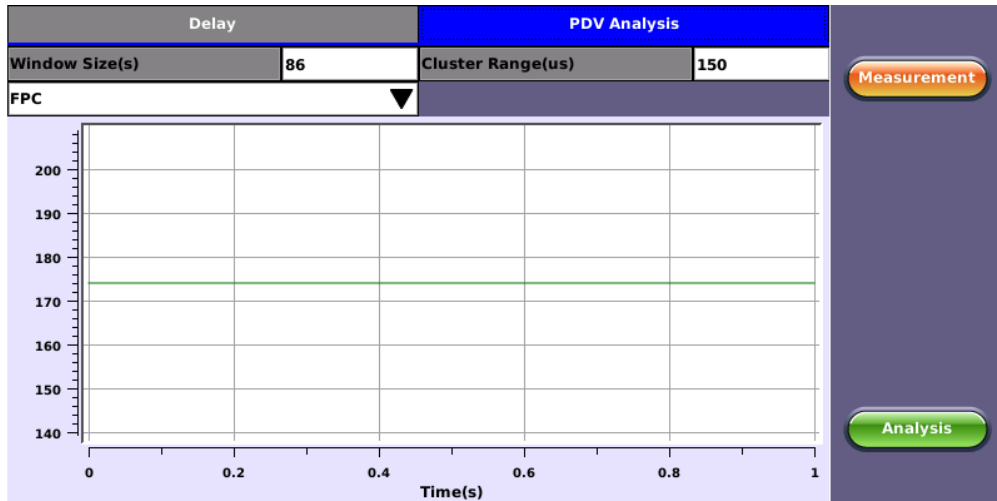

PDV Analysis

Definitions:

$x[i]$ = measured latency of packet i

N = number of packets in measurement data set

Minimum Observed delay = d_{min}

$$d_{min} = \min_{0 \leq i < N} x[i]$$

Indicator function for floor packet selection:

$$\phi_F(i, \delta) = \begin{cases} 1; & \text{if } x[i] \leq d_{min} + \delta \\ 0; & \text{otherwise} \end{cases} \quad \text{for } 0 \leq i < N$$

δ = cluster range

W = Window interval

$K = W/\tau_P$ = number of packets transmitted in the window interval

Floor Packet Count (FPC) with Sliding window

$$FPC(n, W, \delta) = \sum_{j=n-(K-1)}^n \phi_F(j, \delta) \quad \text{for } (K-1) \leq n < N$$

Floor Packet Rate (FPR) with Sliding window

$$FPR(n, W, \delta) = \frac{FPC(n, W, \delta)}{W} \quad \text{for } (K-1) \leq n < N$$

Floor Packet Percent (FPP) with Sliding window

$$FPP(n, W, \delta) = \left(\frac{\tau_P}{W} \right) \times FPC(n, W, \delta) \times 100 \% \quad \text{for } (K-1) \leq n < N$$

ITU-T G.8261.1 Network Limits:

1. With window interval $W = 200$ s and fixed cluster range $\delta = 150\mu$ s starting at the floor delay, the network transfer characteristic quantifying the proportion of delivered packets that meet the delay criterion should satisfy:

$$FPP(n, W, \delta) \geq 1\%$$

1. That is, the floor packet percentage must exceed 1%.
2. This means that for any window interval of 200 seconds at least 1% of transmitted timing packets will be received within a fixed cluster, starting at the observed floor delay, and having a range of 150 μ s.

[Go back to top](#) [Go back to TOC](#)

22.0 Profiles


Profiles can be created in any application that has a "Profiles" drop-down menu available. The PDH, SDH, OTN, Ethernet and Fiber Channel applications, among others, all have the ability to save profiles.

Profiles can also be managed from the Utilities button > **Files** > **Saved**. Options include the ability to filter, rename, delete, export, and import files.

Accessing and Configuring Profiles

Tap on the **Profiles** button to access the Profiles menu. Profile management settings include

- **Load:** Select a test profile to load onto the test application
- **Save:** Save current settings to the selected test profile
- **Delete:** Deletes the selected test profile
- **Save As:** Save a new profile. This will bring up an alphanumeric keypad to name the profile. When the profile is saved, all of the test configurations that apply to the particular application are saved. This allows for fast access to preconfigured test configurations.

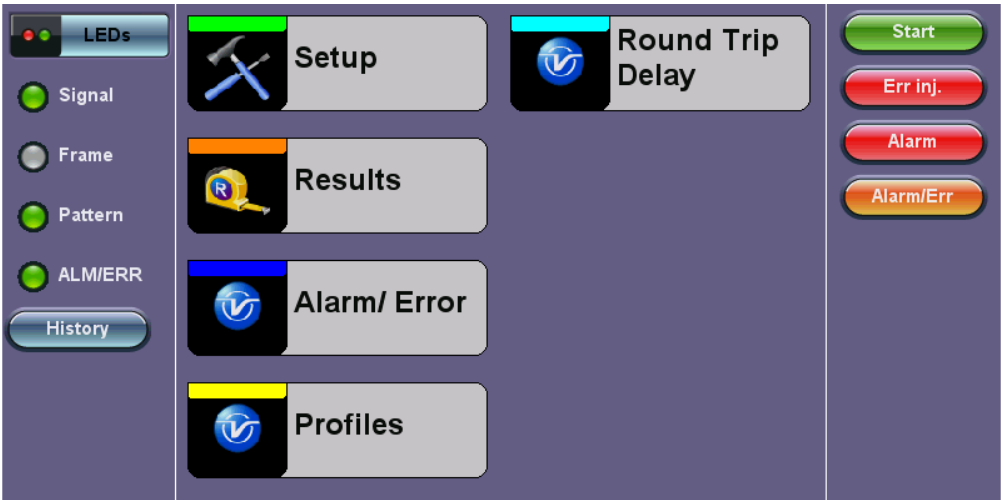

Home Menu with Profile button



Profile drop-down menu from Profile button

23.0 Common Functions

Please refer to the **TX300S, MTTplus, RXT-1200, or UX400 platform manuals** for the following functions:

- IP Tools: Ping, Trace Route
- Net Wiz
- WiFi Wiz
- Advanced Tools
- Utilities
- Files
- R-Server
- Backlight
- VeExpress
- M.Upgrade

[Go back to TOC](#)

24.0 Product Specifications

The product specifications are available for download in PDF format on the VeEX customer website. Please note that Adobe Reader version 9.0 or higher is needed to open and view the file.

To get the latest free version of Adobe Reader, [click here](#).

[Go back to TOC](#)

25.0 Certifications and Declarations

What is CE?



The CE marking is a mandatory European marking for certain product groups to indicate conformity with the essential health and safety requirements set out in European Directives. To permit the use of a CE mark on a product, proof that the item meets the relevant requirements must be documented.

Use of this logo implies that the unit conforms to requirements of European Union and European Free Trade Association (EFTA). EN61010-1

For a copy of the CE Declaration of Conformity relating to VeEX products, please contact VeEX customer service.

RoHS Compliance

VeEX QUALITY AND ENVIRONMENTAL POLICY

Our quality and environmental policy is to limit and progressively eliminate the use of hazardous substances and chemicals in the design and manufacture of our products.

VeEX products are classified as Monitoring and Control Instruments under Article 2, Section (1), Category 9 of the WEEE 2002/96/EC Directive.



RoHS and WEEE Position Statement

The Council of the European Union and the European Parliament adopted Directive 2002/95/EC (January 27, 2003), to Reduce the use of certain Hazardous Substances (RoHS) in Electrical and Electronic Equipment, and Directive 2002/96/EC on Waste Electrical and Electronics Equipment (WEEE), with the purpose of reducing the environmental impact of waste electrical and electronic equipment. Both were later recast by Directives 2011/65/EU and 2012/19/EU respectively. All VeEX products being placed on the EU market conform with these directives.

Additional RoHS substance restrictions for the Monitoring and Control Instruments were adopted by EU Directive 2015/863 (March 31, 2015). These new restrictions will take effect from July 22, 2021. VeEX has established a program to ensure that from July 22, 2021, all its products to be sold and shipped into the EU market will conform with (EU) 2015/863.

VeEX Inc. is committed to comply with RoHS and WEEE Directives to minimize the environmental impact of our products.

For more information about RoHS as it relates to VeEX Inc, go to the VeEX web site at www.veexinc.com/RoHS

26.0 About VeEX

VeEX Inc., the Verification EXperts, is an innovative designer and manufacturer of test and measurement solutions addressing numerous technologies. Global presence through a worldwide distribution channel provides uncompromised product support.

Visit us online at www.veexinc.com for latest updates and additional documentation.

VeEX Incorporated
2827 Lakeview Court
Fremont, CA 94538
USA
Tel: +1 510 651 0500
Fax: +1 510 651 0505

Customer Care

Tel: + 1 510 651 0500
Email: customercare@veexinc.com

[Go back to top](#) [Go back to TOC](#)